
NISSAN 200SX

MODEL S13 SERIES

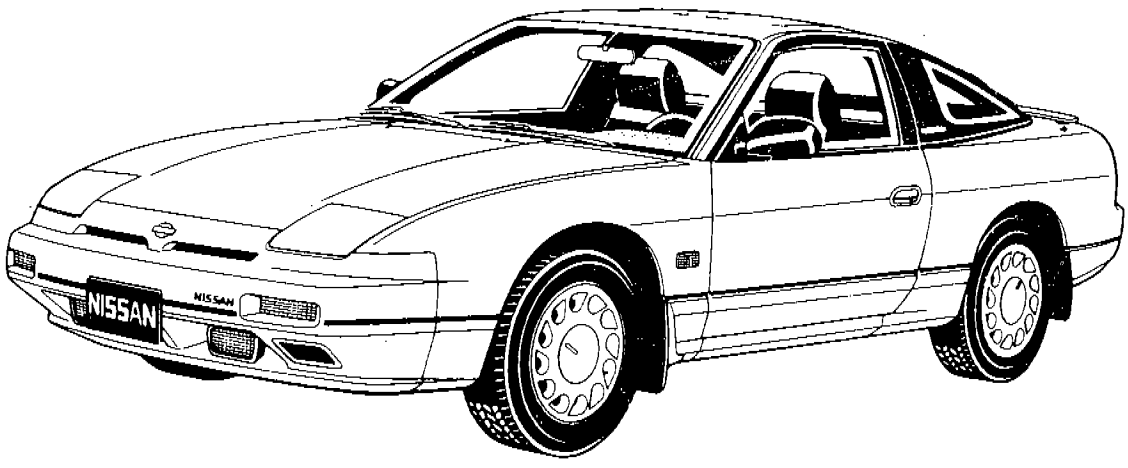

SERVICE MANUAL

NISSAN 200SX

MODEL S13 SERIES

QUICK REFERENCE INDEX

GENERAL INFORMATION — GI
MAINTENANCE — MA
ENGINE MECHANICAL — EM
ENGINE LUBRICATION & COOLING SYSTEMS — LC
ENGINE FUEL & EMISSION CONTROL SYSTEM — EF&
ENGINE CONTROL, FUEL & EXHAUST SYSTEM — FE
CLUTCH — CL
MANUAL TRANSMISSION — MT
AUTOMATIC TRANSMISSION — AT
PROPELLER SHAFT & DIFFERENTIAL CARRIER — PD
FRONT AXLE & FRONT SUSPENSION — FA
REAR AXLE & REAR SUSPENSION — RA
BRAKE SYSTEM — BR
STEERING SYSTEM — ST
BODY — BF
HEATER & AIR CONDITIONER — HA
ELECTRICAL SYSTEM — EL

© 1988 NISSAN MOTOR CO., LTD. Printed in Japan

Not to be reproduced in whole or in part without the prior written permission of Nissan Motor Company Ltd., Tokyo, Japan.

SECTION GI

CONTENTS

PRECAUTIONS ..... GI- 2
HOW TO USE THIS MANUAL ..... GI- 5
HOW TO READ WIRING DIAGRAMS ..... GI- 7
HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES GI-10
IDENTIFICATION INFORMATION GI-13
LIFTING POINTS AND TOW TRUCK TOWING GI-17
TIGHTENING TORQUE OF STANDARD BOLTS GI-20

FOREWORD

This manual contains maintenance and repair procedures for Nissan 200SX, model S13 series.

In order to assure your safety and the efficient functioning of the vehicle, this manual should be read thoroughly. It is especially important that the PRECAUTIONS in the GI section be completely understood before starting any repair task.


All information in this manual is based on the latest product information at the time of publication. The right is reserved to make changes in specifications and methods at any time without notice.

IMPORTANT SAFETY NOTICE


The proper performance of service is essential for both the safety of the technician and the efficient functioning of the vehicle.
The service methods in this Service Manual are described in such a manner that the service may be performed safely and accurately.
Service varies with the procedures used, the skills of the technician and the tools and parts available. Accordingly, anyone using service procedures, tools or parts which are not specifically recommended by NISSAN must first completely satisfy himself that neither his safety nor the vehicle's safety will be jeopardized by the service method selected.

NISSAN MOTOR CO., LTD.
Overseas Service Department
Tokyo, Japan


Observe the following precautions to ensure safe and proper servicing. These precautions are not described in each individual section.

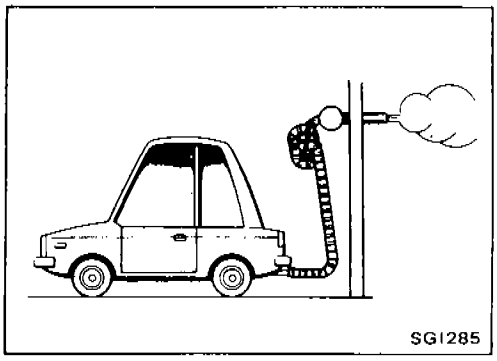
SGI285


1. Do not operate the engine for an extended period of time without proper exhaust ventilation.
   Keep the work area well ventilated and free of any inflammable materials. Special care should be taken when handling any inflammable or poisonous materials, such as gasoline, refrigerant gas, etc. When working in a pit or other enclosed area, be sure to properly ventilate the area before working with hazardous materials.
   Do not smoke while working on the vehicle.

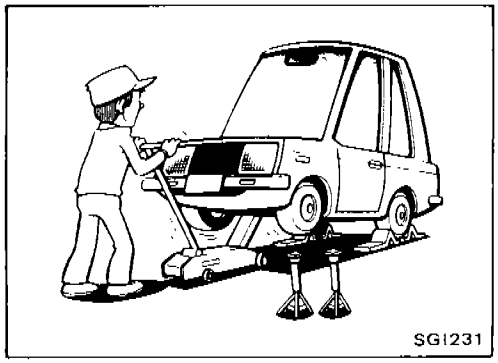
SGI231


2. Before jacking up the vehicle, apply wheel chocks or other tire blocks to the wheels to prevent the vehicle from moving. After jacking up the vehicle, support the vehicle weight with safety stands at the points designated for proper lifting and towing before working on the vehicle.
   These operations should be done on a level surface.
3. When removing a heavy component such as the engine or transaxle/transmission, be careful not to lose your balance and drop them. Also, do not allow them to strike adjacent parts, especially the brake tubes and master cylinder.

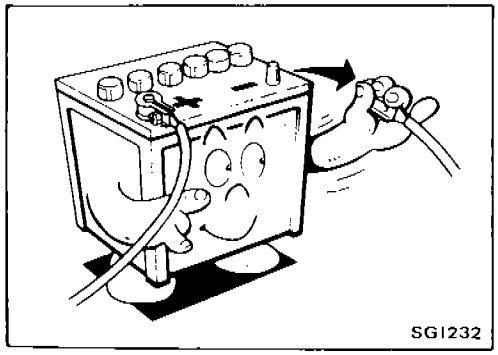
SGI232


4. Before starting repairs which do not require battery power, always turn off the ignition switch, then disconnect the ground cable from the battery to prevent accidental short circuit.

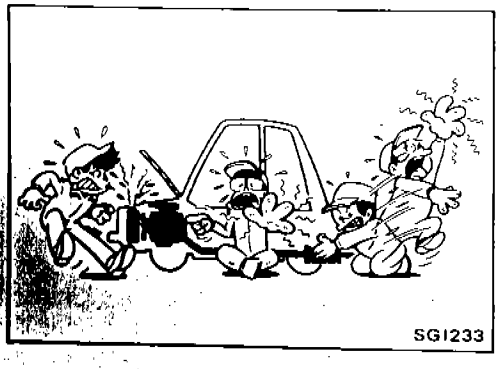
SGI233

5. To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe and muffler. Do not remove the radiator cap when the engine is hot.

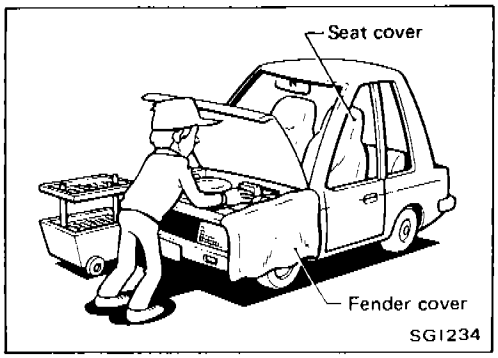


6. Before servicing the vehicle, protect fenders, upholstery and carpeting with appropriate covers.
   Take caution that keys, buckles or buttons on your person do not scratch the paint.
7. Clean all disassembled parts in the designated liquid or solvent prior to inspection or assembly.
8. Replace oil seals, gaskets, packings, O-rings, locking washers, cotter pins, self-locking nuts, etc. with new ones.
9. Replace inner and outer races of tapered roller bearings and needle bearings as a set.
10. Arrange the disassembled parts in accordance with their assembled locations and sequence.
11. Do not touch the terminals of electrical components which use microcomputers (such as electronic control units).
    Static electricity may damage internal electronic components.
12. After disconnecting vacuum or air hoses, attach a tag to indicate the proper connection.
13. Use only the lubricants specified in MA section.
14. Use approved bonding agent, sealants or their equivalents when required.
15. Use tools and recommended special tools where specified for safe and efficient service repairs.
16. When repairing the fuel, oil, water, vacuum or exhaust systems, check all affected lines for leaks.
17. Dispose of drained oil or the solvent used for cleaning parts in an appropriate manner.

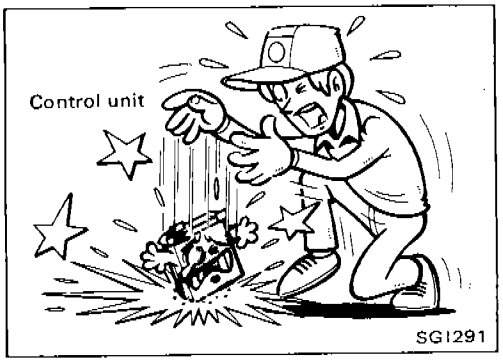

Precautions for E.F.I. or E.C.C.S. Engine


1. Before connecting or disconnecting E.F.I. or E.C.C.S. harness connector to or from any E.F.I. or E.C.C.S. control unit, be sure to turn the ignition switch to the "OFF" position and disconnect the negative battery terminal.
   Otherwise, there may be damage to control unit.
2. Before disconnecting pressurized fuel line from fuel pump to injectors, be sure to release fuel pressure to eliminate danger.
3. Be careful not to jar components such as control unit and air flow meter.

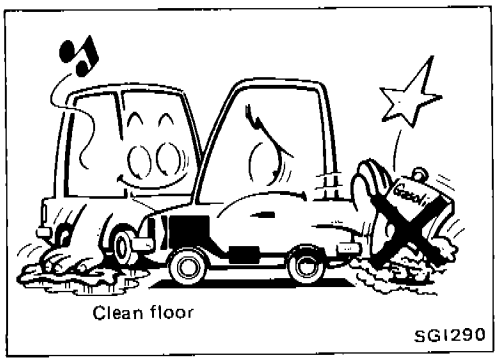

Precautions for Catalyst

If a large amount of unburned fuel flows into the converter, the converter temperature will be excessively high. To prevent this, follow the procedure below:

1. Use unleaded gasoline only. Leaded gasoline will seriously damage the catalytic converter.
2. When checking for ignition spark or measuring engine compression, make tests quickly and only when necessary.
3. Do not run engine when the fuel tank level is low, otherwise the engine may misfire causing damage to the converter.
4. Do not place the vehicle on inflammable material. Keep inflammable material off the exhaust pipe.

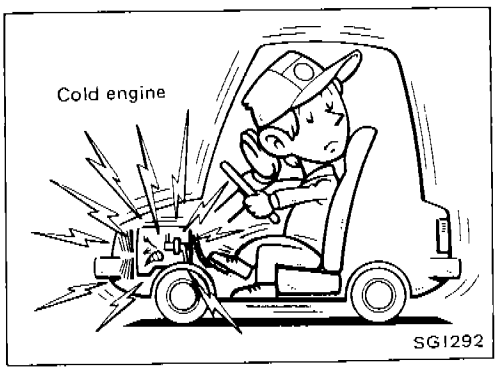

Precautions for Turbocharger

The turbocharger system uses engine oil for lubrication and cooling of its rotating components. The turbocharger turbine turns at a speed in excess of 100,000 rpm at full throttle and its temperature can reach 870°C (1,600°F). It is essential to maintain a clean supply of oil flowing through the turbocharger system. Therefore, a sudden interruption of oil supply may cause a malfunction in the turbocharger.

For proper operation of the system, follow the procedure below:

1. Always use the recommended oil. Follow the instructions for proper time to change the oil and proper oil level.
2. Avoid accelerating engine to a high rpm immediately after starting.
3. If engine had been operating at high rpm for an extended period of time, let it idle for a few minutes prior to shutting it off.

Asbestos Safety Instructions (Based on regulations of United Kingdom)

This vehicle uses parts containing asbestos, most are not hazardous but Brake and Clutch linings can be. Consult the manufacturer or his agent for further details. When working with these please observe the "Garage Workers' Asbestos Code" available through your Nissan Dealer, Local Authority or Health and Safety Executive. In particular, work in a well-ventilated place using where possible appropriate dust extraction equipment and avoid creating dust. Dampen all asbestos/dust where possible prior to machining, cutting, cleaning, etc. Use only hand or low speed tools.

Dispose of all asbestos waste, wet rags, etc., in a closed container as directed by your local waste disposal authority.

Precautions for Fuel

EUROPE


CA18DET with catalytic converter:
Unleaded gasoline of at least 95 octane (RON)

CA18DET without catalytic converter:
Leaded or unleaded gasoline of at least 95 octane (RON)

EXCEPT EUROPE

Leaded gasoline of at least 95 octane (RON)

1. **A QUICK REFERENCE INDEX,** a black tab (e.g. BR) is provided on the first page. You can quickly find the first page of each section by mating it to the section's black tab.
2. **THE CONTENTS** are listed on the first page of each section.
3. **THE TITLE** is indicated on the upper portion of each page and shows the part or system.
4. **THE PAGE NUMBER** of each section consists of two letters which designate the particular section and a number (e.g. "BR-5").
5. **THE LARGE ILLUSTRATIONS** are exploded views (See below) and contain tightening torques, lubrication points and other information necessary to perform repairs.
   The illustrations should be used in reference to service matters only. When ordering parts, refer to the appropriate **PARTS CATALOG.**

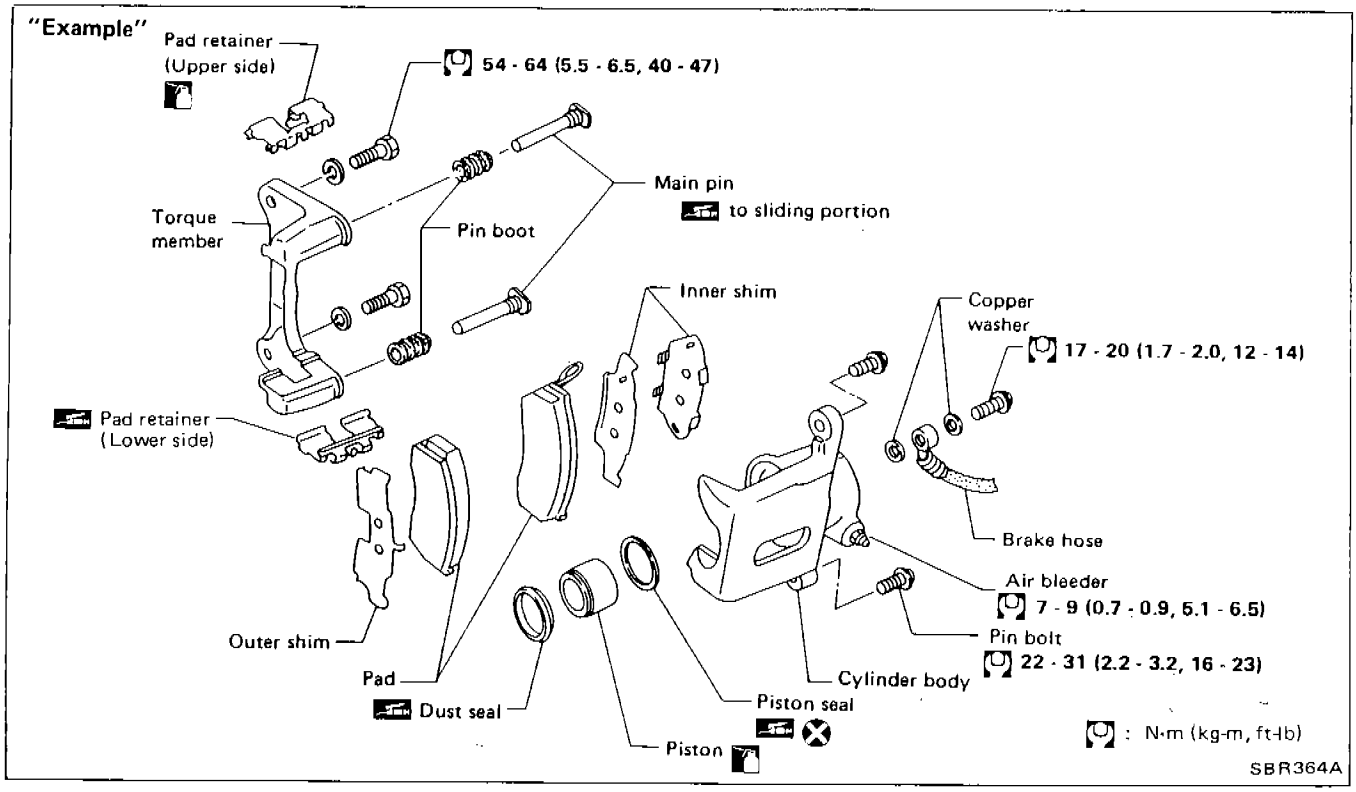

6. **THE SMALL ILLUSTRATIONS** show the important steps such as inspection, use of special tools, knacks of work and hidden or tricky steps which are not shown in the previous large illustrations. Assembly, inspection and adjustment procedures for the complicated units such as the automatic transaxle or transmission, etc. are presented in a step-by-step format where necessary.

7. The following **SYMBOLS AND ABBREVIATIONS** are used:

	:	Tightening torque	4WD	:	4-Wheel Drive
	:	Should be lubricated with grease. Unless otherwise indicated, use recommended multi-purpose grease.	M/T	:	Manual Transaxle/Transmission
			A/T	:	Automatic Transaxle/Transmission
			A/C	:	Air Conditioner
	:	Should be lubricated with oil.	P/S	:	Power Steering
	:	Sealing point	S.S.T.	:	Special Service Tools
	:	Checking point	S.D.S.	:	Service Data and Specifications
	:	Always replace after every disassembly.	SAE	:	Society of Automotive Engineers, Inc.
L.H., R.H.	:	Left-Hand, Right-Hand	G.C.C.	:	Gulf Cooperation Council
FR, RR	:	Front, Rear	L.H.D.	:	Left-Hand Drive
2WD	:	2-Wheel Drive	R.H.D.	:	Right-Hand Drive

8. The **UNITS** given in this manual are primarily expressed as the SI UNIT (International System of Unit), and alternatively expressed in the metric system and in the yard/pound system.

   "Example"

   Tightening torque


   59 - 78 N·m (6.0 - 8.0 kg-m, 43 - 58 ft-lb)


9. **TROUBLE DIAGNOSES** are included in sections dealing with complicated components.
10. **SERVICE DATA AND SPECIFICATIONS** are contained at the end of each section for quick reference of data.
11. The captions **WARNING** and **CAUTION** warn you of steps that must be followed to prevent personal injury and/or damage to some part of the vehicle.

- **WARNING** indicates the possibility of personal injury if instructions are not followed.
- **CAUTION** indicates the possibility of component damage if instructions are not followed.
- **BOLD TYPED STATEMENTS** except **WARNING** and **CAUTION** give you helpful information.

WIRING DIAGRAM

Symbols used in WIRING DIAGRAM are shown below:

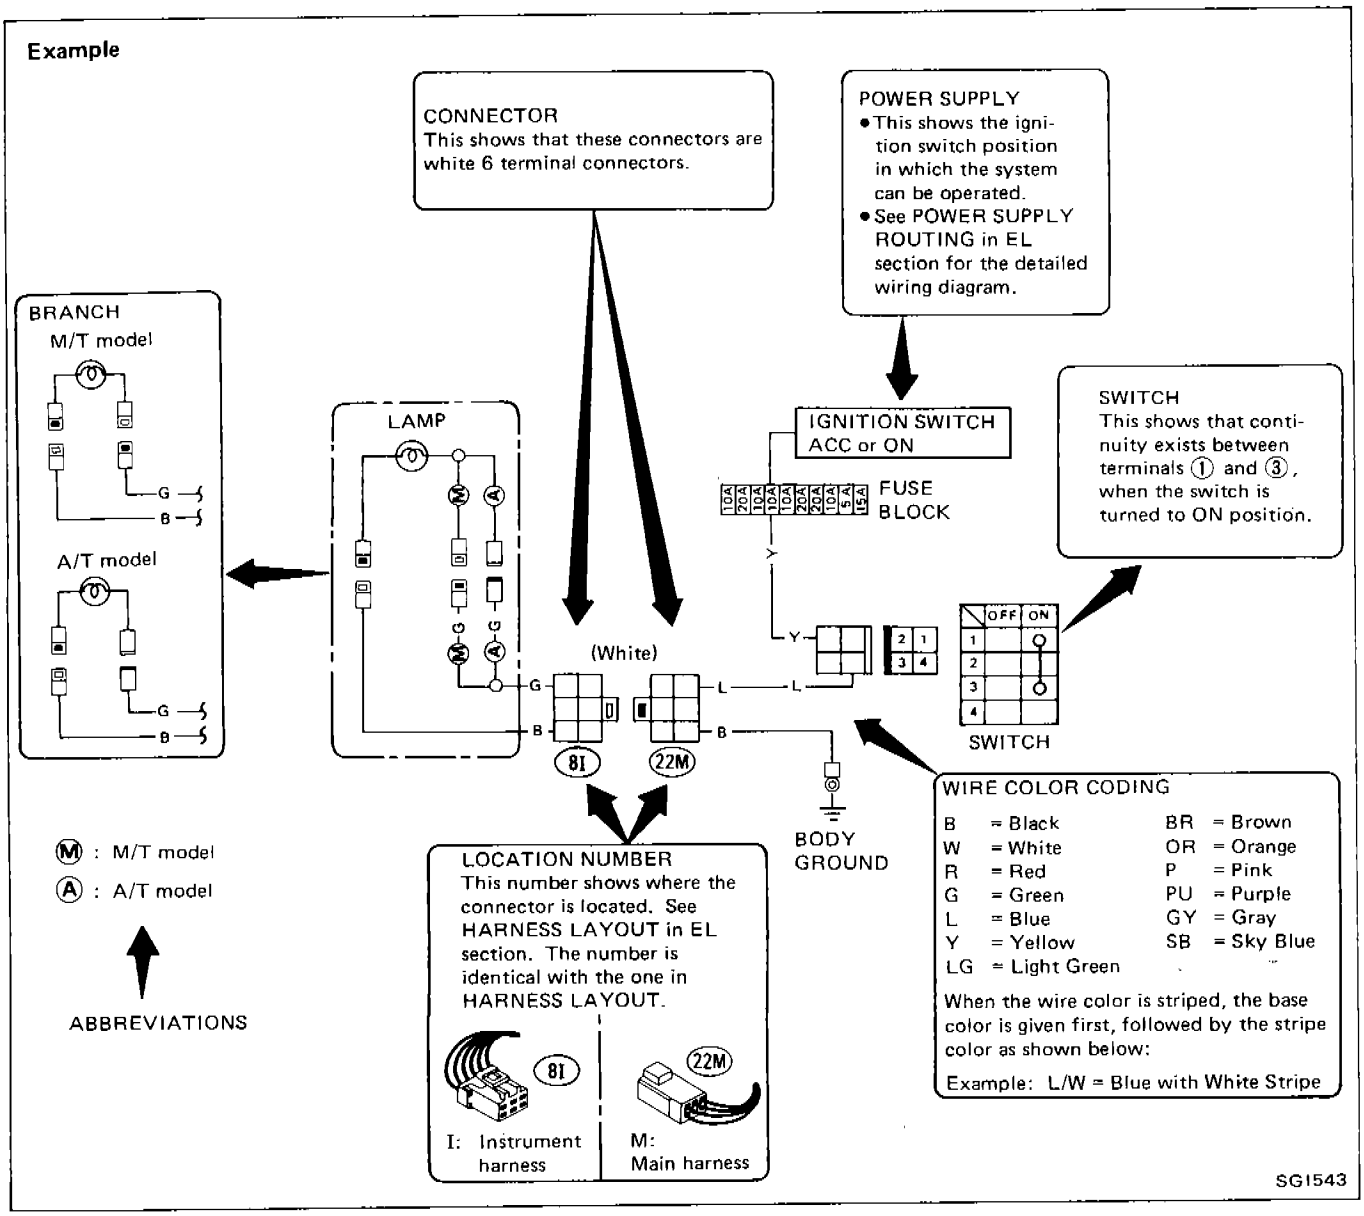

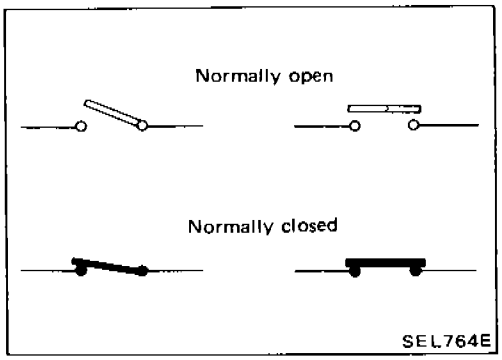


SWITCH POSITIONS

Wiring diagram switches are shown with the vehicle in the following condition.

- Ignition switch "OFF".
- Doors, hood and trunk lid/back door closed.
- Pedals are not depressed and parking brake is released.

Example

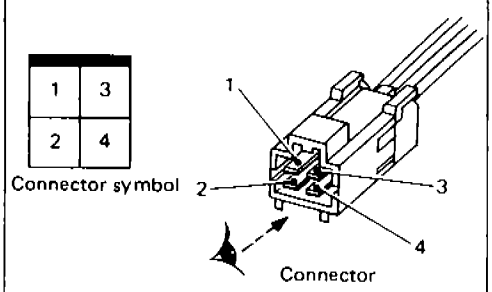


SGI362

CONNECTOR SYMBOLS

- All connector symbols in wiring diagrams are shown from the terminal side.

Example

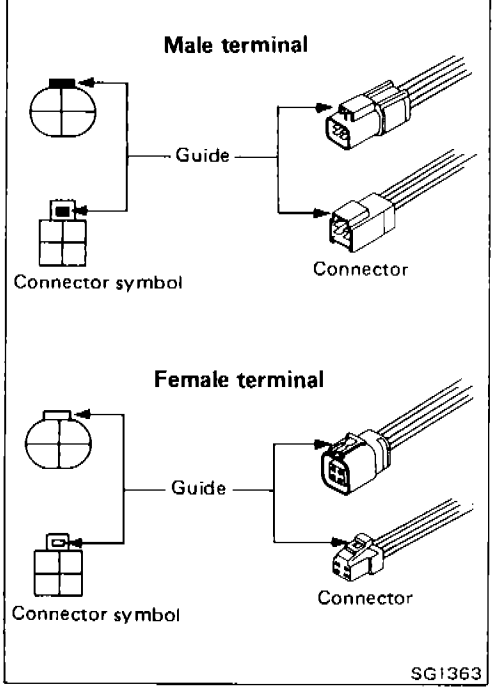


SGI363

- Male and female terminals
  Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.


MULTIPLE SWITCH

The continuity of the multiple switch is identified in the switch chart in wiring diagrams.

Example

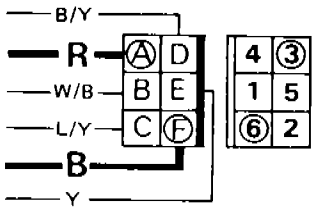

WIPER SWITCH

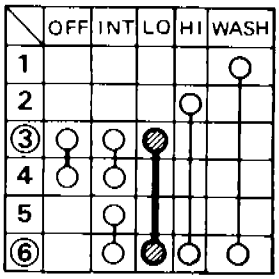

Continuity circuit of wiper switch


SWITCH POSITION	CONTINUITY CIRCUIT
OFF	3 - 4
INT	3 - 4, 5 - 6
LO	3 - 6
HI	2 - 6
WASH	1 - 6


Example: Wiper switch in LO position
Continuity circuit: Red wire – Ⓐ terminal – ③ terminal – Wiper switch (● – ●: LO) – ⑥ terminal – Ⓕ terminal – Black wire

SGI365

SUPER MULTIPLE JUNCTION (S.M.J.)

- The "S.M.J." indicated in wiring diagrams is shown in a simplified form. The terminal arrangement should therefore be referred to in the foldout at the end of the Service Manual.
- The foldout should be spread to read the entire wiring diagram.

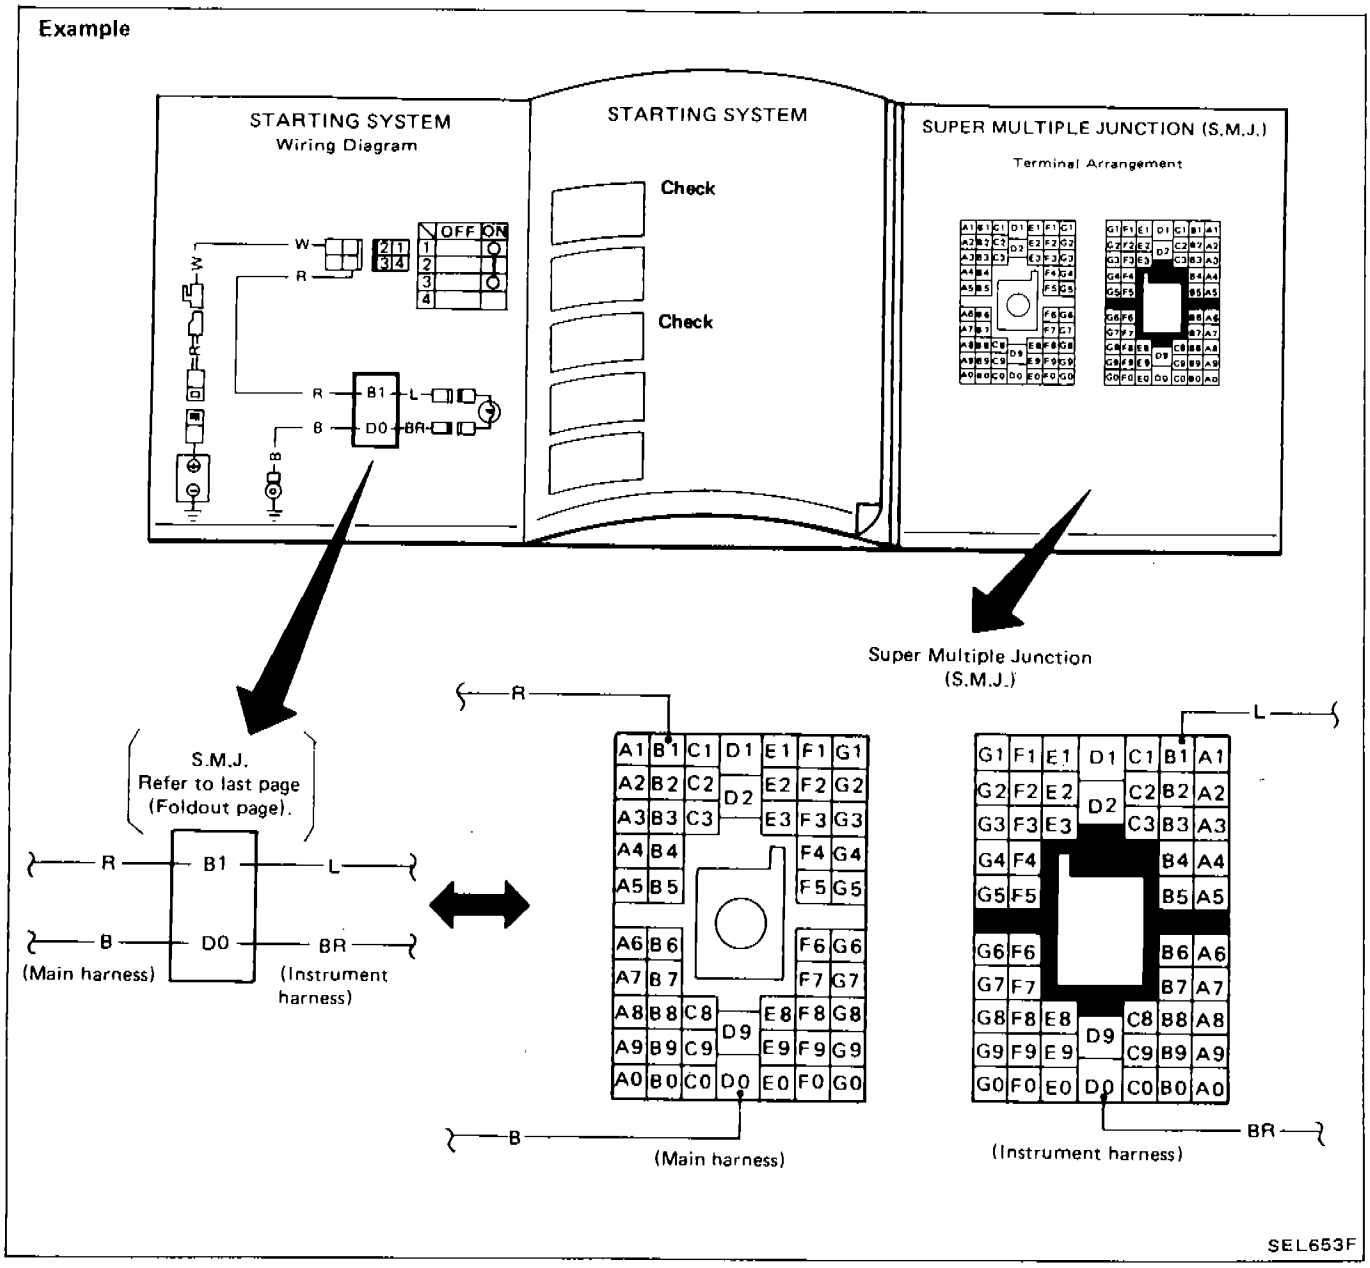

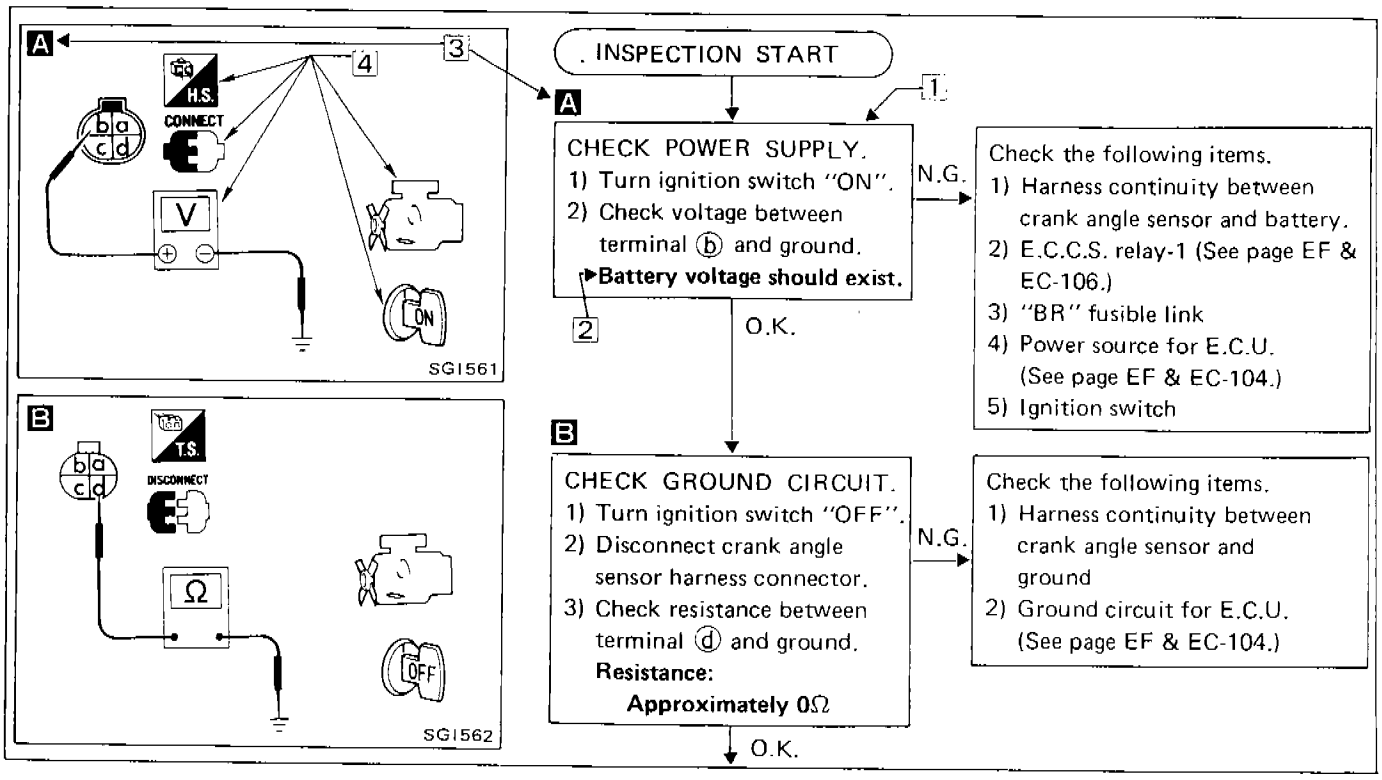

NOTICE


The flow chart indicates work procedures required to diagnose problems effectively. Observe the following instructions before diagnosing.

1) **Use the flow chart after locating probable causes of a problem following the "Preliminary Check" or the "Symptom Chart".**
2) **After repairs, recheck that the problem has been completely eliminated.**
3) **Refer to Component Parts Location and Harness Layout for the Systems described in each section for identification/location of components and harness connectors.**
4) **Refer to the Circuit Diagram for Quick Pinpoint Check. If you must perform circuit continuity between harness connectors more detail, such as in case of sub-harness is used, refer to Wiring Diagram and Harness Layout in EL section for identification of harness connectors.**
5) **When checking circuit continuity, ignition switch should be "OFF".**
6) **Before checking voltage at connectors, check battery voltage.**
7) **After accomplishing the Diagnostic Procedures and Electrical Components Inspection, make sure that all harness connectors are reconnected as it was.**

HOW TO FOLLOW THIS FLOW CHART

1 **Work and diagnostic procedure**

Start to diagnose a problem using procedures indicated in enclosed blocks, as shown in the following example.

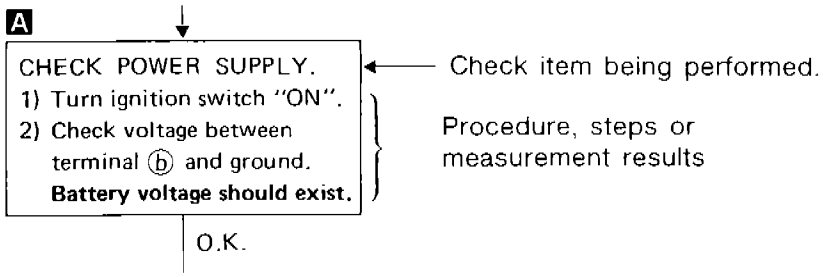

2 **Measurement results**

Required results are indicated in bold type in the corresponding block, as shown below:

These have the following meanings:

Battery voltage → 11 - 14V or approximately 12V
Voltage: Approximately 0V → Less than 1V

3 **Cross reference of work symbols in the text and illustrations**

Illustrations are provided as visual aids for work procedures. For example, symbol **A** indicated in the left upper portion of each illustration corresponds with the symbol in the flowchart for easy identification. More precisely, the procedure under the "CHECK POWER SUPPLY." outlined previously is indicated by an illustration **A** .

4 **Symbols used in illustrations**

Symbols included in illustrations refer to measurements or procedures. Before diagnosing a problem, familiarize yourself with each symbol.

Direction mark

A direction mark is shown to clarify the side of connector (terminal side or harness side).

Direction marks are mainly used in the illustrations indicating terminal inspection.




: **View from terminal side ... T.S.**

- **All connector symbols shown from the terminal side are enclosed by a single line.**











: **View from harness side ... H.S.**

- **All connector symbols shown from the harness side are enclosed by a double line.**

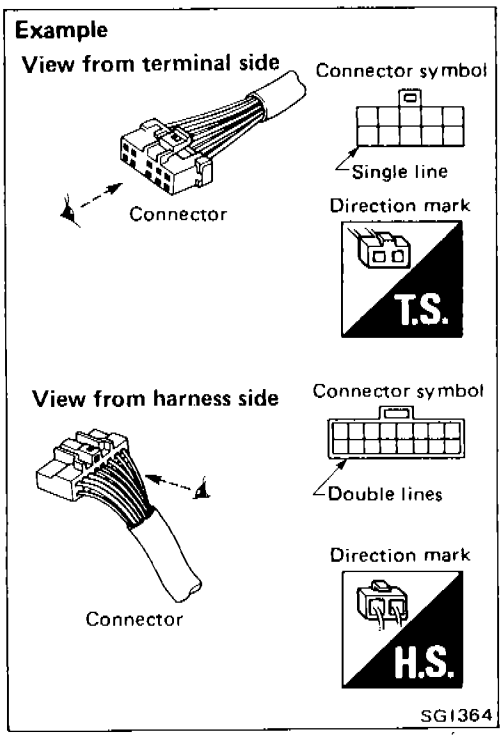


Key to symbols signifying measurements or procedures

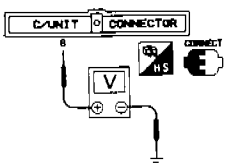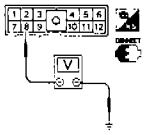Symbol	Symbol explanation	Symbol	Symbol explanation
	Check after disconnecting the connector to be measured.		A. C switch is "OFF".
	Check after connecting the connector to be measured.		A. C switch is "ON".
	Insert key into ignition switch.		REC switch is "ON".
	Turn ignition switch to "OFF" position.		REC switch is "OFF".
	Turn ignition switch to "ON" position.		DEF switch is "ON".
	Turn ignition switch to "START" position.		VENT switch is "ON".
	Turn ignition switch from "OFF" to "ACC" position.		Fan switch is "ON". (At any position except for "OFF" position)
	Turn ignition switch from "ACC" to "OFF" position.		Fan switch is "OFF".
	Turn ignition switch from "OFF" to "ON" position.		Apply battery voltage directly to components.
	Turn ignition switch from "ON" to "OFF" position.		Drive vehicle.
	Do not start engine, or check with engine stopped.		Disconnect battery negative cable.
	Start engine, or check with engine running.		Depress brake pedal.
	Apply parking brake.		Release brake pedal.
	Release parking brake.		Depress accelerator pedal.
	Check after engine is warmed up sufficiently.		Release accelerator pedal.
	Voltage should be measured with a voltmeter.		Pin terminal check for S.M.J. type E.C.U. and A/T control unit connectors. **For details regarding the terminal arrangement, refer to the foldout page.** 
	Circuit resistance should be measured with an ohmmeter.		
	Current should be measured with an ammeter.		

Model Variation

Destination	Body	Model			Engine	Transmission	Differential carrier
		L.H. drive		R.H. drive			
		With catalytic converter	Without catalytic converter				
Europe	Fast Back	–	–	RS13FTQ	CA18DET	FS5W71C	R200
		–	–	RS13ATQ		RE4R01A	
		RLS13FTO	–	–		FS5W71C	
		RLS13ATO	–	–		RE4R01A	
		–	RLS13FTQ	–		FS5W71C	
		–	RLS13ATQ	–		RE4R01A	
Except Europe		–		RS13FTU		FS5W71C	
		–		RS13ATU		RE4R01A	
		–	RLS13FT	–		FS5W71C	
		–	RLS13AT	–		RE4R01A	


Prefix and suffix designations

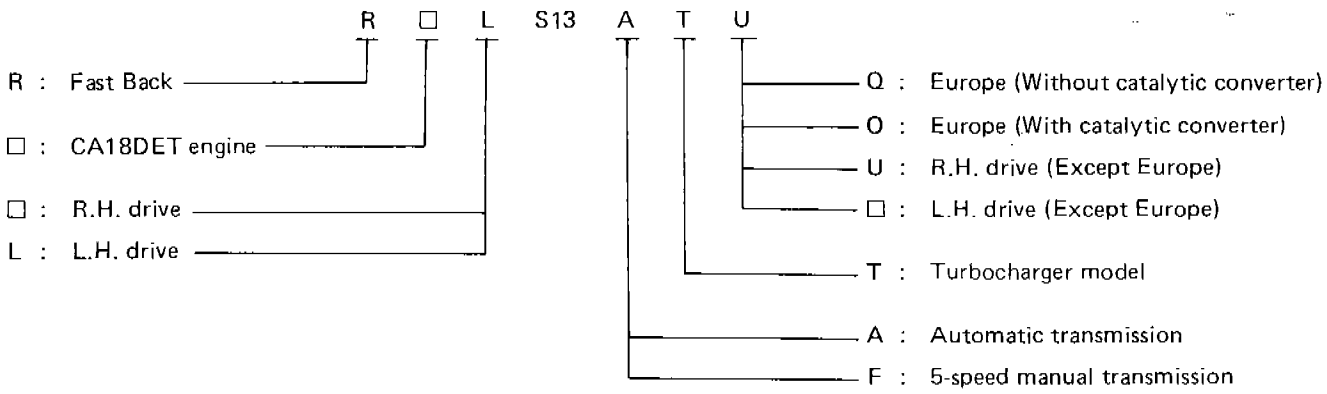

□ : means no indication.

Key

Identification Number

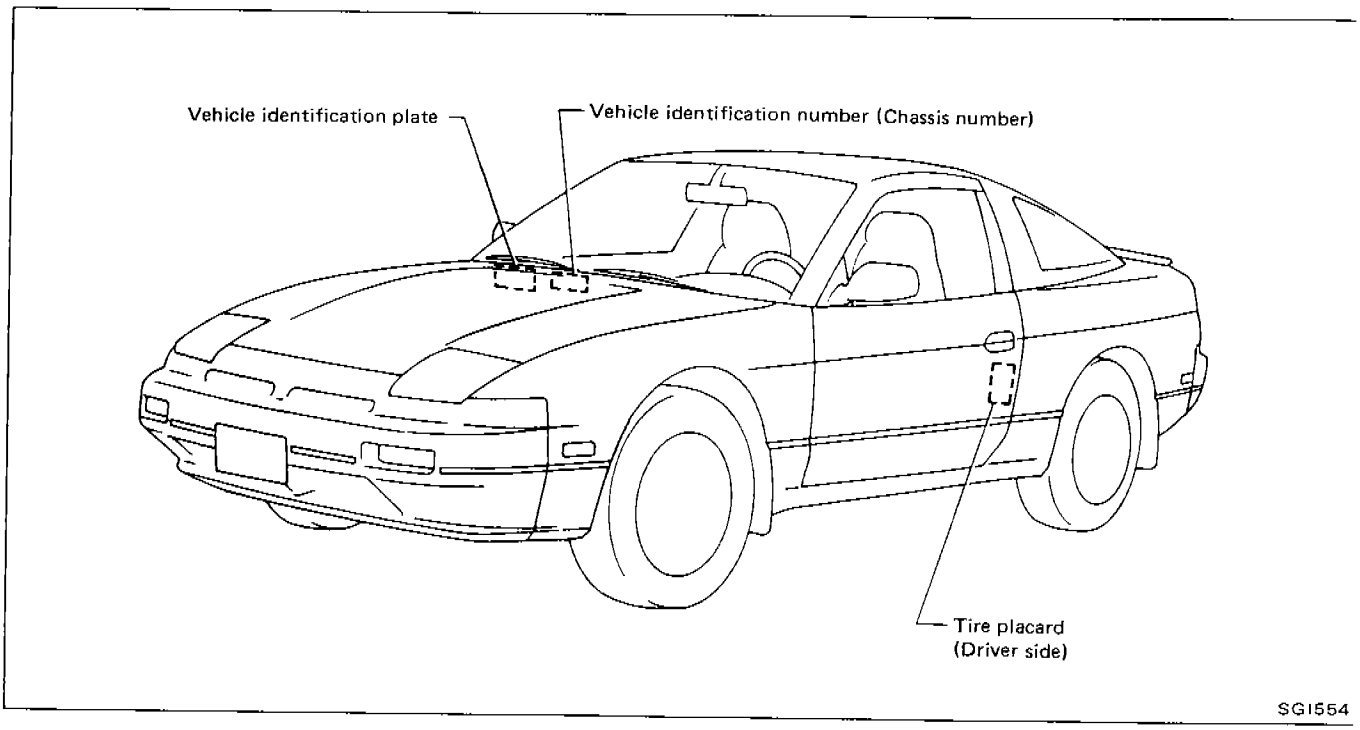

VEHICLE IDENTIFICATION NUMBER (Chassis number)

Prefix and suffix designations

(For Europe)

JN1 0 R S13 U 0 000030

JN1 : Nissan

O : Stopgap (no meaning)

R : Fast Back

Vehicle serial number

O : Stopgap (no meaning)

U : For Europe

Model

(Except for Europe)

R □ S13 – 000001

R : Fast Back

□ : CA18DET engine

Vehicle serial number


Model

□ : means no indication.

Identification Number (Cont'd)


IDENTIFICATION PLATE

Europe

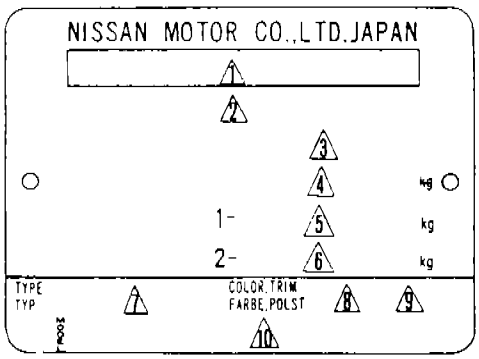

SGI025

Except Europe

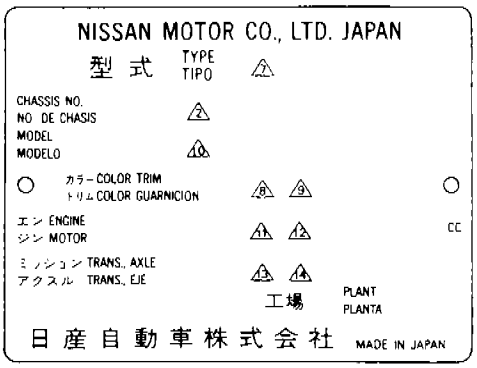


SGI316

1 Type approval number
2 Vehicle identification number (Chassis number)
3 Gross vehicle weight
4 Gross combination weight
Gross vehicle weight + Gross trailing capacity (Weight)
5 Gross axle weight (Front)
6 Gross axle weight (Rear)
7 Type
8 Body color code
9 Trim color code
10 Model
11 Engine model
12 Engine displacement
13 Transmission model
14 Axle model

ENGINE SERIAL NUMBER


CA18DET engine

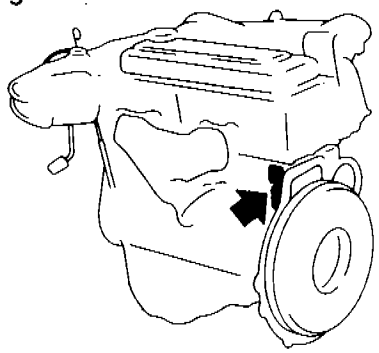

SGI555

MANUAL TRANSMISSION NUMBER


FS5W71C

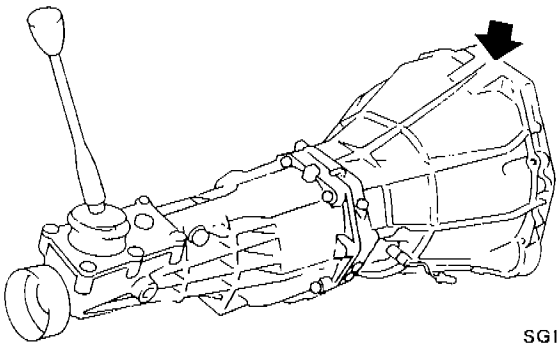

SGI556

AUTOMATIC TRANSMISSION NUMBER

RE4R01A

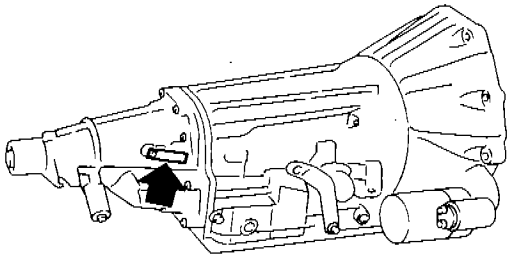

SGI557

Dimensions

Unit: mm (in)

	Europe	Except Europe
Overall length	4,535 (178.5)	4,520 (178.0)
Overall width	1,690 (66.5)	1,690 (66.5)
Overall height	1,290 (50.8)	1,290 (50.8)
Front tread	1,465 (57.7)	1,465 (57.7)
Rear tread	1,465 (57.7)	1,460 (57.5)
Wheelbase	2,475 (97.4)	2,475 (97.4)

Wheels and Tires

Road wheel	Steel	6-JJx15
	Aluminum	6-JJx15*1
	Offset mm (in)	40 (1.57)
Tire size	Conventional	195/60R15 86H
		195/60R15 87V*2
	Spare	T125/70D15*2

*1: Option
*2: Europe


Garage Jack and Safety Stand

WARNING:

- **Never get under the vehicle while it is supported only by the jack. Always use safety stands to support the frame when you have to get under the vehicle.**
- **Place wheel chocks at the front wheels when the rear wheels are raised and place wheel chocks at the rear wheels when the front wheels are raised.**

CAUTION:

Place a wooden or rubber block between safety stand and vehicle body when the supporting body is flat.

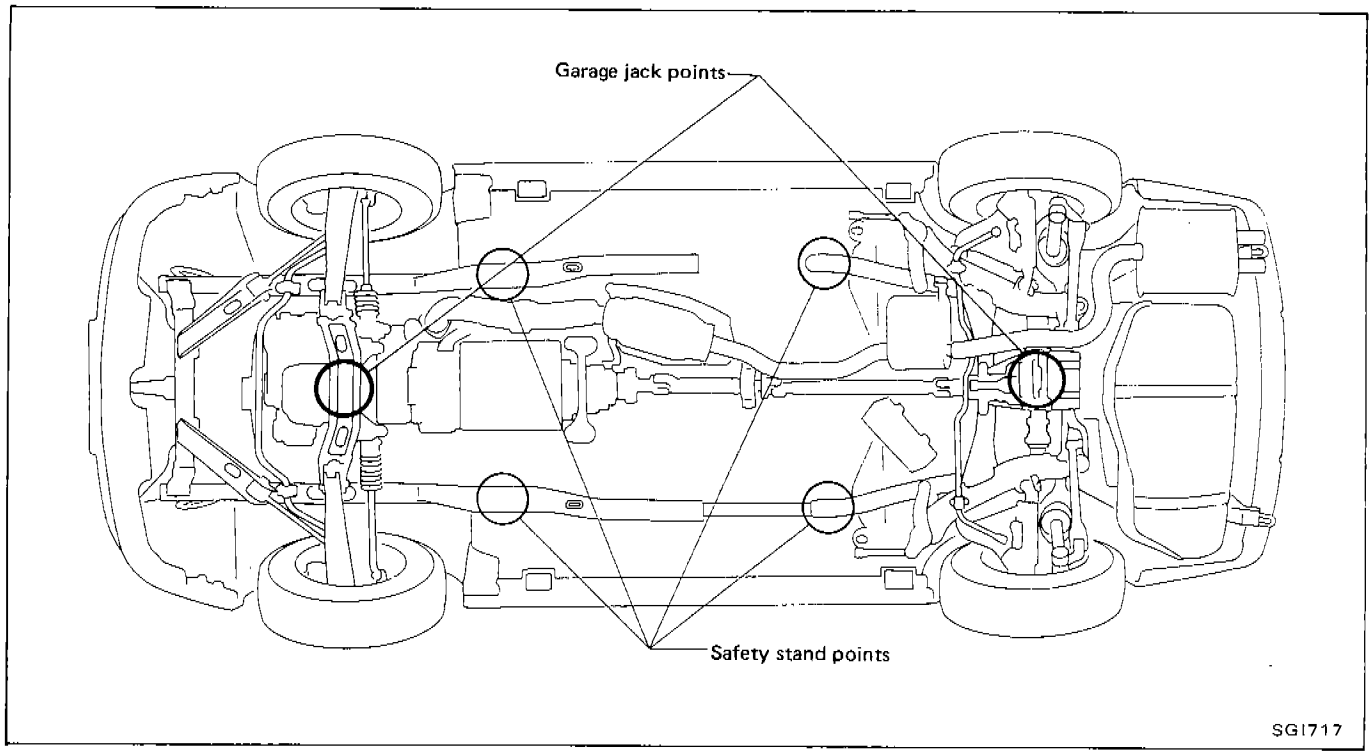


2-pole Lift

WARNING:

When lifting the vehicle, open the lift arms as wide as possible and ensure that the front and rear of the vehicle are well balanced.


When setting the lift arm, do not allow the arm to contact the brake tubes and fuel lines.

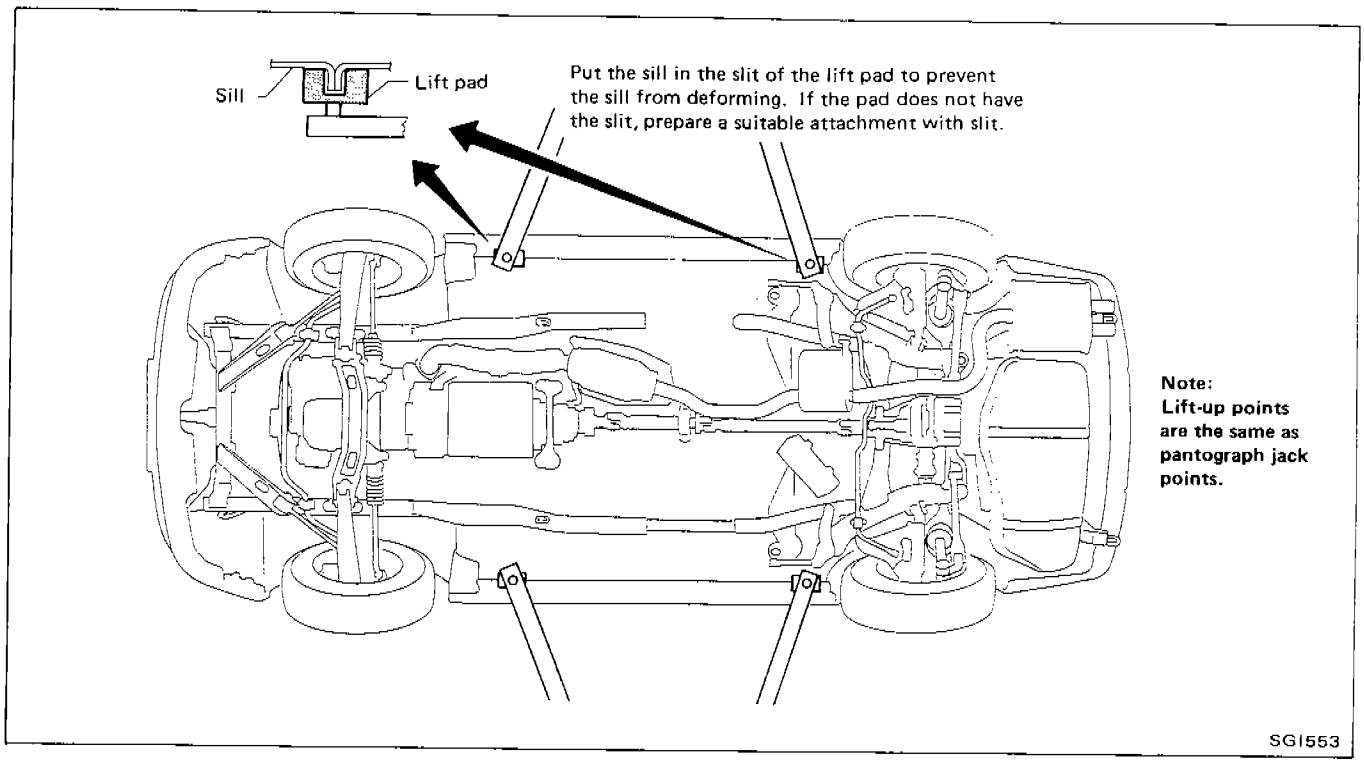

Tow Truck Towing

CAUTION:

- **All applicable local laws regarding the towing operation must be obeyed.**
- **It is necessary to use proper towing equipment to avoid possible damage to the vehicle during a towing operation.**
- **When towing with the rear wheels on the ground, release the parking brake and move the gearshift lever to neutral ("N" position).**

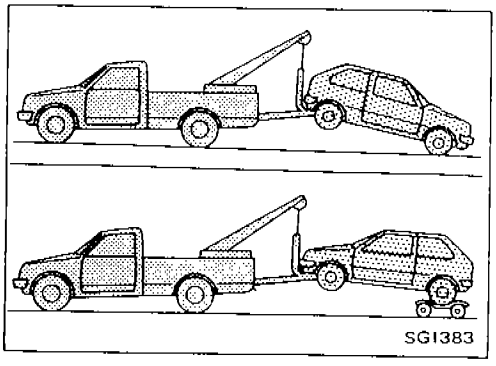

NISSAN recommends that vehicle be towed with the driving (rear) wheels off the ground as illustrated.

Tow Truck Towing (Cont'd)

TOWING AN AUTOMATIC TRANSMISSION MODEL WITH FOUR WHEELS ON GROUND OR TOWING WITH FRONT WHEELS RAISED (With rear wheels on ground)

Observe the following restricted towing speeds and distances.


Speed:

Below 50 km/h (30 MPH)

Distance:

Less than 65 km (40 miles)

If the speed or distance must necessarily be greater, remove the propeller shaft beforehand to prevent damage to the transmission.

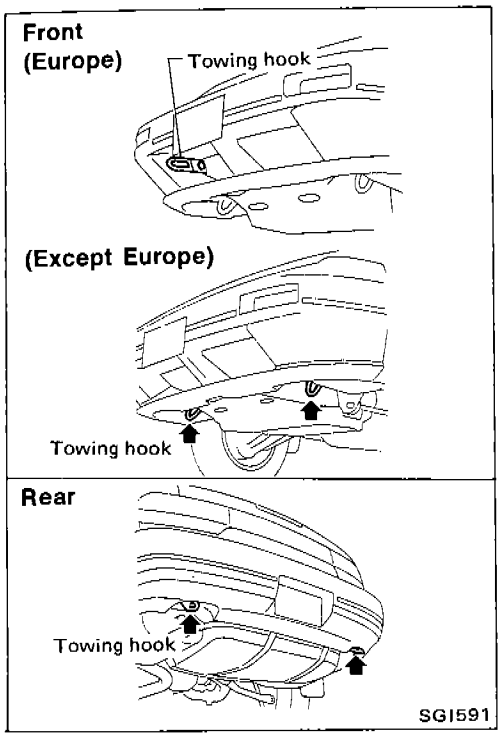

TOWING POINT

Always pull the cable straight out from the vehicle. Never pull on the hook at a sideways angle.

TIGHTENING TORQUE OF STANDARD BOLTS

Grade	Bolt size	Bolt diameter* mm	Pitch mm	Tightening torque (Without lubricant)					
				Hexagon head bolt			Hexagon flange bolt		
				N·m	kg-m	ft-lb	N·m	kg-m	ft-lb
4T	M6	6.0	1.0	5.1	0.52	3.8	6.1	0.62	4.5
	M8	8.0	1.25	13	1.3	9	15	1.5	11
			1.0	13	1.3	9	16	1.6	12
	M10	10.0	1.5	25	2.5	18	29	3.0	22
			1.25	25	2.6	19	30	3.1	22
	M12	12.0	1.75	42	4.3	31	51	5.2	38
			1.25	46	4.7	34	56	5.7	41
	M14	14.0	1.5	74	7.5	54	88	9.0	65
7T	M6	6.0	1.0	8.4	0.86	6.2	10	1.0	7
	M8	8.0	1.25	21	2.1	15	25	2.5	18
			1.0	22	2.2	16	26	2.7	20
	M10	10.0	1.5	41	4.2	30	48	4.9	35
			1.25	43	4.4	32	51	5.2	38
	M12	12.0	1.75	71	7.2	52	84	8.6	62
			1.25	77	7.9	57	92	9.4	68
	M14	14.0	1.5	127	13.0	94	147	15.0	108
9T	M6	6.0	1.0	12	1.2	9	15	1.5	11
	M8	8.0	1.25	29	3.0	22	35	3.6	26
			1.0	31	3.2	23	37	3.8	27
	M10	10.0	1.5	59	6.0	43	70	7.1	51
			1.25	62	6.3	46	74	7.5	54
	M12	12.0	1.75	98	10.0	72	118	12.0	87
			1.25	108	11.0	80	137	14.0	101
	M14	14.0	1.5	177	18.0	130	206	21.0	152

1. **Special parts are excluded.**
2. **This standard is applicable to bolts having the following marks embossed on the bolt head.**

Grade	Mark
4T	4
7T	7
9T	9

*: Nominal diameter

M 6
- 6 — Nominal diameter of bolt threads (Unit: mm)
- M — Metric screw threads


MAINTENANCE

SECTION MA


CONTENTS

PREPARATION ..... MA- 2
PRE-DELIVERY INSPECTION ITEMS ..... MA- 3
PERIODIC MAINTENANCE (Except for Europe) ..... MA- 4
PERIODIC MAINTENANCE (For Europe except U.K.) ..... MA- 6
PERIODIC MAINTENANCE (For U.K.) ..... MA- 8
GENERAL MAINTENANCE MA-10
RECOMMENDED FLUIDS AND LUBRICANTS MA-11
ENGINE MAINTENANCE MA-13
CHASSIS AND BODY MAINTENANCE MA-21
SERVICE DATA AND SPECIFICATIONS (S.D.S.) MA-29

SPECIAL SERVICE TOOL

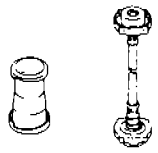Tool number Tool name	Description
EG17650301 Radiator cap tester adapter	

COMMERCIAL SERVICE TOOL

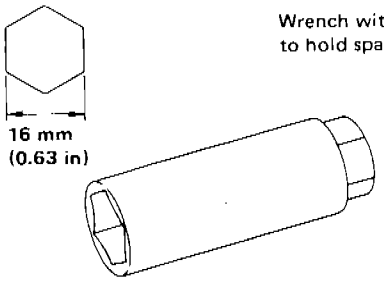Tool name	Description
Spark plug wrench	 Wrench with a magnet to hold spark plug SEM294A

Shown below are Pre-delivery Inspection Items required for the new vehicle. It is recommended that necessary items other than those listed here be added, paying due regard to the conditions in each country.

Perform applicable items on each model. Consult text of this section for specifications.

UNDER HOOD — engine off

- ☐ Radiator coolant level and coolant hose connections for leaks
- ☐ Battery fluid level, specific gravity and conditions of battery terminals
- ☐ Drive belts tension
- ☐ Fuel filter for water or dusts, and fuel lines and connections for leaks
- ☐ Engine oil level and oil leaks
- ☐ Clutch and brake reservoir fluid level and fluid lines for leaks
- ☐ Windshield and rear window washer and headlamp cleaner reservoir fluid level
- ☐ Power steering reservoir fluid level and hose connections for leaks

ON INSIDE AND OUTSIDE

- ☐ Remove front spring/strut spacer (If applicable)
- ☐ Operation of all instruments, gauges, lights and accessories
- ☐ Operation of horn(s), wiper and washer
- ☐ Steering lock for operation
- ☐ Check air conditioner for gas leaks
- ☐ Front and rear seats, and seat belts for operation
- ☐ All moldings, trims and fittings for fit and alignment
- ☐ All windows for operation and alignment
- ☐ Hood, trunk lid, door panels for fit and alignment
- ☐ Latches, keys and locks for operation
- ☐ Weatherstrips for adhesion and fit
- ☐ Headlamp aiming
- ☐ Tighten wheel nuts (Inc. inner nuts if applicable)
- ☐ Tire pressure (Inc. spare tire)
- ☐ Check front wheels for toe-in
- ☐ Install clock/voltmeter/room lamp fuse (If applicable)
- ☐ Install deodorizing filter to air purifier (If applicable)
- ☐ Remove wiper blade protectors (If applicable)

UNDER BODY

- ☐ Manual transmission/transaxle, transfer and differential gear oil level
- ☐ Brake and fuel lines and oil/fluid reservoirs for leaks
- ☐ Tighten bolts and nuts of steering linkage and gear box, suspension, propeller shafts and drive shafts
- ☐ Tighten rear body bolts and nuts (Models with wooden bed only)

ROAD TEST

- ☐ Clutch operation
- ☐ Parking brake operation
- ☐ Service brake operation
- ☐ Automatic transmission/transaxle shift timing and kickdown
- ☐ Steering control and returnability
- ☐ Engine performance
- ☐ Squeaks and rattles

ENGINE OPERATING AND HOT

- ☐ Adjust idle mixture and speed (and ignition timing*1)
- ☐ Automatic transmission/transaxle fluid level
- ☐ Engine idling and stop knob operation (Diesel only)

FINAL INSPECTION

- ☐ Install necessary parts (outside mirror, wheel covers, seat belts, mat, carpet or mud flaps)
- ☐ Inspect for interior and exterior metal and paint damage
- ☐ Check for spare tire, jack, tools (wheel chock), and literature
- ☐ Wash, clean interior and exterior

*1: Not required on models with a direct ignition system

PERIODIC MAINTENANCE (Except for Europe)

The following tables show the normal maintenance schedule. Depending upon weather and atmospheric conditions, varying road surfaces, individual driving habits and vehicle usage, additional or more frequent maintenance will be required.

Periodic maintenance beyond the last period shown on the tables requires similar maintenance.

MAINTENANCE OPERATION Perform either at number of kilometers (miles) or months, whichever comes first.		MAINTENANCE INTERVAL									Reference page
	km x 1,000	1	10	20	30	40	50	60	70	80	
	(Miles x 1,000)	(0.6)	(6)	(12)	(18)	(24)	(30)	(36)	(42)	(48)	
	Months	—	6	12	18	24	30	36	42	48	
ENGINE	**Underhood and under vehicle**										
Check drive belts for cracks, fraying, wear & tension		X		X		X		X		X	MA-13
Change engine anti-freeze coolant (Ethylene glycol base)						X				X	MA-13
Change engine coolant (Soft water)			X	X	X	X	X	X	X	X	MA-13
Check cooling system				X		X		X		X	MA-14
Check fuel lines						X				X	MA-15
Replace air cleaner filter (Viscous paper type)★						X				X	MA-16
Change engine oil (Use recommended oil)★			Every 5,000 km (3,000 miles) or 6 months								MA-16
Change engine oil filter★			X	X	X	X	X	X	X	X	MA-17
Check & adjust mixture ratio (Check mixture ratio only on models bound for areas affected by emission regulations)		X	X	X	X	X	X	X	X	X	EF & EC-25
Replace fuel filter★						X				X	MA-16
Check & replace spark plugs	Check		X		X		X		X		MA-17
	Replace			X		X		X		X	MA-17
Check positive crankcase ventilation (P.C.V.) system				X		X		X		X	MA-19
Check vacuum fitting hoses & connections				X		X		X		X	MA-19
Replace timing belt			Every 100,000 km (60,000 miles)								EM-9
CHASSIS AND BODY	**Underhood**										
Check brake, clutch & automatic transmission fluid level & leaks★			X	X	X	X	X	X	X	X	MA-21, 22, 24
Change brake fluid★						X				X	MA-24
Check brake booster vacuum hoses, connections & check valve						X				X	MA-24
Check power steering fluid & lines			X	X	X	X	X	X	X	X	MA-26
	Under vehicle										
Check brake, clutch & exhaust systems for proper attachment, leaks, cracks, chafing, abrasion, deterioration, etc.			X	X	X	X	X	X	X	X	MA-21, 24
Check oil level in manual transmission & differential gear★			X	X	X	X	X	X	X	X	MA-21, 23
Check steering gear & linkage, axle & suspension parts, propeller shaft & drive shafts for damaged, loose & missing parts & lubrication★		X		X		X		X		X	MA-23, 26 FA-5, RA-5, 7
	Outside and inside										
Check wheel alignment. If necessary, rotate & balance wheels				X		X		X		X	MA-25, 26 FA-6
Check brake pads, discs & other brake components for wear, deterioration & leaks★			X	X	X	X	X	X	X	X	MA-25
Lubricate locks, hinges & hood latch★			X	X	X	X	X	X	X	X	MA-27
Check seat belts, buckles, retractors, anchors & adjuster				X		X		X		X	MA-27
Check foot brake, parking brake & clutch for free play, stroke & operation			X	X	X	X	X	X	X	X	CL-5, BR-7, 29

NOTE: Maintenance items with "★" should be performed more frequently according to "Maintenance under severe driving conditions".

Check: Check. Correct or replace if necessary.

MAINTENANCE UNDER SEVERE DRIVING CONDITIONS

The maintenance intervals shown on the preceding pages are for normal operating conditions. if the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table.

Severe driving conditions

A — Driving under dusty conditions
B — Driving repeatedly short distances
C — Towing a trailer
D — Extensive idling
E — Driving in extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high
F — Driving in high humidity areas or in mountainous areas
G — Driving in areas using salt or other corrosive materials
H — Driving on rough and/or muddy roads or in the desert
I — Driving with frequent use of braking or in mountainous areas

Driving condition	Maintenance item	Maintenance operation	Maintenance interval	Reference page
A	Air cleaner filter	Replace	More frequently	MA-16
A B C D	Engine oil	Replace		MA-16
A B C D	Engine oil filter	Replace	Every 5,000 km (3,000 miles) or 3 months	MA-17
A . . . E	Fuel filter	Replace	Every 20,000 km (12,000 miles) or 12 months	MA-16
. . . . . F . . .	Brake fluid	Replace		MA-24
. . C . . . . H .	Automatic & manual transmission oil & differential gear oil	Replace	Every 40,000 km (24,000 miles) or 24 months	MA-22, 23
. . . . . G H .	Steering gear & linkage, axle & suspension parts, propeller shaft & drive shaft	Check	Every 10,000 km (6,000 miles) or 6 months	MA-23, 26 FA-5, RA-5, 7
A . C . . . G H I	Brake pads, discs & other brake components	Check	Every 5,000 km (3,000 miles) or 3 months	MA-25
. . . . . G . .	Lock, hinges & hood latch	Lubricate		MA-27

Maintenance operation: Check = Check. Correct or replace if necessary.

The following tables show the normal maintenance schedule. Depending upon weather and atmospheric conditions, varying road surfaces, individual driving habits and vehicle usage, additional or more frequent maintenance will be required.

Periodic maintenance beyond the last period shown on the tables requires similar maintenance.

STANDARD & THE FIRST FREE SERVICES

MAINTENANCE OPERATION Perform the standard service on a yearly basis, but on a mileage basis when driving more than 20,000 km (12,000 miles) a year.	MAINTENANCE INTERVAL Months	— km x 1,000	12 20	24 40	36 60	48 80	Reference page
		(Miles x 1,000)	1 (0.6)	(12)	(24)	(36)	(48)
Engine	**Underhood and under vehicle**						
Check drive belts for cracks, fraying, wear & tension				X		X	MA-13
Change engine anti-freeze coolant (Ethylene glycol base)				X		X	MA-13
Check cooling system			X	X	X	X	MA-14
Check fuel lines				X		X	MA-15
Replace air cleaner filter (Viscous paper type)★				X		X	MA-16
Replace timing belt			Every 100,000 km (60,000 miles)				EM-9
Check & adjust mixture ratio*1		X*1	X	X	X	X	EF & EC-25
Replace fuel filter★				X		X	MA-16
Replace spark plugs							
Non-catalyzer models			X	X	X	X	MA-17
Catalyzer models (Use PLATINUM-TIPPED type.)			Every 100,000 km (60,000 miles)				MA-17
Check positive crankcase ventilation (P.C.V.) system*1			X	X	X	X	MA-19
Check vacuum fitting hoses & connections*1			X	X	X	X	MA-19
Check exhaust gas sensor*2				X		X	MA-20
Check vapor lines*2				X		X	MA-19
Chassis and body	**Underhood**						
Check brake & clutch fluid level & leaks			X	X	X	X	MA-21, 24
Check automatic transmission fluid level & leaks★				X		X	MA-22
Change brake fluid★				X		X	MA-24
Check brake booster vacuum hoses, connections & check valve				X		X	MA-24
Check power steering fluid & lines			X	X	X	X	MA-26
	Under vehicle						
Check brake & clutch for proper attachment, leaks, cracks, chafing, abrasion, deterioration, etc.			X	X	X	X	MA-21, 24
Check oil level in manual transmission & differential gear★				X		X	MA-21, 23
Check steering gear & linkage, axle & suspension parts, propeller shaft, drive shafts & exhaust system for damaged, loose & missing parts, lubrication & leaks★		X		X		X	MA-21, 23, 26 FA-5, RA-5, 7
	Outside and inside						
Check wheel alignment. If necessary, rotate & balance wheels			X	X	X	X	MA-25, 26 FA-6
Check brake pads, discs & other brake components for wear, deterioration & leaks★			X	X	X	X	MA-25
Check seat belts, buckles, retractors, anchors & adjuster				X		X	MA-27
Check foot brake, parking brake & clutch for free play, stroke & operation			X	X	X	X	CL-5, BR-7, 29
Check body corrosion				Annually			MA-28

NOTE: Maintenance items with "★" should be performed more frequently according to "Maintenance under severe driving conditions".

Check: Check. Correct or replace if necessary.

*1: Non-catalyzer models only *2: Catalyzer models only

ENGINE OIL SERVICE

MAINTENANCE OPERATION Perform at the specified time or mileage, whichever comes first.	MAINTENANCE INTERVAL									Reference page
	Months	—	**6**	**12**	**18**	**24**	**30**	**36**	**42**	**48**	
	km x 1,000	1	10	20	30	40	50	60	70	80	
	(Miles x 1,000)	(0.6)	(6)	(12)	(18)	(24)	(30)	(36)	(42)	(48)	
Underhood											
Change engine oil (Use recommended oil)★	Every 6 months or 5,000 km (3,000 miles)										MA-16
Change engine oil filter★		X	X	X	X	X	X	X	X		MA-17

NOTE: Maintenance items with "★" should be performed more frequently according to "Maintenance under severe driving conditions".

MAINTENANCE UNDER SEVERE DRIVING CONDITIONS

The maintenance intervals shown on the preceding pages are for normal operating conditions. if the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table.

Severe driving conditions

A — Driving under dusty conditions
B — Driving repeatedly short distances
C — Towing a trailer
D — Extensive idling
E — Driving in extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high
F — Driving in high humidity areas or in mountainous areas
G — Driving in areas using salt or other corrosive materials
H — Driving on rough and/or muddy roads or in the desert
I — Driving with frequent use of braking or in mountainous areas

Driving condition	Maintenance item	Maintenance operation	Maintenance interval	Reference page
Standard service				
A	Air cleaner filter	Replace	Every 12 months or 20,000 km (12,000 miles)	MA-16
A . . . E . . .	Fuel filter	Replace		MA-16
. . . . . F . . .	Brake fluid	Replace		MA-24
. . . . . G H .	Steering gear & linkage, axle & suspension parts, propeller shaft, drive shafts & exhaust system	Check		MA-21, 23, 26 FA-5, RA-5, 7
. . C . . . . H .	Automatic & manual transmission oil, & differential gear oil	Replace	Every 24 months or 40,000 km (24,000 miles)	MA-22, 23
A . C . . . G H I	Brake pads, discs & other brake components	Check	Every 6 months or 10,000 km (6,000 miles)	MA-25
Engine oil service				
A B C D	Engine oil	Replace	More frequently	MA-16
A B C D	Engine oil filter	Replace	Every 3 months or 5,000 km (3,000 miles)	MA-17

Maintenance operation: Check = Check. Correct or replace if necessary.

The following tables show the normal maintenance schedule. Depending upon weather and atmospheric conditions, varying road surface, individual driving habits and vehicle usage, additional or more frequent maintenance will be required.

Periodic maintenance beyond the last period shown on the tables requires similar maintenance.

MAINTENANCE OPERATION Perform either at number of miles (kilometers) or months, whichever comes first.	MAINTENANCE INTERVAL Miles x 1,000 / (km x 1,000) / Months	0.6 (1) –	9 (15) 6	18 (30) 12	27 (45) 18	36 (60) 24	45 (75) 30	54 (90) 36	63 (105) 42	72 (120) 48	Reference page
ENGINE MAINTENANCE	**Under bonnet and under vehicle**										
Replace timing belt		Every 60,000 miles (100,000 km)									EM-9
Change engine anti-freeze coolant (Ethylene glycol base)						X				X	MA-13
Check cooling system				X		X		X		X	MA-14
Check fuel lines						X				X	MA-15
Check drive belts for cracks, fraying, wear & tension		X		X		X		X		X	MA-13
Replace air cleaner filter (Viscous paper type)★						X				X	MA-16
Change engine oil (Use recommended oil) & oil filter★		Every 4,500 miles (7,500 km) or 6 months									MA-16, 17
Check & adjust mixture ratio		X	X	X	X	X	X	X	X	X	EF & EC-25
Replace fuel filter				X		X		X		X	MA-16
Replace spark plugs			X	X	X	X	X	X	X	X	MA-17
Check positive crankcase ventilation (P.C.V.) system				X		X		X		X	MA-19
Check vacuum hose & connections				X		X		X		X	MA-19
CHASSIS AND BODY MAINTENANCE	**Under bonnet**										
Check brake & clutch fluid level & leaks★			X	X	X	X	X	X	X	X	MA-21, 24
Check automatic transmission fluid level & leaks★				X		X		X		X	MA-22
Change brake fluid				X		X		X		X	MA-24
Check brake booster vacuum hoses, connections & check valve						X				X	MA-24
Check power steering fluid & lines			X	X	X	X	X	X	X	X	MA-26
	Under vehicle										
Check brake & clutch for proper attachment, leaks, cracks, chafing, abrasion, deterioration, etc.			X	X	X	X	X	X	X	X	MA-21, 24
Check oil level in manual transmission & differential gear★				X		X		X		X	MA-21, 23
Check steering gear & linkage, axle & suspension parts, propeller shaft, drive shafts & exhaust system for damaged, loose & missing parts, lubrication & leaks★		X		X		X		X		X	MA-21, 23, 26 FA-5, RA-5, 7
	Outside and inside										
Check wheel alignment. If necessary, rotate & balance wheels				X		X		X		X	MA-25, 26 FA-6
Check brake pads, disc & other brake components for wear, deterioration & leaks★			X	X	X	X	X	X	X	X	MA-25
Check seat belts, buckles, retractors & adjuster				X		X		X		X	MA-27
Check foot brake, hand brake & clutch for free play, stroke & operation			X	X	X	X	X	X	X	X	CL-5, BR-7, 29
Check body corrosion		Annually									MA-28

NOTE: Maintenance items with "★" should be performed more frequently according to "Maintenance under severe driving conditions".

Check: Check. Correct or replace if necessary.

MAINTENANCE UNDER SEVERE DRIVING CONDITIONS

The maintenance intervals shown on the preceding pages are for normal operating conditions. if the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table.

Severe driving conditions

A — Driving under dusty conditions
B — Driving repeatedly short distances
C — Towing a trailer
D — Extensive idling
E — Driving in areas using salt or other corrosive materials
F — Driving on rough and/or muddy roads or in the desert
G — Driving with frequent use of braking or in mountainous areas

Driving condition	Maintenance item	Maintenance operation	Maintenance interval	Reference page
A	Air cleaner filter	Replace	More frequently	MA-16
A B C D . . .	Engine oil & oil filter	Replace		MA-16, 17
. . C . . F .	Automatic & manual transmission oil, differential gear oil	Replace	Every 36,000 miles (60,000 km) or 24 months	MA-22, 23
. . . . E F .	Steering gear & linkage, axle & suspension parts, propeller shaft, drive shafts & exhaust system	Check	Every 9,000 miles (15,000 km) or 6 months	MA-21, 23, 26 FA-5, RA-5, 7
A . C . E F G	Brake pads, discs & other brake components	Check	Every 4,500 miles (7,500 km) or 3 months	MA-25

Maintenance operation: Check = Check. Correct or replace if necessary

General maintenance includes those items which should be checked during the normal day-to-day operation of the vehicle. They are essential if the vehicle is to continue operating properly. The owners can perform the checks and inspections themselves or they can have their NISSAN dealers do them for a nominal charge.


Item	Reference pages
OUTSIDE THE VEHICLE The maintenance items listed here should be performed from time to time, unless otherwise specified.	
Tires Check the pressure with a gauge periodically when at a service station, including the spare, and adjust to the specified pressure if necessary. Check carefully for damage, cuts or excessive wear.	—
Windshield wiper blades Check for cracks or wear if they do not wipe properly.	—
Doors and engine hood Check that all doors, the engine hood, the trunk lid and back door operate properly. Also ensure that all latches lock securely. Lubricate if necessary. Make sure that the secondary latch keeps the hood from opening when the primary latch is released. When driving in areas using road salt or other corrosive materials, check for lubrication frequently.	MA-27
Tire rotation Tires should be rotated every 10,000 km (6,000 miles).	MA-26
INSIDE THE VEHICLE The maintenance items listed here should be checked on a regular basis, such as when performing periodic maintenance, cleaning the vehicle etc.	
Lights Make sure that the headlights, stop lights, tail lights, turn signal lights, and other lights are all operating properly and installed securely. Also check headlight aim.	—
Warning lights and chimes Make sure that all warning lights and chimes are operating properly.	—
Steering wheel Check for change in the steering conditions, such as excessive free play, hard steering or strange noises. **Free play: Less than 35 mm (1.38 in)**	—
UNDER THE HOOD AND VEHICLE The maintenance items listed here should be checked periodically e.g. each time you check the engine oil or refuel.	
Windshield washer fluid Check that there is adequate fluid in the tank.	—
Engine coolant level Check the coolant level when the engine is cold.	MA-13
Engine oil level Check the level after parking the vehicle on a level spot and turning off the engine.	MA-16
Brake and clutch fluid level Make sure that the brake and clutch fluid level is between the "MAX" and "MIN" lines on the reservoir.	MA-21, 24
Battery Check the fluid level in each cell. It should be between the "MAX" and "MIN" lines.	—


Fluids and Lubricants

	Capacity (Approximate)		Recommended fluids and lubricants
	Liter	Imp measure	
Engine oil (Refill)			
With oil filter	3.5	3-1/8 qt	API SF/CC, SF/CD, SE or SG*
Without oil filter	3.1	2-3/4 qt	
Cooling system (With reservoir tank)	7.0	6-1/8 qt	Anti-freeze coolant (Ethylene glycol base) or soft water
Manual transmission gear oil	2.4	4-1/4 pt	API GL-4*
Differential carrier gear oil	1.8	3-1/8 pt	API GL-5*
Automatic transmission fluid	7.9	7 qt	Type DEXRON ™
Power steering fluid	0.9	3/4 qt	
Brake and clutch fluid	—	—	DOT 3 (US FMVSS No. 116)
Multi-purpose grease	—	—	NLGI No. 2 (Lithium soap base)

* For further details, see "SAE Viscosity Number".


SAE Viscosity Number

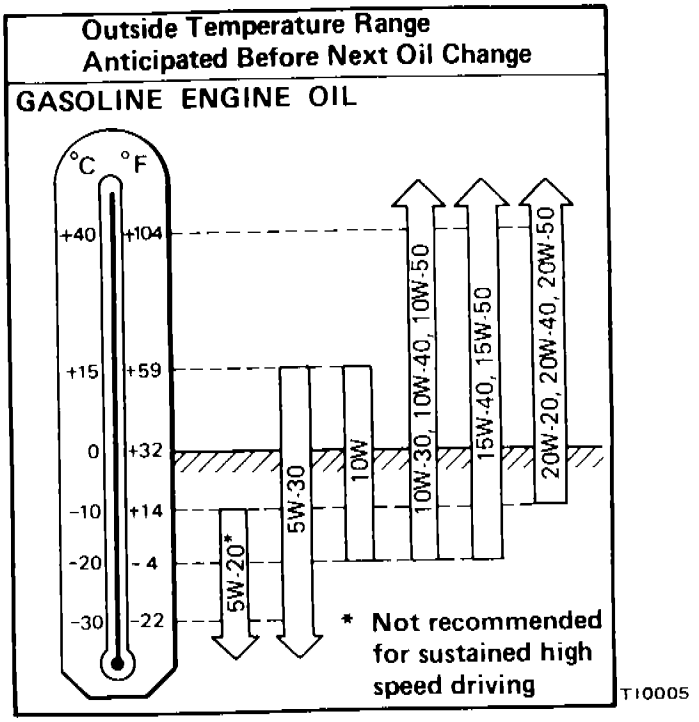

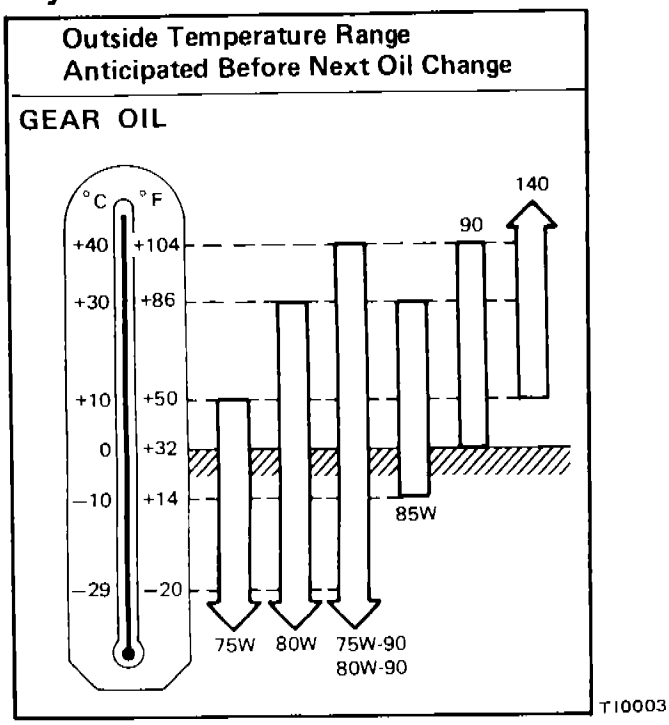

- For warm and cold areas: 10W-30 is preferable for ambient temperatures above –20°C (–4°F).
- For hot areas: 20W-40 and 20W-50 are suitable.
- For turbo engines: 5W-20 is not recommended. 5W-30 should be used only under extremely cold conditions.

- For warm and cold areas: 75W-90 for transmission and 80W-90 for differential carrier are preferable.
- For hot areas: 90 is suitable for ambient temperatures below 40°C (104°F).

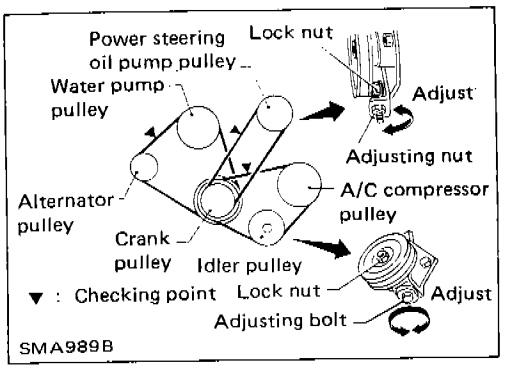

Checking Drive Belts

1. Inspect for cracks, fraying, wear or oil adhesion. If necessary, replace with a new one.
2. Inspect drive belt deflections by pushing on the belt midway between pulleys.


Adjust if belt deflections exceed the limit.

Belt deflection:

Unit: mm (in)

	Used belt deflection		Set deflection of new belt
	Limit	Adjusted deflection	
Alternator	8 (0.31)	4.5 - 5.5 (0.177 - 0.217)	4 - 5 (0.16 - 0.20)
Air conditioner compressor	12 (0.47)	7 - 9 (0.28 - 0.35)	6 - 8 (0.24 - 0.31)
Power steering oil pump	15 (0.59)	10 - 12 (0.39 - 0.47)	9 - 11 (0.35 - 0.43)
Applied pushing force	98 N (10 kg, 22 lb)		

Inspect drive belt deflections when engine is cold.

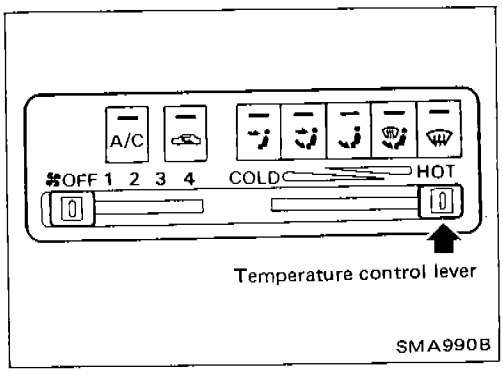


Changing Engine Coolant


WARNING:

To avoid being scalded, never change the coolant when the engine is hot.

1. Move heater "TEMP" control lever all the way to "HOT" position.

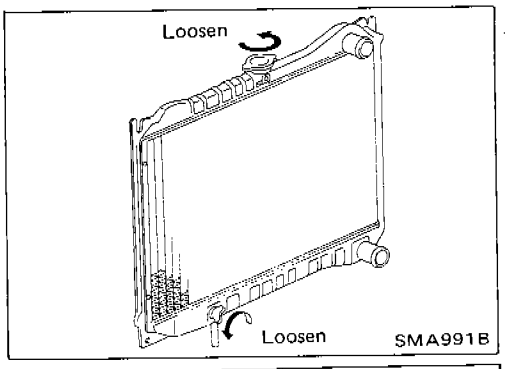


2. Open drain cock at the bottom of radiator, and remove radiator cap.
   - **Be careful not to allow coolant to contact drive belts.**

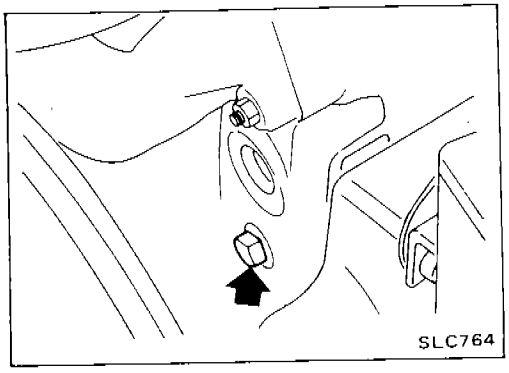


3. Remove cylinder block drain plug.
4. Close drain cock and tighten drain plug securely.
5. Fill radiator with water and warm up engine.
6. Stop engine and wait until it cools down.
7. Repeat step 2 through step 6 until clear water begins to drain from radiator.
8. Drain water.
   - **Apply sealant to the thread of drain plug.**
   - **: 54 - 74 N·m (5.5 - 7.5 kg-m, 40 - 54 ft-lb)**

Changing Engine Coolant (Cont'd)

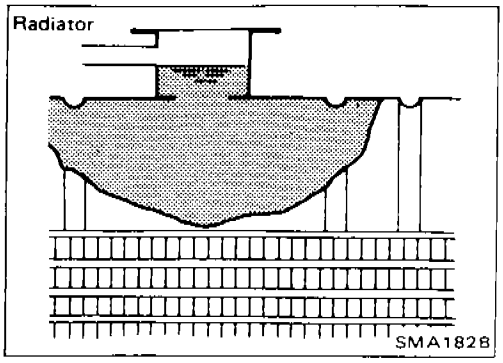

9. Fill radiator with coolant up to specified level.
   Follow instructions attached to anti-freeze container for mixing ratio of anti-freeze to water.
   Coolant capacity (With reservoir tank):
   7.0 ℓ (6-1/8 Imp qt)

Pour coolant through coolant filler neck slowly to allow air in system to escape.

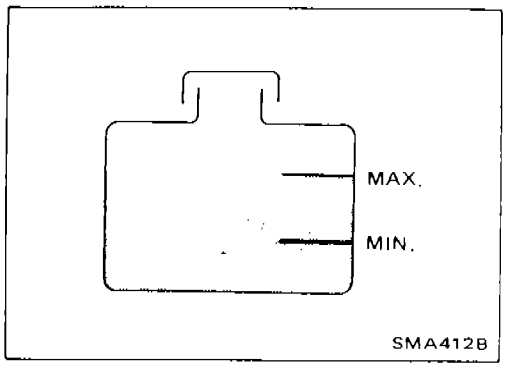


10. Remove reservoir tank, drain coolant, then clean reservoir tank.
11. Fill reservoir tank with coolant up to "MAX" level.
12. Run engine and warm it up.
13. Stop engine and cool it down, then add coolant as necessary.

Checking Cooling System

CHECKING HOSES


Check hoses for improper attachment and for leaks, cracks, damage, loose connections, chafing and deterioration.

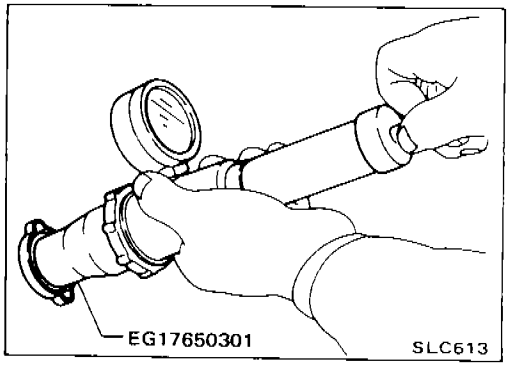

CHECKING RADIATOR CAP

Apply pressure to radiator cap with cap tester to see if it is satisfactory.


Radiator cap relief pressure:
78 - 98 kPa
(0.78 - 0.98 bar, 0.8 - 1.0 kg/cm^2, 11 - 14 psi)

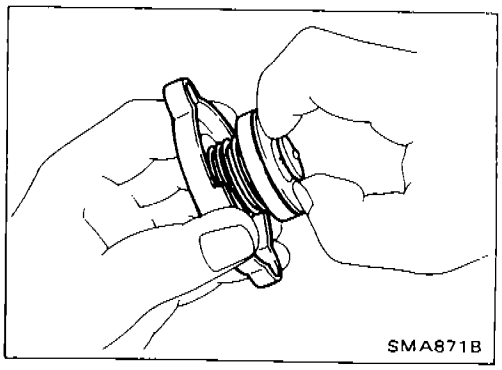

Pull the negative-pressure valve to open it. Check that it closes completely when released.

Checking Cooling System (Cont'd)

CHECKING COOLING SYSTEM FOR LEAKS

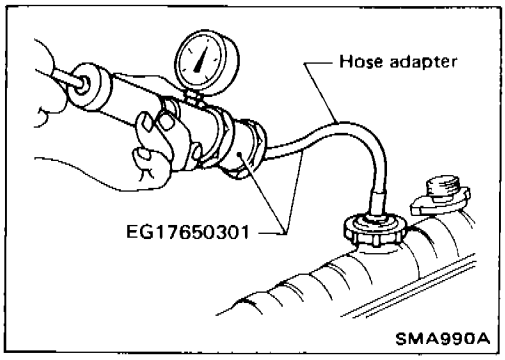

Apply pressure to the cooling system with cap tester to check for leakage.

Testing pressure:

98 kPa (0.98 bar, 1.0 kg/cm^2, 14 psi)


CAUTION:

Higher pressure than the specified value may cause damage to radiator.

Checking Fuel Lines

Inspect fuel lines and tank for improper attachment and for leaks, cracks, damage, loose connections, chafing and deterioration.

If necessary, repair or replace faulty parts.

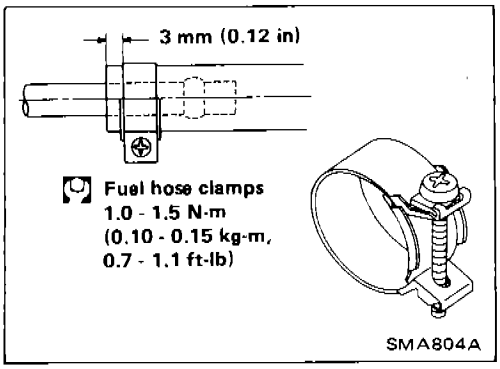

CAUTION:

Tighten high-pressure rubber hose clamp so that clamp end is 3 mm (0.12 in) from hose end.


Tightening torque specifications are the same for all rubber hose clamps.

Ensure that screw does not contact adjacent parts.

Changing Fuel Filter


WARNING:

Before removing fuel filter, release fuel pressure from fuel line to eliminate danger.

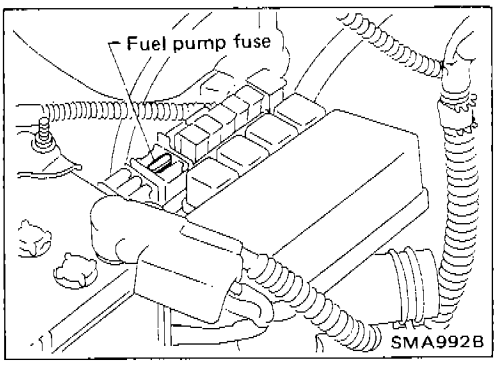

1. Remove fuse for fuel pump.
2. Start engine.
3. After engine stalls, crank engine two or three times to make sure that fuel pressure is released.
4. Turn ignition switch off and install fuse for fuel pump.


Changing Fuel Filter (Cont'd)

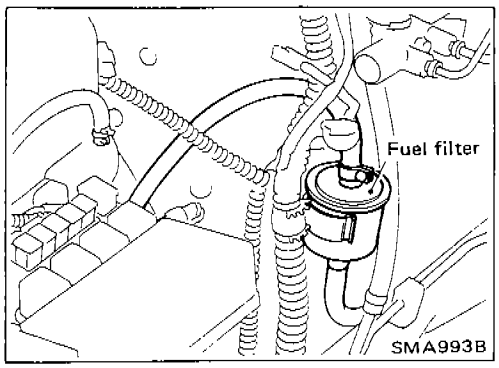

5. Loosen fuel hose clamps.
6. Replace fuel filter.

- **Be careful not to spill fuel over engine compartment. Place a shop towel to absorb fuel.**
- **Use a high-pressure type fuel filter. Do not use a synthetic resinous fuel filter.**
- **When tightening fuel hose clamps, refer to "Checking Fuel Lines".**


Changing Air Cleaner Filter

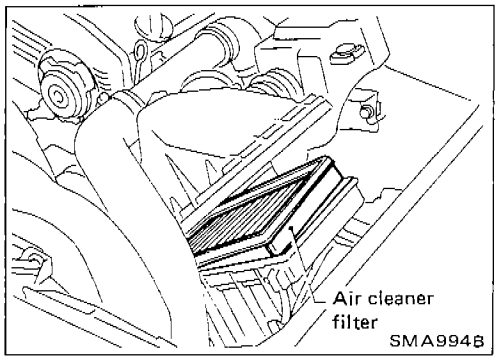

Viscous paper type

The viscous paper type filter does not need cleaning between renewals.

Changing Engine Oil

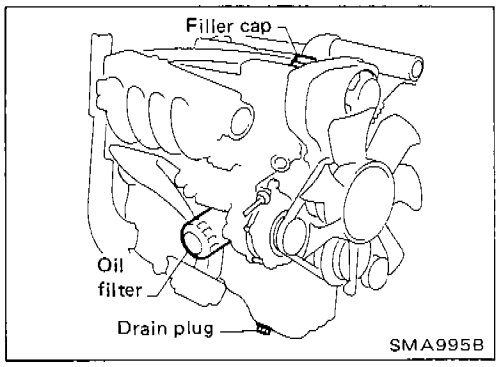

WARNING:

Be careful not to burn yourself, as the engine oil is hot.

1. Warm up engine, and check for oil leakage from engine components.
2. Remove drain plug and oil filler cap.
3. Drain oil and refill with new engine oil.

Refill oil capacity (Approximate):

With oil filter change

3.5 ℓ (3-1/8 Imp qt)

Without oil filter change

3.1 ℓ (2-3/4 Imp qt)


CAUTION:

- **Be sure to clean drain plug and install with new washer.**

  Drain plug:

  : 29 - 39 N·m (3.0 - 4.0 kg-m, 22 - 29 ft-lb)
- **Use recommended engine oil.**

Changing Engine Oil (Cont'd)

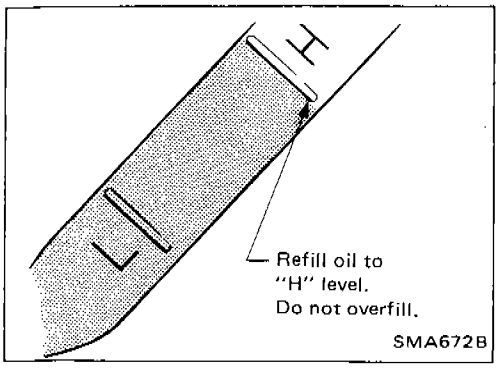


4. Check oil level.
5. Start engine and check area around drain plug and oil filter for oil leakage.
6. Run engine for a few minutes, then turn it off. After several minutes, check oil level.

Changing Oil Filter


1. Remove oil filter.

WARNING:

Be careful not to burn yourself, as the engine and the engine oil are hot.

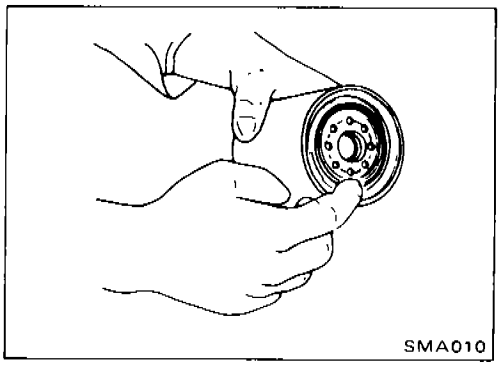

2. Before installing new oil filter, clean the oil filter mounting surface on cylinder block, and coat the rubber seal of oil filter with a little engine oil.

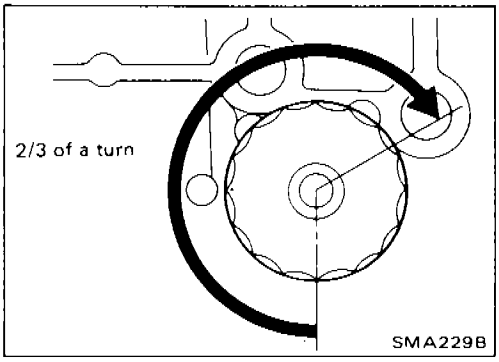


3. Screw in the oil filter until a slight resistance is felt, then tighten additionally more than 2/3 turn.
4. Add engine oil.

Refer to "Changing Engine Oil".


Checking and Changing Spark Plugs

1. Remove ornament cover.

Checking and Changing Spark Plugs (Cont'd)

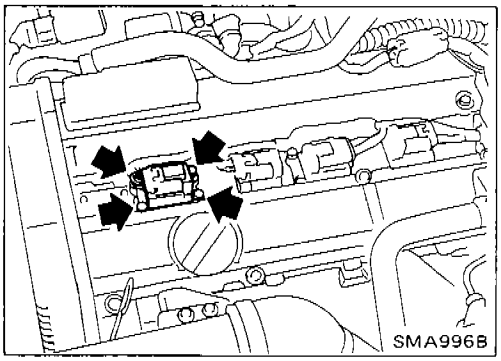

2. Disconnect harness connector between ignition coil and power transistor.
3. Remove ignition coil bracket fixing bolts and pull out this bracket with ignition coils.

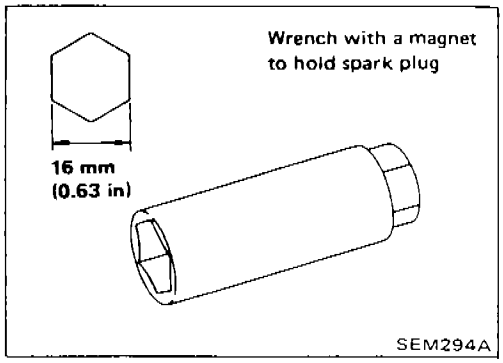


4. Remove spark plugs with suitable spark plug wrench.

— For model with catalyzer —

Spark plug (Platinum-tipped type):

Standard type	PFR6A-11
Hot type	PFR5A-11
Cold type	PFR7A-11

: 20 - 29 N·m (2.0 - 3.0 kg-m, 14 - 22 ft-lb)

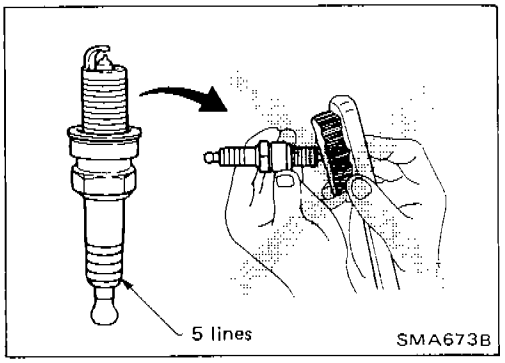

- Checking and adjusting plug gap are not required between renewals.
- Never use a wire brush for cleaning.
- If plug tip is covered with carbon, spark plug cleaner can be used.


Cleaner air pressure:
Less than 588 kPa
(5.9 bar, 6 kg/cm^2, 85 psi)

Cleaning time:
Less than 20 seconds

— For model without catalyzer —

Spark plug (Conventional type):


Standard type	BCPR6ES-11
Hot type	BCPR5ES-11
Cold type	BCPR7ES-11

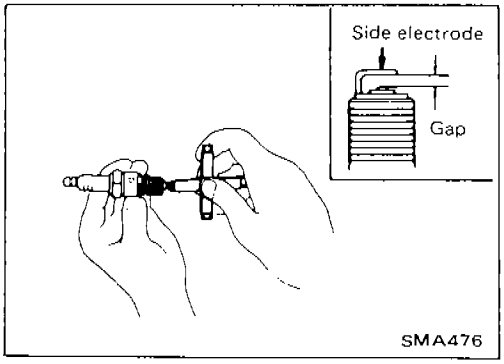

When using conventional type spark plugs, check spark plug gap. (Non-catalyzer models only)

Gap:
1.0 - 1.1 mm (0.039 - 0.043 in)

Spark plug:
: 20 - 29 N·m (2.0 - 3.0 kg-m, 14 - 22 ft-lb)

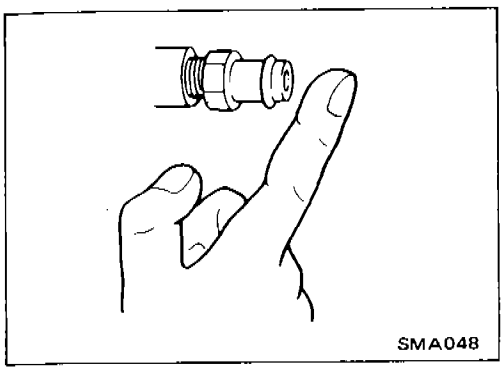


Checking Positive Crankcase Ventilation (P.C.V.) System

CHECKING P.C.V. VALVE

With engine running at idle, remove ventilation hose from P.C.V. valve; if valve is working properly, a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet.

Checking Vacuum Hoses and Connections

Check vacuum hoses for improper attachment and for leaks, cracks, damage, loose connections, chafing and deterioration.

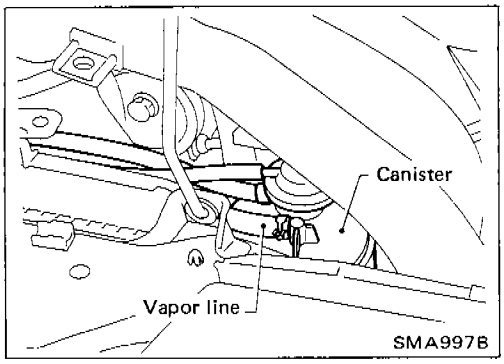



Checking Vapor Lines

1. Visually inspect vapor lines for improper attachment and for cracks, damage, loose connections, chafing and deterioration.
2. Inspect vacuum relief valve of fuel tank filler cap for clogging, sticking, etc.
   Refer to "EVAPORATIVE EMISSION CONTROL SYSTEM" in EF & EC section.

Checking Exhaust Gas Sensor


Checking procedure

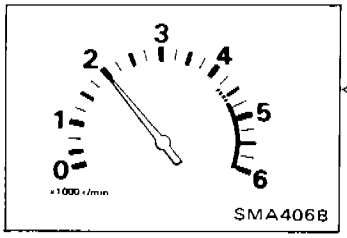

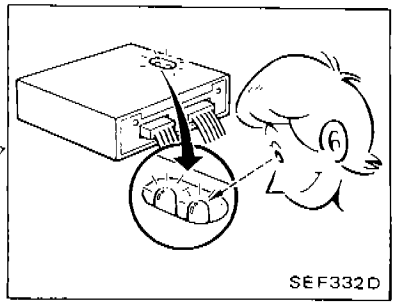


* • Make sure that diagnostic mode is mode I or mode II.
  • Make sure that diagnostic mode selector is turned fully counter-clockwise.

Refer to Self-diagnosis in EF & EC section.

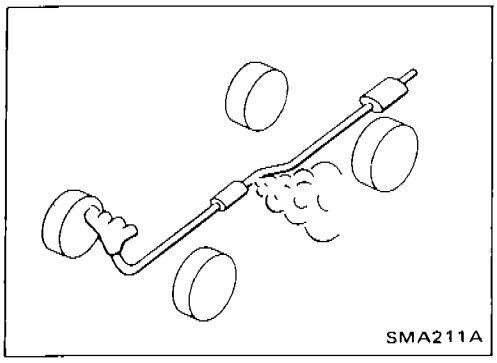
SMA211A

Checking Exhaust System


- Check exhaust pipes, muffler and mounting for improper attachment and for leaks, cracks, damage, loose connections, chafing and deterioration.

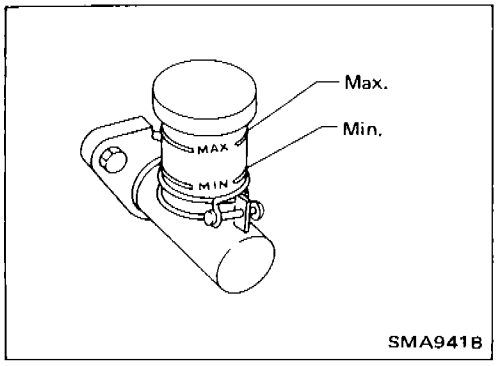

SMA941B

Checking Clutch Fluid Level and Leaks


- If fluid level is extremely low, check clutch system for leaks.

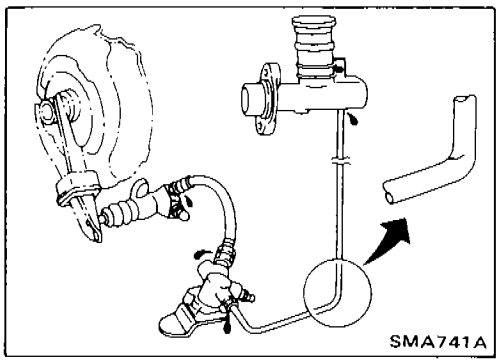
SMA741A

Checking Clutch System


HYDRAULIC TYPE

Check fluid lines and operating cylinder for improper attachment, cracks, damage, loose connections, chafing and deterioration.

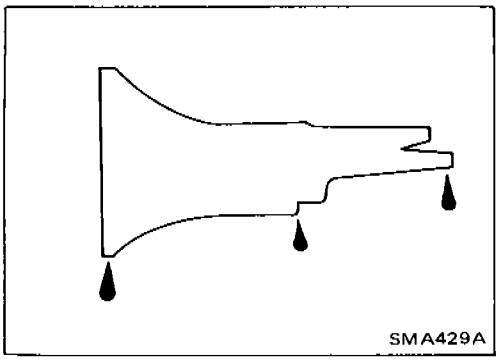
SMA429A

Checking M/T Oil

1. Check for oil leakage.

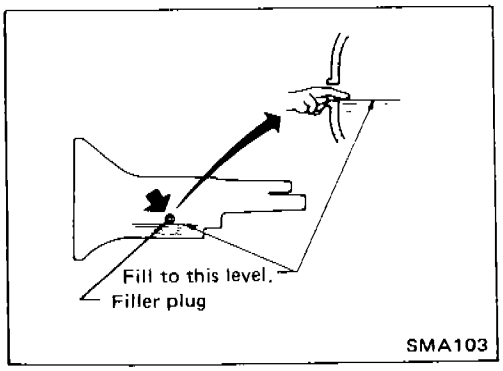


SMA103

2. Check oil level.

Never start engine while checking oil level.

Filler plug:


: 25 - 34 N·m (2.5 - 3.5 kg-m, 18 - 25 ft-lb)

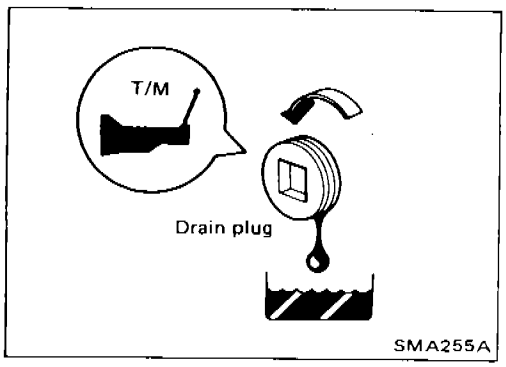

Changing M/T Oil


1. Drain oil and refill with new gear oil.
2. Check oil level.

Oil capacity:
2.4 ℓ (4-1/4 Imp pt)
Drain plug:
: 25 - 34 N·m (2.5 - 3.5 kg-m, 18 - 25 ft-lb)

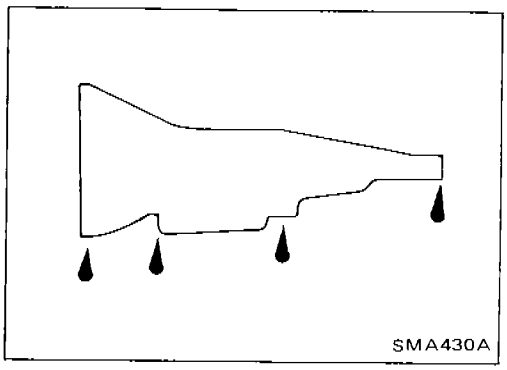

Checking A/T Fluid


1. Check for fluid leakage.

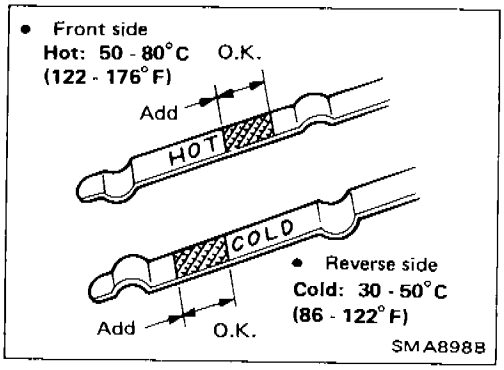


2. Check fluid level.
Fluid level should be checked using "HOT" range on dipstick at fluid temperatures of 50 to 80°C (122 to 176°F) after vehicle has been driven approximately 5 minutes in urban areas after engine is warmed up. But it can be checked at fluid temperatures of 30 to 50°C (86 to 122°F) using "COLD" range on dipstick for reference after engine is warmed up and before driving. However, fluid level must be rechecked using "HOT" range.

1) Park vehicle on level surface and set parking brake.
2) Start engine and then move selector lever through each gear range, ending in "P".
3) Check fluid level with engine idling.
4) Remove dipstick and wipe it clean with lint-free paper.
5) Reinsert dipstick into charging pipe as far as it will go.
6) Remove dipstick and note reading. If level is at low side of either range, add fluid to the charging pipe.

Do not overfill.

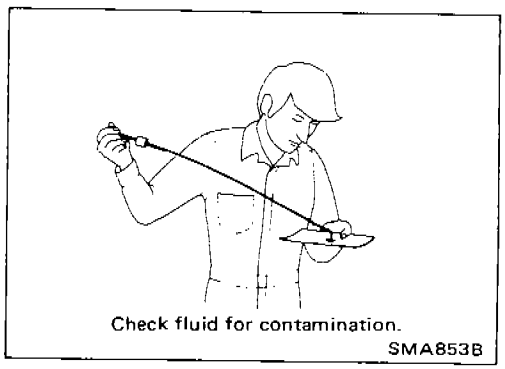


3. Check fluid condition.
Check fluid for contamination. If fluid is very dark or smells burned, or contains frictional material (clutches, band, etc.), check operation of A/T.
Refer to section AT for checking operation of A/T.

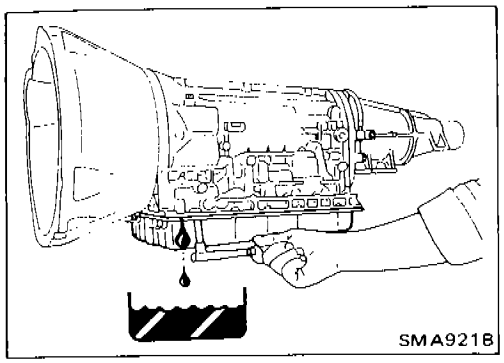
SMA921B

Changing A/T Fluid

1. Drain fluid by removing oil pan.
2. Replace gasket with new one.
3. Refill with fluid and then check fluid level.


Oil capacity (With torque converter):
7.9 ℓ (7 Imp qt)

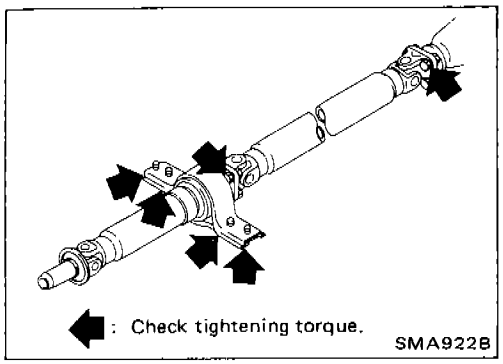

SMA922B


Checking Propeller Shaft

Check propeller shaft and center bearing for damage, looseness or grease leakage.
If greasing points are provided, supply grease as necessary.
Refer to section PD.

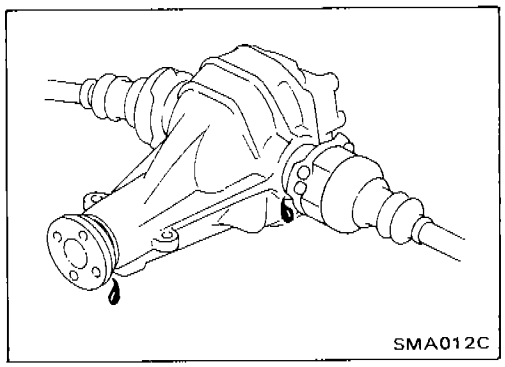
SMA012C

Checking Differential Gear Oil


1. Check differential carrier for oil leakage.

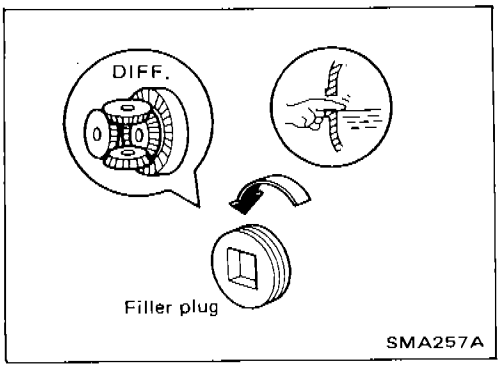

SMA257A

2. Check oil level.

Filler plug:
: 59 - 98 N·m (6 - 10 kg-m, 43 - 72 ft-lb)

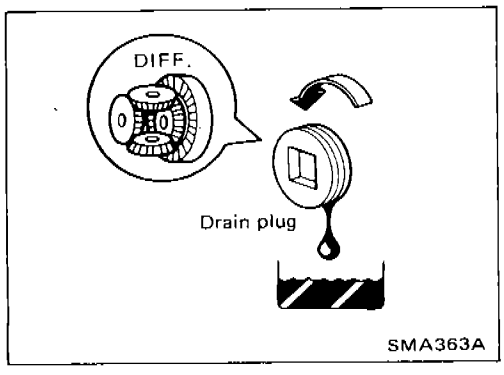


SMA363A

Changing Differential Gear Oil


1. Drain oil and refill with new gear oil.
2. Check oil level.

Oil capacity:
1.8 ℓ (3-1/8 Imp pt)
Drain plug:
: 59 - 98 N·m (6 - 10 kg-m, 43 - 72 ft-lb)

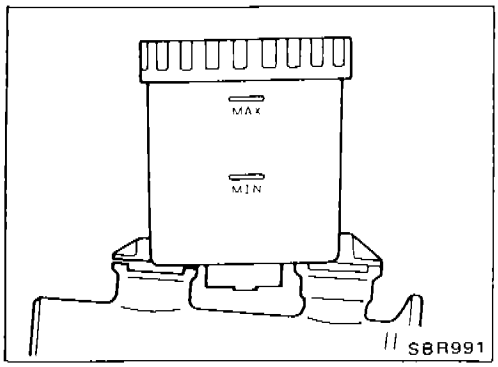


Checking Brake Fluid Level and Leaks

- If fluid level is extremely low, check brake system for leaks.

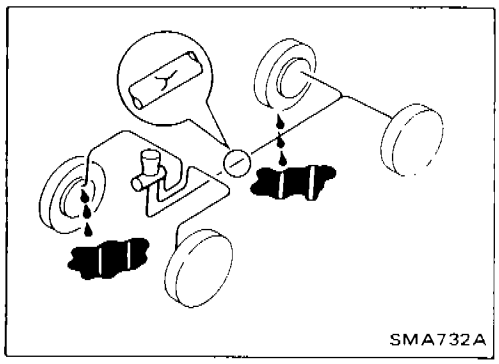

Checking Brake System


- Check brake fluid lines and parking brake cables for improper attachment and for leaks, chafing, abrasions, deterioration, etc.

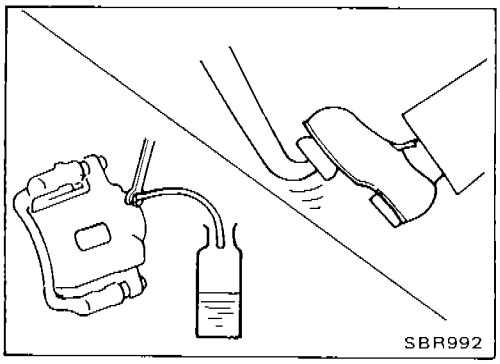

Changing Brake Fluid


1. Drain brake fluid from each air bleeder valve.
2. Refill until new brake fluid comes out from each air bleeder valve.
   Use same procedure as in bleeding hydraulic system to refill brake fluid.
   Refer to section BR.

- **Refill with recommended brake fluid "DOT 3".**
- **Never reuse drained brake fluid.**
- **Be careful not to splash brake fluid on painted areas.**

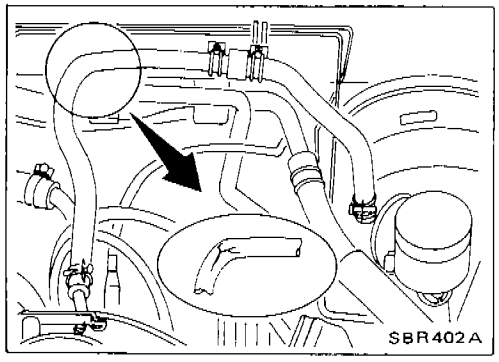

Checking Brake Booster, Vacuum Hoses, Connections and Check Valve

Check vacuum lines, connections and check valve for improper attachment, air tightness, chafing and deterioration.

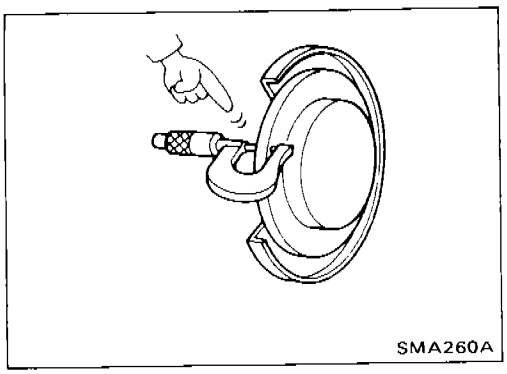
SMA260A

Checking Disc Brake


- Check condition of disc brake components.

ROTOR

- Check condition and thickness.


Unit: mm (in)

	Front		Rear	
	Except Europe	Europe	Except Europe	Europe
Disc brake type	CL18VB	CL25VA	CL9H	AD9
Standard thickness	18.0 (0.709)	22.0 (0.866)	9.0 (0.354)	
Minimum thickness	16.0 (0.630)	20.0 (0.787)	8.0 (0.315)	

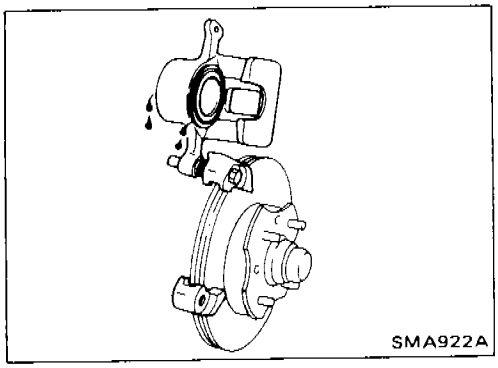
SMA922A

CALIPER

- Check operation and for leakage.

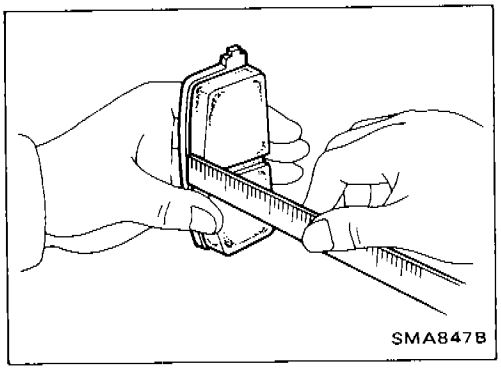
SMA847B

PAD

- Check for wear or damage.


Unit: mm (in)

	Front		Rear	
	Except Europe	Europe	Except Europe	Europe
Disc brake type	CL18VB	CL25VA	CL9H	AD9
Standard thickness	10.0 (0.394)	11.0 (0.433)	9.5 (0.374)	10.0 (0.394)
Minimum thickness	2.0 (0.079)			

Balancing Wheels

- Adjust wheel balance using road wheel center.

Wheel balance (Maximum allowable unbalance at rim flange):
Refer to S.D.S.
Tire balance weight: Refer to S.D.S.

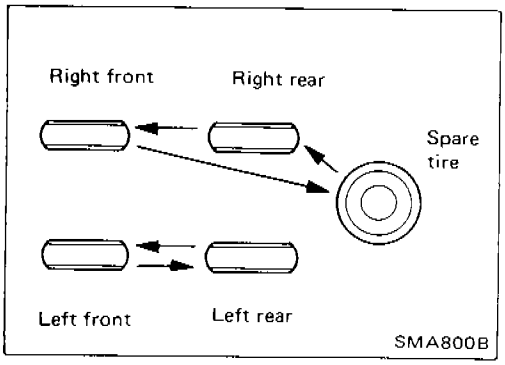


Tire Rotation

- **Do not include the T-type spare tire when rotating the tires.**

Wheel nuts:

: 98 - 118 N·m

(10.0 - 12.0 kg-m, 72 - 87 ft-lb)

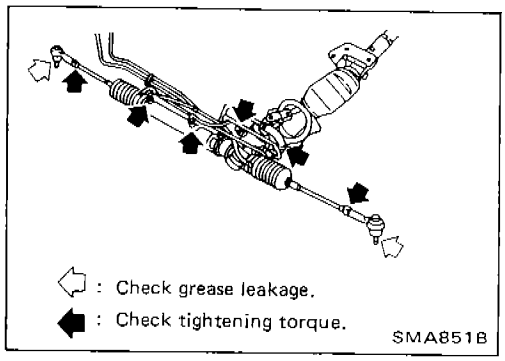


Checking Steering Gear and Linkage

STEERING GEAR

- Check gear housing and boots for looseness, damage or grease leakage.
- Check connection with steering column for looseness.


STEERING LINKAGE

- Check ball joint, dust cover and other component parts for looseness, wear, damage or grease leakage.

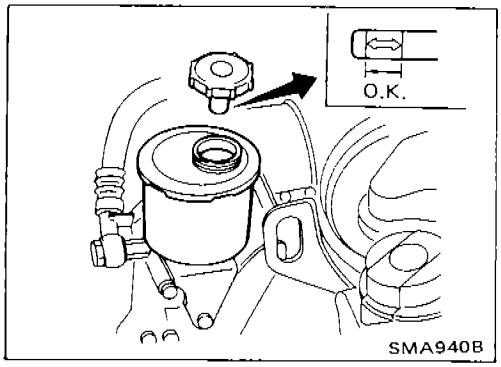


Checking Power Steering Fluid and Lines

- Check fluid level, when the fluid is cold.

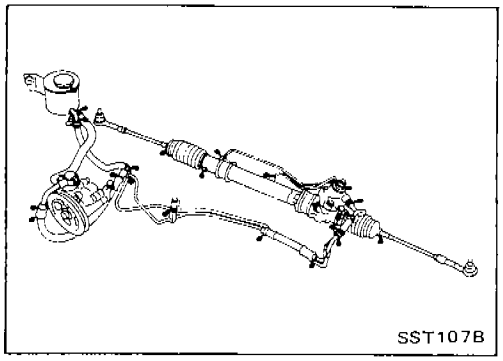

- Check lines for improper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.

LUBRICATING LOCKS, HINGES AND HOOD LATCHES

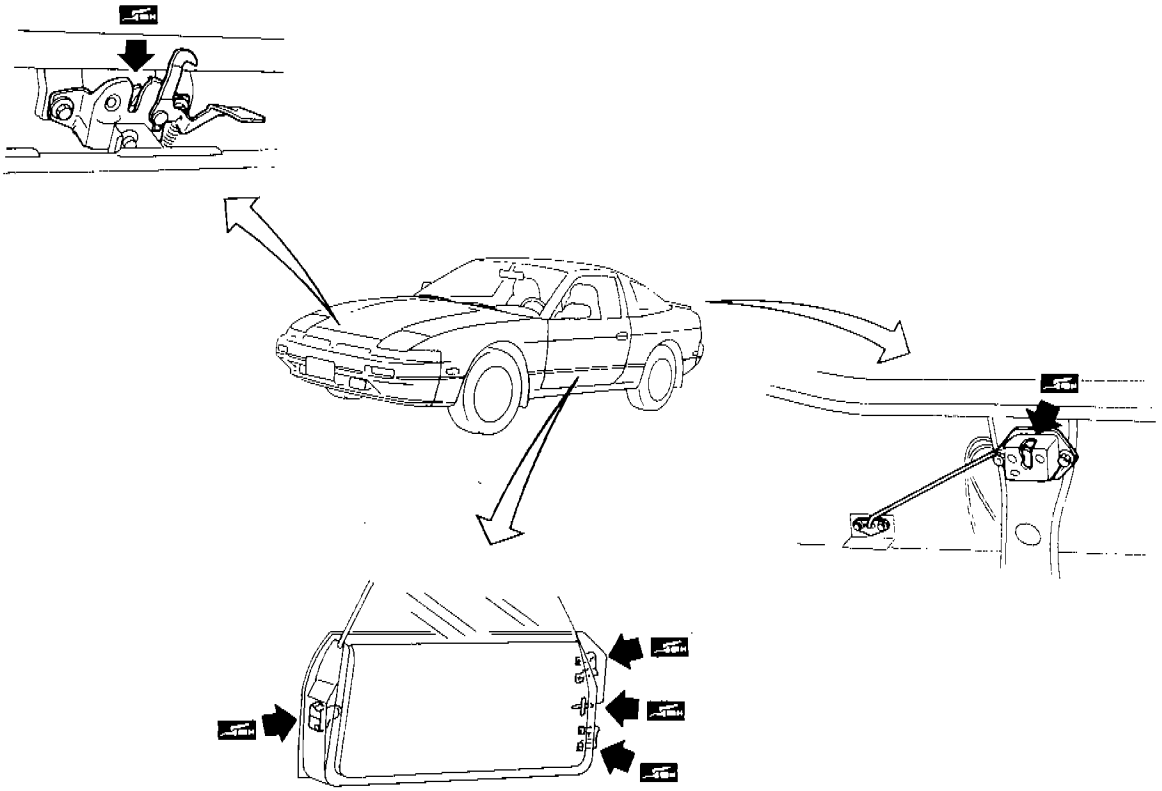


SMA045C

CHECKING SEAT BELTS, BUCKLES, RETRACTORS, ANCHORS AND ADJUSTERS

CAUTION:

1. If the vehicle is collided or overturned, replace the entire belt assembly, regardless of nature of accident.
2. If the condition of any component of a seat belt is questionable, do not have seat belt repaired, but replaced as a belt assembly.
3. If webbing is cut, frayed, or damaged, replace belt assembly.
4. Do not spill drinks, oil, etc. on inner lap belt buckle. Never oil tongue and buckle.
5. Use a NISSAN genuine seat belt assembly.

Anchor bolt
24 - 31 N·m
(2.4 - 3.2 kg-m, 17 - 23 ft-lb)

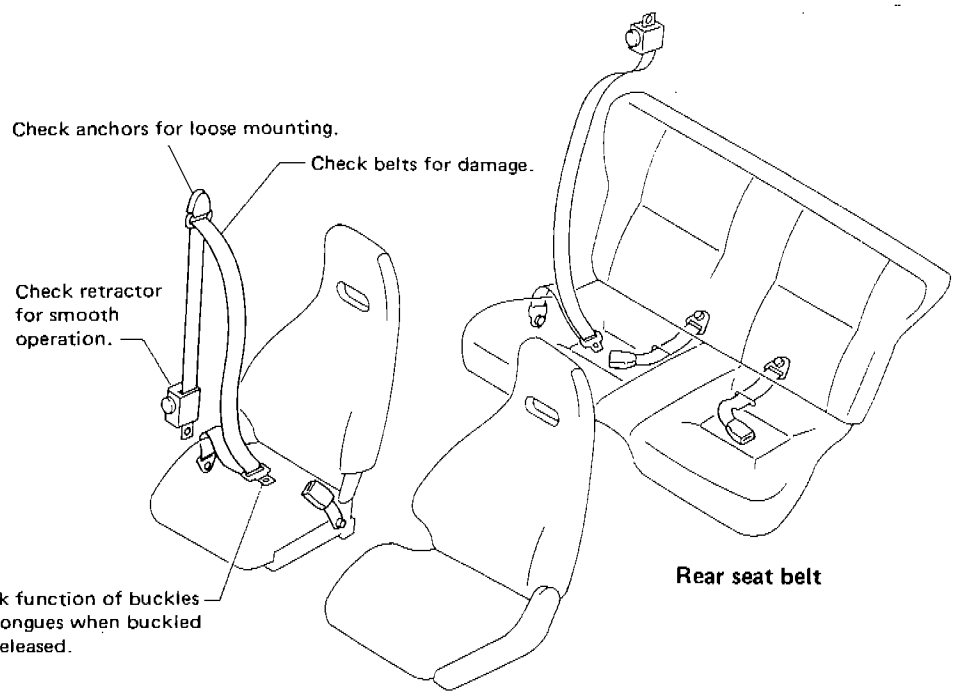

SMA046C

Checking Body Corrosion

Visually check the body sheet metal panel for corrosion, paint damage (scratches, chipping, rubbing, etc.) or damage to the anti-corrosion materials. In particular, check the following locations.

Hemmed portion

Hood front end, door lower end, trunk lid rear end, etc.

Panel joint

Side sill of rear fender and center pillar, rear wheel housing of rear fender, around strut tower in engine compartment, etc.

Panel edge

Trunk lid opening, sun roof opening, fender wheel-arch flange, fuel filler lid flange, around holes in panel, etc.

Parts contact

Waist moulding, windshield moulding, bumper, etc.

Protectors

Damage or condition of mudguard, fender protector, chipping protector, etc.

Anti-corrosion materials

Damage or separation of anti-corrosion materials under the body.

Drain holes

Condition of drain holes at door and side sill.

When repairing corroded areas, refer to the Corrosion Repair Manual.

Engine Maintenance

INSPECTION AND ADJUSTMENT

Drive belt deflection

Unit: mm (in)

	Used belt deflection		Set deflection of new belt
	Limit	Adjusted deflection	
Alternator	8 (0.31)	4.5 - 5.5 (0.177 - 0.217)	4 - 5 (0.16 - 0.20)
Air conditioner compressor	12 (0.47)	7 - 9 (0.28 - 0.35)	6 - 8 (0.24 - 0.31)
Power steering oil pump	15 (0.59)	10 - 12 (0.39 - 0.47)	9 - 11 (0.35 - 0.43)
Applied pushing force	98 N (10 kg, 22 lb)		

Coolant and oil capacity

Unit: ℓ (Imp qt)

Coolant (with reservoir tank)	Approx. 7.0 (6-1/8)
Reservoir tank	0.7 (5/8)
Engine oil	
With oil filter change	Approx. 3.5 (3-1/8)
Without oil filter change	Approx. 3.1 (2-3/4)

Spark plug

Platinum-tipped type (For model with catalyzer)

Standard type	PFR6A-11
Hot type	PFR5A-11
Cold type	PFR7A-11

Conventional type (For model without catalyzer)

Standard type		BCPR6ES-11
Hot type		BCPR5ES-11
Cold type		BCPR7ES-11
Gap	mm (in)	1.0 - 1.1 (0.039 - 0.043)

Cooling system

Unit: kPa (bar, kg/cm², psi)

Radiator cap relief pressure	78 - 98 (0.78 - 0.98, 0.8 - 1.0, 11 - 14)
Cooling system leakage testing pressure	98 (0.98, 1.0, 14)

TIGHTENING TORQUE

Unit	N·m	kg-m	ft-lb
Oil pan drain plug	29 - 39	3.0 - 4.0	22 - 29
Spark plug	20 - 29	2.0 - 3.0	14 - 22
Crank angle sensor	7 - 8	0.7 - 0.8	5.1 - 5.8
Crankshaft pulley	142 - 152	14.5 - 15.5	105 - 112
Timing belt tensioner pulley nut	22 - 29	2.2 - 3.0	16 - 22

Chassis and Body Maintenance

INSPECTION AND ADJUSTMENT

Clutch

Unit: mm (in)

Model	R.H.D.	L.H.D.
Pedal free height "H"	182 - 192 (7.17 - 7.56)	186 - 196 (7.32 - 7.72)
Pedal free play "A"	1.0 - 3.0 (0.039 - 0.118)	

Front axle and front suspension (Unladen)*

Camber	degree	−1°25′ to 5′	
Caster	degree	5°55′ - 7°25′	
Toe-in	mm (in)	0 - 2 (0 - 0.08)	
(Total toe-in)	degree	0′ - 12′	
Kingpin inclination	degree	12°25′ - 13°55′	
Front wheel turning angle Full turn Inside/Outside	degree	Except Europe L.H.D.	Europe L.H.D.
		39° - 43°/33°	36° - 40°/32°

*: Tankful of fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools, mats in designated position.

Rear axle and rear suspension (Unladen)*

Camber	degree	−1°40′ to −0°40′
Toe-out	mm (in)	0 - 5 (0 - 0.20)
(Total toe-out)	degree	0′ - 28′

*: Tankful of fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools, mats in designated position.

Wheel bearing

	Front	Rear
Wheel bearing axle end play mm (in)	0.03 (0.0012) or less	0.05 (0.0020) or less
Wheel bearing lock nut Tightening torque N·m (kg-m, ft-lb)	147 - 216 (15 - 22, 108 - 159)	235 - 314 (24 - 32, 174 - 231)

Brake

Unit: mm (in)

Disc brake			
Pad			
Standard thickness			
CL18VB		10.0 (0.394)	
CL25VA		11.0 (0.433)	
CL9H		9.5 (0.374)	
AD9		10.0 (0.394)	
Minimum thickness			
CL18VB, CL25VA		2.0 (0.079)	
CL9H, AD9		2.0 (0.079)	
Rotor			
Standard thickness			
CL18VB		18.0 (0.709)	
CL25VA		22.0 (0.866)	
CL9H, AD9		9.0 (0.354)	
Minimum thickness			
CL18VB		16.0 (0.630)	
CL25VA		20.0 (0.787)	
CL9H, AD9		8.0 (0.315)	
Pedal			
Free height			
M/T	L.H.D.	177 - 187 (6.97 - 7.36)	
	R.H.D.	178 - 188 (7.01 - 7.40)	
A/T	L.H.D.	186 - 196 (7.32 - 7.72)	
	R.H.D.	188 - 198 (7.40 - 7.80)	
Free play		1 - 3 (0.04 - 0.12)	
Depressed height [under force of 490 N (50 kg, 110 lb) with engine running]		L.H.D	R.H.D.
Except Europe	M/T	90 (3.54) or more	95 (3.74) or more
	A/T	100 (3.94) or more	100 (3.94) or more
Europe	M/T	85 (3.35) or more	90 (3.54) or more
	A/T	95 (3.74) or more	95 (3.74) or more
Parking brake Number of notches [at pulling force 196 N (20 kg, 44 lb)]		6 - 8	

Wheel balance

Wheel balance (Maximum allowable unbalance at rim flange) g (oz)	10 (0.35)
Tire balance weight g (oz)	5 - 60 (0.18 - 2.12) Spacing 5 (0.18)

TIGHTENING TORQUE

Unit	N·m	kg-m	ft-lb
Clutch			
Pedal stopper lock nut	16 - 22	1.6 - 2.2	12 - 16
Clutch switch lock nut	12 - 15	1.2 - 1.5	9 - 11
Manual transmission			
Drain and filler plugs	25 - 34	2.5 - 3.5	18 - 25
Final drive			
Drain plug	59 - 98	6 - 10	43 - 72
Filler plug	59 - 98	6 - 10	43 - 72
Front axle and front suspension			
Tie-rod lock nut	37 - 46	3.8 - 4.7	27 - 34
Camber adjusting pin	124 - 143	12.6 - 14.6	91 - 106
Rear axle and rear suspension			
Toe adjusting pin	69 - 88	7.0 - 9.0	51 - 65
Camber adjusting pin	69 - 88	7.0 - 9.0	51 - 65
Brake system			
Air bleed valve	7 - 9	0.7 - 0.9	5.1 - 6.5
Brake lamp switch lock nut	12 - 15	1.2 - 1.5	9 - 11
Brake booster input rod lock nut	16 - 22	1.6 - 2.2	12 - 16
Wheel and tire			
Wheel nut	98 - 118	10.0 - 12.0	72 - 87






ENGINE MECHANICAL







SECTION EM

CONTENTS







PREPARATION ..... EM- 2
OUTER COMPONENT PARTS ..... EM- 5
COMPRESSION PRESSURE ..... EM- 6
OIL PAN ..... EM- 7
TIMING BELT ..... EM- 9
OIL SEAL REPLACEMENT EM-14
CYLINDER HEAD EM-16
TURBOCHARGER EM-28
ENGINE REMOVAL EM-31
CYLINDER BLOCK EM-33
SERVICE DATA AND SPECIFICATIONS (S.D.S.) EM-44


SPECIAL SERVICE TOOLS

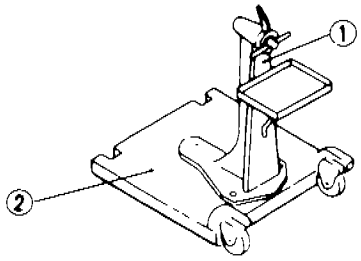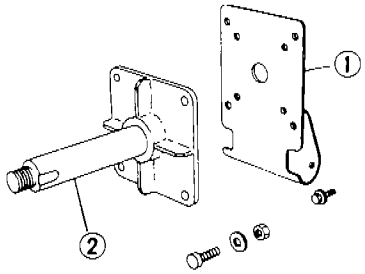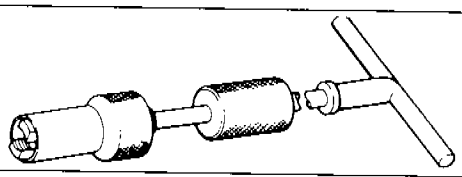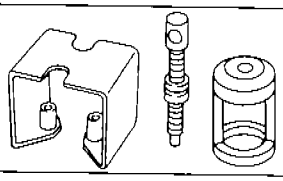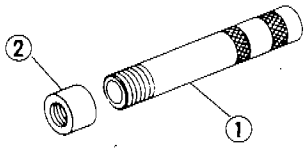Tool number Tool name	Description
ST0501S000 Engine stand assembly ① ST05011000 Engine stand ② ST05012000 Base	When overhauling engine 
Engine attachment assembly ① KV10108101 Engine attachment ② KV10106500 Sub-attachment	
KV10107901 Valve lip seal puller	Displacement valve lip seal 
KV10111300 Valve spring compressor	Disassembling and assembling valve components 
① KV10107501 Valve lip seal drift ② KV10111400 Valve oil seal drift attachment	Installing valve lip seal 

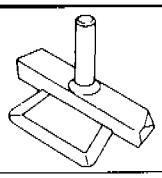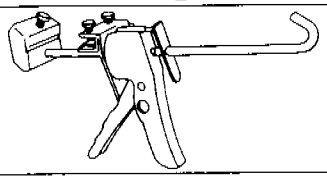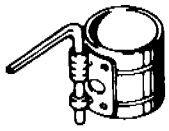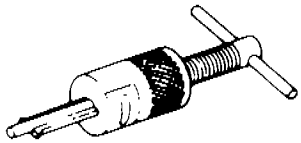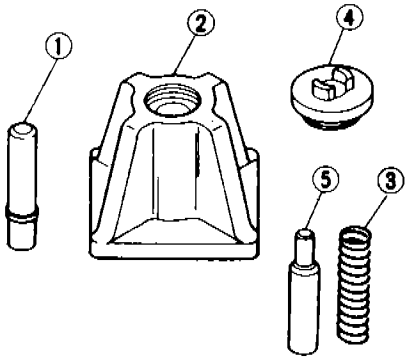Tool number Tool name	Description	
KV10111100 Seal cutter		Removing oil pan
WS39930000 Tube presser		Pressing the tube of liquid gasket
EM03470000 Piston ring compressor		Installing piston assembly into cylinder bore
ST16610001 Pilot bushing puller		Removing crankshaft pilot bushing
KV101070S0 Piston pin press stand ① KV10107010 Center shaft ② ST13030020 Stand ③ ST13030030 Spring ④ KV10107020 Cap ⑤ ST13030051 Drift		Disassembling and assembling piston with connecting rod
KV10113700 Exhaust gas sensor wrench		Removing and installing exhaust gas sensor


COMMERCIAL SERVICE TOOLS

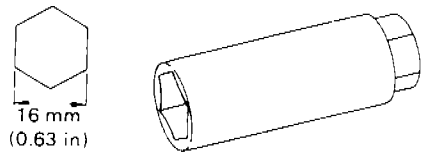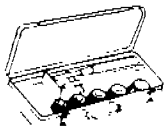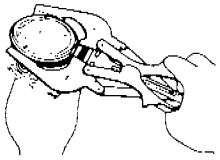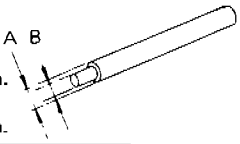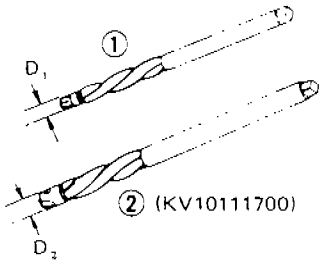
Tool name	Description	
Spark plug wrench		Removing and installing spark plug
Pulley holder		Holding camshaft pulley while tightening or loosening camshaft bolt
Valve seat cutter set		Finishing valve seat dimensions
Piston ring expander		Removing and installing piston ring
Valve guide drift	 **Intake & Exhaust:** **A = 9.5 mm (0.374 in) dia.** **B = 5.5 mm (0.217 in) dia.**	Removing and installing valve guide
Valve guide reamer	 **Intake & Exhaust:** **D_1 = 6.0 mm (0.236 in) dia.** **D_2 = 10.2 mm (0.402 in) dia.**	Reaming cylinder head for oversize valve guide ①. Reaming valve guide inner ②.

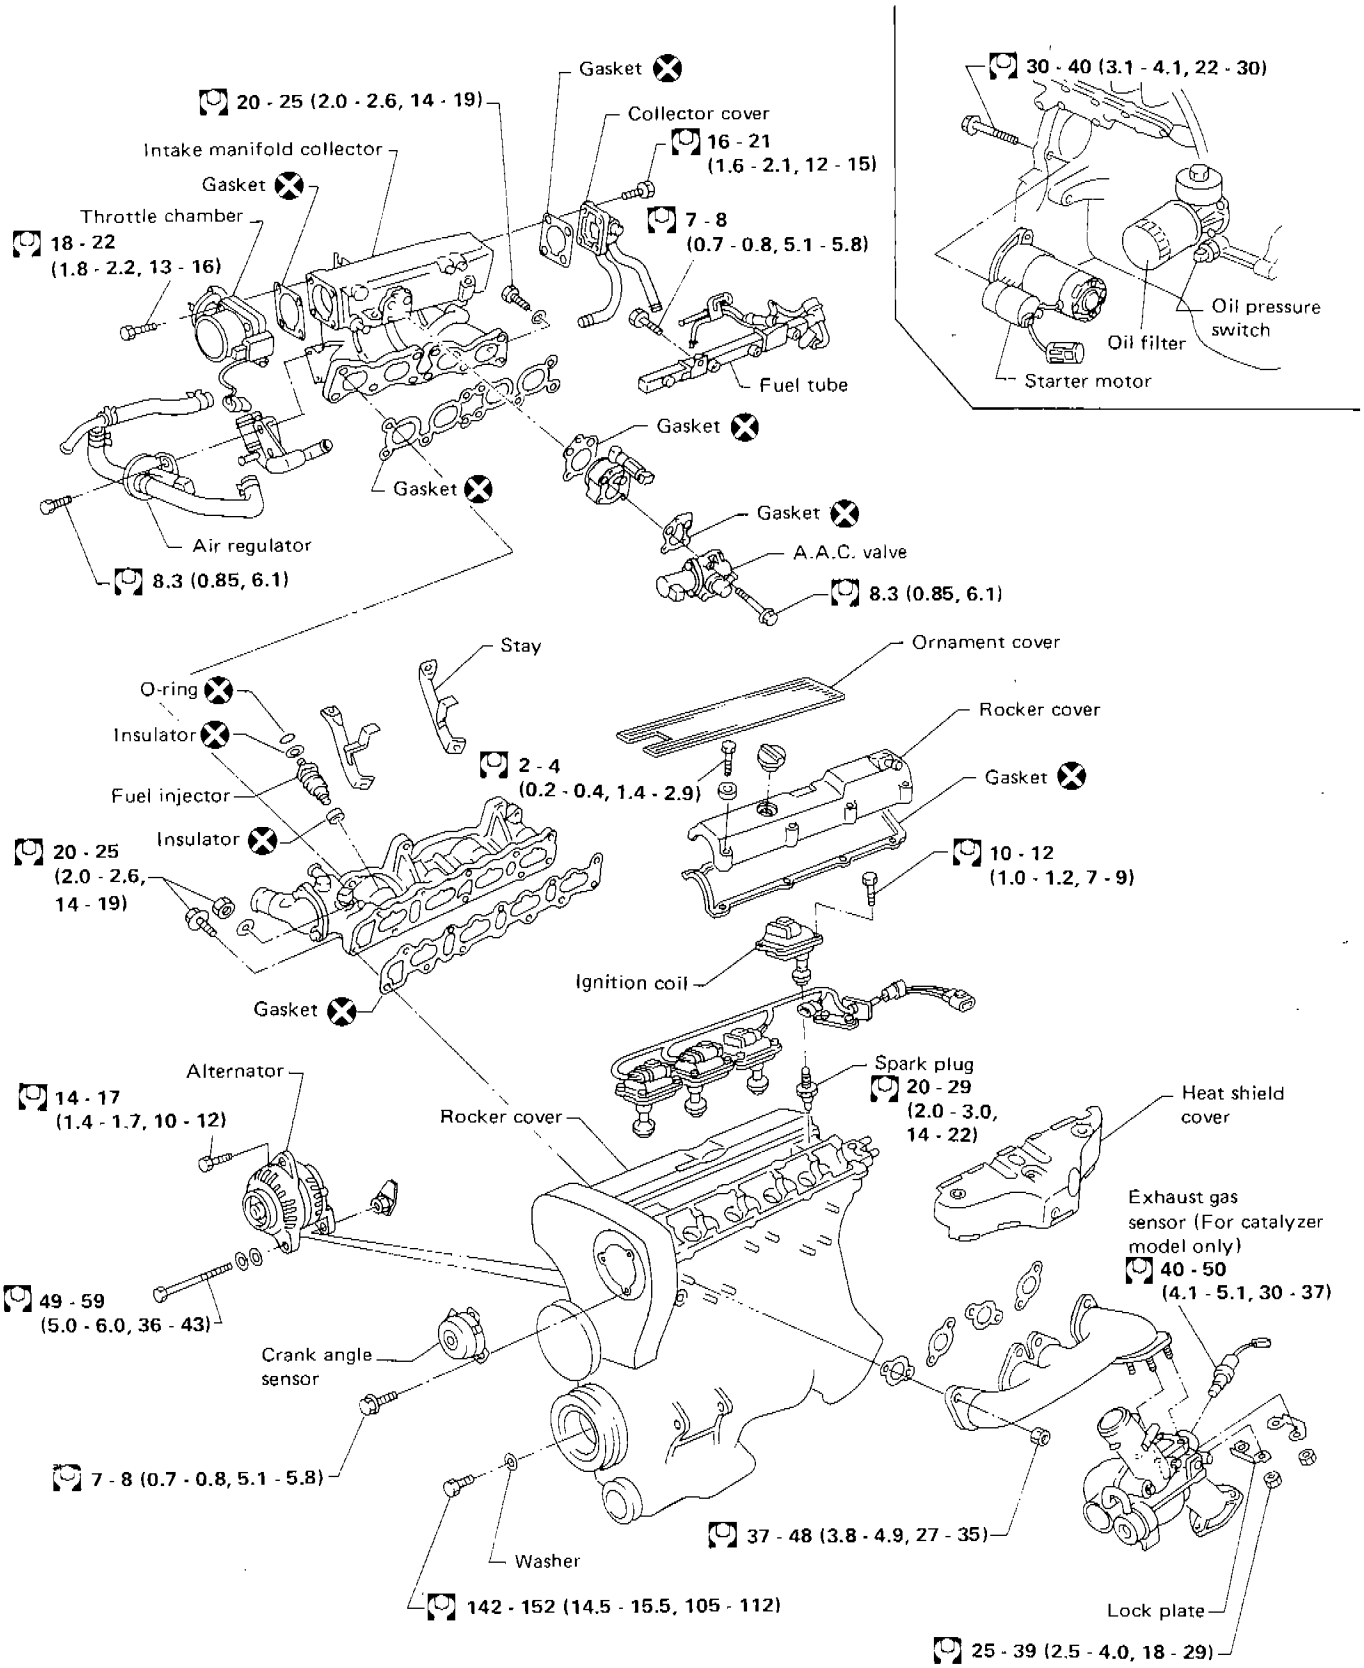

: N·m (kg-m, ft-lb)

SEM352C

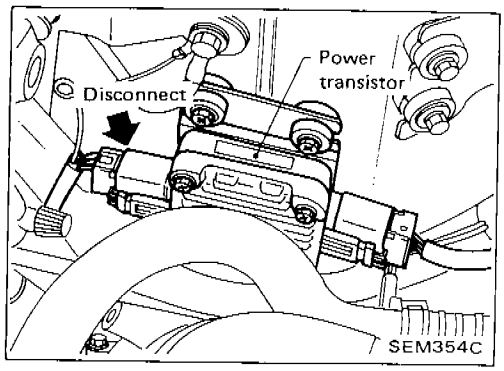

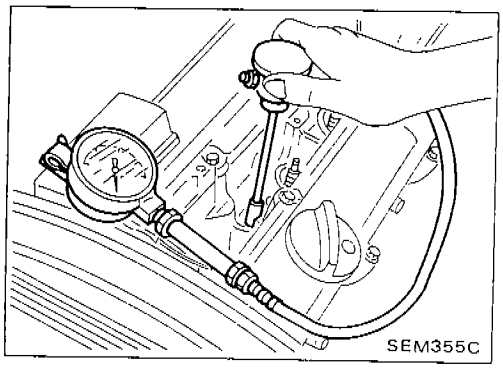

Measurement of Compression Pressure

1. Warm up engine.
2. Turn ignition switch off.
3. Release fuel pressure.
   Refer to "Releasing Fuel Pressure" in section EF & EC.
4. Remove all spark plugs.
5. Disconnect power transistor harness connector.
6. Attach a compression tester to No. 1 cylinder.
7. Depress accelerator pedal fully to keep throttle valve wide open.
8. Crank engine and record highest gauge indication.
9. Repeat the measurement on each cylinder as shown above.

- **Always use a fully-charged battery to obtain specified engine revolution.**


Compression pressure:
kPa (bar, kg/cm^2, psi)/rpm
Standard
1,177 (11.77, 12.0, 171)/350
Minimum
981 (9.81, 10.0, 142)/350
Differential limit between cylinders
98 (0.98, 1.0, 14)/350

10. If cylinder compression in one or more cylinders is low, pour a small amount of engine oil into cylinders through spark plug holes and retest compression.

- **If adding oil helps compression, piston rings may be worn or damaged. If so, replace piston rings after checking piston.**
- **If pressure stays low, a valve may be sticking or seating improperly. Inspect and repair valve and valve seat. (Refer to S.D.S.) If valve or valve seat is damaged excessively, replace them.**
- **If compression in any two adjacent cylinders is low and if adding oil does not help compression, there is leakage past the gasket surface. If so, replace cylinder head gasket.**

Removal


1. Drain engine oil.
2. Remove front stabilizer bar.
3. Loosen front engine mounting nuts. (Do not loosen completely.)
4. Lift up engine slightly using engine slingers.

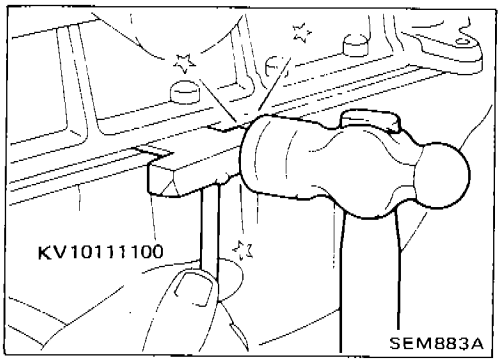


5. Remove oil pan.

(1) Insert Tool between cylinder block and oil pan.

- **Do not insert Tool into oil pump or rear oil seal retainer portion, or aluminum mating face will be damaged.**
- **Do not insert screwdriver, or oil pan flange will be deformed.**

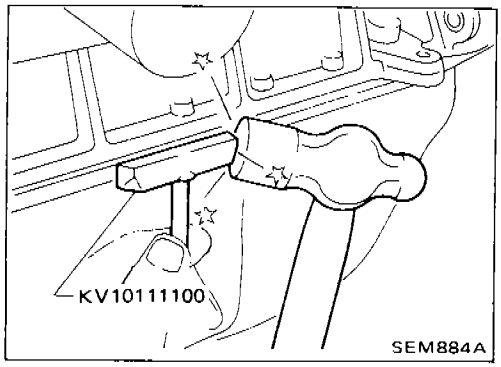


(2) Slide Tool by tapping its side with a hammer, and remove oil pan.

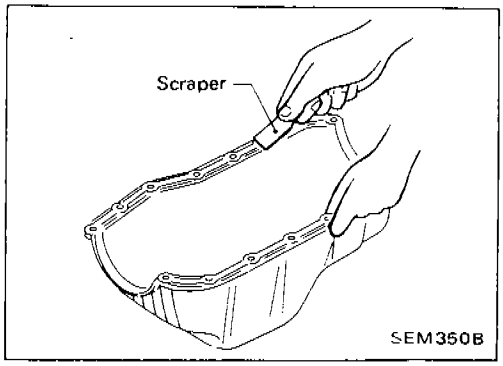

Installation


1. Before installing oil pan, remove all traces of liquid gasket from mating surface using a scraper.

- Also remove traces of liquid gasket from mating surface of cylinder block.

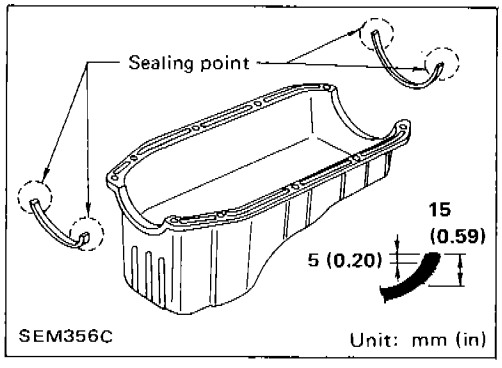


2. Apply liquid gasket to oil pump gasket and rear oil seal retainer gasket.


Installation (Cont'd)

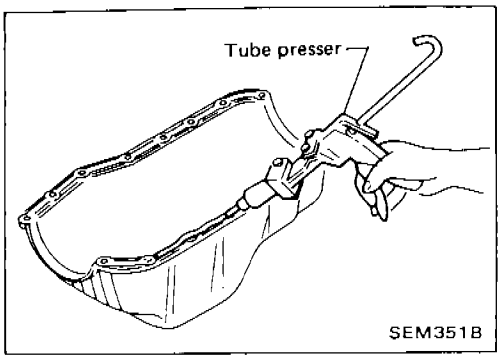

3. Apply a continuous bead of liquid gasket to mating surface of oil pan.
- **Use Genuine Liquid Gasket or equivalent.**

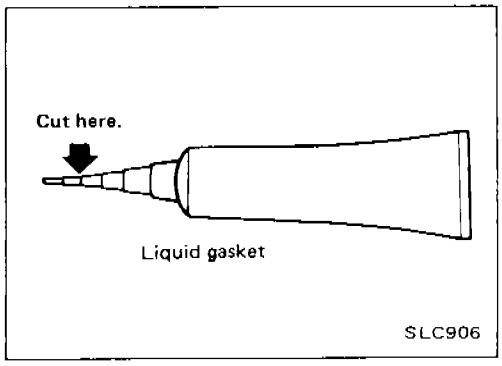


- Be sure liquid gasket is 3.5 to 4.5 mm (0.138 to 0.177 in) wide.

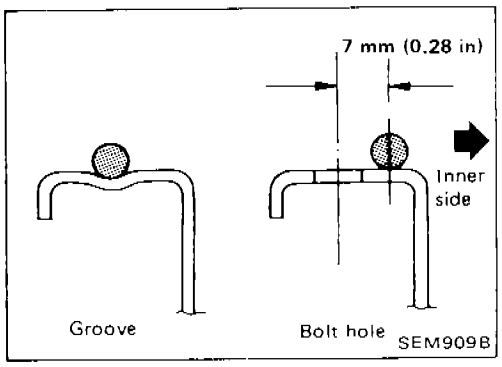

4. Apply liquid gasket to inner sealing surface as shown in figure.
- Attaching should be done within 5 minutes after coating.
5. Install oil pan.
- Wait at least 30 minutes before refilling engine oil.

CAUTION:

a. Do not bend or twist timing belt.
b. After removing timing belt, do not turn crankshaft and camshaft separately because valves will strike piston heads.
c. Make sure that timing belt, camshaft sprocket, crankshaft sprocket and belt tensioner are clean and free from oil and water.

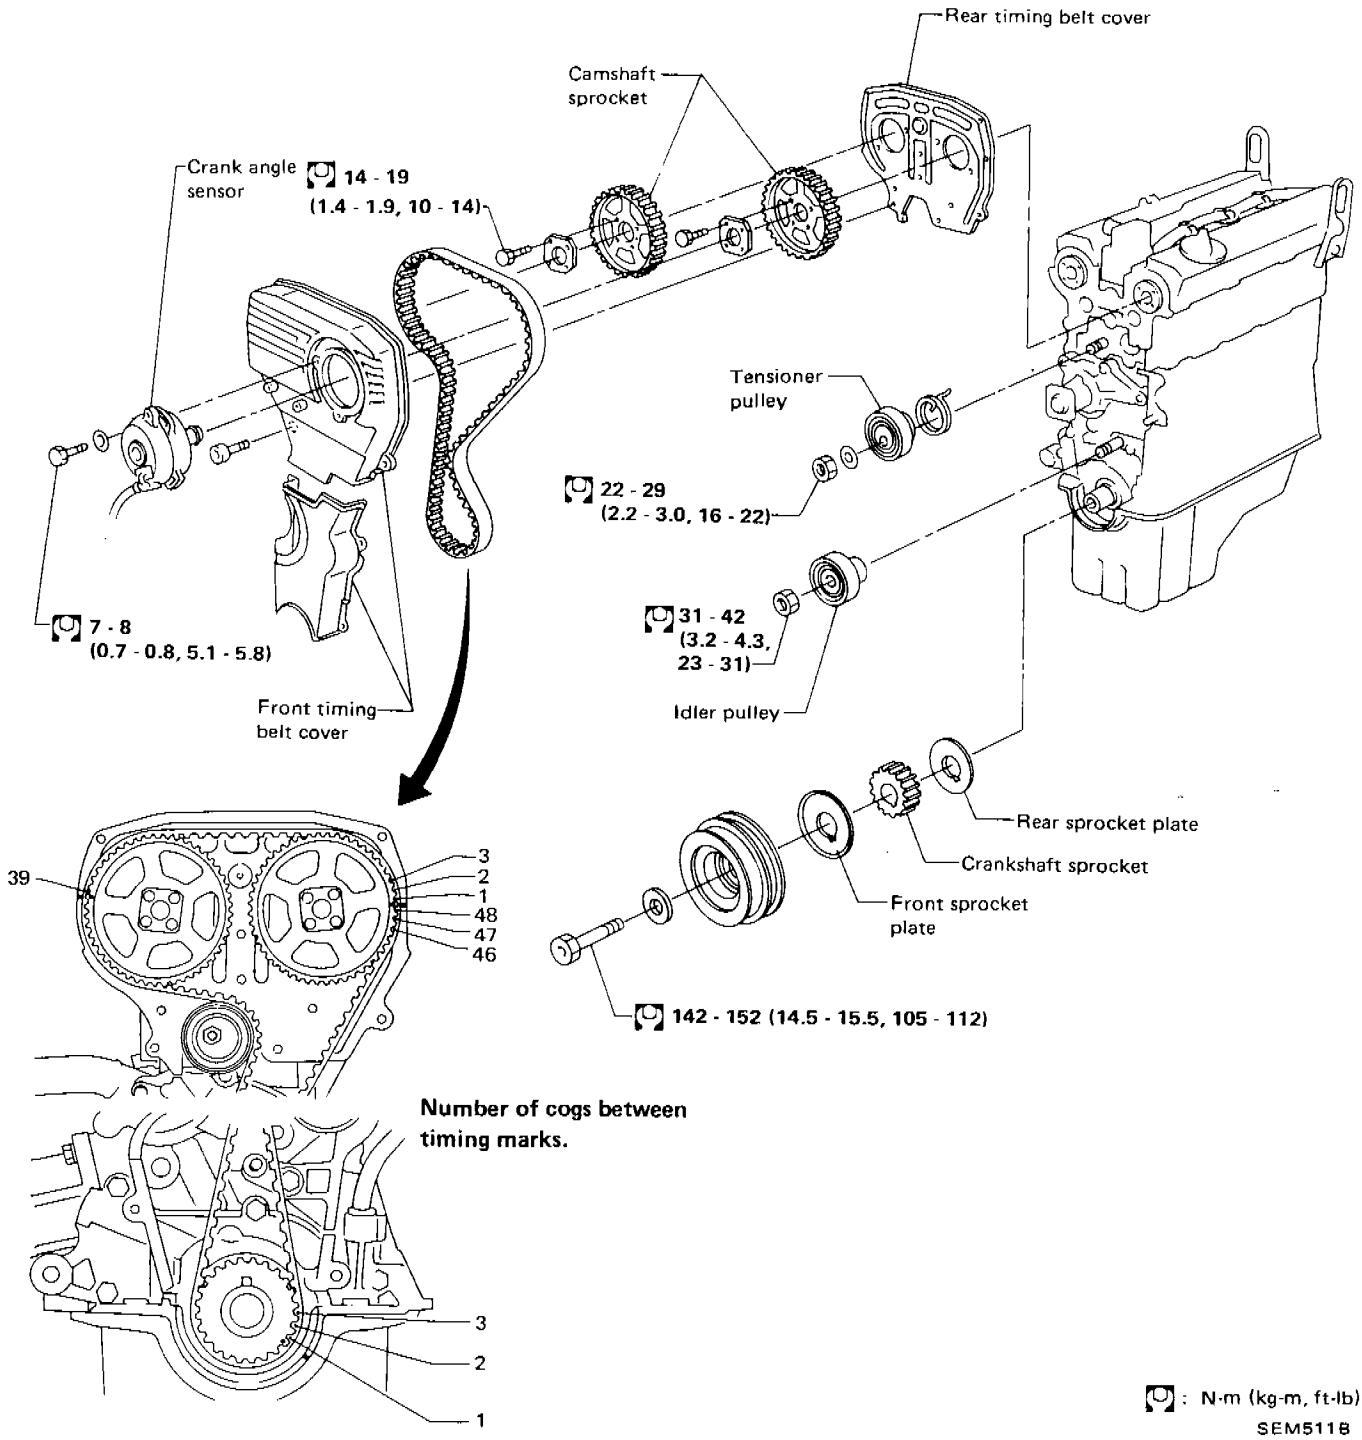

: N·m (kg-m, ft-lb)


SEM511B

Removal

1. Drain engine coolant from radiator.


Be careful not to spill coolant on drive belts.

2. Remove air duct, upper radiator hose, radiator shroud and under cover.
3. Remove the following belts.
- Power steering pump drive belt
- Compressor drive belt
- Alternator drive belt
4. Remove water pump pulley, fan and fan coupling.

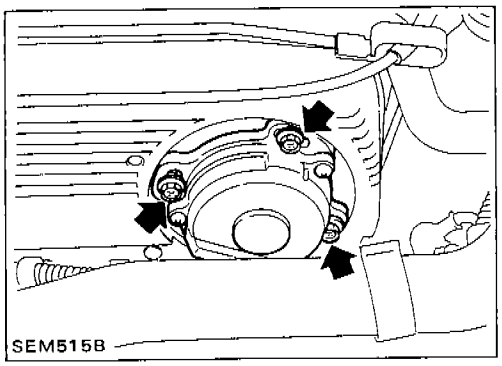


5. Remove crank angle sensor.


Put aligning mark on crank angle sensor and timing belt cover.

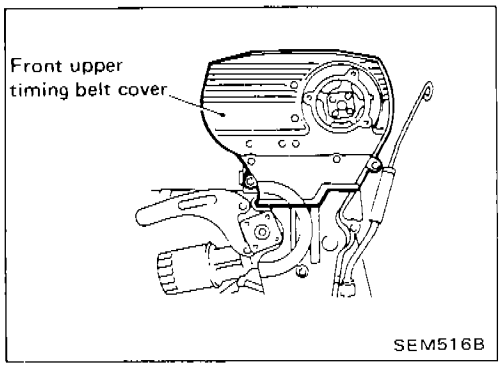

6. Remove front upper timing belt cover.
7. Remove all spark plugs.

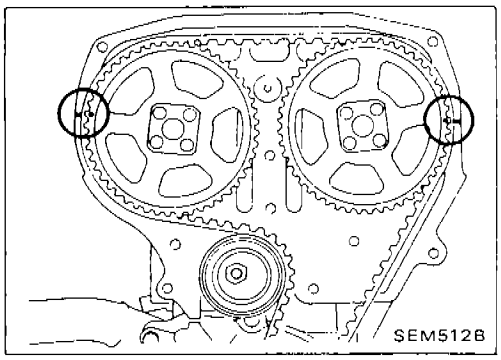





8. Set No. 1 piston at T.D.C. on its compression stroke.
9. Remove crankshaft pulley.

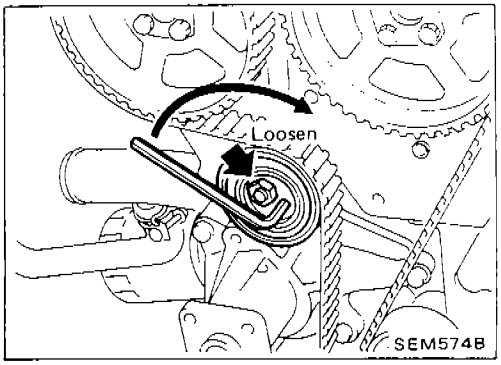


10. Remove front lower timing belt cover.
11. Loosen timing belt tensioner nut, turn tensioner, then remove timing belt.

Inspection

Visually check the condition of timing belt.
Replace if any abnormality is found.

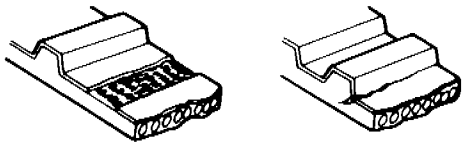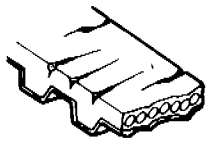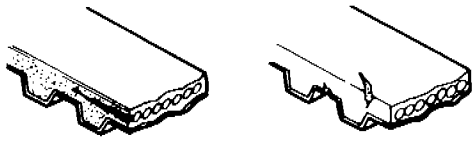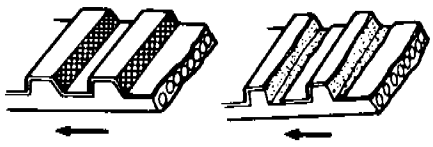Item to check	Problem	Cause
Tooth is broken/ tooth root is cracked.	 SEM394A	• Camshaft jamming • Distributor jamming • Damaged camshaft/crankshaft oil seal
Back surface is cracked/worn.	 SEM395A	• Tensioner jamming • Overheated engine • Interference with belt cover
Side surface is worn.	 • Belt corners are worn and round. • Wicks are frayed and coming out. SEM396A	• Improper installation of belt • Malfunctioning crankshaft pulley plate/ timing belt plate
Teeth are worn.	 Rotating direction • Canvas on tooth face is worn down. • Canvas on tooth is fluffy, rubber layer is worn down and faded white, or weft is worn down and invisible. SEM397A	• Poor belt cover sealing • Coolant leakage at water pump • Camshaft not functioning properly • Distributor not functioning properly • Excessive belt tension
Oil/Coolant or water is stuck to belt.		• Poor oil sealing of each oil seal • Coolant leakage at water pump • Poor belt cover sealing


Inspection (Cont'd)

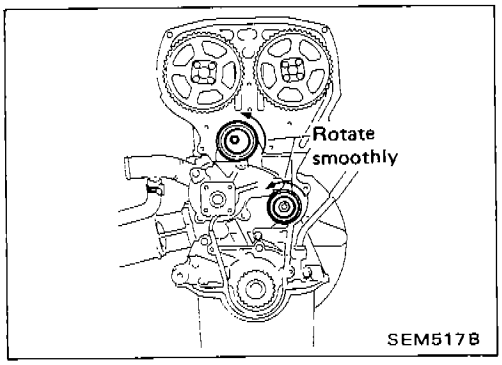


BELT TENSIONER, IDLER PULLEY AND TENSIONER SPRING

1. Check belt tensioner and idler pulley for smooth turning.
2. Check condition of tensioner spring.

Installation

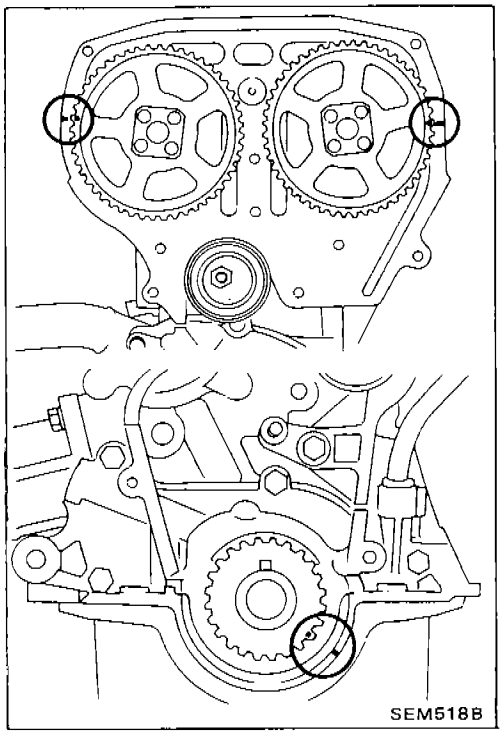


1. Confirm that No. 1 piston is set at T.D.C. on its compression stroke.
2. Install tensioner and tensioner spring.
- **Turn tensioner fully clockwise with hexagon wrench, and temporarily tighten lock nut.**

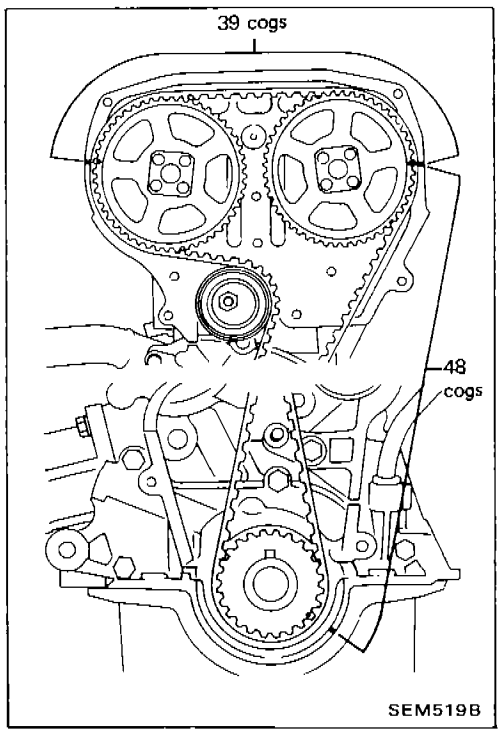


3. Set timing belt.

Align timing marks on timing belt and sprockets.

Installation (Cont'd)

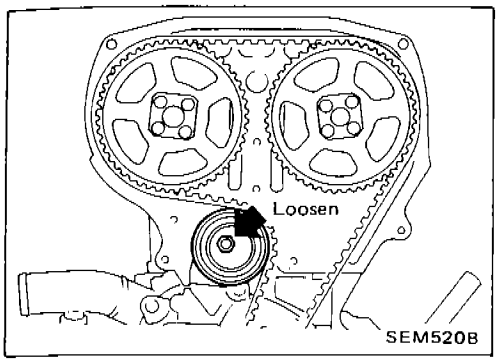


4. Loosen tensioner lock nut, keeping tensioner steady with hexagon wrench.
5. Rotate crankshaft at least two turns clockwise.
6. Adjust belt tension.
   Slowly swing tensioner with hexagon wrench clockwise and counterclockwise two or three times.
7. Tighten tensioner lock nut.

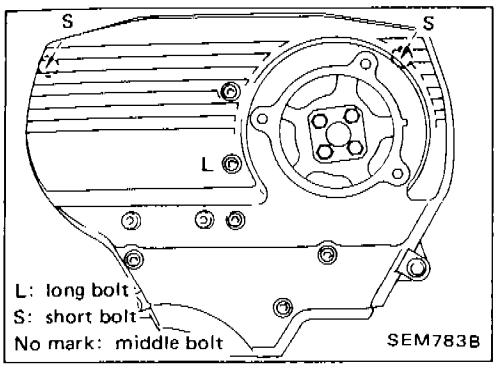


8. Install lower and upper timing belt covers.

9. Install crankshaft pulley with washer.
10. Install engine mount bracket.
11. Install crank angle sensor and water pump pulley.

Align marks on crank angle sensor and front cover that were made when crank angle sensor was removed.

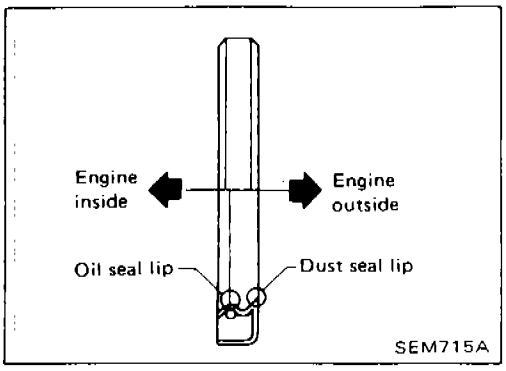

OIL SEAL INSTALLING DIRECTION

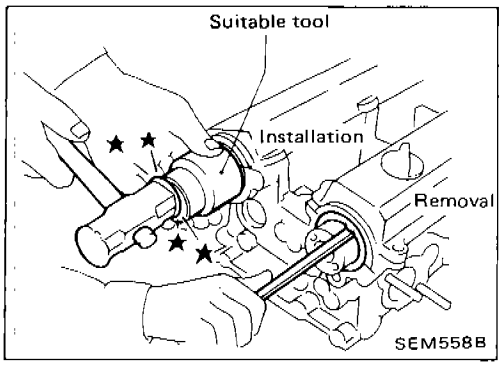


CAMSHAFT OIL SEAL

1. Set No. 1 piston at T.D.C. on its compression stroke.
2. Remove crank angle sensor, front cover, timing belt, camshaft sprockets and rear dust cover.
3. Remove camshaft oil seal.


Be careful not to scratch camshaft.

4. Apply engine oil to camshaft oil seal lip and install it in place.

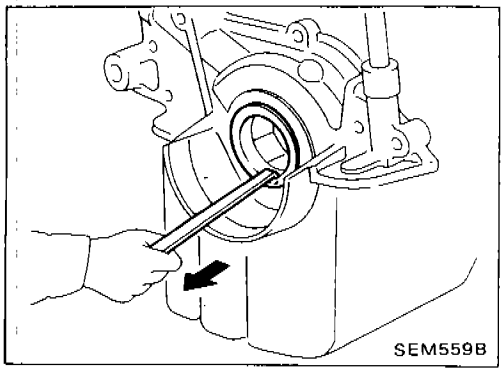


FRONT OIL SEAL

1. Set No. 1 piston at T.D.C. on its compression stroke.
2. Remove timing belt and crankshaft sprocket.
3. Remove front oil seal.
4. Apply engine oil to oil seal lip and install it in place using suitable tool.

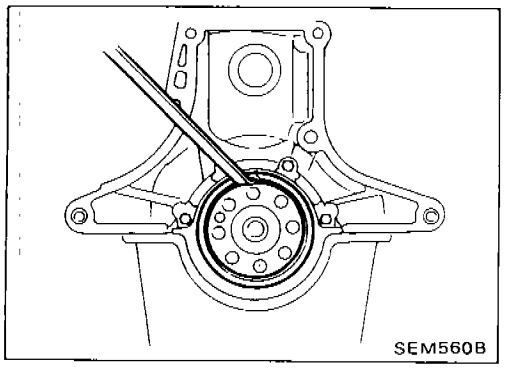


REAR OIL SEAL

1. Remove transmission and flywheel.
2. Remove rear oil seal from the retainer.
3. Apply engine oil to oil seal lip and install it in place using suitable tool.

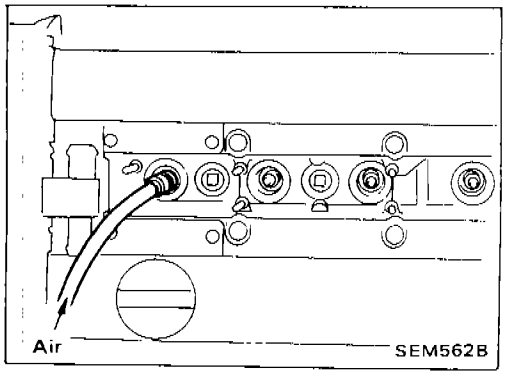



VALVE OIL SEAL

1. Set No. 1 piston at T.D.C. on its compression stroke.
2. Remove throttle chamber and rocker covers.
3. Remove camshafts and valve lifters.
4. Remove spark plug.
5. Install air hose adapter into spark plug hole and apply air pressure to hold valves in place. [Apply pressure of 490 kPa (4.9 bar, 5 kg/cm^2, 71 psi)].

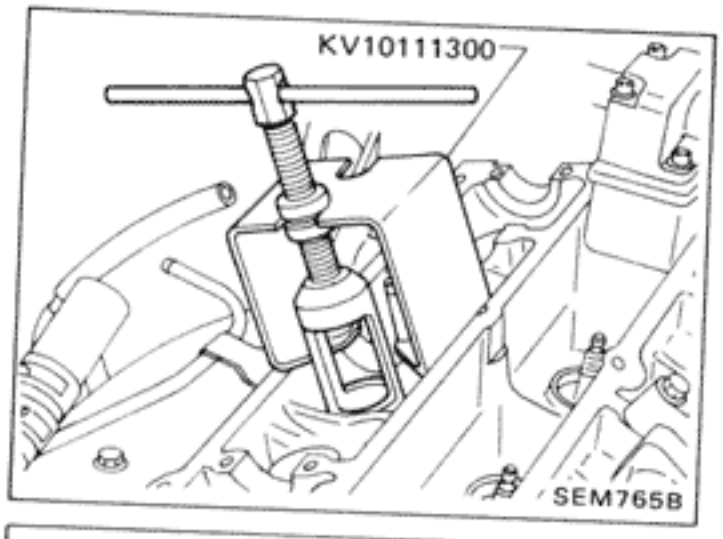


6. Remove valve springs and valve oil seals.

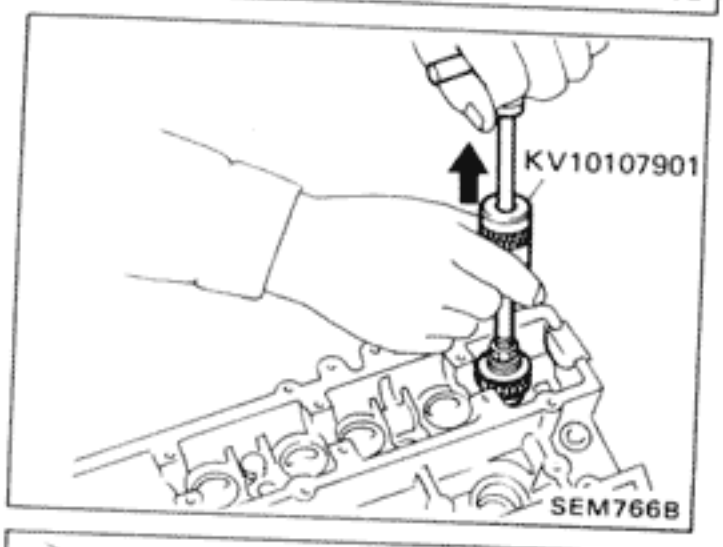


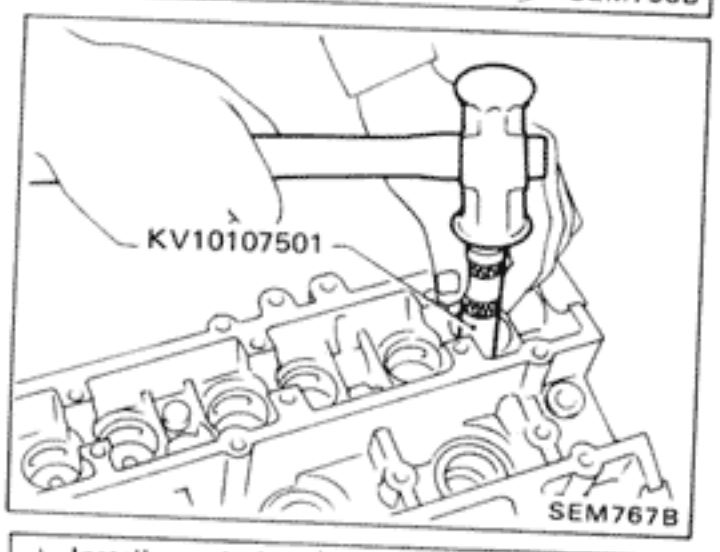

7. Apply engine oil to valve oil seal and install it in place.

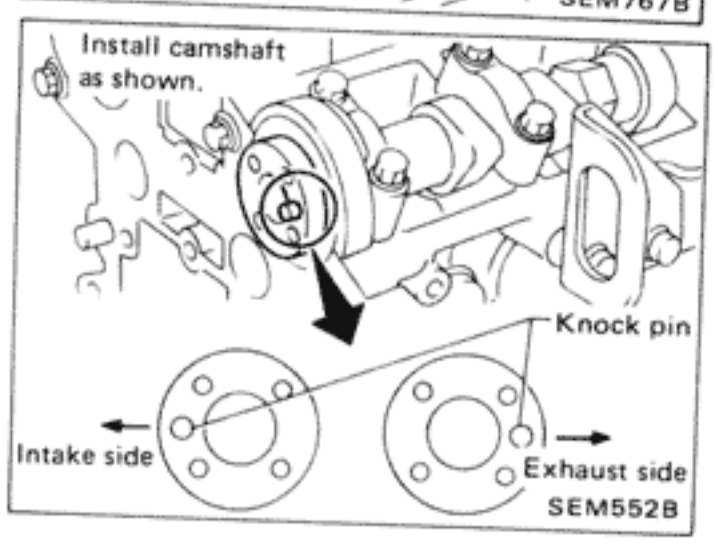


8. Assemble valve mechanism, camshafts and timing belt.
9. Reinstall remaining parts.

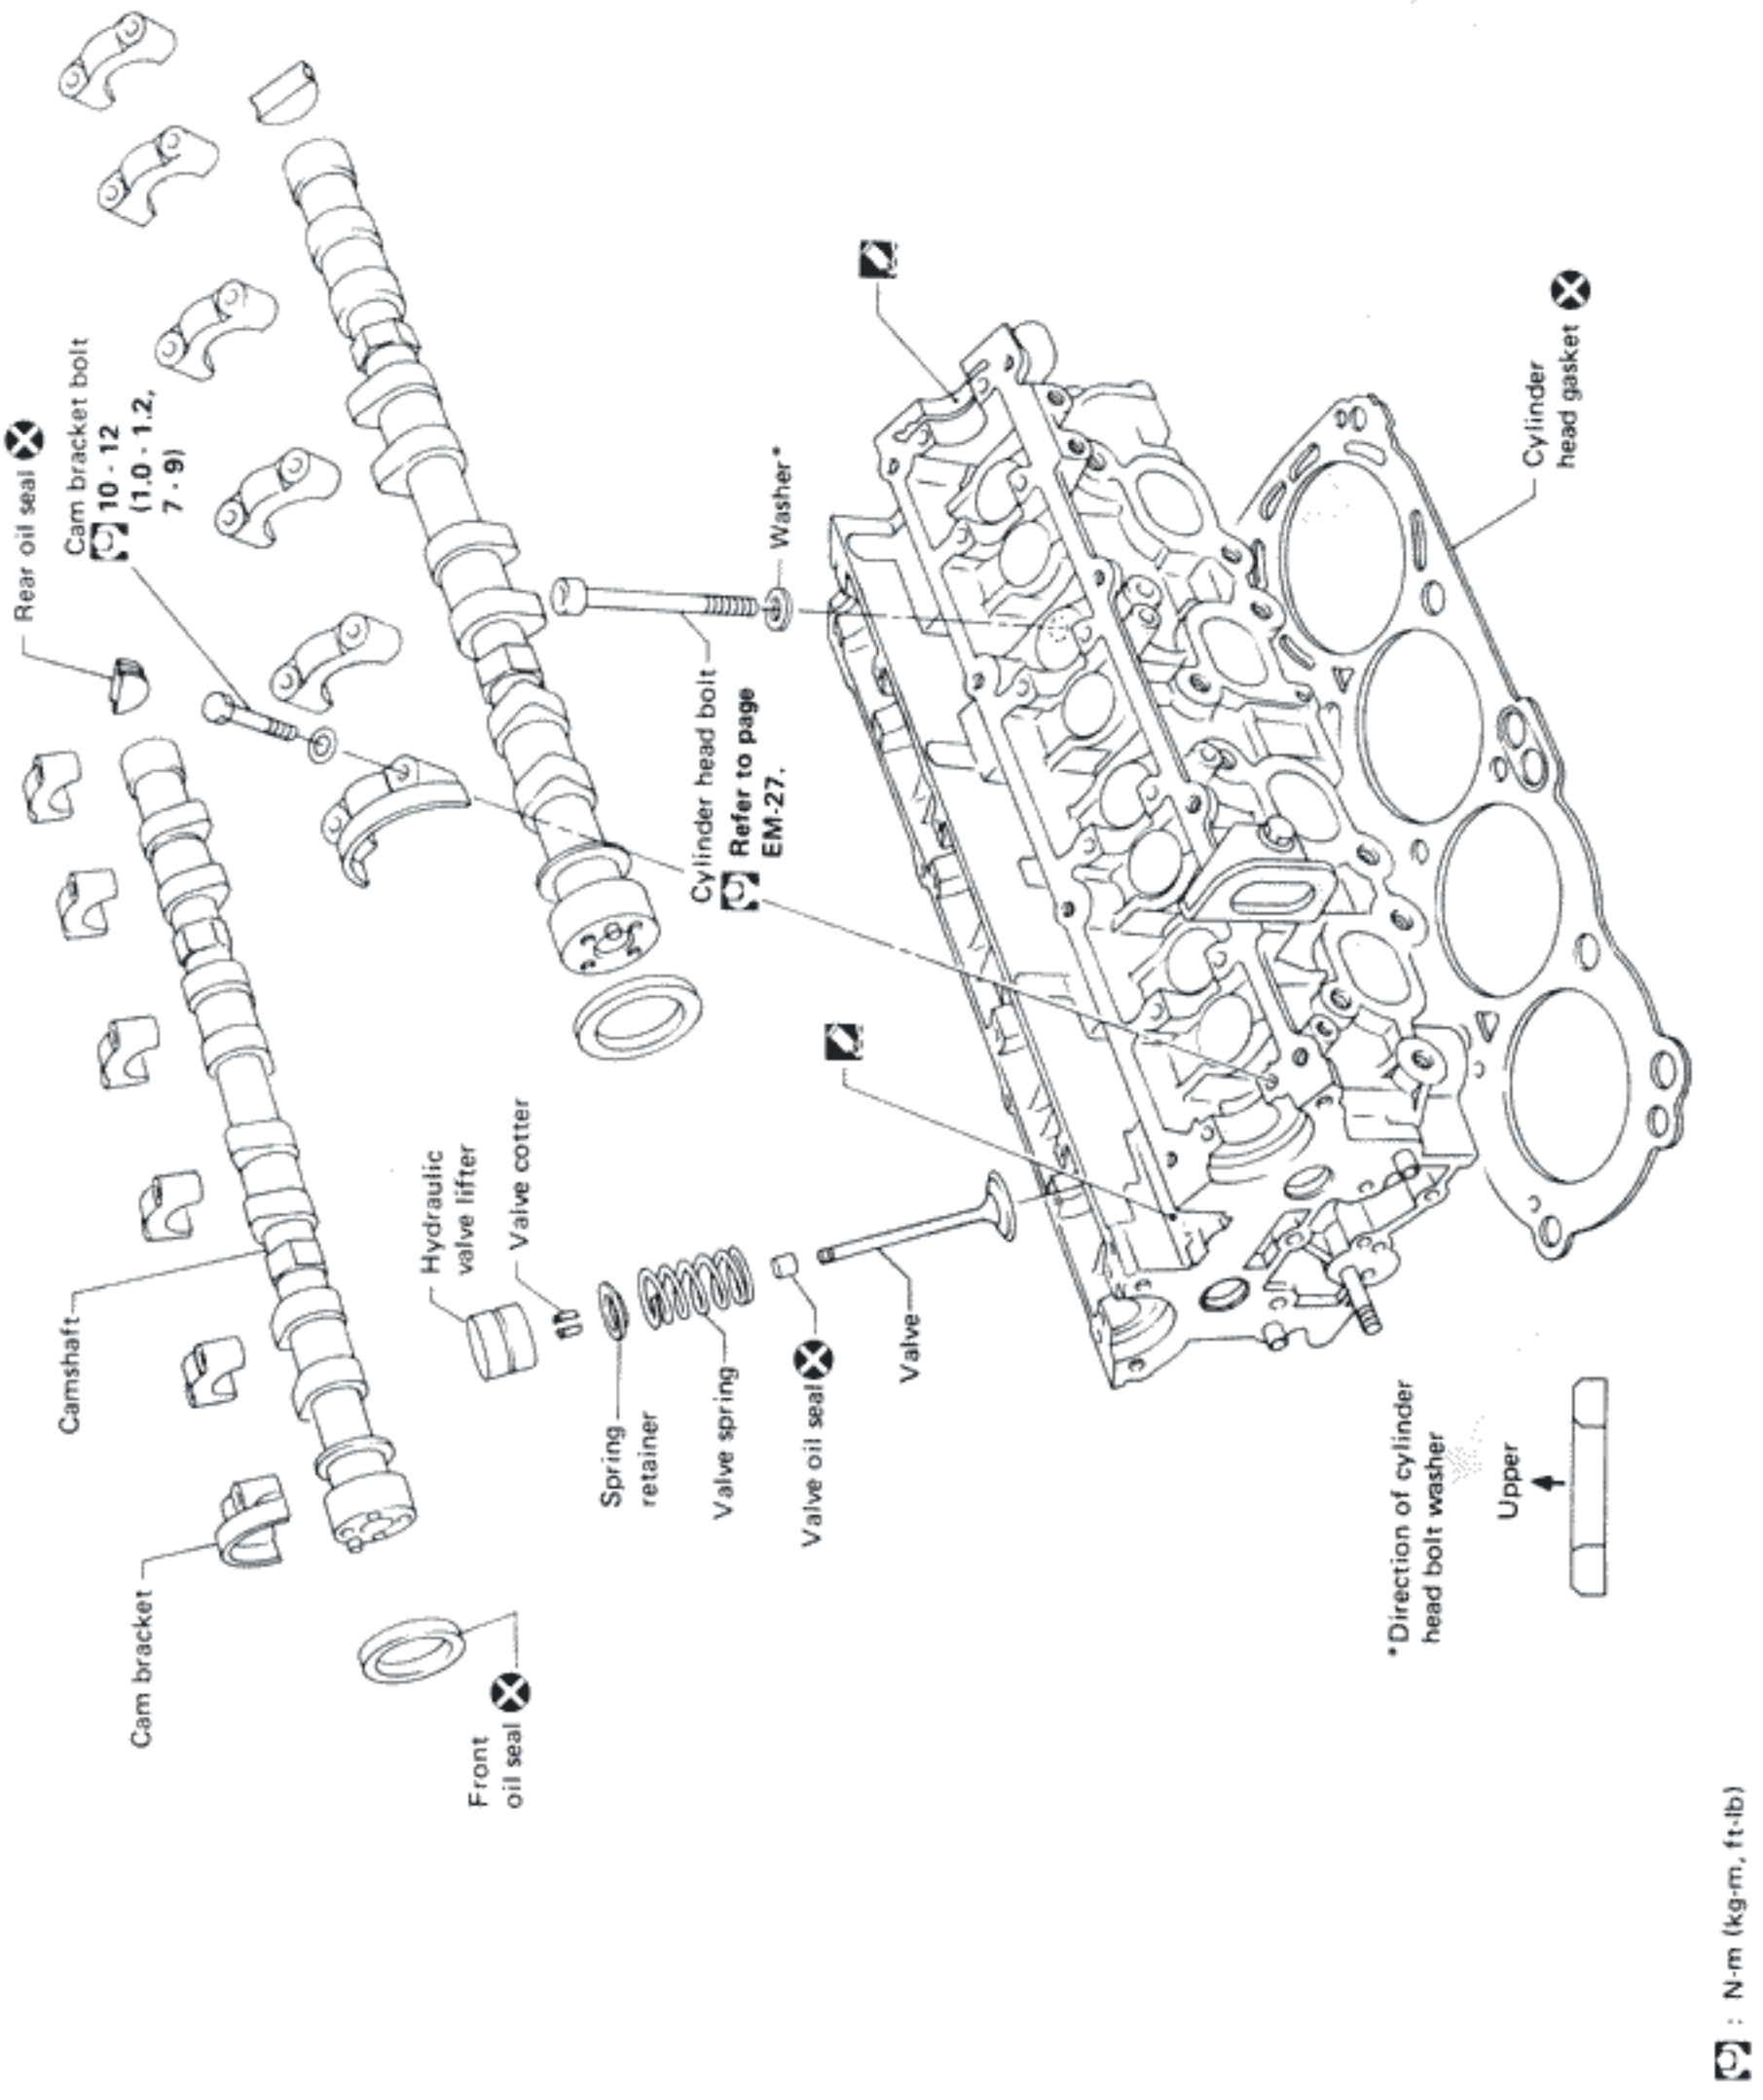
Rear oil seal
Cam bracket bolt
10 - 12
(1.0 - 1.2,
7 - 9)
Washer*
Cylinder head bolt
Refer to page
EM-27.
Cylinder
head gasket
Camshaft
Hydraulic
valve lifter
Valve cotter
Spring
retainer
Valve spring
Valve oil seal
Valve
Cam bracket
Front
oil seal
*Direction of cylinder
head bolt washer
Upper
: N·m (kg-m, ft-lb)

SEM357C

CAUTION:

- **When installing sliding parts such as camshaft, camshaft bracket and oil seal, be sure to apply new engine oil on their sliding surfaces.**
- **When tightening cylinder head bolts and camshaft bracket bolts, apply new engine oil to thread portions and seat surfaces of bolts.**

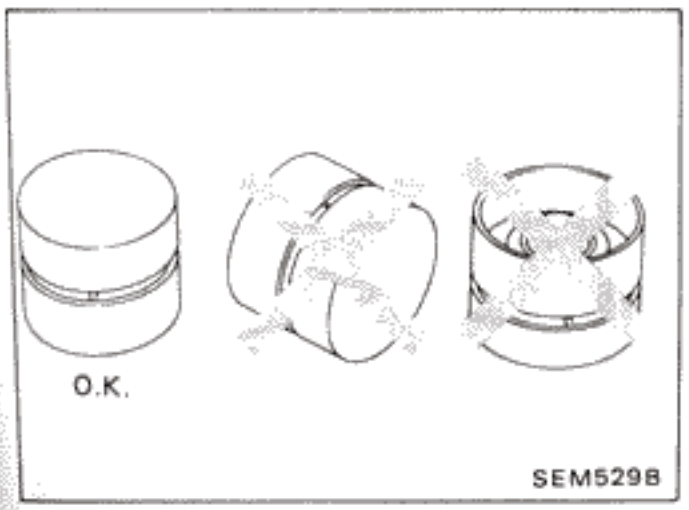


- **Do not put hydraulic valve lifters upside down, otherwise air will enter valve lifter, causing it to make a noise.**
- **Do not disassemble hydraulic valve lifter.**
- **Attach tags to valve lifters so as not to mix them up.**
- **Valve lifters are required to put in engine oil.**

Removal

1. Remove timing belt.


Refer to "Removal" of TIMING BELT.

2. Drain coolant from radiator.
3. Disconnect exhaust manifold from cylinder head.

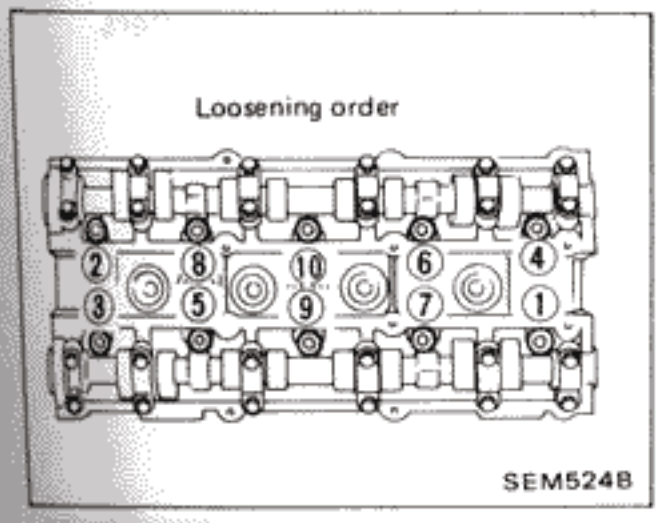


4. Remove cylinder head with intake manifold.

- **Head warpage or cracking could result from removing in incorrect order.**
- **Cylinder head bolts should be loosened in two or three steps.**

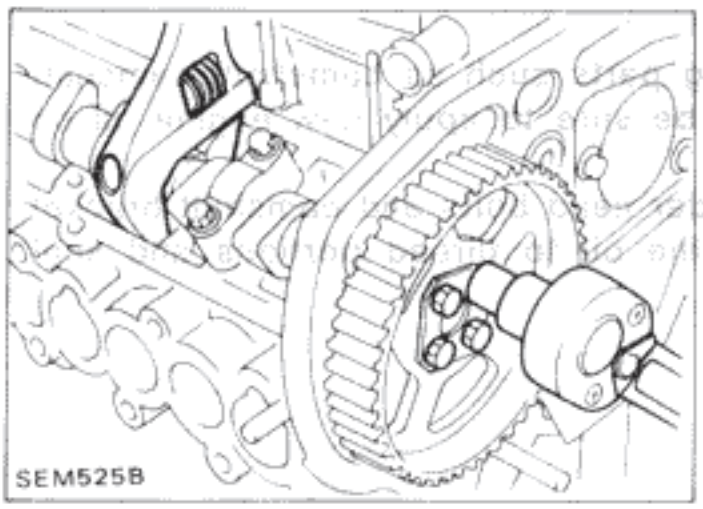

SEM525B

Disassembly

1. Remove intake manifold from cylinder head.
2. Remove camshaft sprockets.

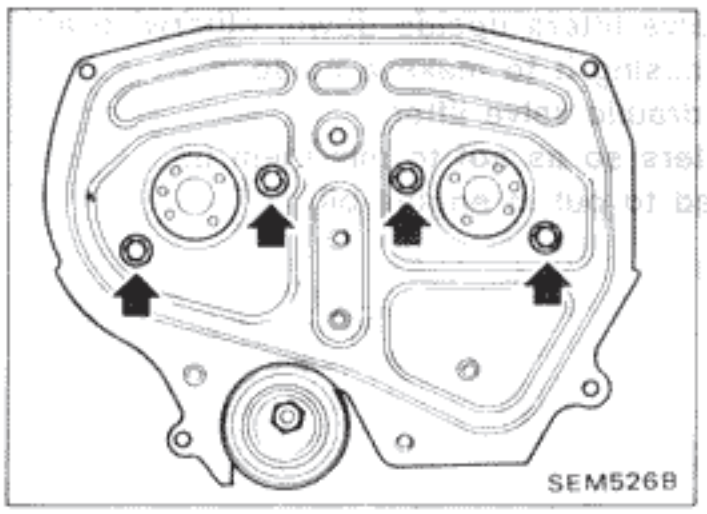
SEM526B

3. Remove tensioner pulley and rear cover.

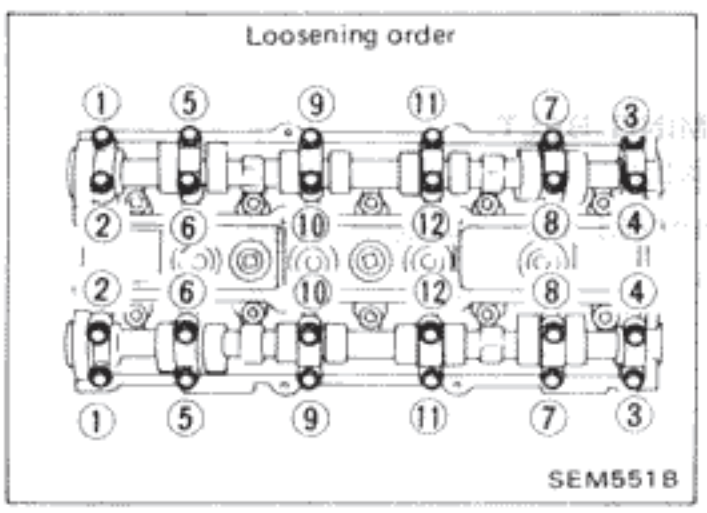


SEM551B


4. Remove camshaft bracket.

Bolts should be loosened in two or three steps.

- **Before removing camshaft, measure camshaft end play.**

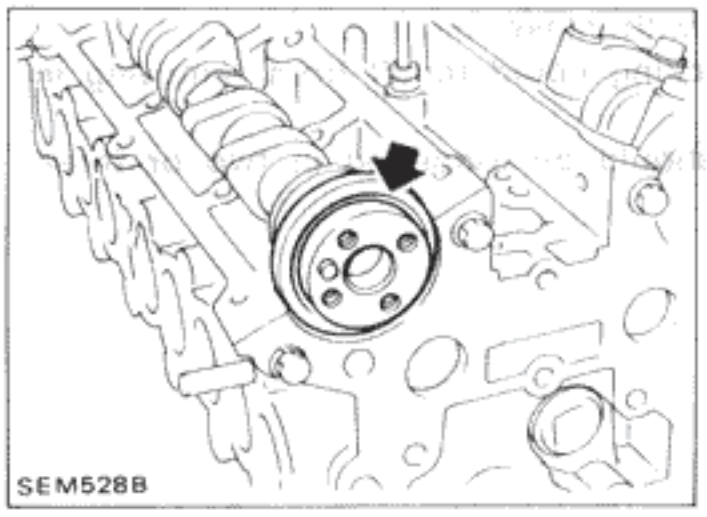
SEM528B


5. Remove oil seals, camshafts and hydraulic valve lifters.

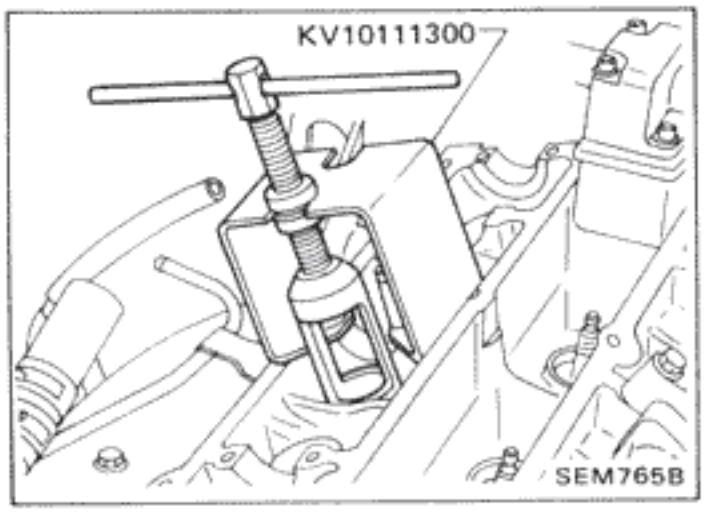

SEM765B

6. Remove valve components with Tool.

Disassembly (Cont'd)

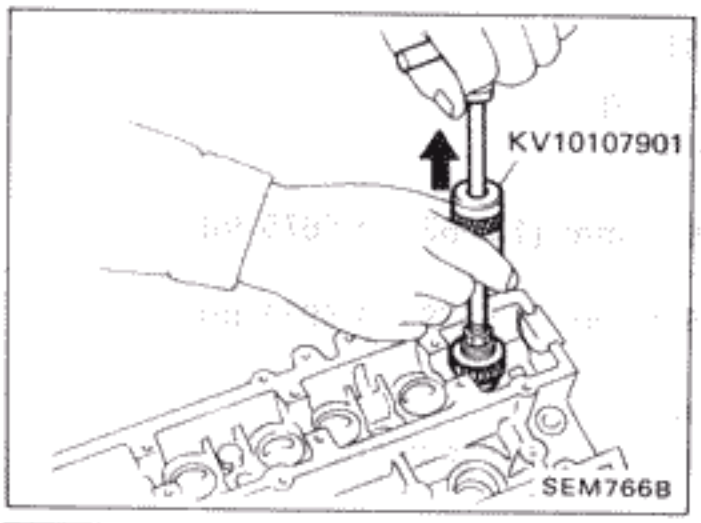

7. Remove valve oil seals with Tool or suitable tool.

Inspection

CYLINDER HEAD DISTORTION

Head surface flatness:

Less than 0.1 mm (0.004 in)

If beyond the specified limit, replace it or resurface it.

Resurfacing limit:

The resurfacing limit of cylinder head is determined by the cylinder block resurfacing in an engine.

Amount of cylinder head resurfacing is "A"

Amount of cylinder block resurfacing is "B"


The maximum limit is as follows:

A + B = 0.2 mm (0.008 in)

After resurfacing cylinder head, check that camshaft rotates freely by hand. If resistance is felt, cylinder head must be replaced.


Nominal cylinder head height:

125.9 - 126.1 mm (4.957 - 4.965 in)

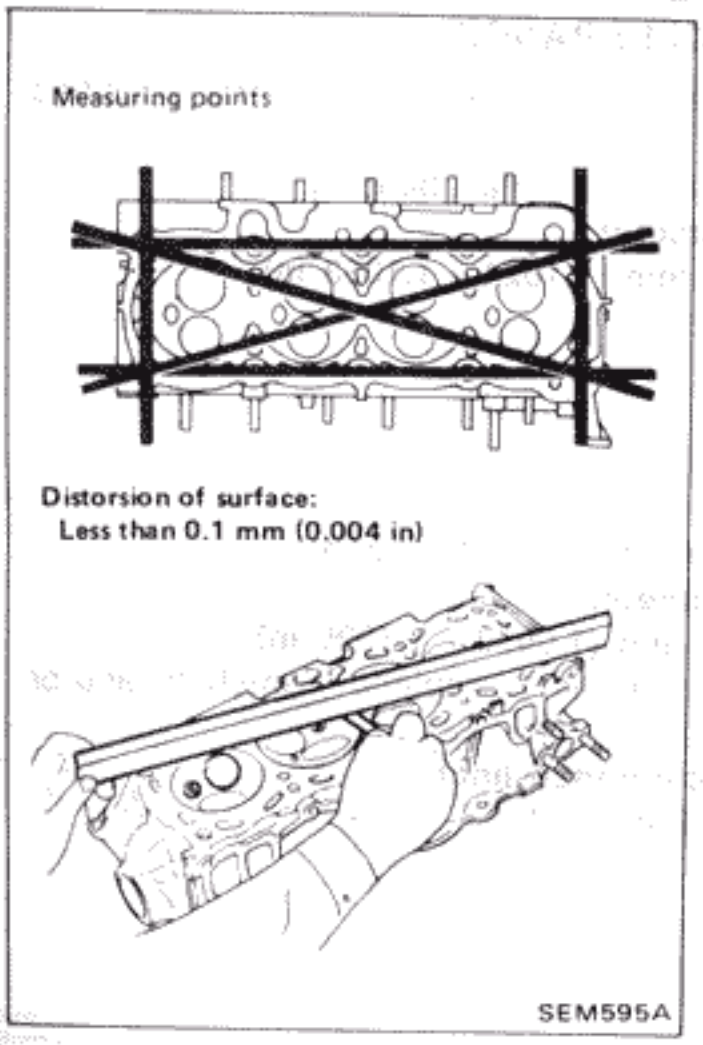

CAMSHAFT VISUAL CHECK

Check camshaft for scratches, seizure and wear.

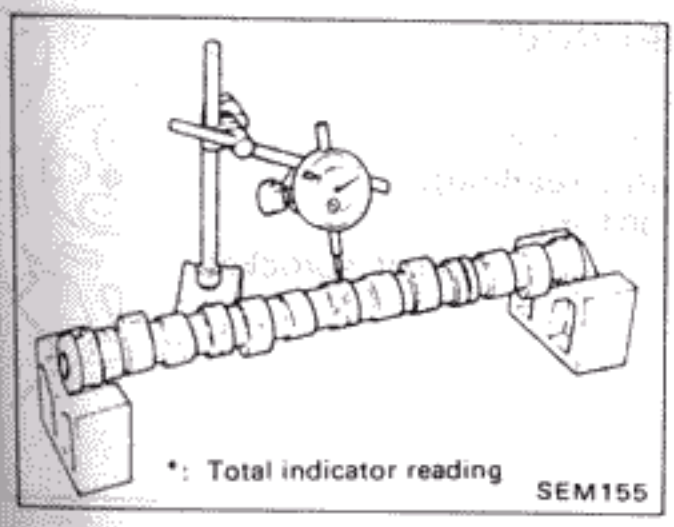

CAMSHAFT RUNOUT


1. Measure camshaft runout at the center journal.

Runout (Total indicator reading):

Limit 0.05 mm (0.0020 in)


2. If it exceeds the limit, replace camshaft.

Inspection (Cont'd)

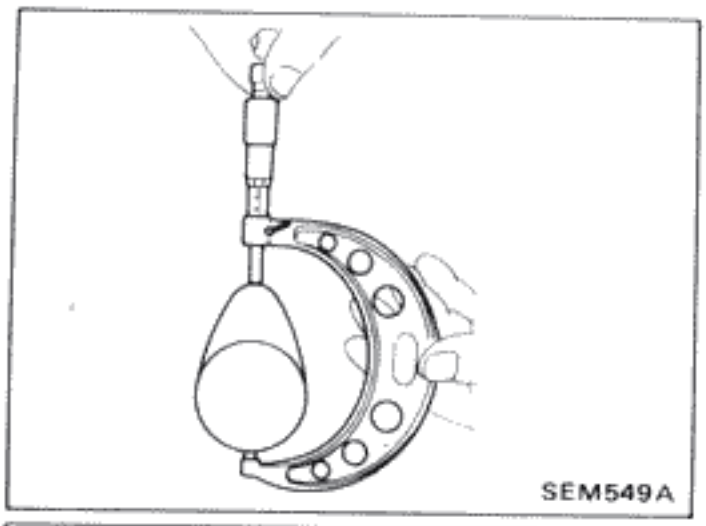
SEM549A


CAMSHAFT CAM HEIGHT

1. Measure camshaft cam height.
   Standard cam height:
   Intake
   39.785 - 39.815 mm (1.5663 - 1.5675 in)
   Exhaust
   40.485 - 40.515 mm (1.5939 - 1.5951 in)
   Cam wear limit:
   0.2 mm (0.008 in)
2. If wear is beyond the limit, replace camshaft.

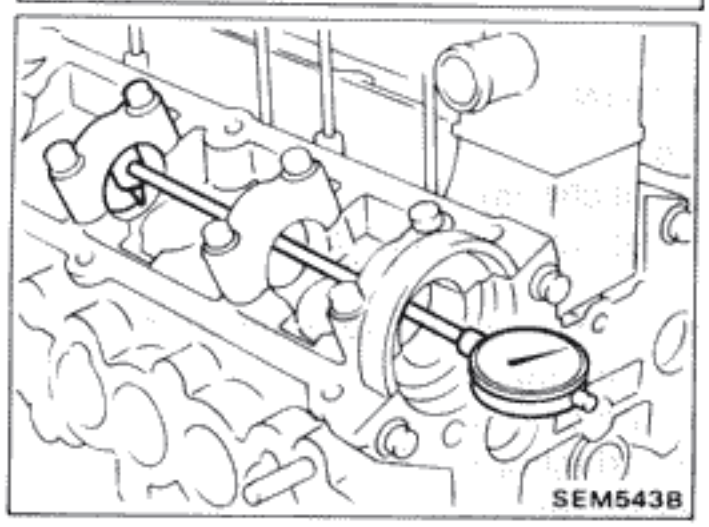

SEM543B

CAMSHAFT JOURNAL CLEARANCE

1. Install camshaft bracket and tighten bolts to the specified torque.
2. Measure inner diameter of camshaft bearing.
   Standard inner diameter:
   28.000 - 28.025 mm (1.1024 - 1.1033 in)

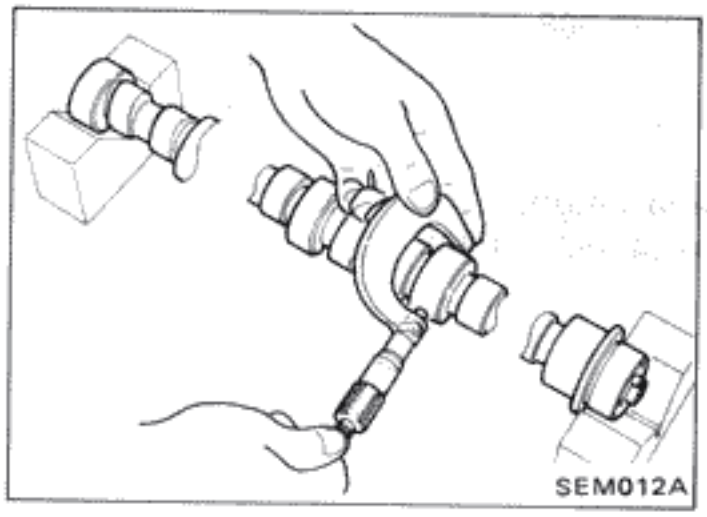

SEM012A

3. Measure outer diameter of camshaft journal.
   Standard outer diameter:
   27.935 - 27.955 mm (1.0998 - 1.1006 in)
4. If clearance exceeds the limit, replace camshaft and/or cylinder head.
   Camshaft journal clearance limit:
   0.15 mm (0.0059 in)

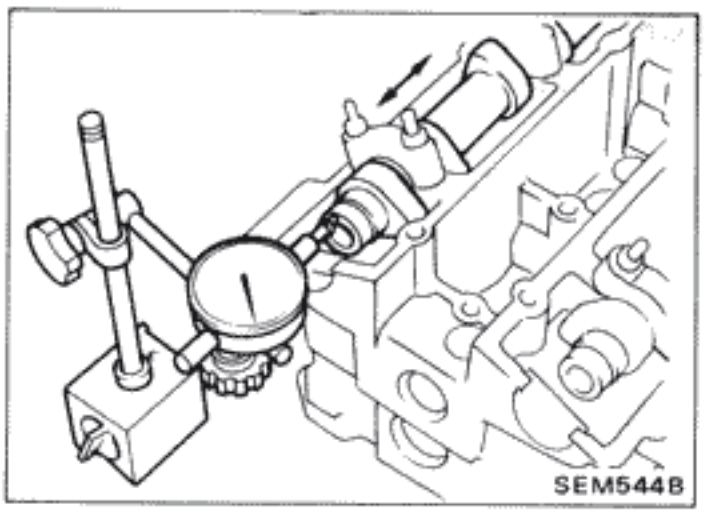
SEM544B

CAMSHAFT END PLAY


1. Install camshaft in cylinder head.
2. Measure camshaft end play.
   Camshaft end play:
   Standard
   0.07 - 0.15 mm (0.0028 - 0.0059 in)
   Limit 0.2 mm (0.008 in)

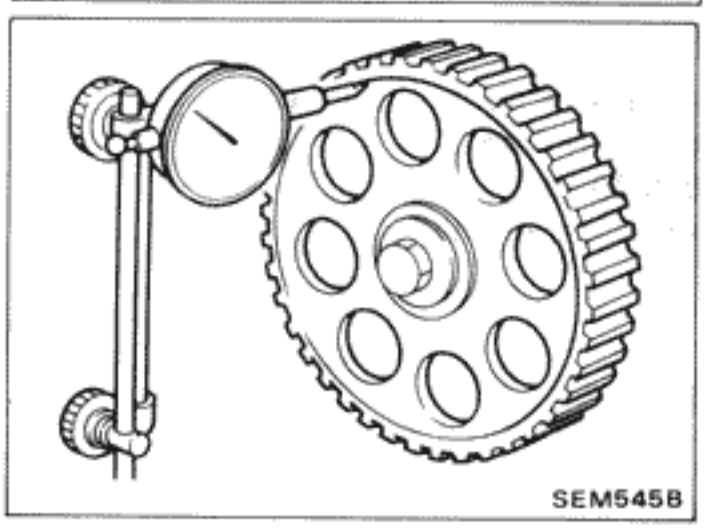
SEM545B

CAMSHAFT SPROCKET RUNOUT


1. Install sprocket on camshaft.
2. Measure camshaft sprocket runout.
   Runout (Total indicator reading):
   Limit 0.1 mm (0.004 in)
3. If it exceeds the limit, replace camshaft sprocket.

Inspection (Cont'd)

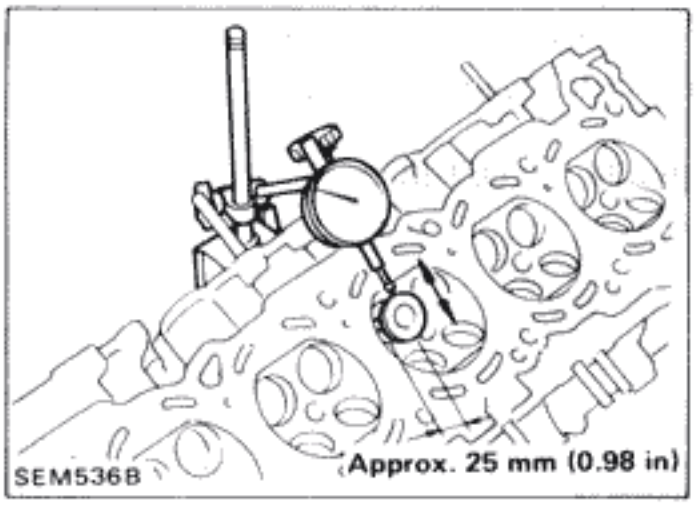


VALVE GUIDE CLEARANCE

1. Measure valve deflection in a parallel direction with rocker arm. (Valve and valve guide mostly wear in this direction.)
   Valve deflection limit (Dial gauge reading):
   0.2 mm (0.008 in)

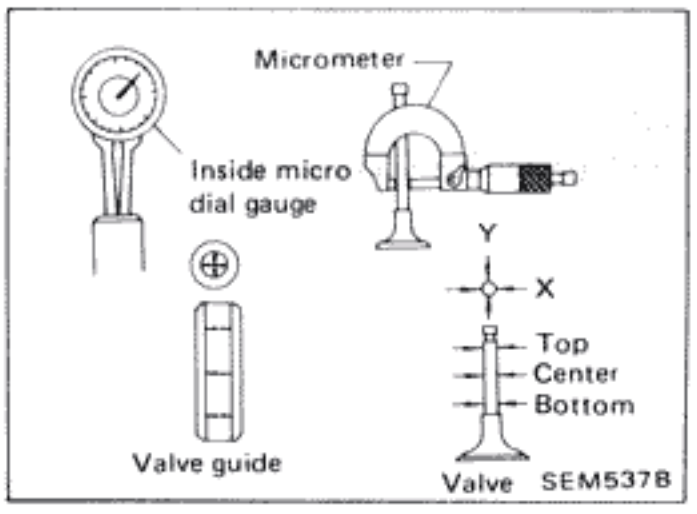


2. If it exceeds the limit, check valve to valve guide clearance.
a. Measure valve stem diameter and valve guide inner diameter.
b. Check that clearance is within specification.
   Valve to valve guide clearance limit:
   0.1 mm (0.004 in)
c. If it exceeds the limit, replace valve or valve guide.

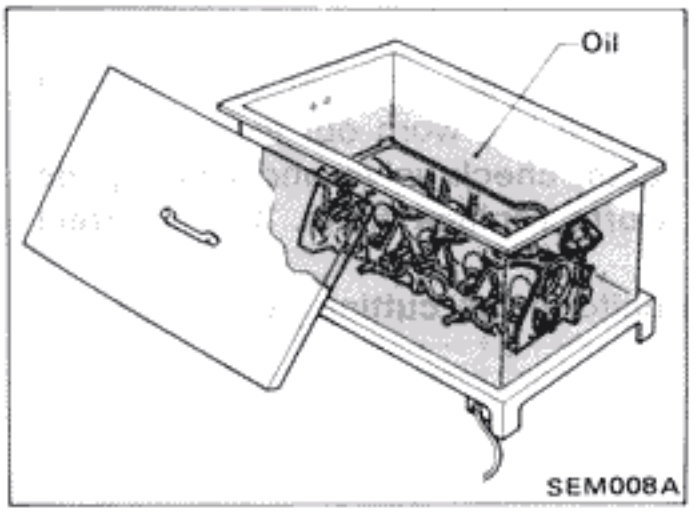


VALVE GUIDE REPLACEMENT

1. To remove valve guide, heat cylinder head to 150 to 160°C (302 to 320°F).

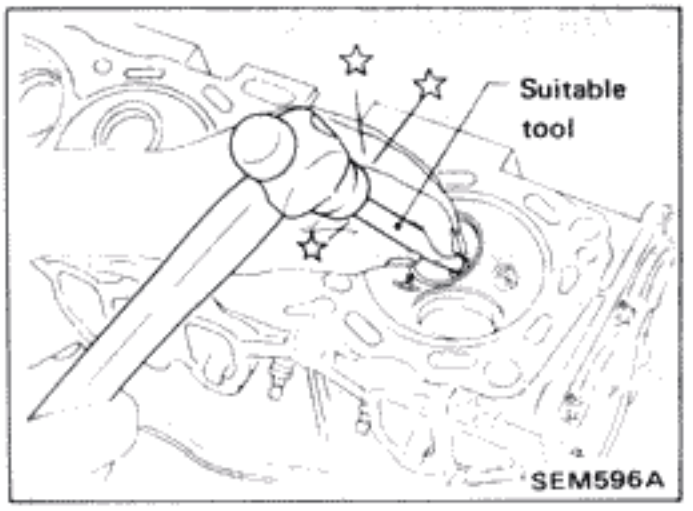


2. Drive out valve guide with a press [under a 20 kN (2 t, 2.2 US ton, 2.0 Imp ton) pressure] or hammer and suitable tool.

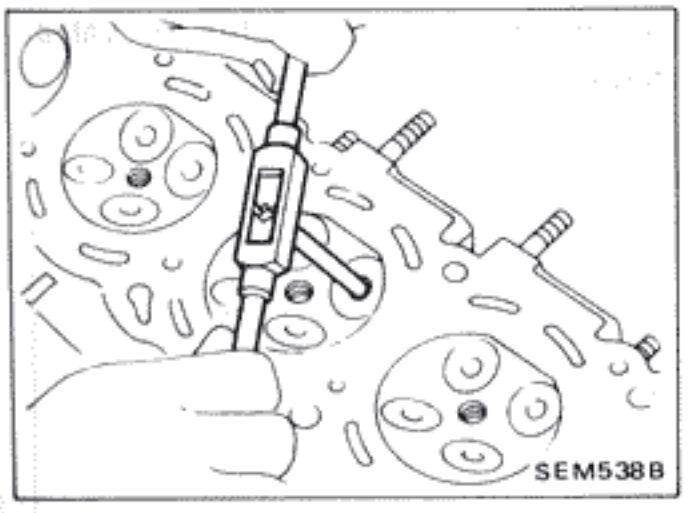


3. Ream cylinder head valve guide hole.
   Valve guide hole diameter
   (for service parts):
   Intake and Exhaust
   10.175 - 10.196 mm (0.4006 - 0.4014 in)

Inspection (Cont'd)

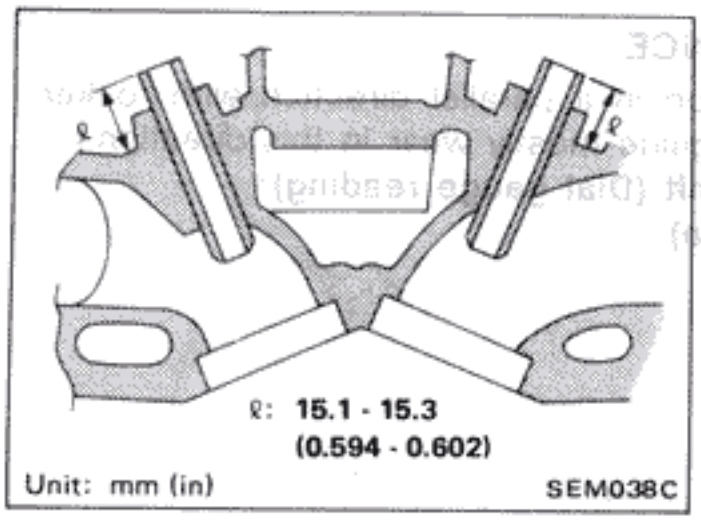

4. Heat cylinder head to 150 to 160°C (302 to 320°F) and press service valve guide onto cylinder head.
   Projection " ℓ ":
   15.1 - 15.3 mm (0.594 - 0.602 in)

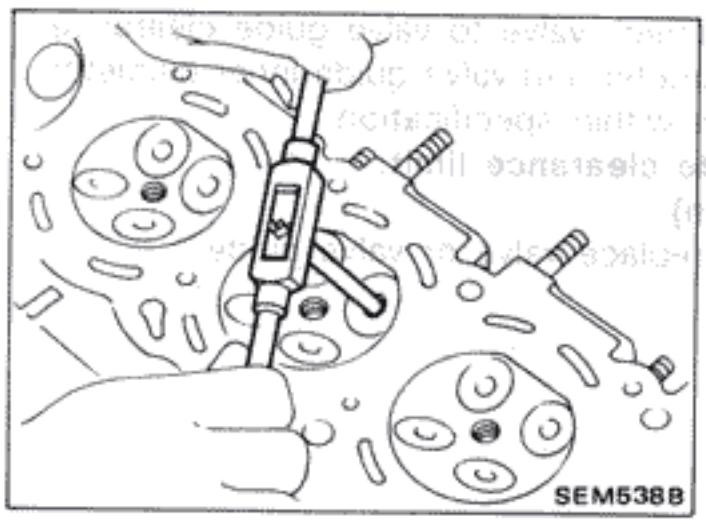


5. Ream valve guide.
   Finished size:
   Intake and Exhaust
   6.000 - 6.018 mm (0.2362 - 0.2369 in)

VALVE SEATS

Check valve seats for any evidence of pitting at valve contact surface, and reseat or replace if it has worn out excessively.

- **Before repairing valve seats, check valve and valve guide for wear. If they have worn, replace them. Then correct valve seat.**
- **Cut with both hands to uniform the cutting surface.**

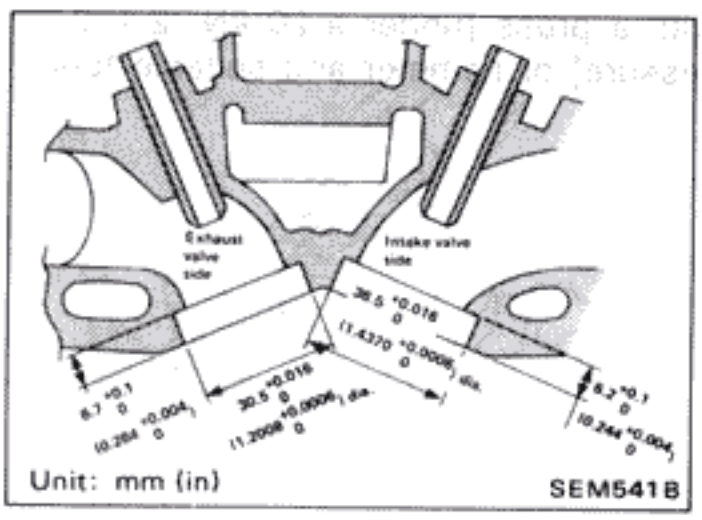


REPLACING VALVE SEAT FOR SERVICE PARTS

1. Bore out old seat until it collapses. The machine depth stop should be set so that boring cannot continue beyond the bottom face of the seat recess in cylinder head.
2. Ream cylinder head recess.
   Reaming bore for service valve seat
   Oversize [0.5 mm (0.020 in)]:
   Intake
   36.500 - 36.516 mm (1.4370 - 1.4376 in)
   Exhaust
   30.500 - 30.516 mm (1.2008 - 1.2014 in)


Reaming should be done to the concentric circles to valve guide center so that valve seat will have the correct fit.

Inspection (Cont'd)

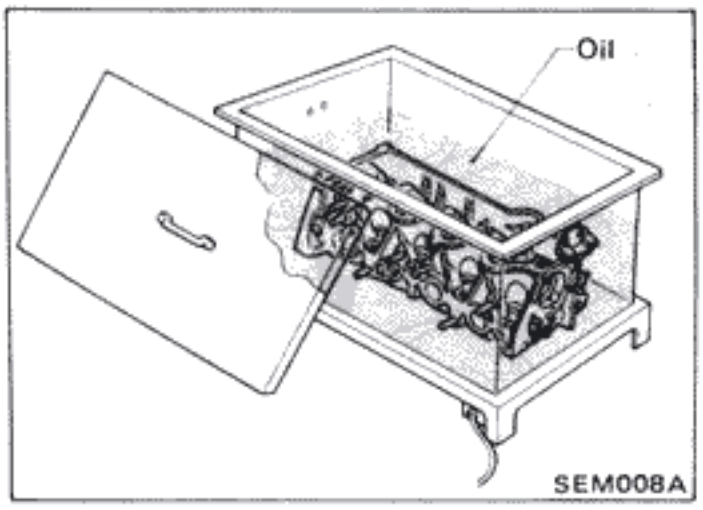

3. Heat cylinder head to 150 to 160°C (302 to 320°F).
4. Press fit valve seat until it seats on the bottom.


5. Cut or grind valve seat using suitable tool at the specified dimensions as shown in S.D.S.
6. After cutting, lap valve seat with abrasive compound.
7. Check valve seat contact condition.

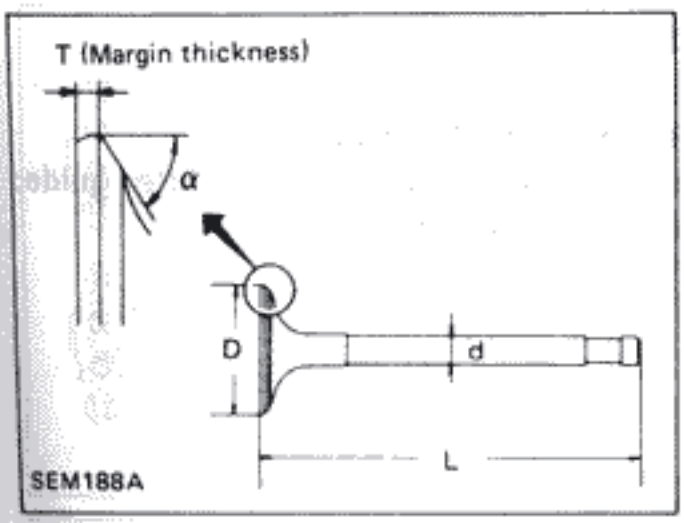

VALVE DIMENSIONS

Check dimensions in each valve. For dimensions, refer to S.D.S. When valve head has been worn down to 0.5 mm (0.020 in) in margin thickness, replace valve.


Grinding allowance for valve stem tip is 0.2 mm (0.008 in) or less.

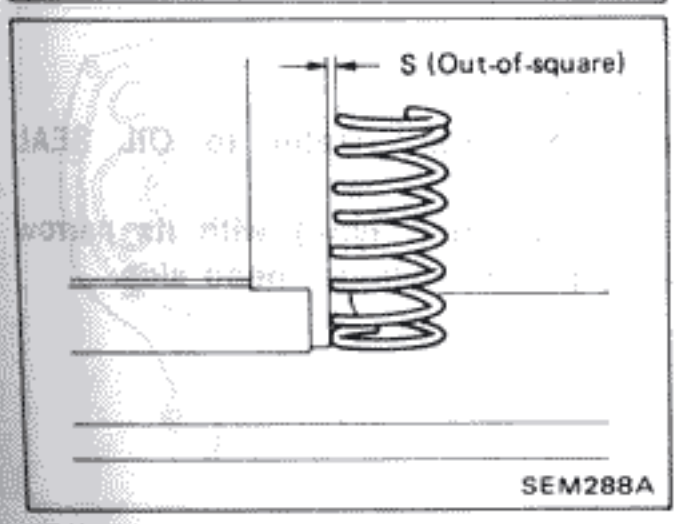

VALVE SPRING

Squareness

1. Measure "S" dimension.
   Out-of-square:
   Less than 1.8 mm (0.071 in)
2. If it exceeds the limit, replace spring.

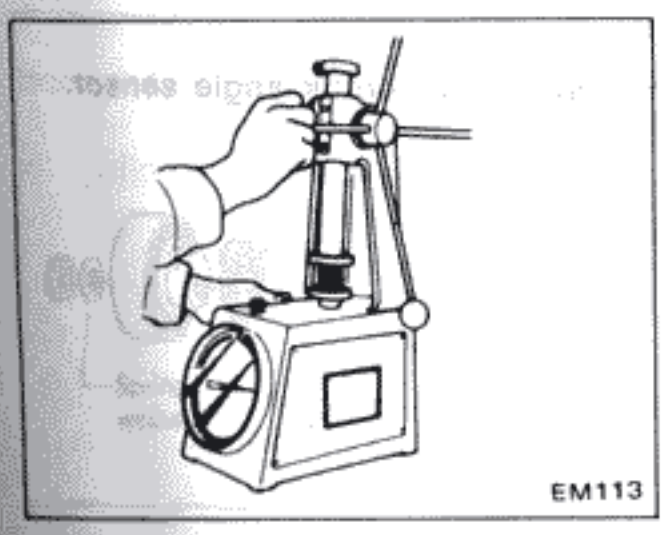

Pressure


Check valve spring pressure.


Compression length mm (in)	Load N (kg, lb)
0 (0)	0 (0, 0)
8 (0.31)	Approx. 235 (24, 53)
16.5 (0.650)	Approx. 539 (55, 121)

Inspection (Cont'd)


HYDRAULIC VALVE LIFTER

1. Check contact and sliding surfaces for wear or scratches.

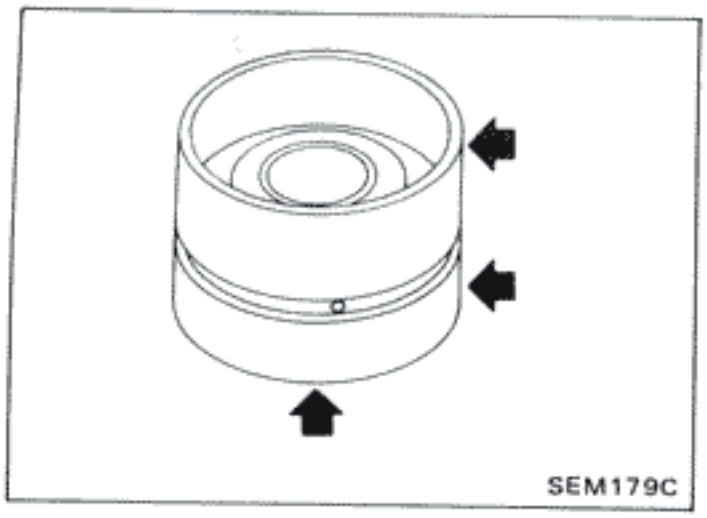
SEM179C

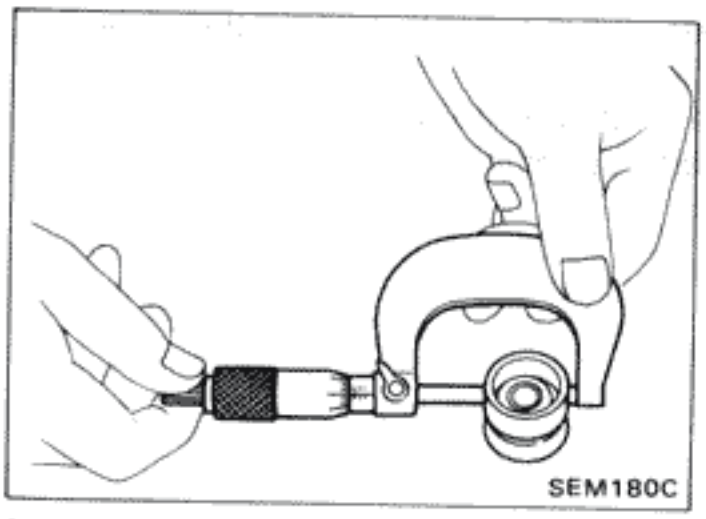
SEM180C


2. Check diameter of valve lifter.
   Outer diameter:
   30.955 - 30.965 mm (1.2187 - 1.2191 in)

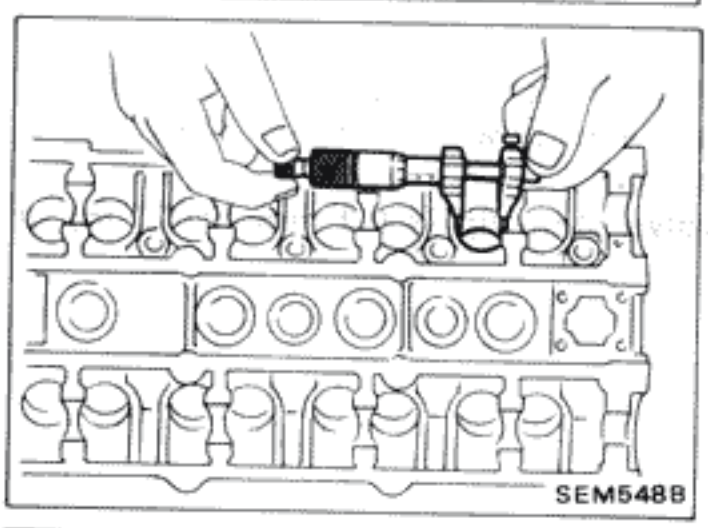
SEM548B

3. Check valve lifter guide inner diameter.
   Inner diameter:
   31.000 - 31.013 mm (1.2205 - 1.2210 in)
   Standard clearance between valve lifter and lifter guide:
   0.035 - 0.058 mm (0.0014 - 0.0023 in)


Assembly

1. Install valve component parts.
- **Always use new valve oil seal. (Refer to OIL SEAL REPLACEMENT.)**
- **Install valve spring (uneven pitch type) with its narrow pitch side (painted side) toward cylinder head side.**

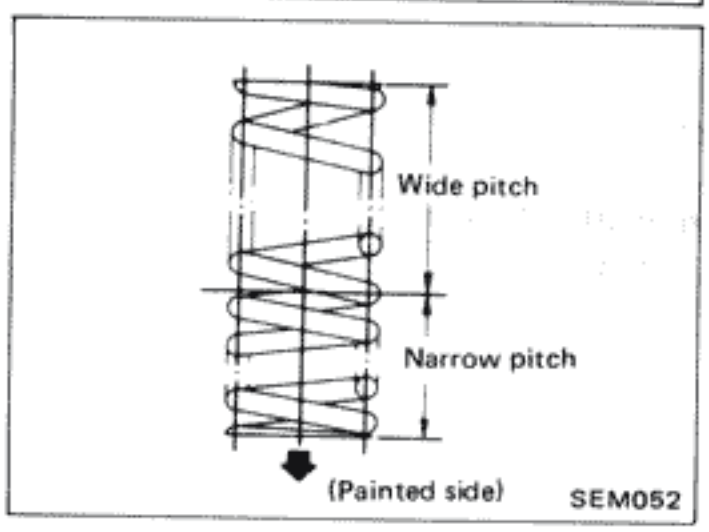

SEM052


2. Install camshafts.
Exhaust side camshaft has spline for crank angle sensor.

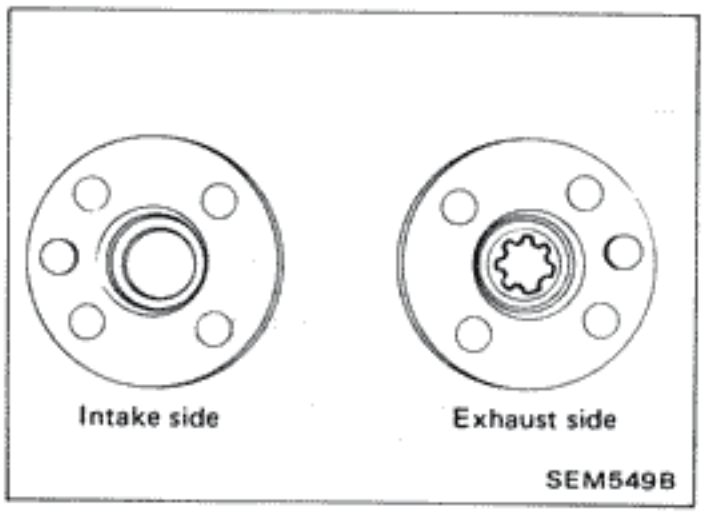


SEM549B

Assembly (Cont'd)

Install camshaft as shown.

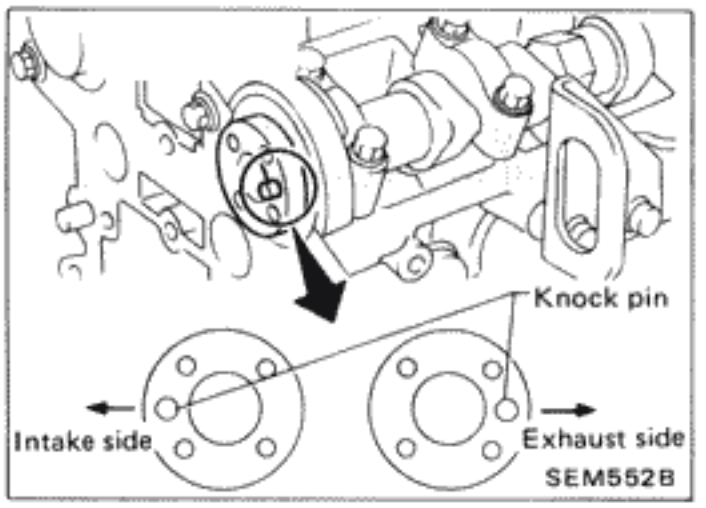

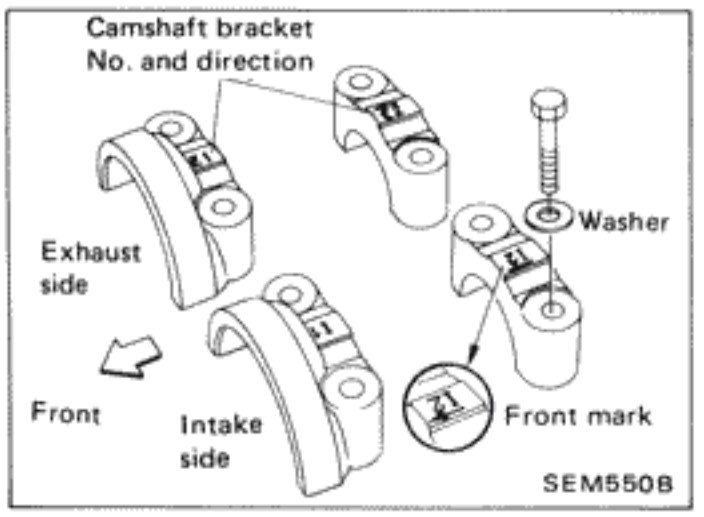


3. Install camshaft brackets.

Front mark is punched on the camshaft bracket.


4. Apply engine oil to camshaft oil seal lip and install it in place.

Always use new camshaft oil seal.

: 9 - 12 N·m (0.9 - 1.2 kg-m, 6.5 - 8.7 ft-lb)

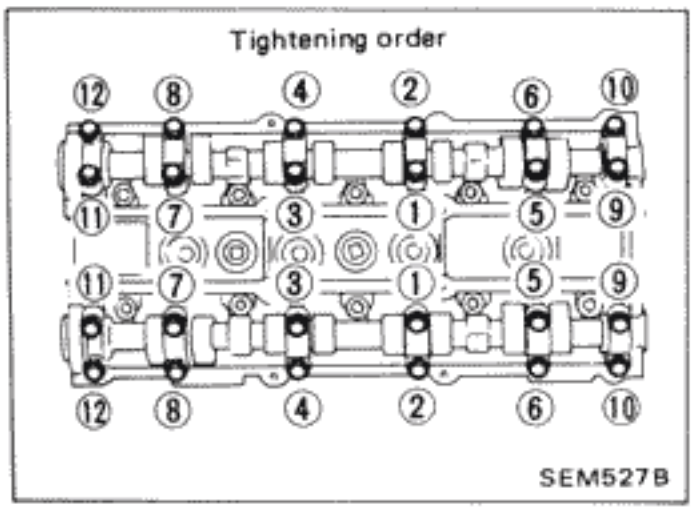


Tighten camshaft bracket bolts gradually in two or three stages.

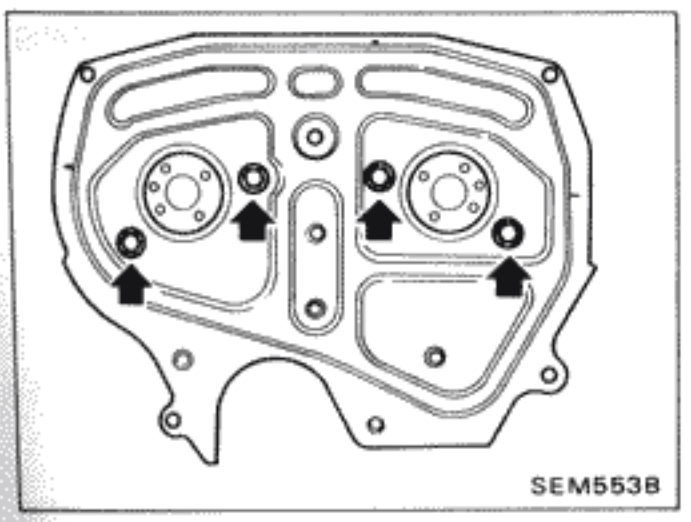

5. Install rear timing cover.

: 7 - 8 N·m (0.7 - 0.8 kg-m, 5.1 - 5.8 ft-lb)

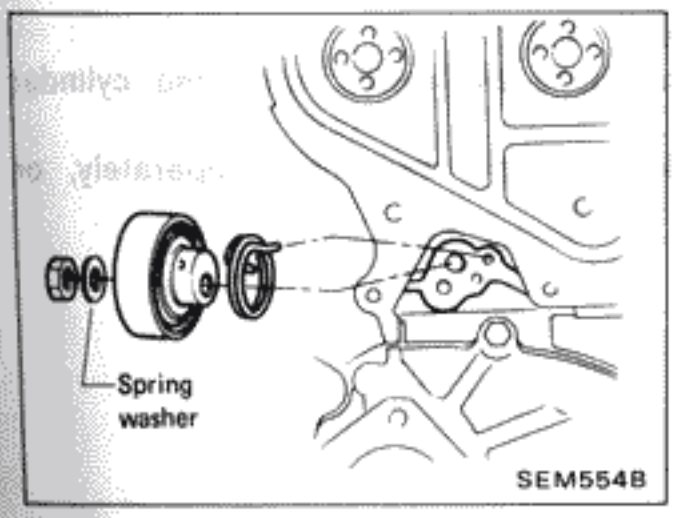


6. Install timing belt tensioner.

Tensioner nut:

: 22 - 29 N·m (2.2 - 3.0 kg-m, 16 - 22 ft-lb)

Assembly (Cont'd)

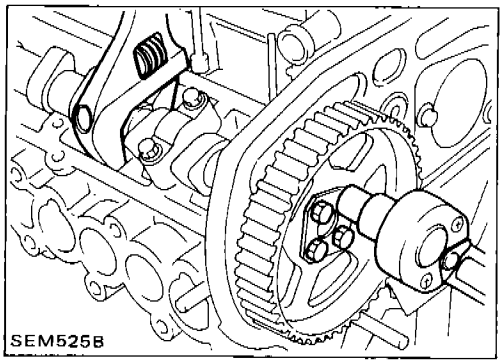


7. Install camshaft sprockets.
   Sprocket bolt:
   : 14 - 19 N·m (1.4 - 1.9 kg-m, 10 - 14 ft-lb)


When tightening bolts, fix camshaft to prevent it from rotating.

8. Adjust timing belt tension.
   Refer to TIMING BELT.
9. Reinstall remaining parts.


Installation

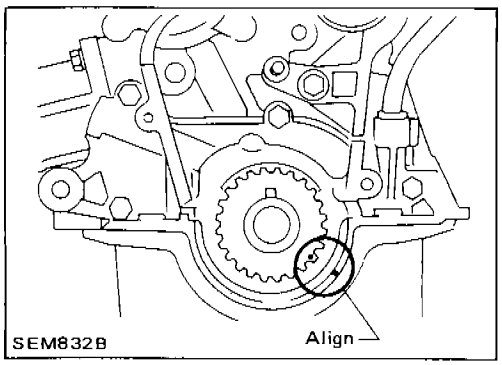

1. Set No. 1 piston at T.D.C. on its compression stroke as follows:
(1) Align crankshaft sprocket aligning mark with mark on oil pump body.

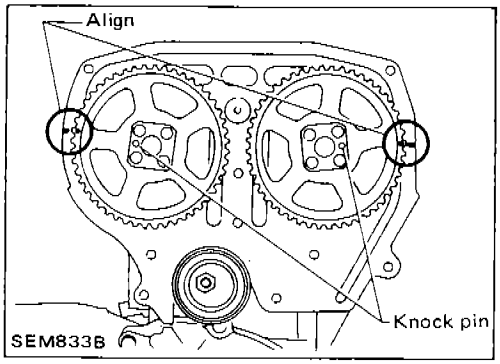


(2) Align camshaft sprocket aligning mark with mark on timing belt rear cover.

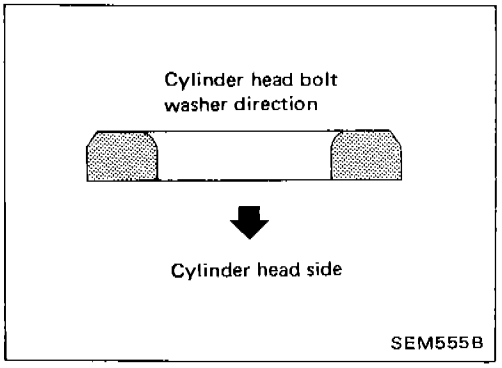

2. Install cylinder head with new gasket.

- **Be sure to install washers between bolts and cylinder head.**
- **Do not rotate crankshaft and camshaft separately, or valves will hit piston heads.**

Installation (Cont'd)

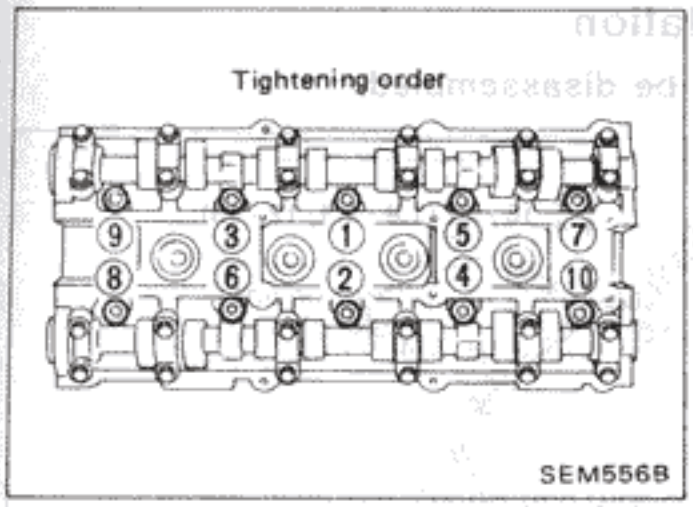

3. Tighten cylinder head bolts in numerical order.

- **Tightening procedure**


(1) Tighten all bolts to 29 N·m (3.0 kg-m, 22 ft-lb).
(2) Tighten all bolts to 103 N·m (10.5 kg-m, 76 ft-lb).
(3) Loosen all bolts completely.
(4) Tighten all bolts to 29 N·m (3.0 kg-m, 22 ft-lb).
(5) Tighten all bolts to 103 N·m (10.5 kg-m, 76 ft-lb) or if an angle wrench is available, tighten bolts 85 to 90 degrees clockwise.

4. Install timing belt and adjust belt tension.


Refer to "Installation" of TIMING BELT.

Removal and Installation

Turbocharger should not be disassembled.

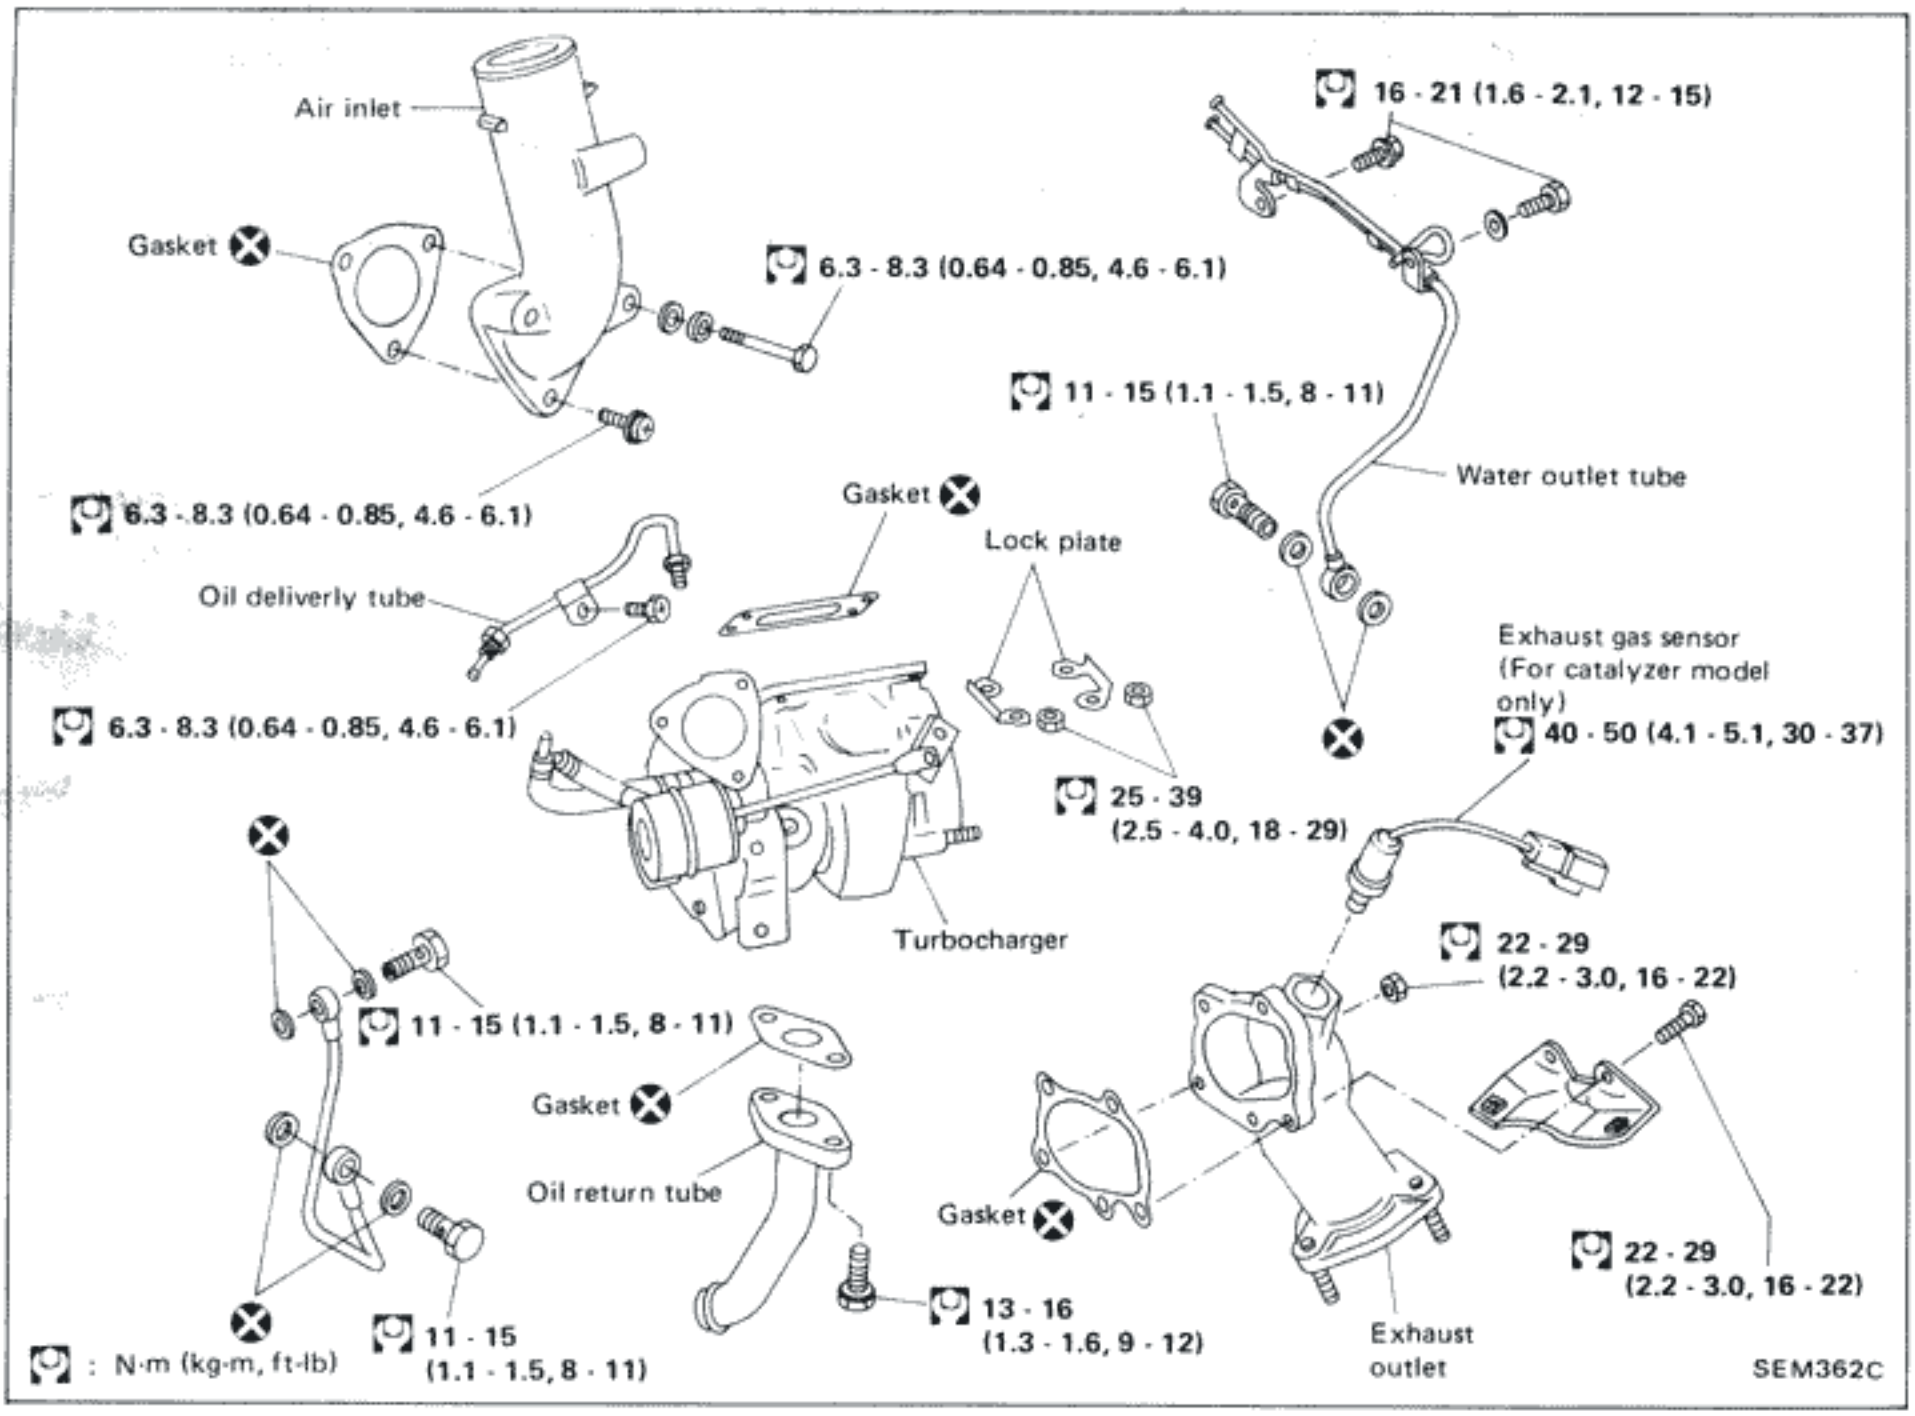

1. Drain engine coolant.
2. Remove the following:
- Air duct and hoses
- Air intake pipe
- Exhaust front tube
- Oil delivery tube and return hose
- Water inlet and outlet tubes
3. Remove turbocharger from exhaust manifold.
4. When installing turbocharger to exhaust manifold, securely tighten nuts and lock the nuts with lock plate.

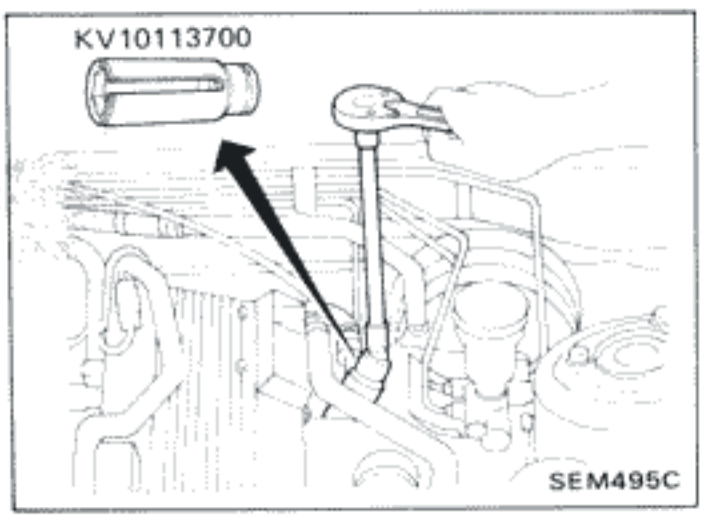

- When removing or installing exhaust gas sensor, use exhaust gas sensor wrench (KV10113700) as shown.

Inspection

Condition 1: Low engine power


Probable cause	Corrective action
Air leak at the connection of compressor housing and suction hose/inlet tube, or inlet tube and intake manifold	Correct the connection.
Exhaust gas leak at the connection of turbine housing and exhaust manifold, connecting tube or exhaust outlet	Correct the connection or replace gasket.
By-pass valve is stuck open.	Replace turbocharger assembly.
Stuck or worn journal or bearing	
Broken shaft	
Sludge on back of tubine wheel	
Broken turbine wheel	

Condition 2: Excessively high engine power

Probable cause	Corrective action
Disconnected or cracked rubber hose of by-pass valve controller	Correct or replace rubber hose.
By-pass valve is stuck closed.	Replace turbocharger assembly.
Controller diaphragm is broken.	


Inspection (Cont'd)

Condition 3: Excessively high oil consumption or exhaust shows pale blue smoke	
Probable cause	**Corrective action**
Oil leak at the connection of lubricating oil passage	Correct the connection.
Oil leak at oil seal of turbine	Replace turbocharger assembly.
Oil leak at oil seal of compressor	
Worn journal or bearing	

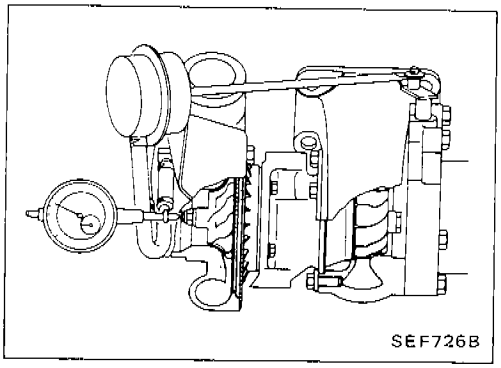
SEF726B

1. Inspect turbine and compressor wheel as follows:
- Visually check for cracks, clogging, deformity or other damage.
- Revolve wheels to make sure that they turn freely without any abnormal noise or friction.
- Measure play in axial direction.

Play (axial direction):
0.013 - 0.097 mm (0.0005 - 0.0038 in)

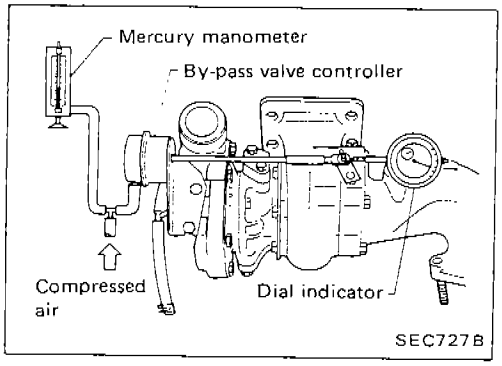


2. Check operation of by-pass valve controller.
- Move by-pass valve to make sure that it is not sticking or scratched.
- Measure rod end play of the by-pass valve controller.

Do not apply excessively high pressure to controller diaphragm.

By-pass valve controller stroke/pressure:
0.38 mm (0.0150 in)/78.6 - 84.0 kPa (786 - 840 mbar, 590 - 630 mmHg, 23.23 - 24.80 inHg)

Always replace the turbocharger as an assembly if necessary.

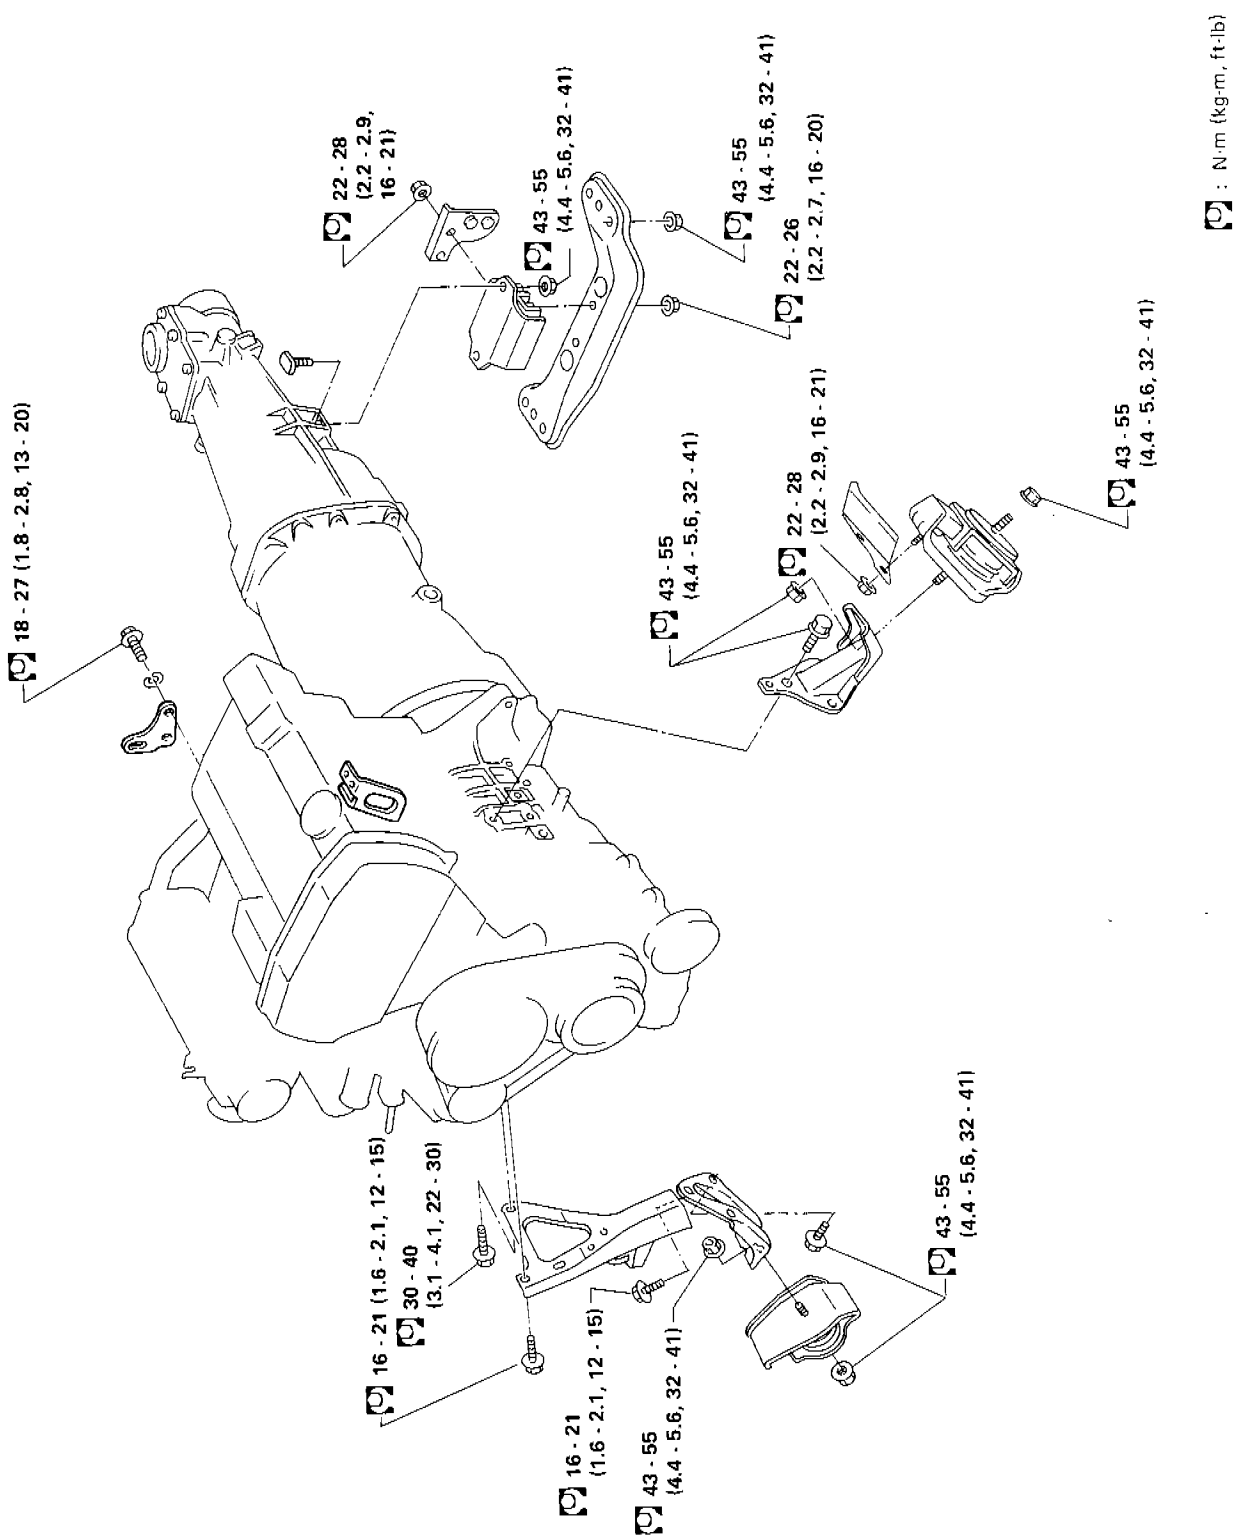
: N·m (kg-m, ft-lb)
22 - 28 (2.2 - 2.9, 16 - 21)
43 - 55 (4.4 - 5.6, 32 - 41)
43 - 55 (4.4 - 5.6, 32 - 41)
22 - 26 (2.2 - 2.7, 16 - 20)
43 - 55 (4.4 - 5.6, 32 - 41)
22 - 28 (2.2 - 2.9, 16 - 21)
43 - 55 (4.4 - 5.6, 32 - 41)
18 - 27 (1.8 - 2.8, 13 - 20)
16 - 21 (1.6 - 2.1, 12 - 15)
30 - 40 (3.1 - 4.1, 22 - 30)
16 - 21 (1.6 - 2.1, 12 - 15)
43 - 55 (4.4 - 5.6, 32 - 41)
43 - 55 (4.4 - 5.6, 32 - 41)


SEM358C

WARNING:


a. Situate vehicle on a flat and solid surface.
b. Place chocks at front and back of rear wheels.
c. Do not remove engine until exhaust system has completely cooled off.
   Otherwise, you may burn yourself and/or fire may break out in fuel line.
d. For safety during subsequent steps, the tension of wires should be slackened against the engine.
e. Before disconnecting fuel hose, release fuel pressure from fuel line.
   Refer to "Releasing Fuel Pressure" in section EF & EC.
f. Be sure to hoist engine and transmission in a safe manner.
g. For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

CAUTION:

- When lifting engine, be careful not to strike adjacent parts, especially accelerator wire casing, brake lines, and brake master cylinder.
- In hoisting the engine, always use engine slingers in a safe manner.

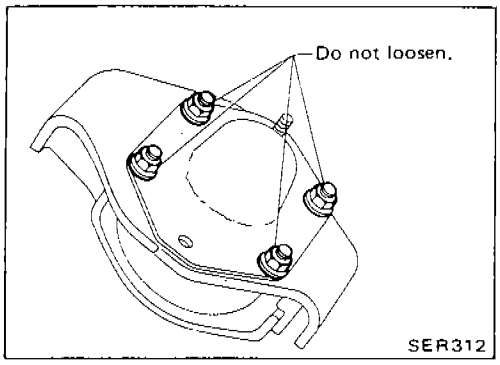

- Do not loosen front engine mounting insulator cover securing nuts.
  When cover is removed, damper oil flows out and mounting insulator will not function.
  For tightening torque, refer to sections AT, MT and PD.

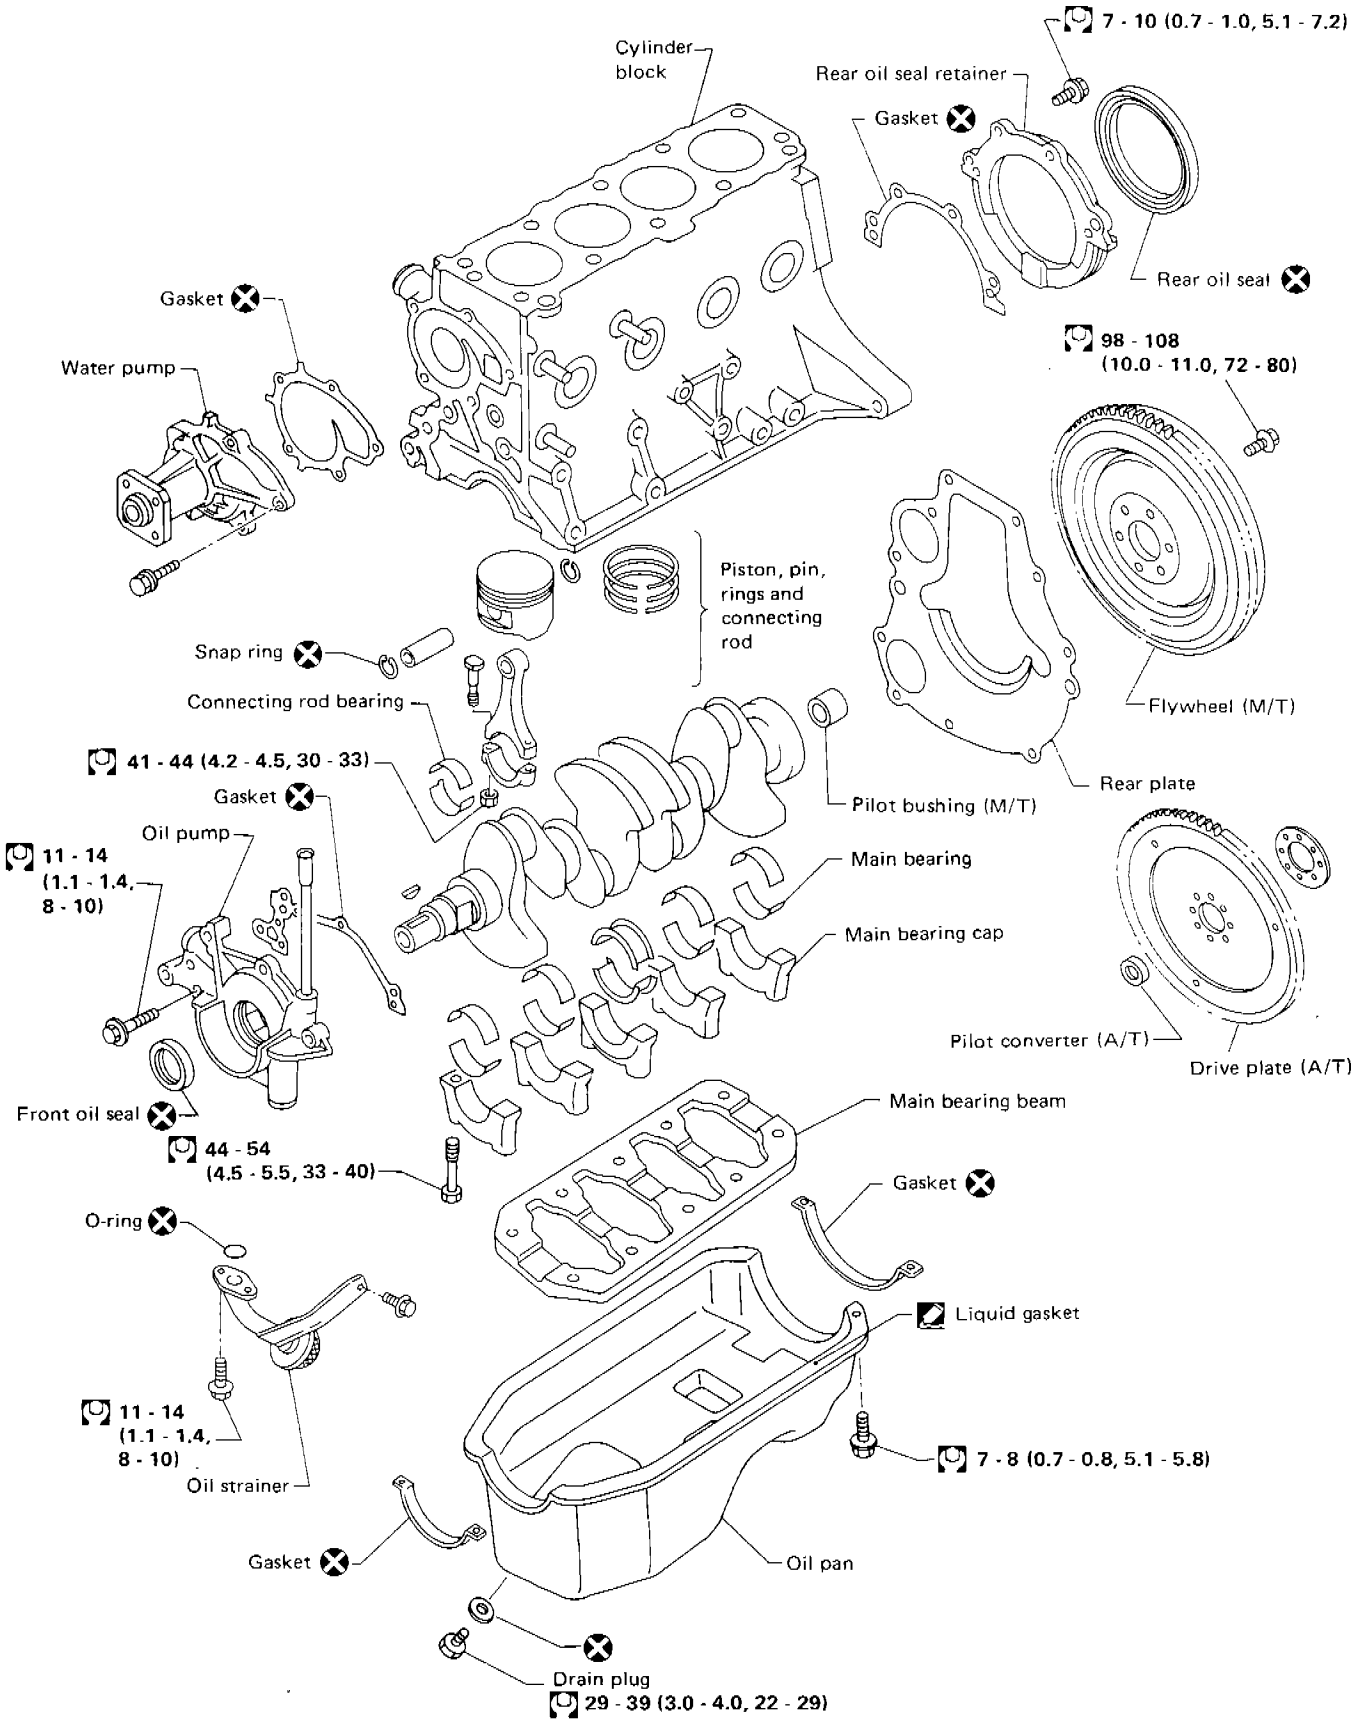


: N·m (kg-m, ft-lb)

SEM359C

CAUTION:


- **When installing sliding parts such as bearings and pistons, be sure to apply engine oil on the sliding surfaces.**
- **Place removed parts such as bearings and bearing caps in their proper order and direction.**
- **When tightening connecting rod bolts and main bearing cap bolts, apply engine oil to thread portion of bolts and seating surface of nuts.**

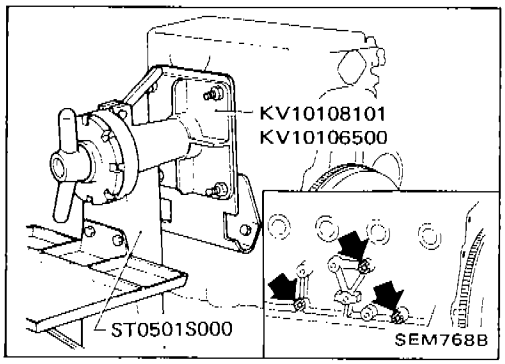


Disassembly

PISTON AND CRANKSHAFT


1. Place engine on a work stand.
2. Remove timing belt.
3. Drain coolant and remove water pump.
4. Drain oil.
5. Remove oil pan and oil pump.
6. Remove cylinder head.

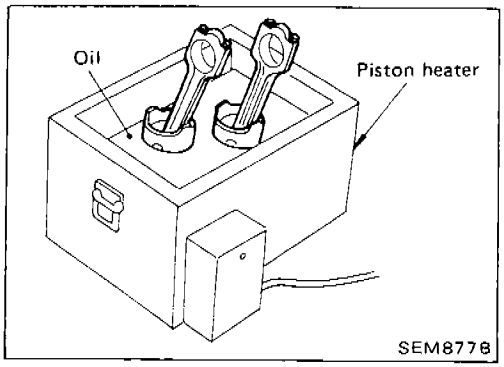

7. Remove pistons.
- When disassembling piston and connecting rod, remove snap ring first, then heat piston to 60 to 70°C (140 to 158°F) or use piston pin press stand at room temperature.

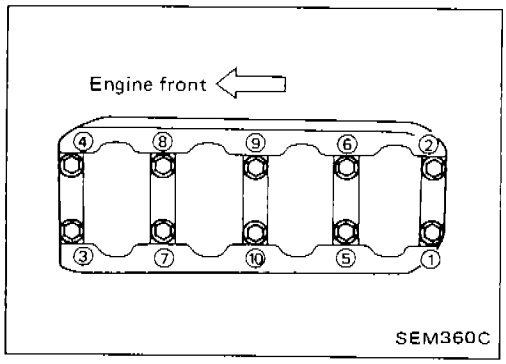

8. Remove bearing cap and crankshaft.
- **Before removing bearing cap, measure crankshaft end play.**
- **Bolts should be loosened in two or three steps.**

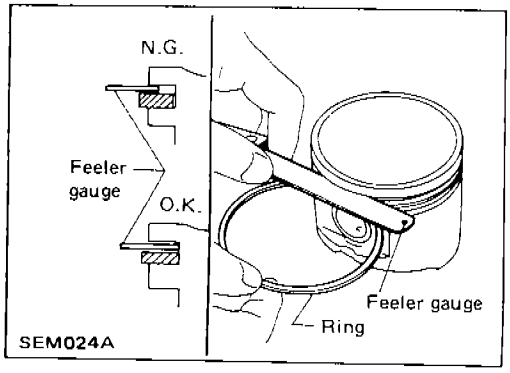

Inspection

PISTON RING SIDE CLEARANCE

Side clearance:

Top ring

0.040 - 0.073 mm (0.0016 - 0.0029 in)

2nd ring


0.030 - 0.063 mm (0.0012 - 0.0025 in)

Max. limit of side clearance:

0.1 mm (0.004 in)

If out of specification, replace piston and/or piston ring assembly.

Inspection (Cont'd)

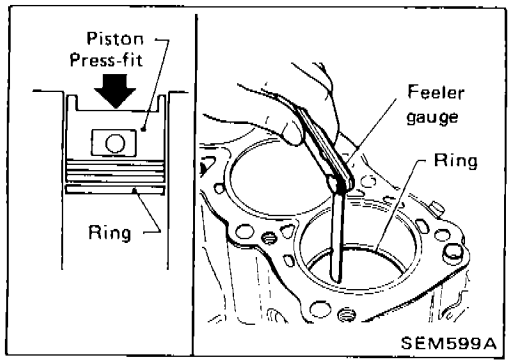

PISTON RING END GAP

End gap:

Top ring

0.25 - 0.42 mm (0.0098 - 0.0165 in)

2nd ring

0.38 - 0.64 mm (0.0150 - 0.0252 in)

Oil ring


0.20 - 0.76 mm (0.0079 - 0.0299 in)

Max. limit of ring gap:

1.0 mm (0.039 in)

If out of specification, replace piston ring. If gap still exceeds the limit even with a new ring, rebore cylinder and use oversized piston and piston rings.

Refer to S.D.S.

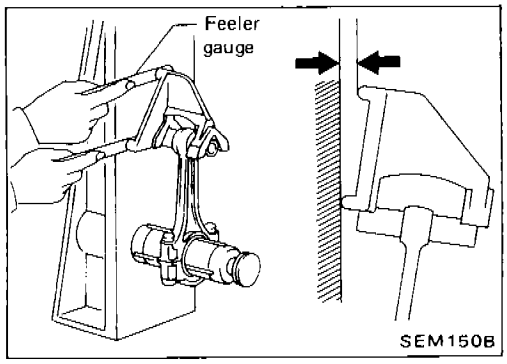


CONNECTING ROD BEND AND TORSION

Bend and torsion:

Limit 0.1 mm (0.004 in)

per 100 mm (3.94 in) length

If it exceeds the limit, replace connecting rod assembly.

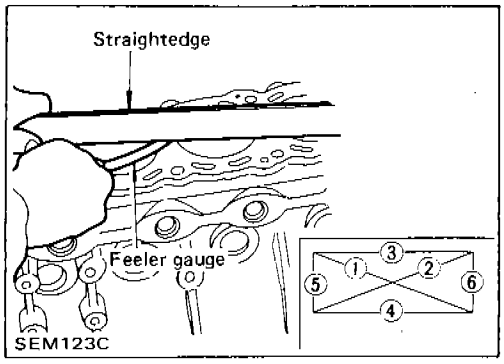

CYLINDER BLOCK DISTORTION AND WEAR

1. Clean upper face of cylinder block and measure the distortion.

   Limit:

   0.10 mm (0.0039 in)

2. If out of specification, resurface it.

   The resurfacing limit is determined by cylinder head resurfacing in engine.

Amount of cylinder head resurfacing is "A".

Amount of cylinder block resurfacing is "B".

The maximum limit is as follows:

A + B = 0.2 mm (0.008 in)


Nominal cylinder block height from crankshaft center:

204.75 - 204.85 mm (8.0610 - 8.0649 in)

3. If necessary, replace cylinder block.

Inspection (Cont'd)

PISTON-TO-BORE CLEARANCE

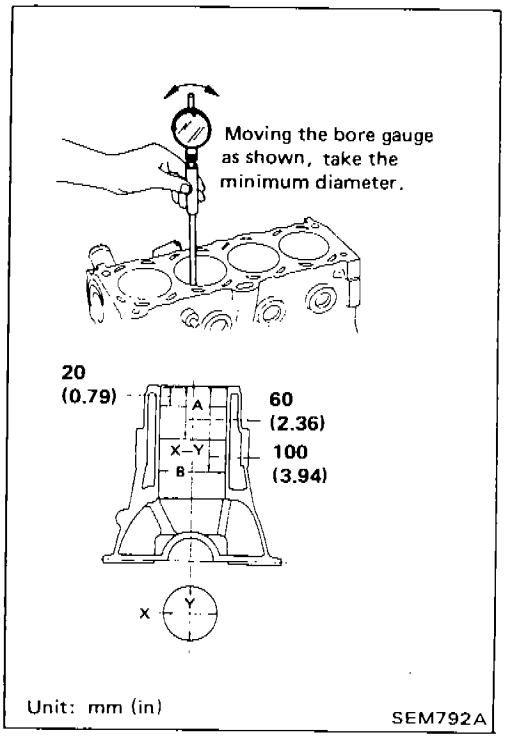


1. Using a bore gauge, measure cylinder bore for wear, out-of-round and taper.

Standard inner diameter:
83.000 - 83.050 mm (3.2677 - 3.2697 in)
Wear limit:
0.20 mm (0.0079 in)
Out-of-round (X – Y) limit:
0.015 mm (0.0006 in)
Taper (A – B) limit:
0.010 mm (0.0004 in)

If it exceeds the limit, rebore all cylinders. Replace cylinder block if necessary.

2. Check for scratches and seizure. If seizure is found, hone it.

- **If both cylinder block and pistons are replaced with new ones, select pistons having the same piston grade numbers as those punched on the cylinder block upper surfaces.**

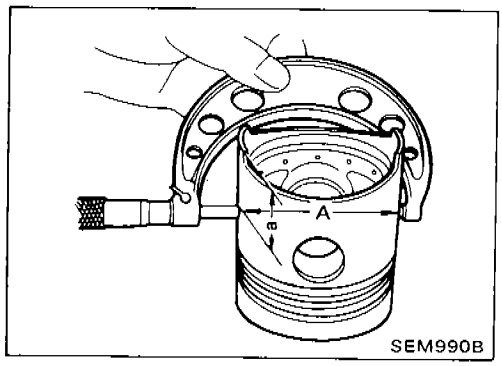

3. Measure piston skirt diameter.

Piston diameter "A":
Refer to S.D.S.
Measuring point "a" (Distance from the bottom):
14 mm (0.55 in)

4. Check that piston-to-bore clearance is within specification.

Piston-to-bore clearance "B":
0.015 - 0.035 mm (0.0006 - 0.0014 in)

5. Determine piston oversize according to amount of cylinder wear.

Oversize pistons are available for service.
Refer to S.D.S.

6. Cylinder bore size is determined by adding piston-to-bore clearance to piston diameter "A".

Rebored size calculation:
D = A + B – C
where,
D: Bored diameter
A: Piston diameter as measured
B: Piston-to-bore clearance
C: Honing allowance 0.02 mm (0.0008 in)


7. Install main bearing caps, and tighten to the specified torque to prevent distortion of cylinder bores in final assembly.
8. Cut cylinder bores.

- **When any cylinder needs boring, all other cylinders must also be bored.**
- **Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so in diameter at a time.**

9. Hone cylinders to obtain specified piston-to-bore clearance.
10. Measure finished cylinder bore for out-of-round and taper.

- **Measurement should be done after cylinder bore cools down.**


Inspection (Cont'd)

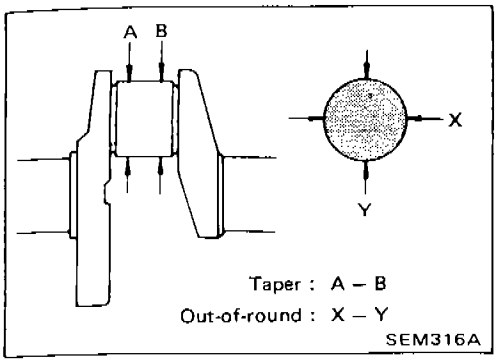

CRANKSHAFT

1. Check crankshaft main and pin journals for score, wear or cracks.
2. With a micrometer, measure journals for taper and out-of-round.

Out-of-round (X – Y):
Less than 0.005 mm (0.0002 in)
Taper (A – B):
Less than 0.005 mm (0.0002 in)

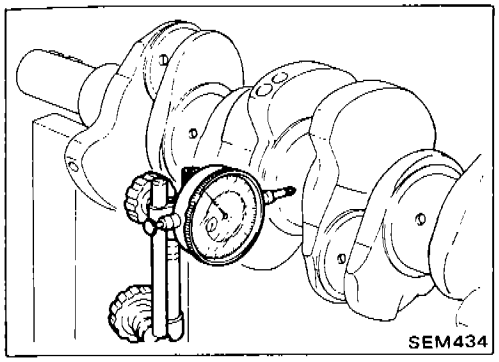


3. Measure crankshaft runout.

Runout (Total indicator reading):
Less than 0.025 mm (0.0010 in)

BEARING CLEARANCE

Method A (Using bore gauge & micrometer)
Main bearing


1. Set main bearings in their proper positions on cylinder block and main bearing cap.

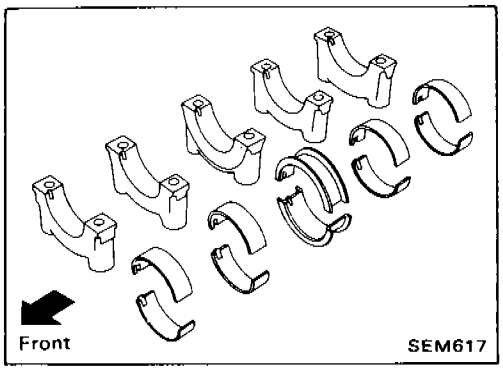

2. Install main bearing cap to cylinder block.

Tighten all bolts in correct order in two or three stages.


3. Measure inner diameter "A" of each main bearing.

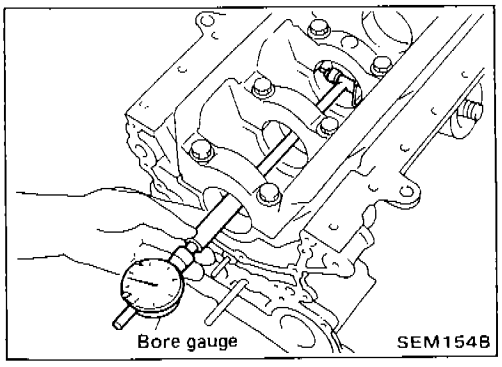


4. Measure outer diameter "Dm" of each crankshaft main journal.
5. Calculate main bearing clearance.
   Main bearing clearance = A – Dm

Standard:
0.021 - 0.048 mm (0.0008 - 0.0019 in)
Limit: 0.1 mm (0.004 in)


6. If it exceeds the limit, replace bearing.
7. If clearance cannot be adjusted within the standard of any bearing, grind crankshaft journal and use undersized bearing.

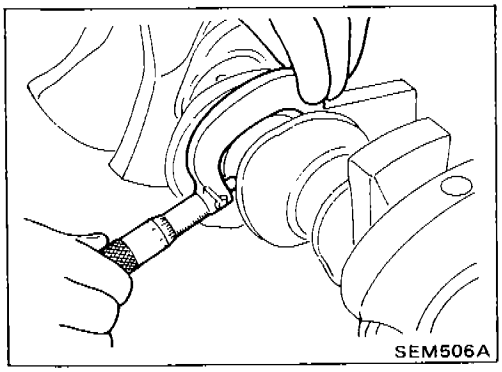


Inspection (Cont'd)

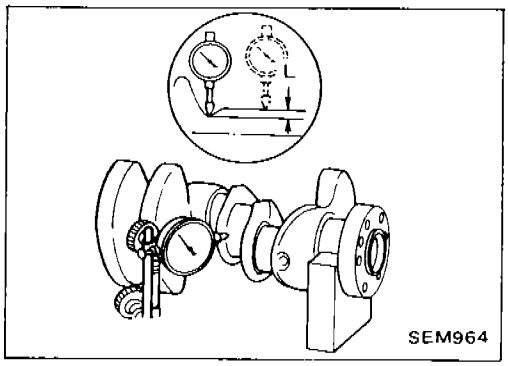

a. When grinding crankshaft journal, confirm that "L" dimension in fillet roll is more than the specified limit.
"L": 0.1 mm (0.004 in)
b. Refer to S.D.S. for grinding crankshaft and available service parts.

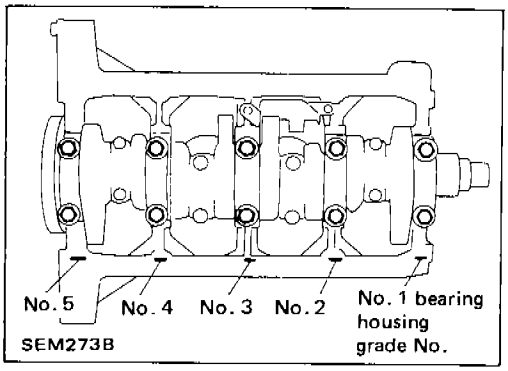

8. If crankshaft, cylinder block or main bearing is reused again, measure main bearing clearance.
If crankshaft, cylinder block and main bearings are replaced with new ones, it is necessary to select thickness of main bearings as follows:
a. Grade number of each cylinder block main journal is punched on the respective cylinder block.

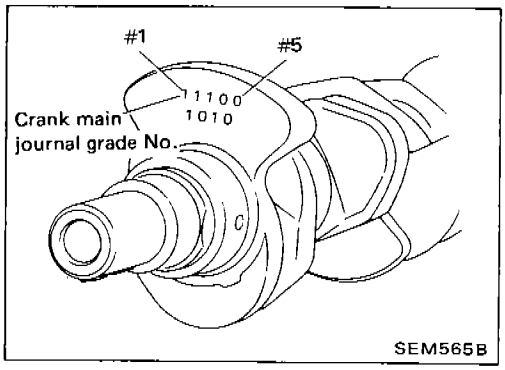

b. Grade number of each crankshaft main journal is punched on the respective crankshaft.


c. Select main bearing with suitable thickness according to the following table.

Main bearing grade number:

		Main bearing housing grade number		
		0	1	2
		Main bearing grade number		
Crankshaft main journal grade number	0	0	1	2
	1	1	2	3
	2	2	3	4

For example:
Main journal grade number: 1
Crankshaft journal grade number: 2
Main bearing grade number = 1 + 2
= 3

Inspection (Cont'd)

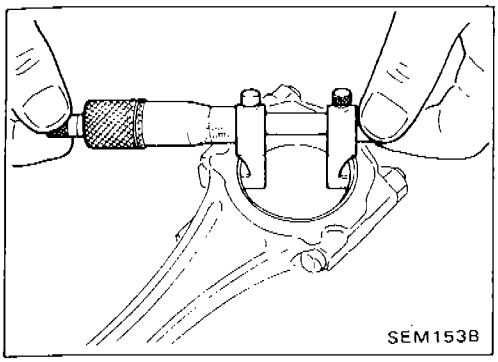

SEM153B

Connecting rod bearing (Big end)

1. Install connecting rod bearing to connecting rod and cap.
2. Install connecting rod cap to connecting rod.

Tighten bolts to the specified torque.

3. Measure inner diameter "C" of each bearing.

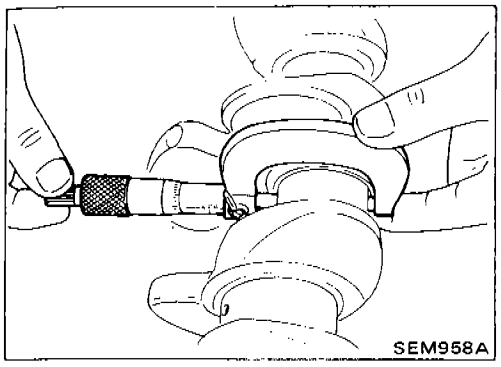
SEM958A


4. Measure outer diameter "Dp" of each crankshaft pin journal.
5. Calculate connecting rod bearing clearance.

   Connecting rod bearing clearance = C – Dp

   Standard:

   0.018 - 0.045 mm (0.0007 - 0.0018 in)

   Limit: 0.1 mm (0.004 in)
6. If it exceeds the limit, replace bearing.
7. If clearance cannot be adjusted within the standard of any bearing, grind crankshaft journal and use undersized bearing. Refer to step 7 of "BEARING CLEARANCE —Main bearing".

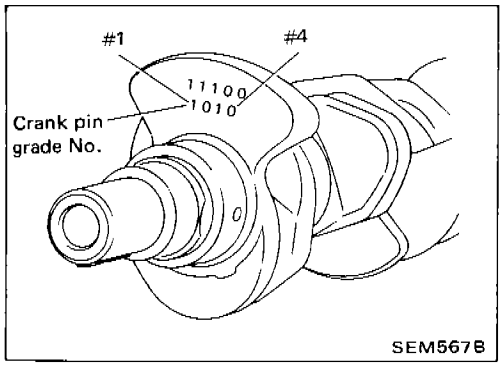


SEM567B

8. If bearing, crankshaft or connecting rod is replaced with a new one, select connecting rod bearing according to the following table.

Connecting rod bearing grade number:

Crank pin grade number	Connecting rod bearing grade number
0	0
1	1
2	2

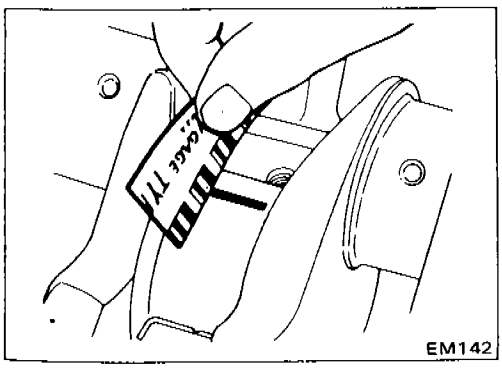
EM142


Method B (Using plastigage)

CAUTION:


- **Do not turn crankshaft or connecting rod while the plastigage is being inserted.**
- **When bearing clearance exceeds the specified limit, ensure that the proper bearing has been installed. However, if excessive bearing clearance still exists, use thicker main bearing or undersized bearing so that the specified bearing clearance is obtained.**

Inspection (Cont'd)

CONNECTING ROD BUSHING CLEARANCE (Small end)

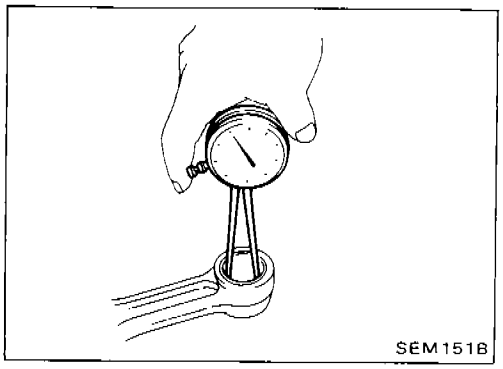

1. Measure inner diameter "C" of bushing.

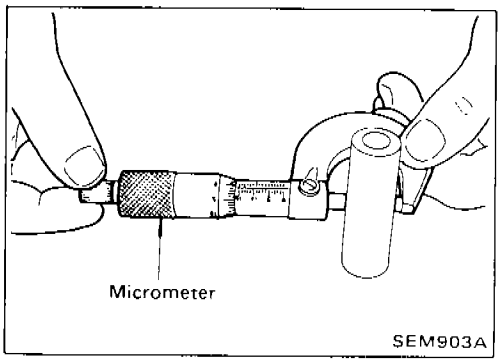


2. Measure outer diameter "Dp" of piston pin.
3. Calculate connecting rod bearing clearance.

   C – Dp = 0.005 - 0.017 mm (0.0002 - 0.0007 in)

   If it exceeds the limit, replace connecting rod assembly and/or piston set with pin.

   Connecting rod bushing cannot be removed from connecting rod.

REPLACEMENT OF CONNECTING ROD BUSHING (Small end)

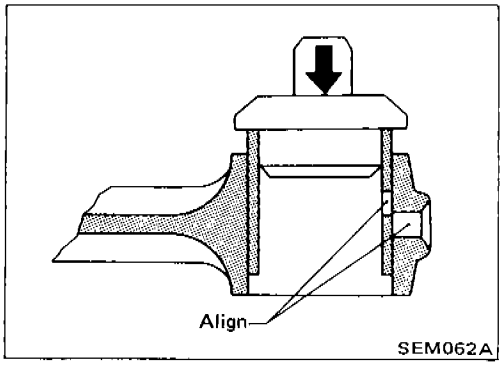


1. Drive in small end bushing until it is flush with end surface of rod.


Be sure to align the oil holes.

2. After driving in small end bushing, ream the bushing.

FLYWHEEL/DRIVE PLATE RUNOUT

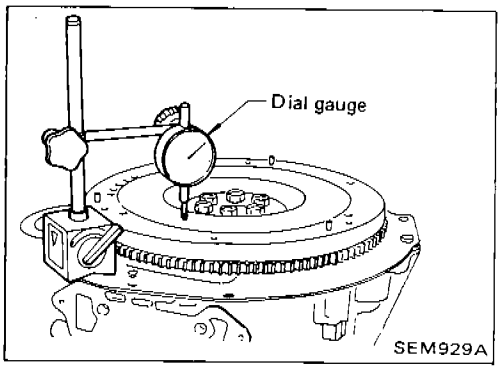

Runout (Total indicator reading):
Less than 0.15 mm (0.0059 in)

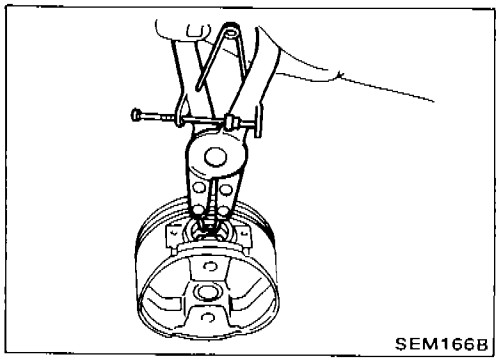


Assembly


PISTON

1. Install new snap ring on one side of piston pin hole.


Assembly (Cont'd)

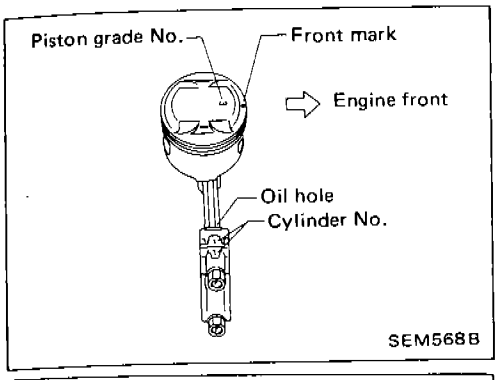

2. Heat piston to 60 to 70°C (140 to 158°F) and assemble piston, piston pin, connecting rod and new snap ring.
- **Align the direction of piston and connecting rod.**
- **Numbers stamped on connecting rod and cap correspond to each cylinder.**
- **After assembly, make sure connecting rod swings smoothly.**

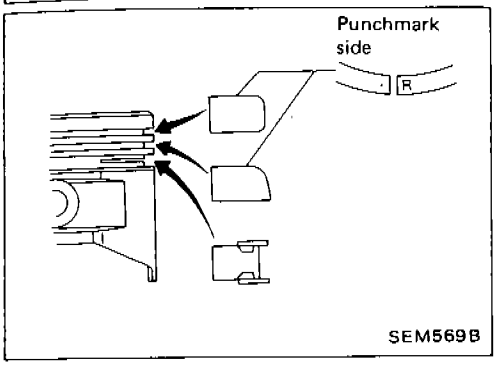


3. Set piston rings as shown.

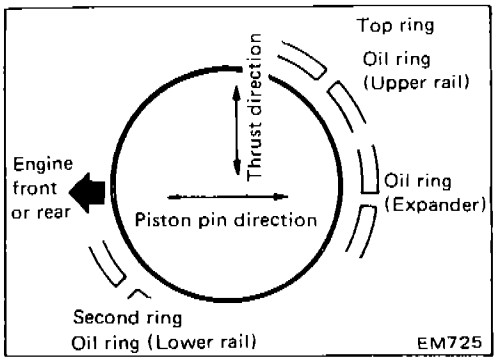


CRANKSHAFT


1. Set main bearings in their proper positions on cylinder block and main bearing cap.
- **Confirm that correct main bearings are used. Refer to "Inspection".**

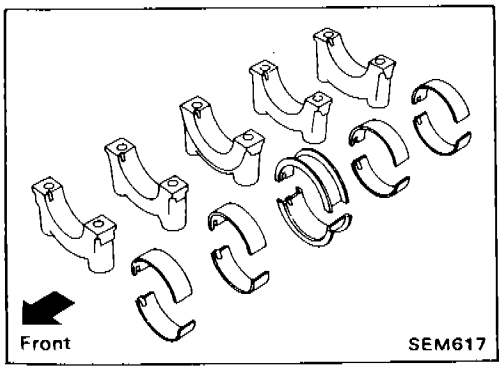

2. Install crankshaft, main bearing caps and main bearing beam and tighten bolts to the specified torque.
- **Prior to tightening bearing cap bolts, place bearing cap in its proper position by shifting crankshaft in the axial direction.**
- **Tighten bearing cap bolts gradually in two or three stages. Start with center bearing and move outward sequentially.**
- **After securing bearing cap bolts, make sure crankshaft turns smoothly by hand.**

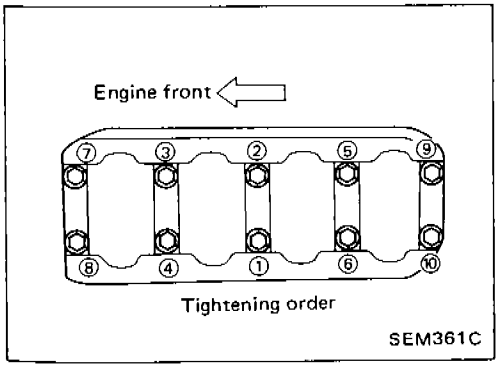


Assembly (Cont'd)

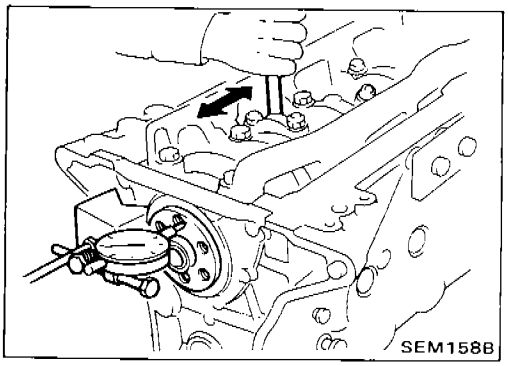


3. Measure crankshaft end play.
   Crankshaft end play:
   Standard
   0.05 - 0.18 mm (0.0020 - 0.0071 in)
   Limit
   0.3 mm (0.012 in)

If beyond the limit, replace bearing with a new one.

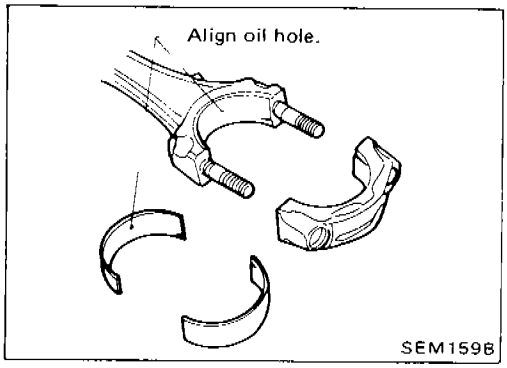


4. Install connecting rod bearings in connecting rods and connecting rod caps.
- Confirm that correct bearings are used.
  Refer to "Inspection".
- Install bearings so that oil hole in connecting rod aligns with oil hole of bearing.

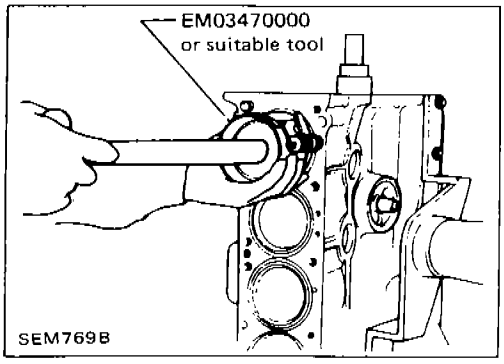


5. Install pistons with connecting rods.

a. Install them into corresponding cylinders with Tool.
- **Be careful not to scratch cylinder wall by connecting rod.**
- **Arrange so that front mark on piston head faces toward front of engine.**

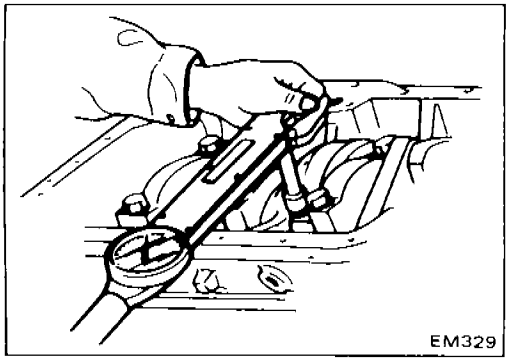

b. Install connecting rod bearing caps.
   Tighten connecting rod bearing cap nuts to the specified torque.
   Connecting rod bearing nut:
   (1) Tighten to 14 to 16 N·m (1.4 to 1.6 kg-m, 10 to 12 ft-lb).
   (2) Tighten to 41 to 44 N·m (4.2 to 4.5 kg-m, 30 to 33 ft-lb) or if you have an angle wrench, tighten bolts 60 to 65 degrees clockwise.

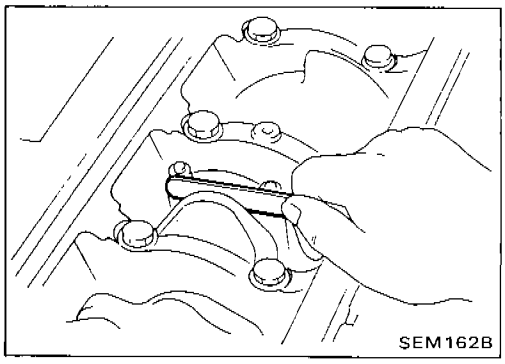


6. Measure connecting rod side clearance.
   Connecting rod side clearance:
   Standard
   0.20 - 0.35 mm (0.0079 - 0.0138 in)
   Limit
   0.4 mm (0.016 in)


If beyond the limit, replace connecting rod and/or crankshaft.

Assembly (Cont'd)

REPLACING PILOT BUSHING

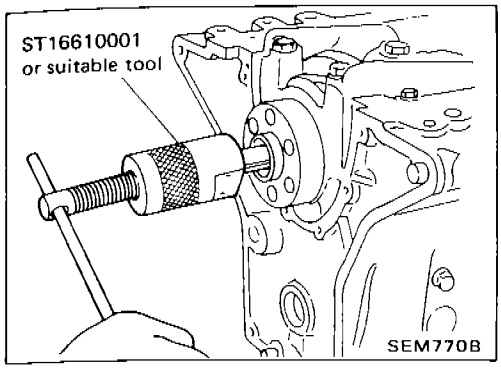

1. Remove pilot bushing (M/T)/pilot converter (A/T).

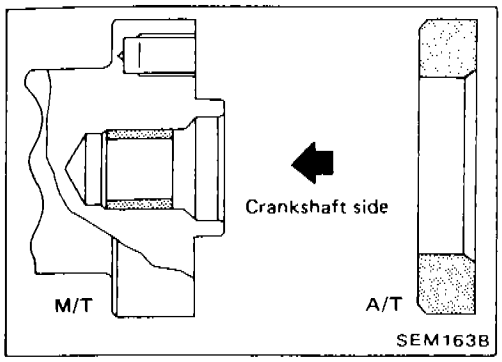

2. Install pilot bushing (M/T)/pilot converter (A/T).

General Specifications


Engine model	CA18DET
Cylinder arrangement	4, in-line
Displacement cm^3 (cu in)	1,809 (110.39)
Bore x stroke mm (in)	83.0 x 83.6 (3.268 x 3.291)
Valve arrangement	D.O.H.C.
Firing order	1-3-4-2
Number of piston rings	
Compression	2
Oil	1
Number of main bearings	5
Compression ratio	8.5

Unit: kPa (bar, kg/cm^2, psi)/rpm

Compression pressure	
Standard	1,177 (11.77, 12.0, 171)/350
Minimum	981 (9.81, 10.0, 142)/350
Differential limit between cylinders	98 (0.98, 1.0, 14)/350

Inspection and Adjustment

CYLINDER BLOCK

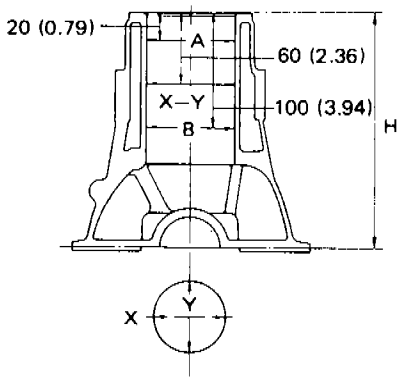

SEM528A

Unit: mm (in)


			Standard	Limit
Distortion			0.03 (0.0012)	0.1 (0.004)
Cylinder bore	Inner diameter	Grade 1	83.000 - 83.010 (3.2677 - 3.2681)	0.2 (0.008)*
		Grade 2	83.010 - 83.020 (3.2681 - 3.2685)	
		Grade 3	83.020 - 83.030 (3.2685 - 3.2689)	
		Grade 4	83.030 - 83.040 (3.2689 - 3.2693)	
		Grade 5	83.040 - 83.050 (3.2693 - 3.2697)	
	Out-of-round (X — Y)		Less than 0.015 (0.0006)	—
	Taper (A — B)		Less than 0.010 (0.0004)	—
Difference in inner diameter between cylinders			Less than 0.05 (0.0020)	0.2 (0.008)
Piston-to-cylinder clearance			0.015 - 0.035 (0.0006 - 0.0014)	—
Cylinder block height (From crankshaft center)			204.75 - 204.85 (8.0610 - 8.0649)	0.2 (0.008)**

* Wear limit

** Total amount of cylinder head resurfacing and cylinder block resurfacing

Inspection and Adjustment (Cont'd)

CYLINDER HEAD

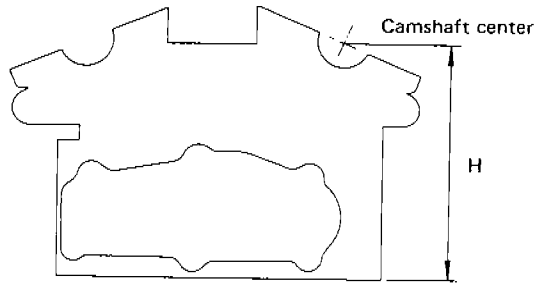


SEM570B

Unit: mm (in)


	Standard	Limit
Height (H)	125.9 - 126.1 (4.957 - 4.965)	0.2 (0.008)*
Surface distorsion	0.03 (0.0012)	0.1 (0.004)

* Total amount of cylinder head resurfacing and cylinder block resurfacing

VALVE GUIDE

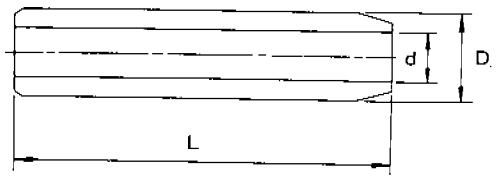

SEM571B

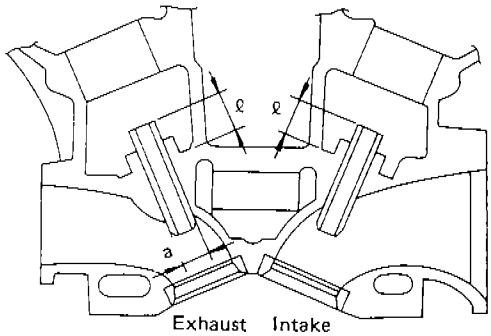


SEM572B

Unit: mm (in)

	Standard		Service		Limit
	Intake	Exhaust	Intake	Exhaust	
Length (L)	40.1 (1.579)	43.1 (1.697)	40.1 (1.579)	43.1 (1.697)	—
Outer diameter (D)	10.023 - 10.034 (0.3946 - 0.3950)		10.223 - 10.234 (0.4025 - 0.4029)		—
Inner diameter (d) (Finished size)	6.000 - 6.018 (0.2362 - 0.2369)				—
Cylinder head hole diameter (a)	9.975 - 9.996 (0.3927 - 0.3935)		10.175 - 10.196 (0.4006 - 0.4014)		—
Interference fit	0.027 - 0.059 (0.0011 - 0.0023)				—
Stem to guide clearance	0.020 - 0.053 (0.0008 - 0.0021)	0.040 - 0.073 (0.0016 - 0.0029)	0.020 - 0.053 (0.0008 - 0.0021)	0.040 - 0.073 (0.0016 - 0.0029)	0.1 (0.004)
Tapping length (ℓ)	15.1 - 15.3 (0.594 - 0.602)				—

Inspection and Adjustment (Cont'd)

VALVE SEAT

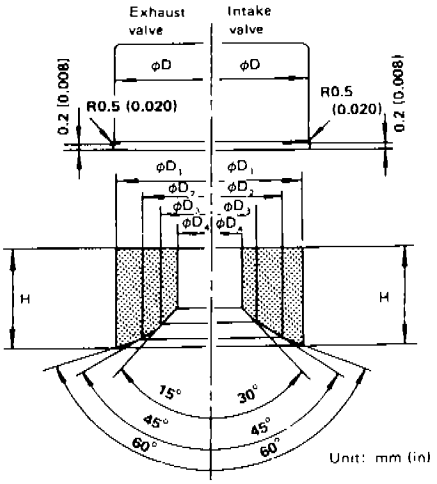


SEM573B

Unit: mm (in)

	Standard		Service	
	Intake	Exhaust	Intake	Exhaust
Cylinder head seat recess diameter (D)	36.000 - 36.016 (1.4173 - 1.4179)	30.000 - 30.016 (1.1811 - 1.1817)	36.500 - 36.516 (1.4370 - 1.4376)	30.500 - 30.516 (1.2008 - 1.2014)
Valve seat outer diameter (D_1)	36.097 - 36.113 (1.4211 - 1.4218)	30.080 - 30.096 (1.1842 - 1.1849)	36.597 - 36.613 (1.4408 - 1.4415)	30.580 - 30.596 (1.2039 - 1.2046)
Face outer diameter (D_2)	33.6 - 33.8 (1.323 - 1.331)	27.4 - 27.6 (1.079 - 1.087)	33.6 - 33.8 (1.323 - 1.331)	27.4 - 27.6 (1.079 - 1.087)
Face inner diameter (D_3)	31.5 (1.240)	24.9 (0.980)	31.5 (1.240)	24.9 (0.980)
Valve seat inner diameter (D_4)	29.85 - 30.15 (1.1752 - 1.1870)	22.85 - 23.15 (0.8996 - 0.9114)	29.9 - 30.1 (1.177 - 1.185)	22.85 - 23.15 (0.8996 - 0.9114)
Height (H)	5.9 - 6.0 (0.232 - 0.236)	6.4 - 6.5 (0.252 - 0.256)	5.35 - 5.45 (0.2106 - 0.2146)	5.75 - 5.85 (0.2264 - 0.2303)

Inspection and Adjustment (Cont'd)

VALVE

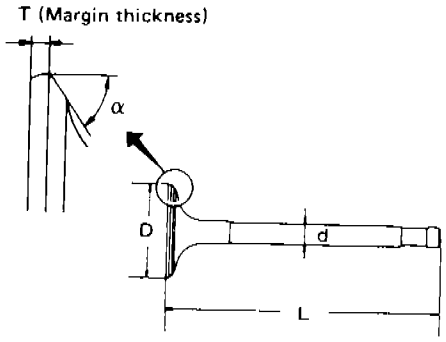

SEM188A

Unit: mm (in)

		Standard	Limit
Valve head diameter (D)	In.	34.0 - 34.2 (1.339 - 1.346)	—
	Ex.	28.0 - 28.2 (1.102 - 1.110)	—
Valve length (L)	In.	88.8 - 89.0 (3.496 - 3.504)	—
	Ex.	89.2 - 89.4 (3.512 - 3.520)	—
Valve stem diameter (d)	In.	5.965 - 5.980 (0.2348 - 0.2354)	—
	Ex.	5.945 - 5.960 (0.2341 - 0.2346)	—
Valve face angle (α)	In.	45°30′	—
	Ex.	45°30′	—
Valve head margin (T)	In.	1.3 (0.051)	0.5 (0.020)
	Ex.	1.5 (0.059)	

VALVE SPRING

Unit: mm (in)

	Standard	Limit
Free height (H)	43.1 (1.697)	—
Spring constant N/mm (kg/mm, lb/in)	28.4 (2.9, 162)	—
Out-of-square (S)	—	1.8 (0.071)


HYDRAULIC VALVE LIFTER

Unit: mm (in)


Valve lifter diameter	30.955 - 30.965 (1.2187 - 1.2191)
Lifter guide bore diameter	31.000 - 31.013 (1.2205 - 1.2210)

Inspection and Adjustment (Cont'd)

CAMSHAFT AND CAMSHAFT BEARING

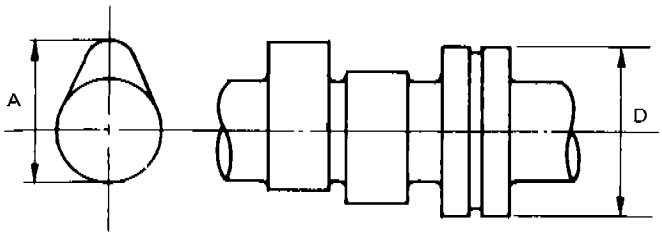

SEM568A

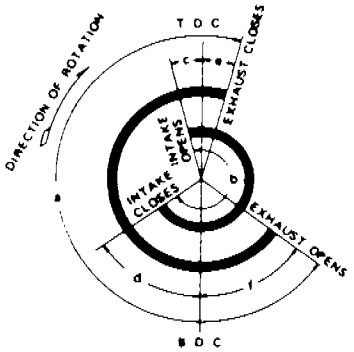

EM120


Unit: mm (in)

		Standard	Limit
Cam height (A)	In.	39.785 - 39.815 (1.5663 - 1.5675)	–
	Ex.	40.485 - 40.515 (1.5939 - 1.5951)	–
Valve lift	In.	7.8 (0.307)	–
	Ex.	8.5 (0.335)	–
Wear limit of cam height		–	0.2 (0.008)
Camshaft journal to bearing clearance		0.045 - 0.090 (0.0018 - 0.0035)	0.15 (0.0059)
Inner diameter of camshaft bearing		28.000 - 28.025 (1.1024 - 1.1033)	–
Outer diameter of camshaft journal (D)		27.935 - 27.955 (1.0998 - 1.1006)	–
Camshaft runout		–	0.05 (0.0020)
Camshaft end play		0.07 - 0.15 (0.0028 - 0.0059)	0.2 (0.008)
Valve timing (Degree on crankshaft)	a	248	–
	b	240	–
	c	0	–
	d	60	–
	e	9	–
	f	59	–

Inspection and Adjustment (Cont'd)

PISTON, PISTON RING AND PISTON PIN

Piston

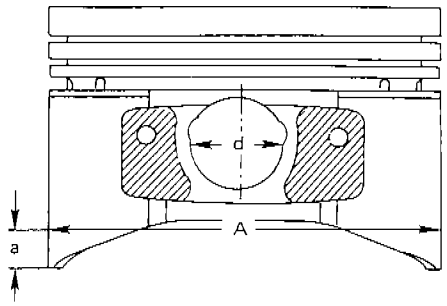

SEM493C

Unit: mm (in)

Piston skirt diameter (A)	Service (Standard)	Grade No. 1	82.975 - 82.985 (3.2667 - 3.2671)
		Grade No. 2	82.985 - 82.995 (3.2671 - 3.2675)
		Grade No. 3	82.995 - 83.005 (3.2675 - 3.2679)
		Grade No. 4	83.005 - 83.015 (3.2679 - 3.2683)
		Grade No. 5	83.015 - 83.025 (3.2683 - 3.2687)
	Service (Oversize)	0.5 (0.020)	83.475 - 83.525 (3.2864 - 3.2884)
		1.0 (0.039)	83.975 - 84.025 (3.3061 - 3.3081)
Dimension (a)		Approximately 14 (0.55)	
Piston pin hole diameter (d)		19.987 - 19.999 (0.7869 - 0.7874)	
Piston-to-cylinder bore clearance		0.015 - 0.035 (0.0006 - 0.0014)	

Piston pin

Unit: mm (in)

Piston pin outer diameter	19.989 - 20.001 (0.7870 - 0.7874)
Interference fit of piston pin to piston pin hole clearance	0 - 0.004 (0 - 0.0002)
Piston pin to connecting rod bearing clearance	0.005 - 0.017 (0.0002 - 0.0007)


Piston ring

Unit: mm (in)

		Standard	Limit
Side clearance	Top	0.040 - 0.073 (0.0016 - 0.0029)	0.1 (0.004)
	2nd	0.030 - 0.063 (0.0012 - 0.0025)	0.1 (0.004)
End gap	Top	0.25 - 0.42 (0.0098 - 0.0165)	1.0 (0.039)
	2nd	0.38 - 0.64 (0.0150 - 0.0252)	1.0 (0.039)
	Oil (rail ring)	0.20 - 0.76 (0.0079 - 0.0299)	1.0 (0.039)

Inspection and Adjustment (Cont'd)

ONNECTING ROD

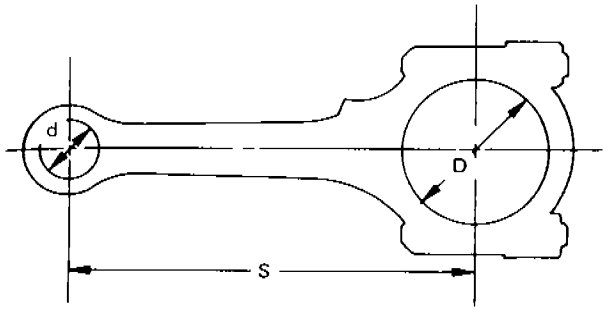

SEM570A


Unit: mm (in)

	Standard	Limit
ıter distance (S)	132.95 - 133.05 (5.2342 - 5.2382)	—
ıd ır 100 mm (3.94 in)]	—	0.1 (0.004)
ʳsion ır 100 mm (3.94 in)]	—	0.1 (0.004)
ton pin bore diameter *	22.987 - 23.000 (0.9050 - 0.9055)	—
arance between piston and bearing	0.005 - 0.017 (0.0002 - 0.0007)	—
nk pin bore diameter *	48.000 - 48.013 (1.8898 - 1.8903)	—
arance between crank and bearing	0.018 - 0.045 (0.0007 - 0.0018)	—
end play	—	0.4 (0.016)


'ithout bearing

Inspection and Adjustment (Cont'd)

CRANKSHAFT

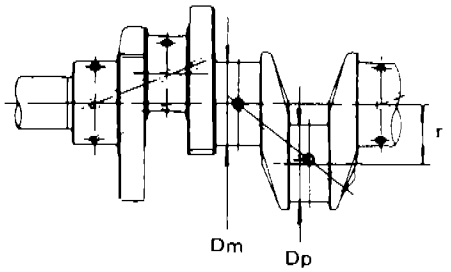

EM737

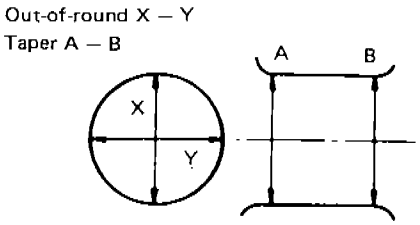

EM715

Unit: mm (in)

Main journal diameter (Dm)	52.951 - 52.975 (2.0847 - 2.0856)	
Pin journal diameter (Dp)	44.954 - 44.974 (1.7698 - 1.7706)	
Center distance (r)	41.77 - 41.83 (1.6445 - 1.6468)	
	Standard	Limit
Taper of journal and pin (A — B)	—	0.005 (0.0002)
Out-of-round of journal and pin (X — Y)	—	0.005 (0.0002)
Runout [T.I.R.] *	—	0.025 (0.0010)
Free end play	0.05 - 0.18 (0.0020 - 0.0071)	0.3 (0.012)

* Total indicator reading

Inspection and Adjustment (Cont'd)

BEARING CLEARANCE

Unit: mm (in)

	Standard	Limit
Main bearing clearance	0.021 - 0.048 (0.0008 - 0.0019)	0.1 (0.004)
Connecting rod bearing clearance	0.018 - 0.045 (0.0007 - 0.0018)	0.1 (0.004)

AVAILABLE MAIN BEARING

Standard

Grade number	Thickness mm (in)	Identification color
0	1.825 - 1.829 (0.0719 - 0.0720)	Black
1	1.829 - 1.833 (0.0720 - 0.0722)	Brown
2	1.833 - 1.837 (0.0722 - 0.0723)	Green
3	1.837 - 1.841 (0.0723 - 0.0725)	Yellow
4	1.841 - 1.845 (0.0725 - 0.0726)	Blue

Undersize (service)

Unit: mm (in)

	Thickness	Main journal diameter "Dm"
0.25 (0.0098)	1.947 - 1.960 (0.0767 - 0.0772)	Grind so that bearing clearance is the specified value.

AVAILABLE CONNECTING ROD BEARING

Standard

Grade number	Thickness mm (in)	Identification color
0	1.501 - 1.504 (0.0591 - 0.0592)	—
1	1.504 - 1.507 (0.0592 - 0.0593)	Brown
2	1.507 - 1.510 (0.0593 - 0.0594)	Green

Undersize (service)

Unit: mm (in)

	Thickness	Crank pin journal diameter "Dp"
0.08 (0.0031)	1.540 - 1.548 (0.0606 - 0.0609)	Grind so that bearing clearance is the specified value.
0.12 (0.0047)	1.560 - 1.568 (0.0614 - 0.0617)	
0.25 (0.0098)	1.625 - 1.633 (0.0640 - 0.0643)	

MISCELLANEOUS COMPONENTS

Unit: mm (in)

Camshaft sprocket runout	[T.I.R.] *	Less than 0.1 (0.004)
Flywheel runout	[T.I.R.] *	Less than 0.15 (0.0059)

* Total indicator reading

TURBOCHARGER

By-pass valve controller diaphragm	0.38 mm (0.0150 in)/ 83.3 - 88.6 kPa (833 - 886 mbar, 625 - 665 mmHg, 24.61 - 26.18 inHg)
Play	0.013 - 0.097 mm (0.0005 - 0.0038 in)





ENGINE LUBRICATION & COOLING SYSTEMS

SECTION LC


CONTENTS

PREPARATION ..... LC- 2
ENGINE LUBRICATION SYSTEM ..... LC- 3
ENGINE COOLING SYSTEM ..... LC- 8
SERVICE DATA AND SPECIFICATIONS (S.D.S.) LC-15

SPECIAL SERVICE TOOLS

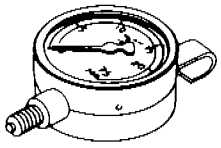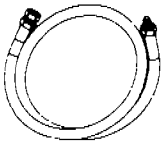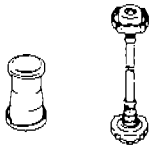Tool number Tool name	Description	
ST25051001 Oil pressure gauge		
ST25052000 Hose		Adapting oil pressure gauge to cylinder block
EG17650301 Radiator cap tester adapter		Adapting radiator cap tester to radiator filler neck
KV99103510 Radiator plate pliers A		Installing radiator upper and lower tanks
KV99103520 Radiator plate pliers B		Removing radiator upper and lower tanks


Lubrication Circuit

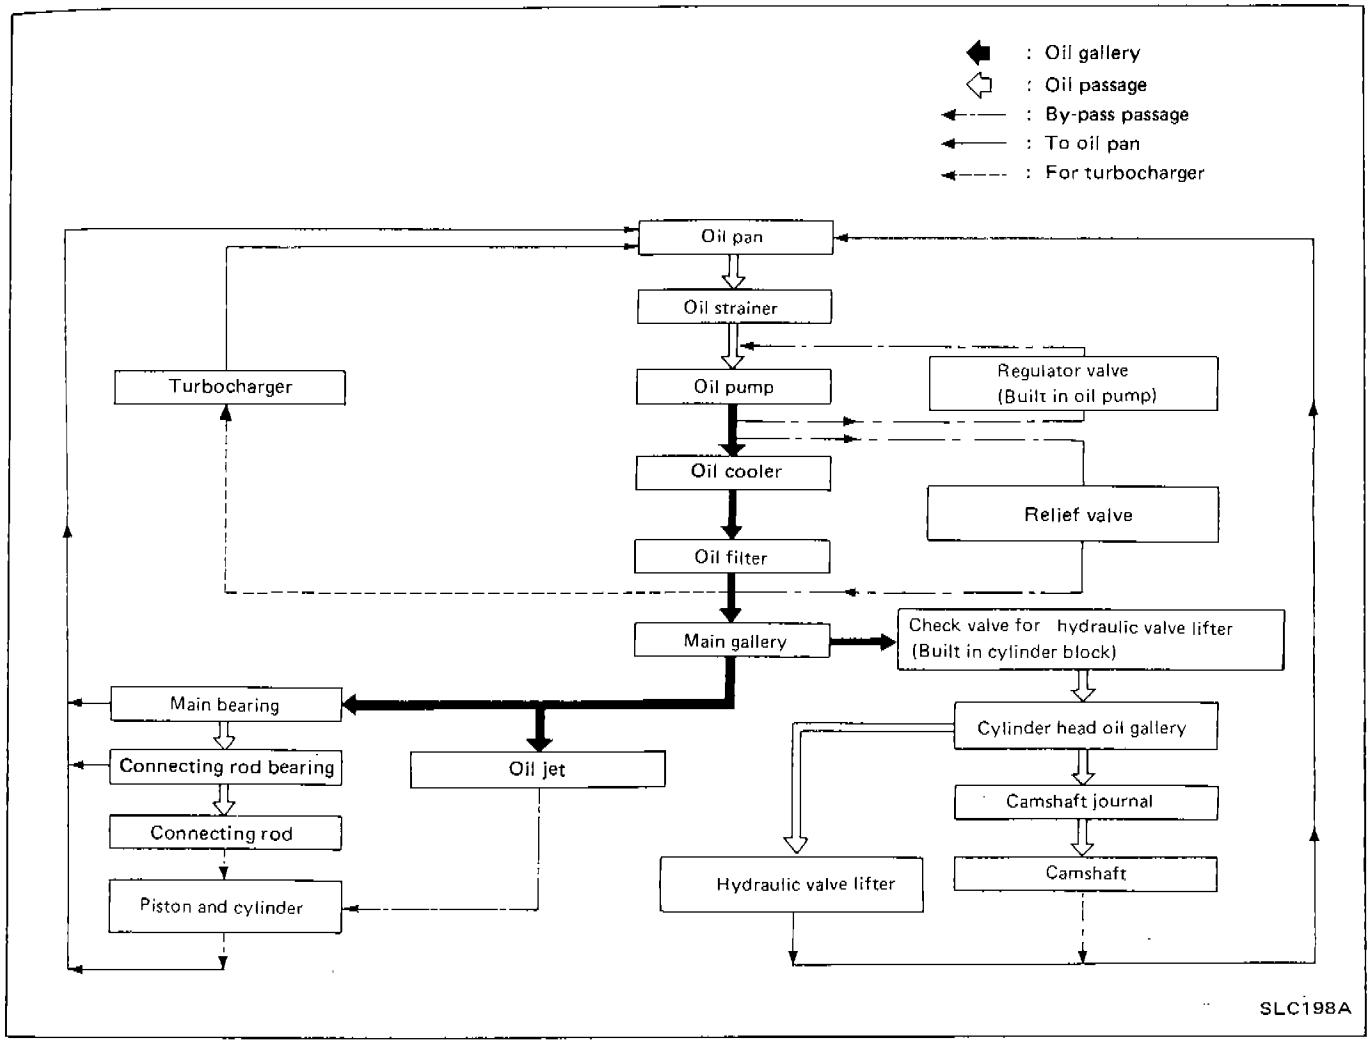

Oil Pressure Check


WARNING:

- **Be careful not to burn yourself, as the engine and oil may be hot.**
- **Oil pressure check should be done in "Neutral" gear position.**

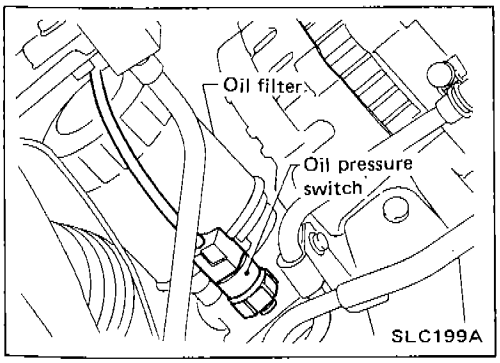

1. Check oil level.
2. Remove oil pressure switch.

Oil Pressure Check (Cont'd)

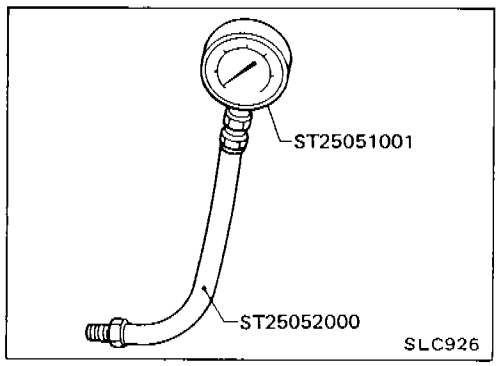

3. Install pressure gauge.
4. Start engine and warm it up to normal operating temperature.
5. Check oil pressure with engine running under no-load.

Engine rpm	Approximate discharge pressure kPa (bar, kg/cm^2, psi)
Idle speed	More than 78 (0.78, 0.8, 11)
3,000	353 - 412 (3.53 - 4.12, 3.6 - 4.2, 51 - 60)

If difference is extreme, check oil passage and oil pump for oil leaks.

6. Install oil pressure switch with sealant.


Use proper liquid sealant.

Oil pressure switch:


: 10 - 16 N·m (1.0 - 1.6 kg-m, 7 - 12 ft-lb)

Oil Pump

REMOVAL AND INSTALLATION

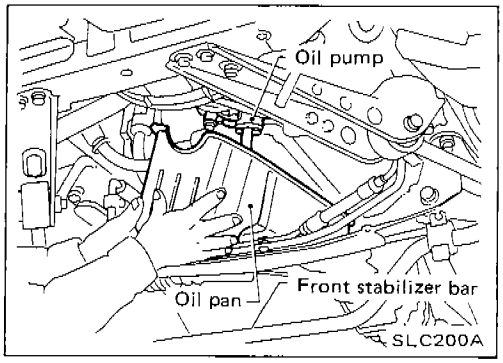


1. Remove drive belts.
2. Remove timing belt covers and timing belt.
3. Remove front stabilizer bar.
4. Loosen front engine mounting nuts. (Do not loosen nuts completely.)
5. Lift up engine slightly using engine slings.
6. Remove oil pan.

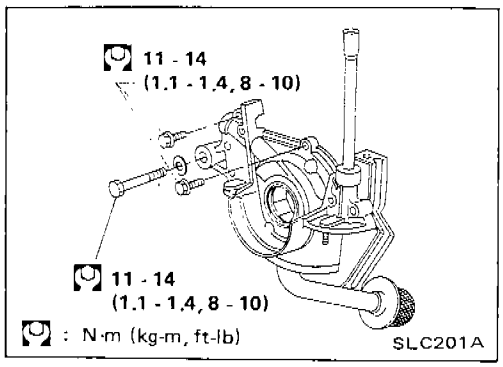


7. Remove oil pump assembly with oil strainer.
8. Installation is in reverse order of removal.


Oil Pump (Cont'd)

DISASSEMBLY AND ASSEMBLY

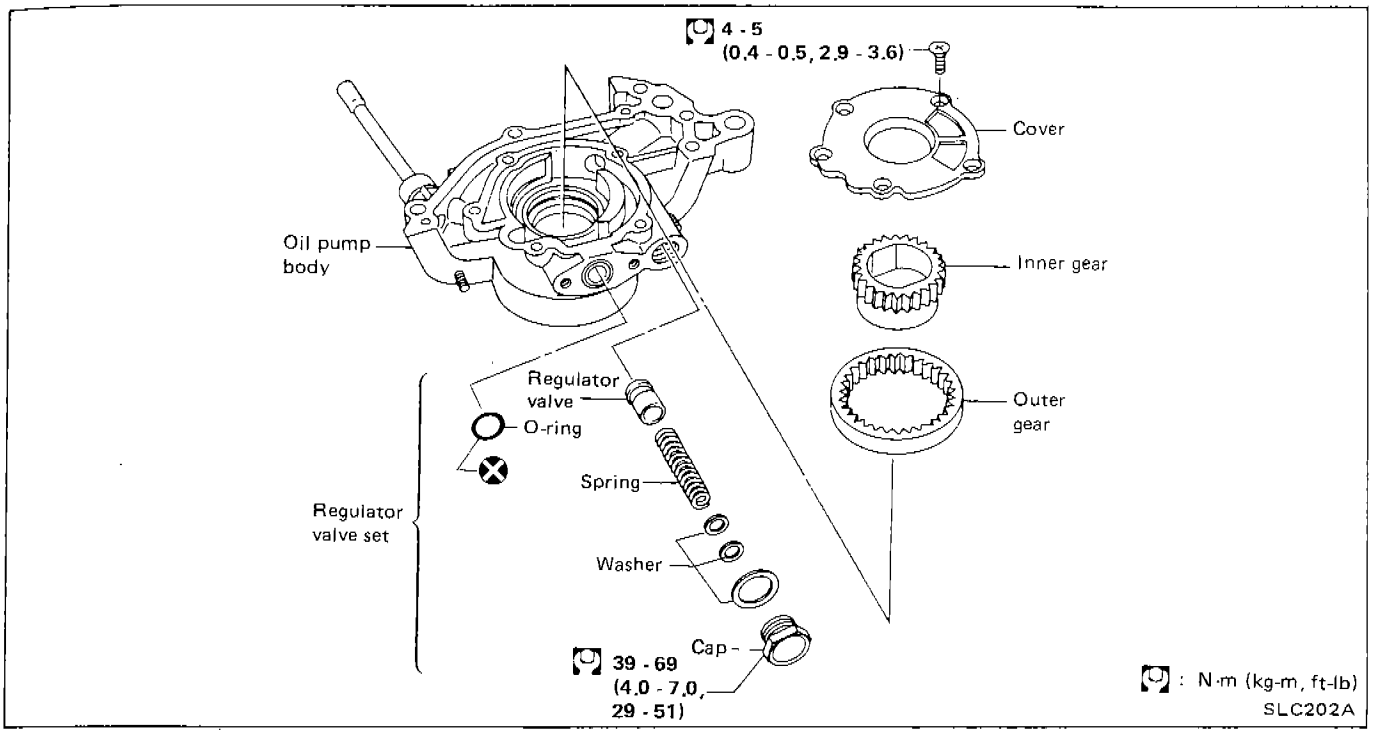

- **When installing oil pump, apply engine oil to inner and outer gear.**
- **Be sure that O-ring is properly fitted.**

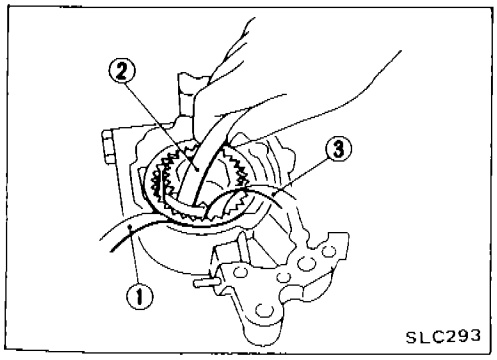

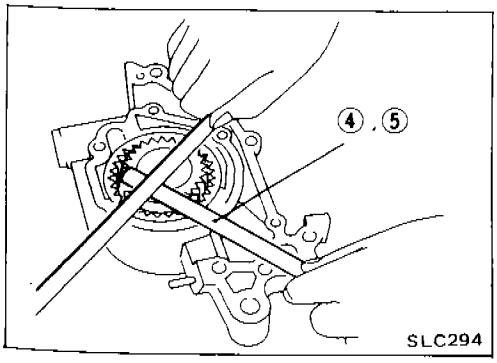


INSPECTION

Using a feeler gauge, check the following clearances.

Unit: mm (in)

Body to outer gear clearance ①	0.11 - 0.20 (0.0043 - 0.0079)
Inner gear to crescent clearance ②	0.15 - 0.26 (0.0059 - 0.0102)
Outer gear to crescent clearance ③	0.21 - 0.32 (0.0083 - 0.0126)
Housing to inner gear clearance ④	0.05 - 0.09 (0.0020 - 0.0035)
Housing to outer gear clearance ⑤	0.05 - 0.11 (0.0020 - 0.0043)

If it exceeds the limit, replace gear set or entire oil pump assembly.

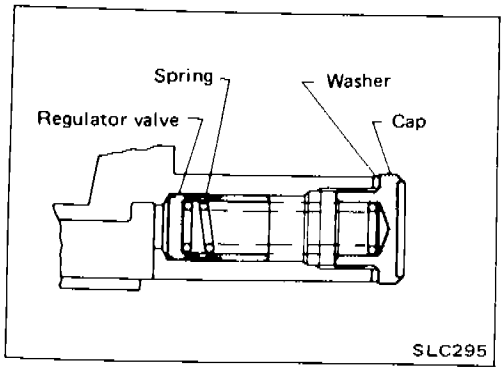

Oil Pump (Cont'd)


REGULATOR VALVE INSPECTION

1. Visually inspect components for wear and damage.
2. Check oil pressure regulator valve sliding surface and valve spring.
3. Coat regulator valve with engine oil and check that it falls smoothly into the valve hole by its own weight.

If damaged, replace regulator valve set or oil pump assembly.

OIL PRESSURE RELIEF VALVE INSPECTION


Inspect oil pressure relief valve for movement, cracks and breaks by pushing the ball, If replacement is necessary, remove valve by prying it out with a suitable tool. Install a new valve in place by tapping it.

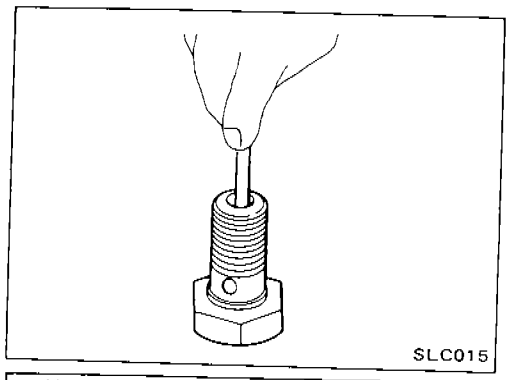

Oil Jet

INSPECTION (For piston)


1. Blow through outlet of oil jet and make sure that air comes out of inlet.
2. Push cut-off valve of oil jet bolt with a clean resin or brass rod and make sure that cut-off valve moves smoothly with proper repulsion.

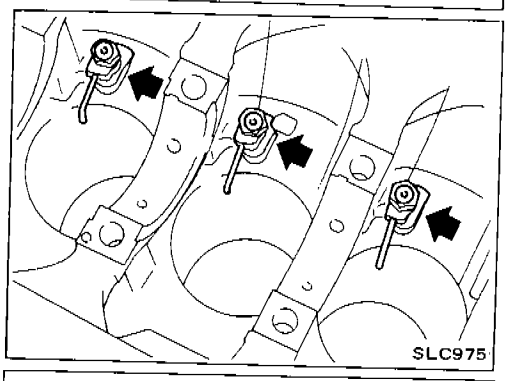

When installing oil jet, align oil jet's boss with hole on cylinder block.

Oil jet bolt:


: 29 - 39 N·m (3.0 - 4.0 kg-m, 22 - 29 ft-lb)

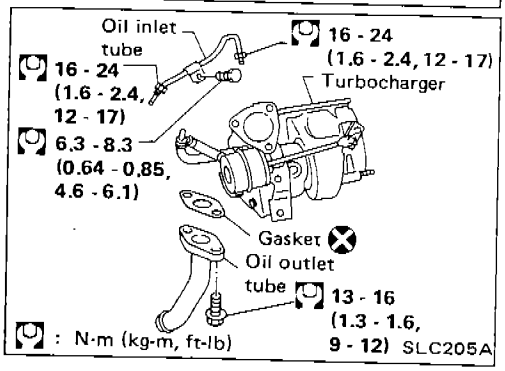

Turbocharger

- **Before removing water tube, drain coolant first.**
- **After installation, run engine for a few minutes and check for leaks.**

Oil Cooler

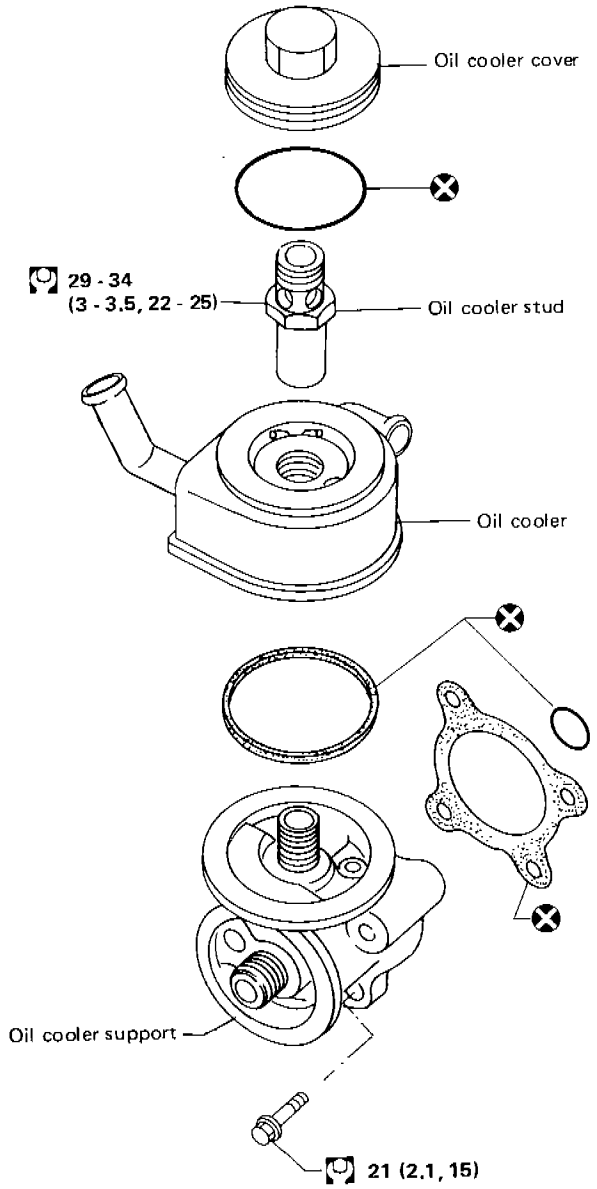



: N·m (kg-m, ft-lb)

INSPECTION

1. Check oil cooler element and housing for cracks.
2. Check oil cooler for clogging by blowing through coolant inlet.
   Replace it if necessary.

Cooling Circuit

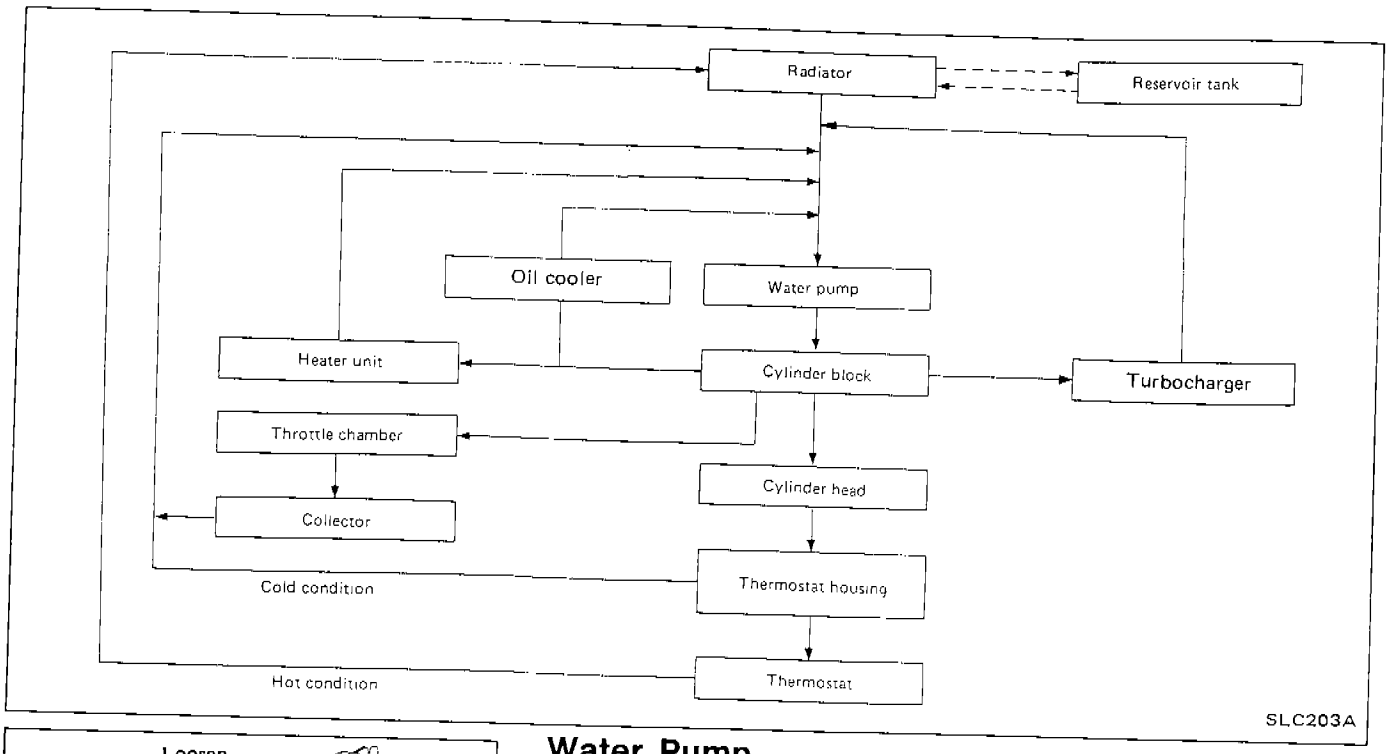


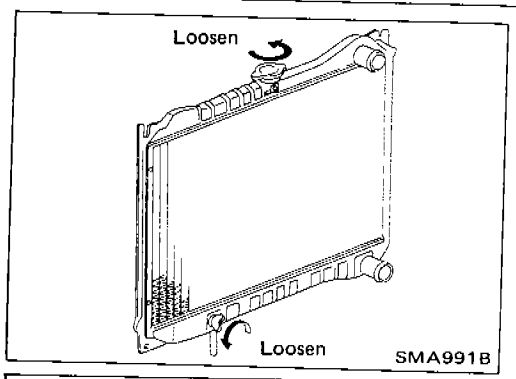


Water Pump

REMOVAL AND INSTALLATION

1. Drain coolant from radiator.

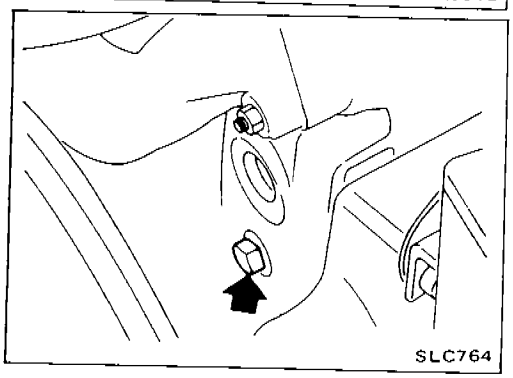

2. Remove cylinder block drain plug located at left rear of cylinder block and drain coolant.

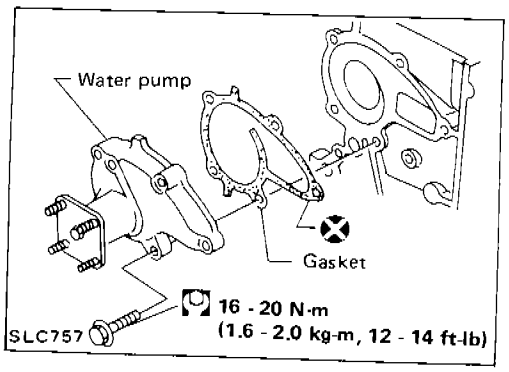


CAUTION:

- **When removing water pump assembly, be careful not to get coolant on timing belt.**
- **Water pump cannot be disassembled and should be replaced as a unit.**
- **After installing water pump, connect hose and clamp securely, then check for leaks using radiator cap tester.**

Water Pump (Cont'd)

INSPECTION


1. Check for badly rusted or corroded body assembly and vane.
2. Check for rough operation due to excessive end play.

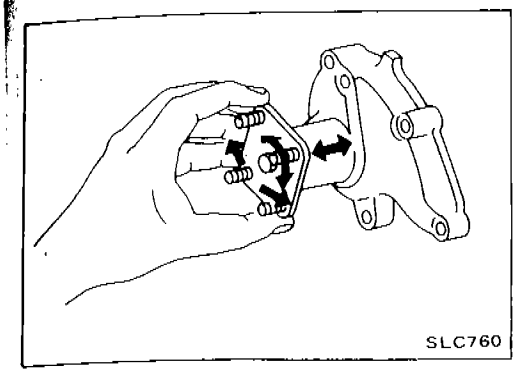
SLC760


Thermostat

INSPECTION


1. Check for valve seating condition at ordinary temperatures. It should seat tightly.

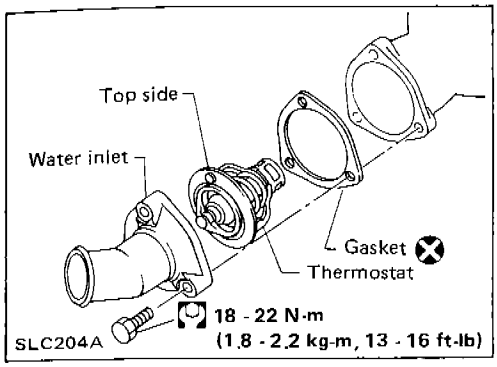

SLC204A

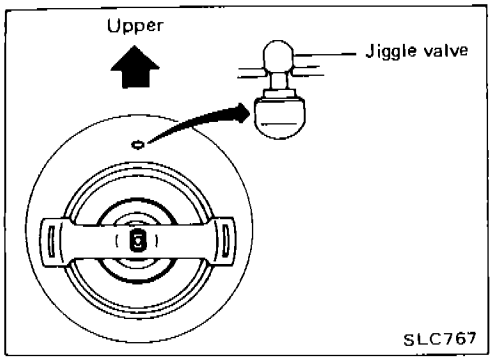

SLC767

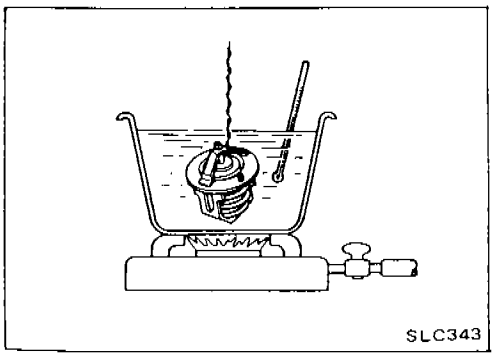
SLC343

2. Check valve opening temperature and maximum valve lift.


	Standard	Cold type	Hot type*
Valve opening temperature °C (°F)	82 (180)	88 (190)	76.5 (170)
Max. valve lift mm/°C (in/°F)	8/95 (0.31/203)	8/100 (0.31/212)	8/90 (0.31/194)

*For general areas only


3. Then check if valve closes at 5°C (9°F) below valve opening temperature.

- **After installation, run engine for a few minutes, and check for leaks.**


Radiator

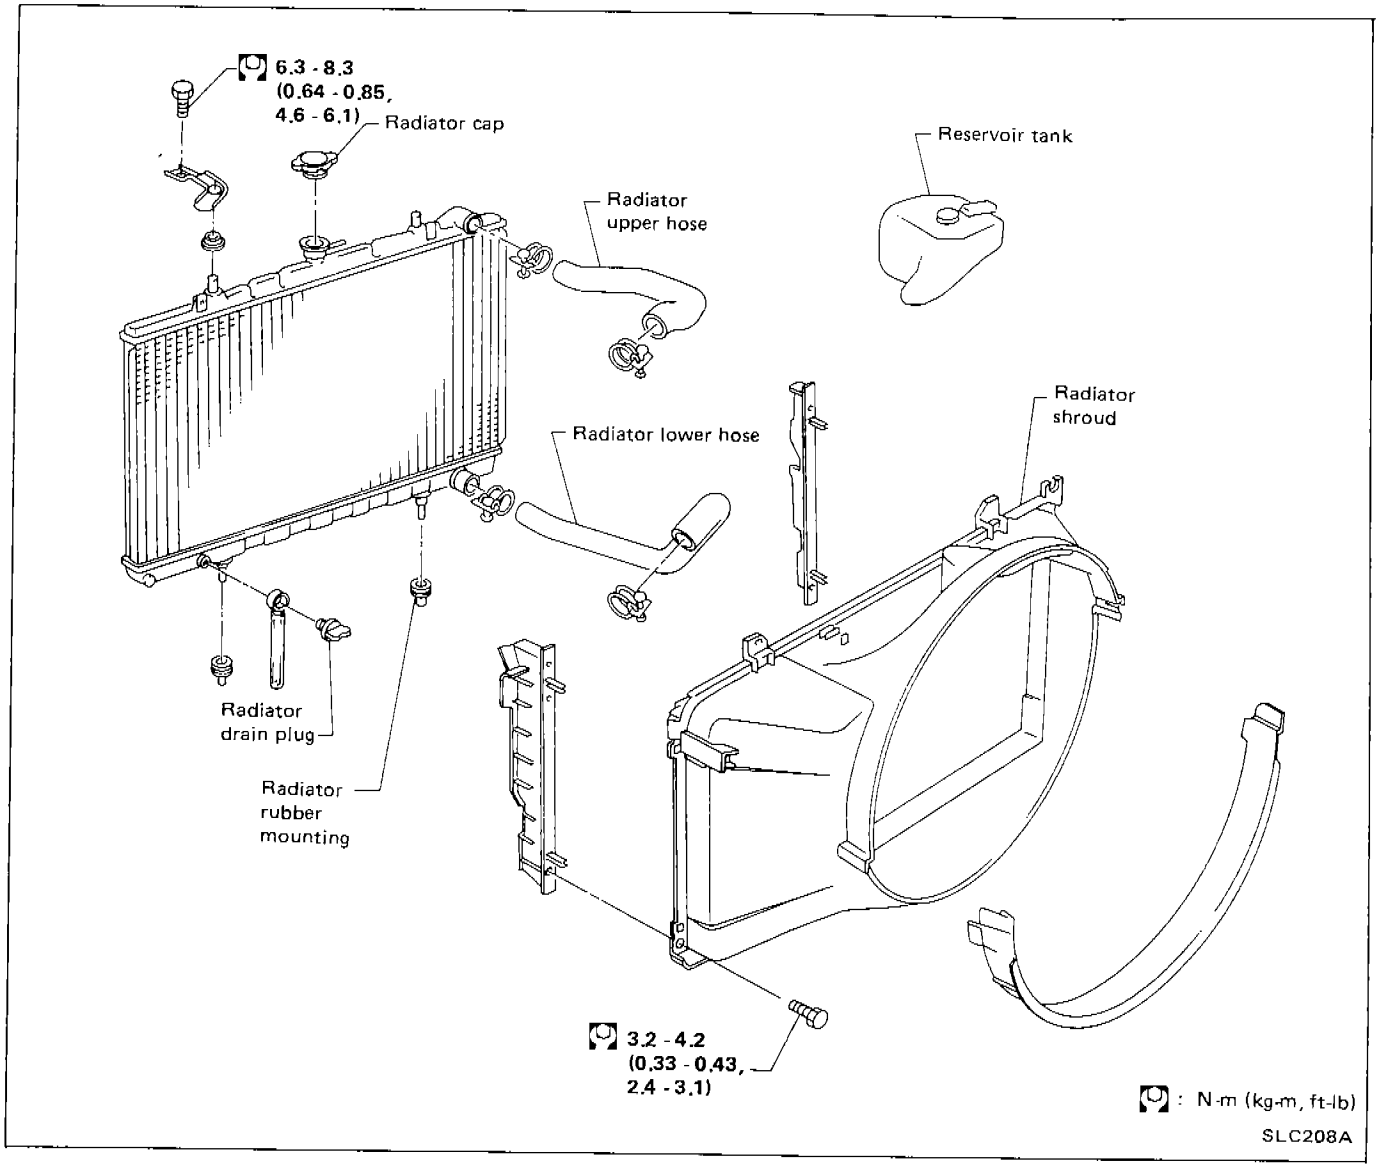
6.3 - 8.3
(0.64 - 0.85,
4.6 - 6.1)
Radiator cap
Reservoir tank
Radiator
upper hose
Radiator lower hose
Radiator
shroud
Radiator
drain plug
Radiator
rubber
mounting
3.2 - 4.2
(0.33 - 0.43,
2.4 - 3.1)
: N·m (kg-m, ft-lb)
SLC208A

Radiator (Aluminum type)

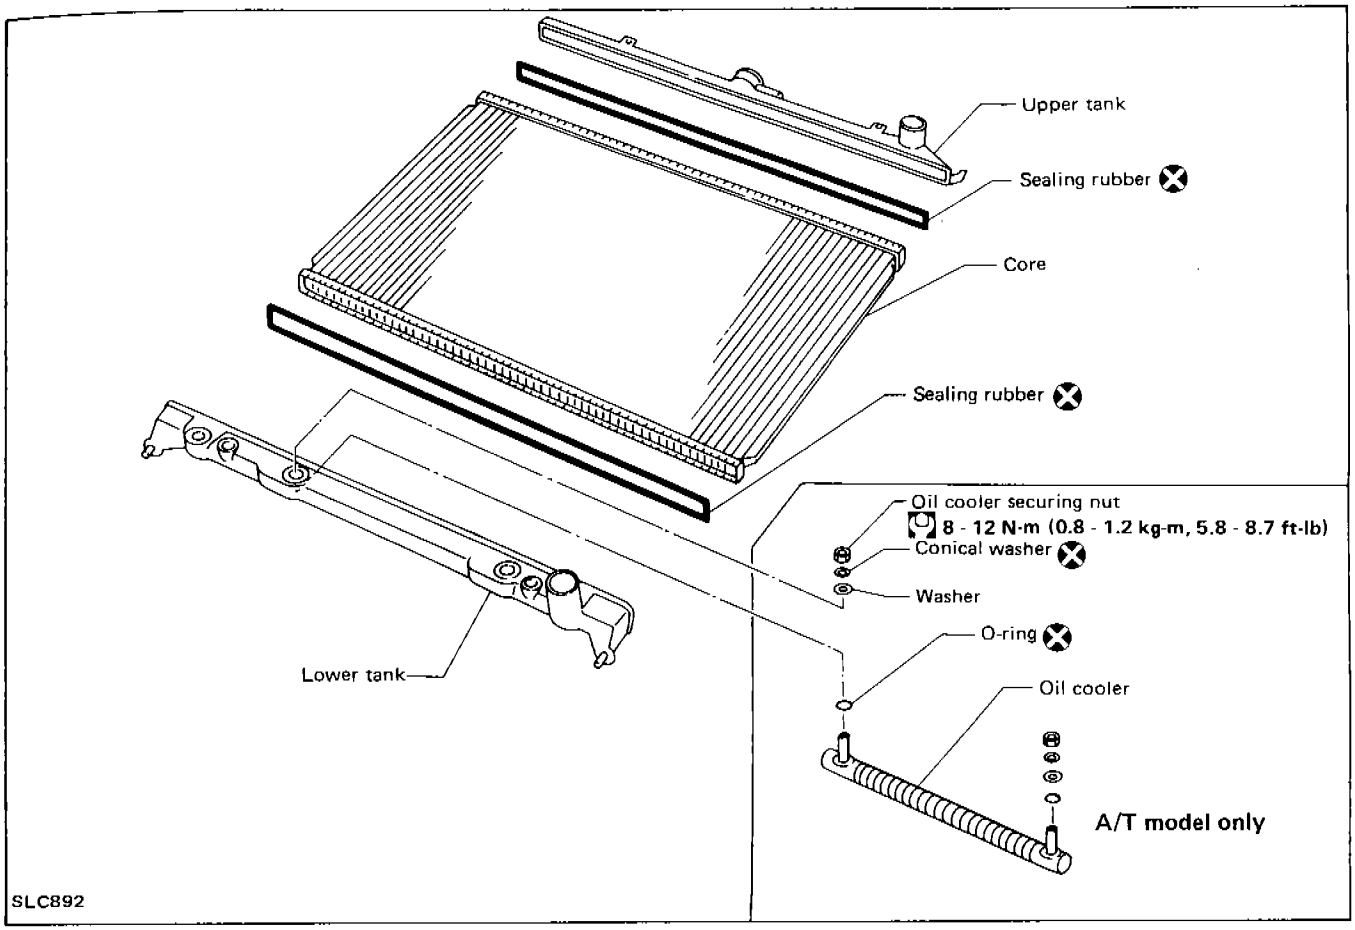


Aluminum radiator can be disassembled by using special procedures and special service tools.

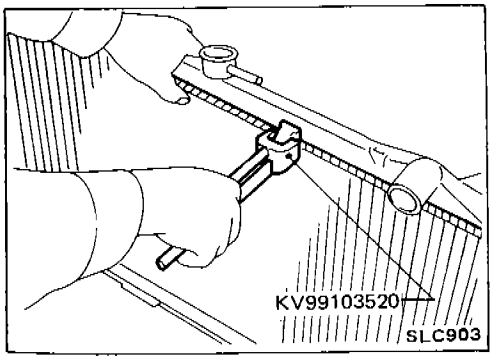

DISASSEMBLY


1. Remove tank with Tool.

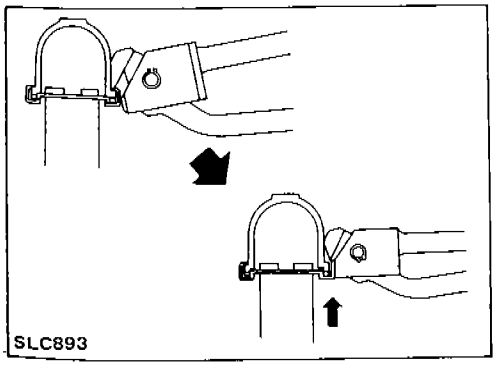

- Grip the crimped edge and bend it upwards so that Tool slips off.


Do not bend excessively.

Radiator (Aluminum type)(Cont'd)

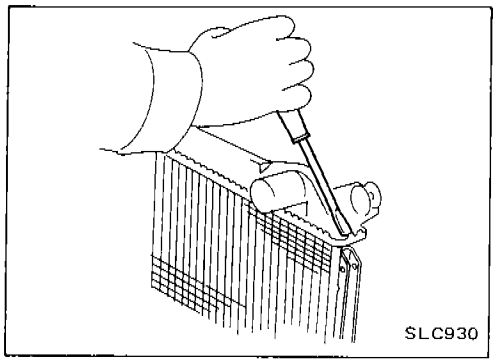


- In areas where Tool cannot be used, use a screwdriver to bend the edge up.

Be careful not to damage tank.

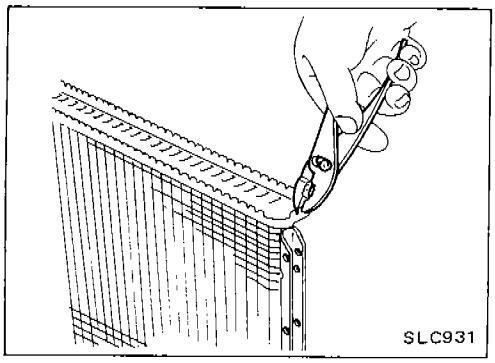


2. Make sure the edge stands straight up.
3. Remove oil cooler from tank. (A/T model only)

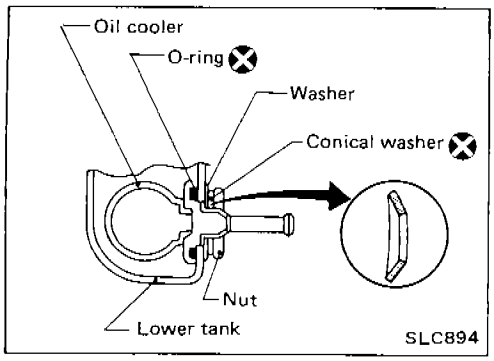


ASSEMBLY

1. Install oil cooler. (A/T model only)

Pay attention to direction of conical washer.

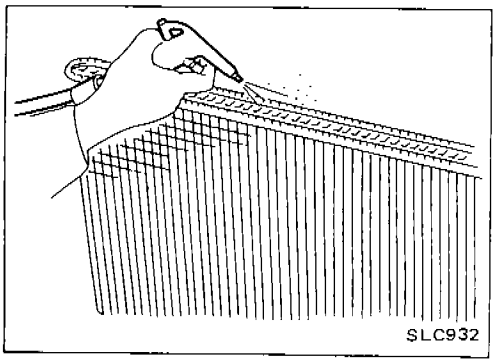

2. Clean contact portion of tank.

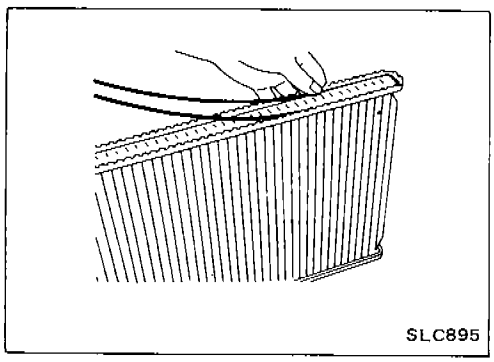


3. Install sealing rubber.


Push it in with fingers.


Be careful not to twist sealing rubber.

Radiator (Aluminum type)(Cont'd)


4. Caulk tank in specified sequence with Tool.

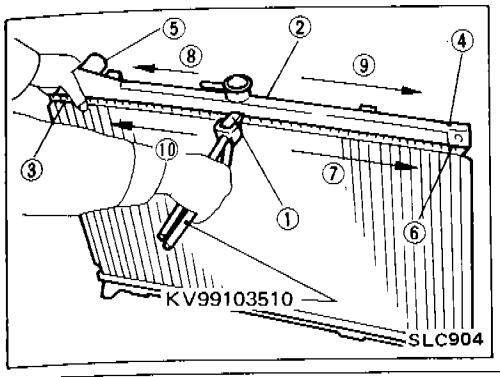

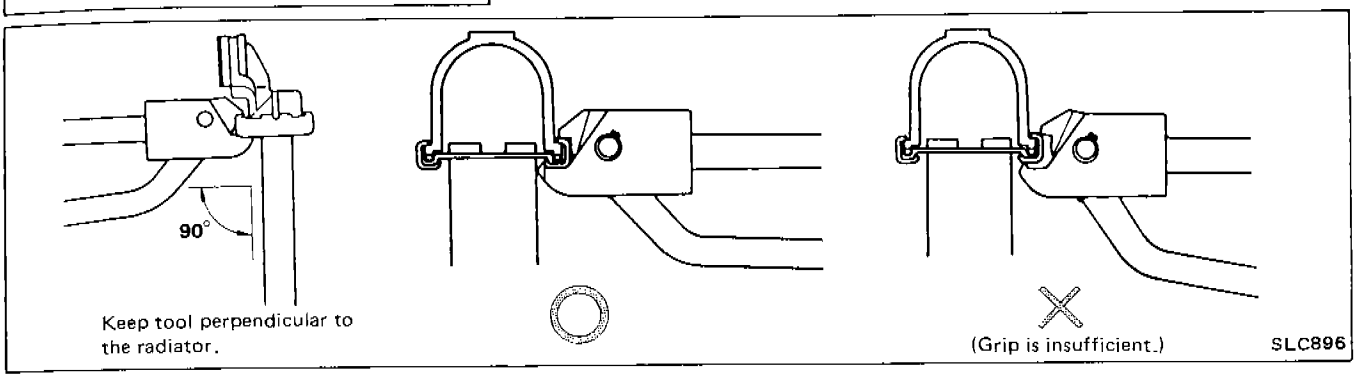

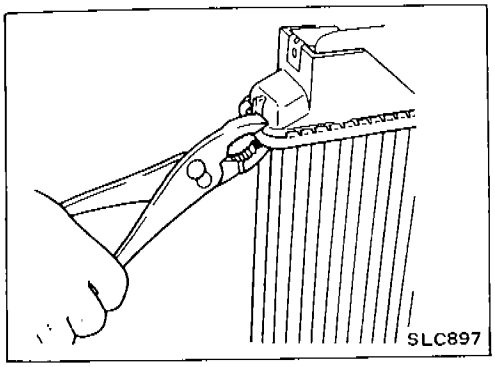


- Use pliers in the locations where Tool cannot be used.

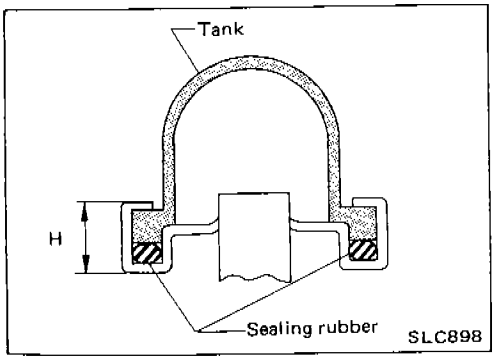

5. Make sure that the rim is completely crimped down.
   Standard height "H":
   11.5 mm (0.453 in)
6. Confirm that there is no leakage.

Refer to "INSPECTION".

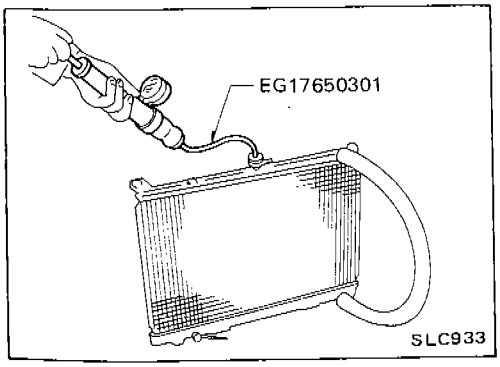


INSPECTION

1. Apply pressure with Tool.
   Specified pressure value:
   157 kPa (1.57 bar, 1.6 kg/cm^2, 23 psi)

WARNING:
To prevent the risk of the hose coming undone while under pressure, securely fasten it down with a hose clamp.
Attach a hose to the oil cooler as well. (A/T model only)


Radiator (Aluminum type)(Cont'd)

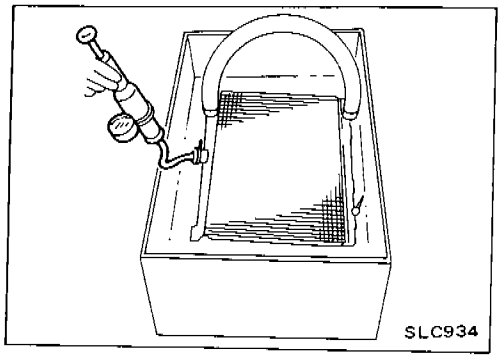

2. Check leakage.


Cooling Fan

DISASSEMBLY AND ASSEMBLY

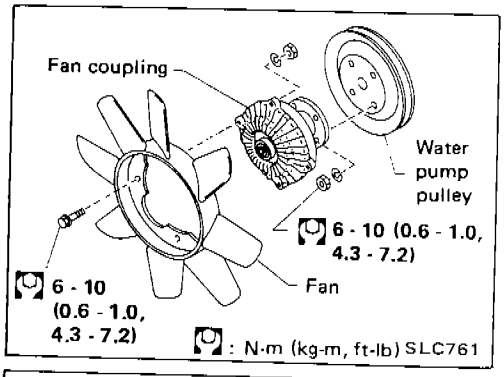


INSPECTION

Check fan coupling for rough operation, oil leakage or bent bimetal.

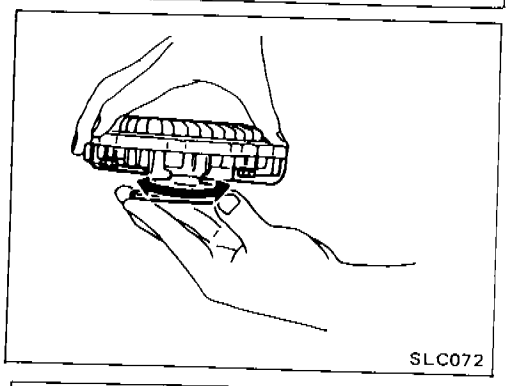

Turbocharger

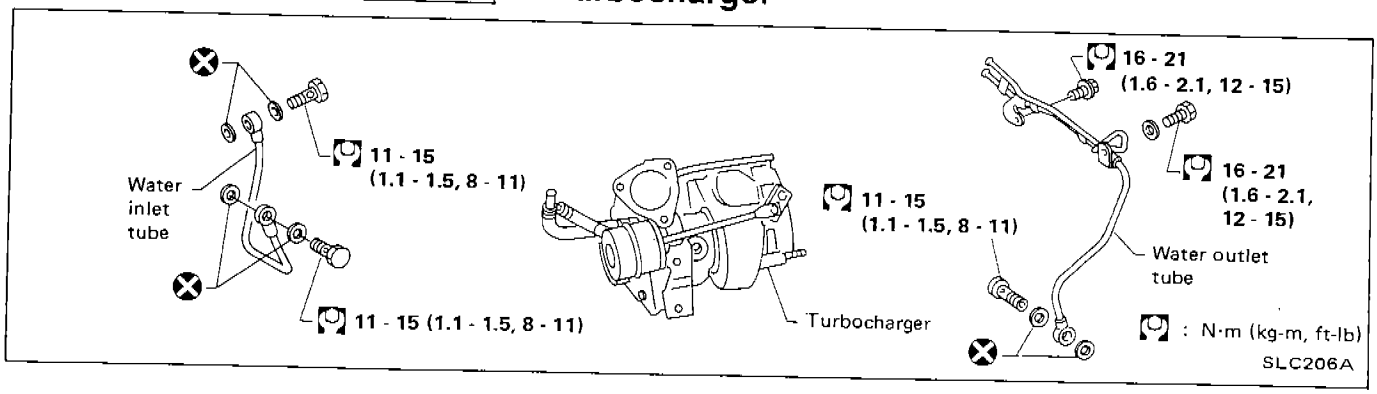

- **When installing oil tubes, first hand-tighten nuts connecting tubes, then slightly tighten bracket securing bolts, and tighten nuts and bolts securely.**
- **Be careful not to deform tubes.**
- **After installation, run engine for a few minutes, and check for oil leakage.**

Engine Lubrication System

OIL PRESSURE CHECK

Engine rpm	Approximate discharge pressure kPa (bar, kg/cm², psi)
Idle speed	More than 78 (0.78, 0.8, 11)
3,000	353 - 412 (3.53 - 4.12, 3.6 - 4.2, 51 - 60)

OIL PUMP INSPECTION

Unit: mm (in)

Body to outer gear clearance	0.11 - 0.20 (0.0043 - 0.0079)
Inner gear to crescent clearance	0.15 - 0.26 (0.0059 - 0.0102)
Outer gear to crescent clearance	0.21 - 0.32 (0.0083 - 0.0126)
Housing to inner gear clearance	0.05 - 0.09 (0.0020 - 0.0035)
Housing to outer gear clearance	0.05 - 0.11 (0.0020 - 0.0043)

Engine Cooling System

THERMOSTAT

	Standard	Cold type	Hot type*
Valve opening temperature °C (°F)	82 (180)	88 (190)	76.5 (170)
Max. valve lift mm/°C (in/°F)	8/95 (0.31/203)	8/100 (0.31/212)	8/90 (0.31/194)

*For general areas only

RADIATOR

Leakage test pressure	157 kPa (1.57 bar, 1.6 kg/cm², 23 psi)

ENGINE FUEL & EMISSION CONTROL SYSTEM

SECTION EF & EC

CONTENTS



PREPARATION ..... EF & EC- 2
PRECAUTIONS ..... EF & EC- 3
ENGINE AND EMISSION CONTROL OVERALL SYSTEM ..... EF & EC- 4
ENGINE AND EMISSION CONTROL DESCRIPTION ..... EF & EC- 9
ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION ..... EF & EC- 14
IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION ..... EF & EC- 25
TROUBLE DIAGNOSES ..... EF & EC- 32
FUEL INJECTION CONTROL SYSTEM INSPECTION ..... EF & EC-129
EVAPORATIVE EMISSION CONTROL SYSTEM (For catalyzer model) ..... EF & EC-132
CRANKCASE EMISSION CONTROL SYSTEM ..... EF & EC-134
SERVICE DATA AND SPECIFICATIONS (S.D.S.) ..... EF & EC-136

When you read wiring diagrams:
- **Read GI section, "HOW TO READ WIRING DIAGRAMS".**
- **See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.**

When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES".

E.C.C.S Wiring Diagram — See pull-out following EL section.

SPECIAL SERVICE TOOLS

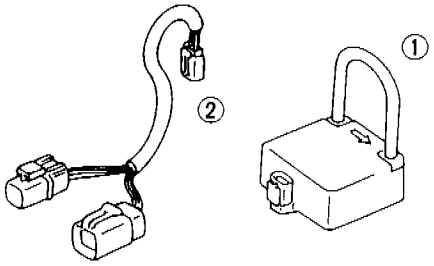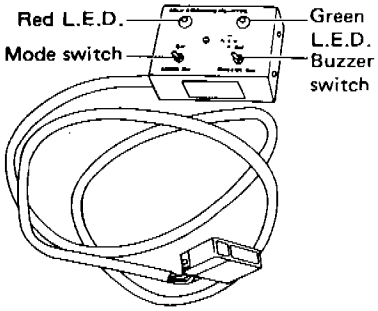Tool number Tool name	Description	
KV109D10S0 Ignition timing adapter coil set ① KV109D0010 Ignition timing adapter coil ② KV109D0015 Adapter harness		Measuring ignition timing
KV109D0020 Checker Box		Reading self-diagnosis indication

E.C.U.

- Do not disassemble E.C.C.S. control unit. (E.C.U.)
- Do not turn diagnosis mode selector forcibly.
- If a battery terminal is disconnected, the memory will return to the ROM value. The E.C.C.S. will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation. (Model with catalyzer)
- Do not apply undue force to mounting bracket.
- Before connecting or disconnecting E.C.U. connector, make sure red and green L.E.D.s are off after turning ignition key off.
- Always install specified E.C.U. on car; otherwise, erroneous engine operation may result.
- Disconnect connector by pulling it (not the harness) straight out.

E.C.C.S. HARNESS HANDLING

- Securely connect E.C.C.S. harness connectors.
  A poor connection can cause extremely high voltage to develop in the coil and condenser, resulting in damage to ICs.
- Keep E.C.C.S. harness at least 10 cm (3.9 in) away from adjacent harnesses, to prevent an E.C.C.S. system malfunction due to receiving external noise, degraded operation of ICs, etc.
- Keep E.C.C.S. parts and harnesses dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.
- Before connecting connector, make sure all pins are straight.

E.C.C.S. PARTS HANDLING


- Handle air flow meter carefully to avoid damage.
- Do not disassemble air flow meter.
- Do not clean air flow meter with detergent.
- Do not shock or jar the crank angle sensor.

INJECTOR

- Do not disconnect injector harness connectors with engine running.
- Do not apply battery power directly to injectors; otherwise injectors will be damaged.

FUEL PUMP

- Do not operate fuel pump when there is no fuel in lines.
- Do not reuse fuel hose clamps.
- Tighten fuel hose clamps to the specified torque.

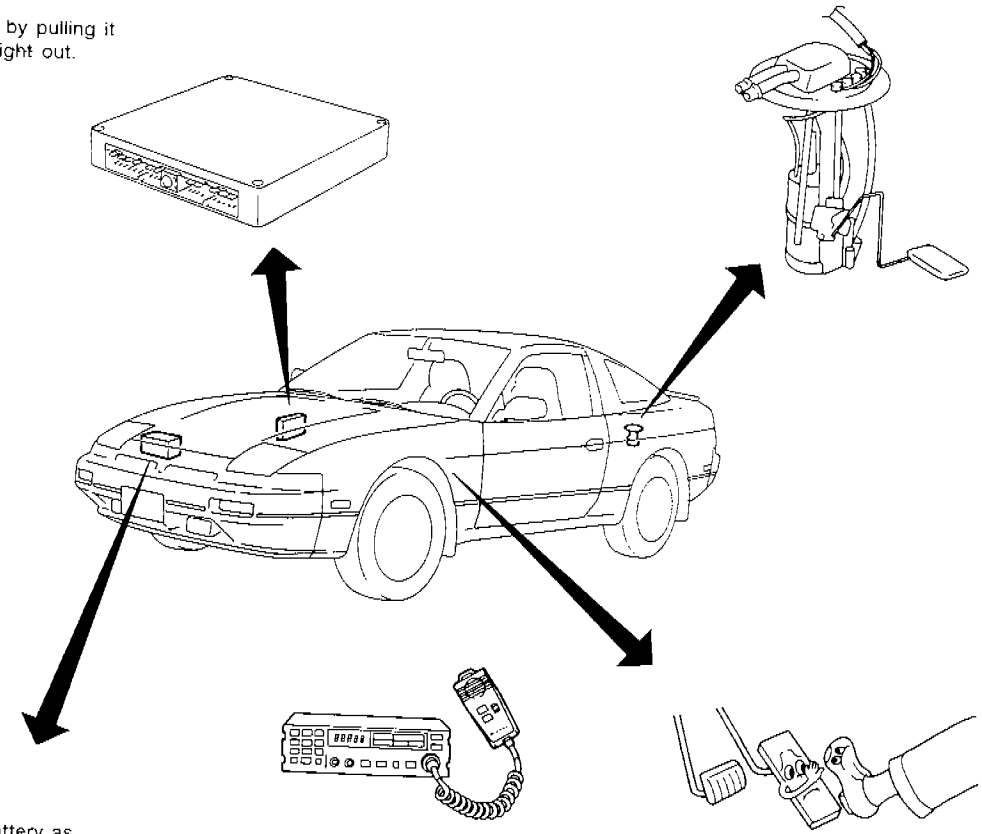

BATTERY

- Always use a 12 volt battery as power source.
- Do not disconnect battery cables while the engine is running.
- Do not reverse polarity of battery when connecting it. Otherwise, E.C.U. and/or injectors may be burned.

WIRELESS EQUIPMENT

- When installing a C.B. ham radio or a mobile phone, be sure to observe the following, as installation location may affect the electronic control systems.


1) Keep antenna as far as possible away from electronic control units.
2) Keep antenna feeder line more than 20 cm (7.9 in) away from harness of electronic controls.
   Do not let them run parallel for a long distance.
3) Adjust antenna and feeder line so that standing-wave ratio can be kept smaller.
4) Be sure to ground radio to vehicle body.

WHEN STARTING


- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

SEF398H

E.C.C.S. Component Parts Location

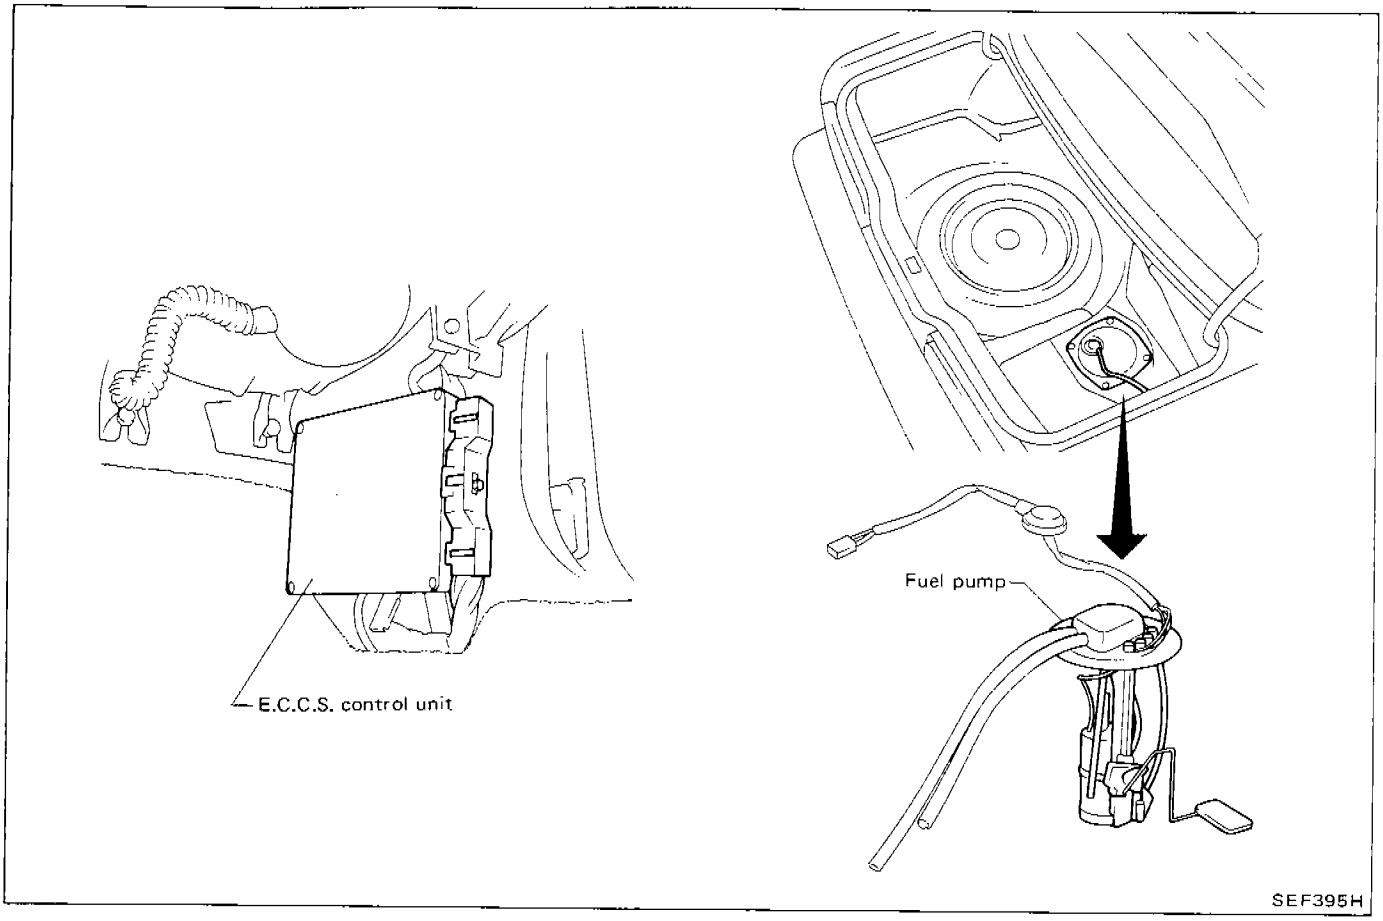


E.C.C.S. Component Parts Location (Cont'd)

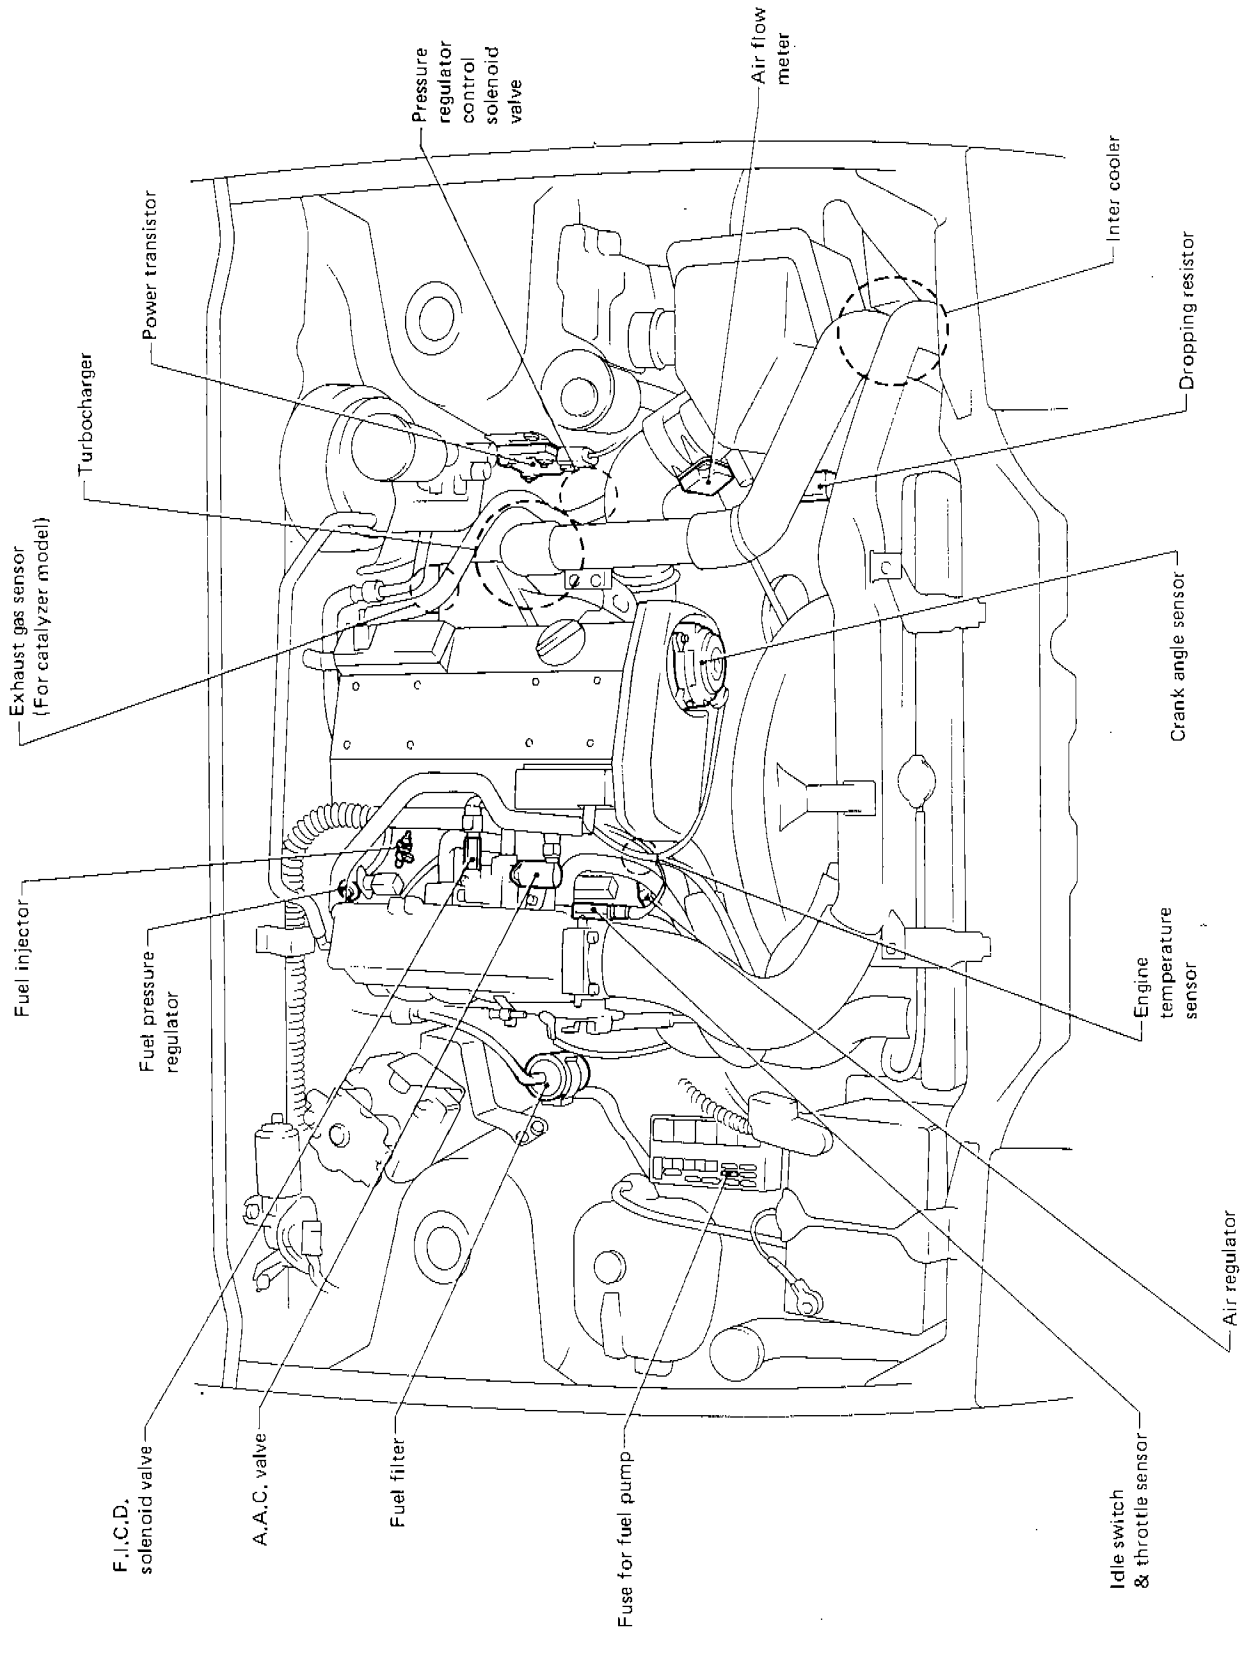

SEF396H


System Diagram

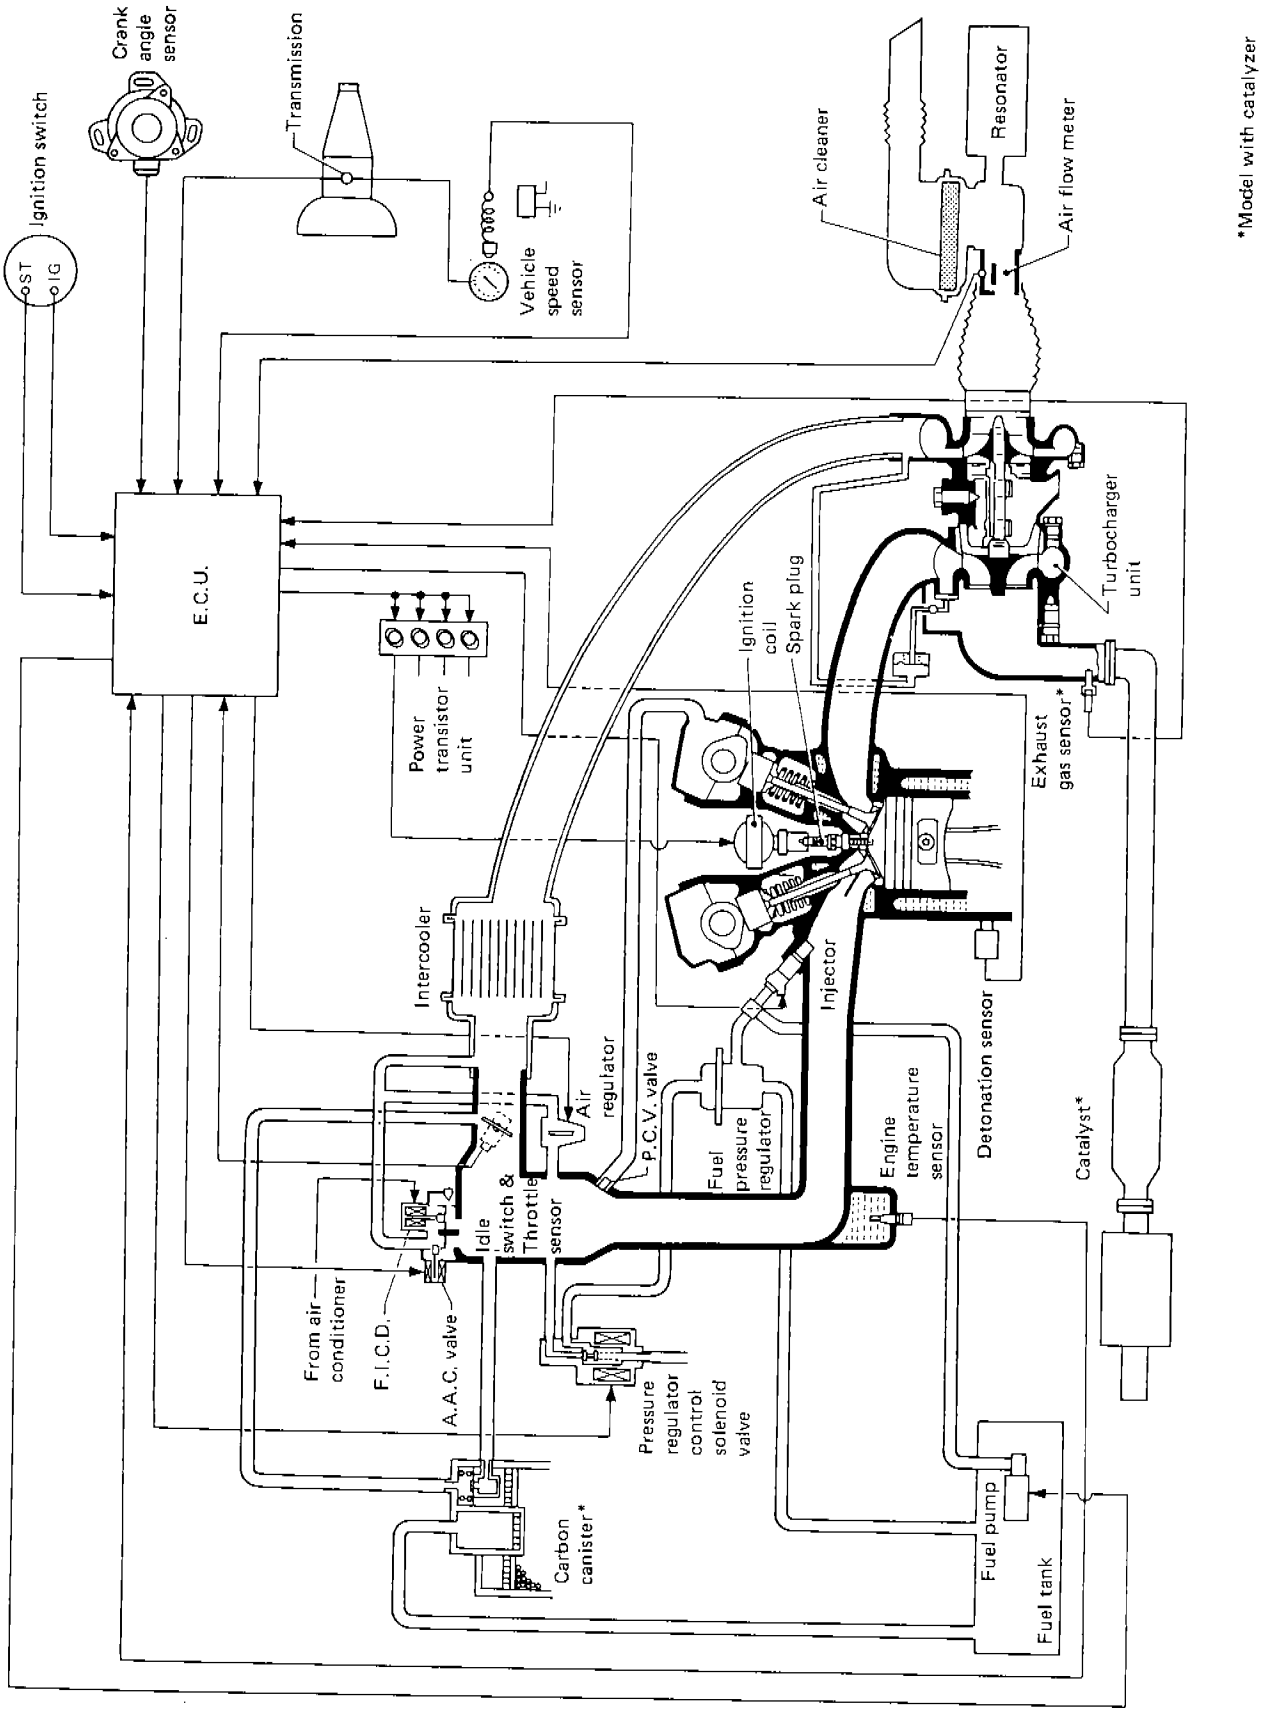

SEF397H

System Chart


E.C.C.S. CONTROL

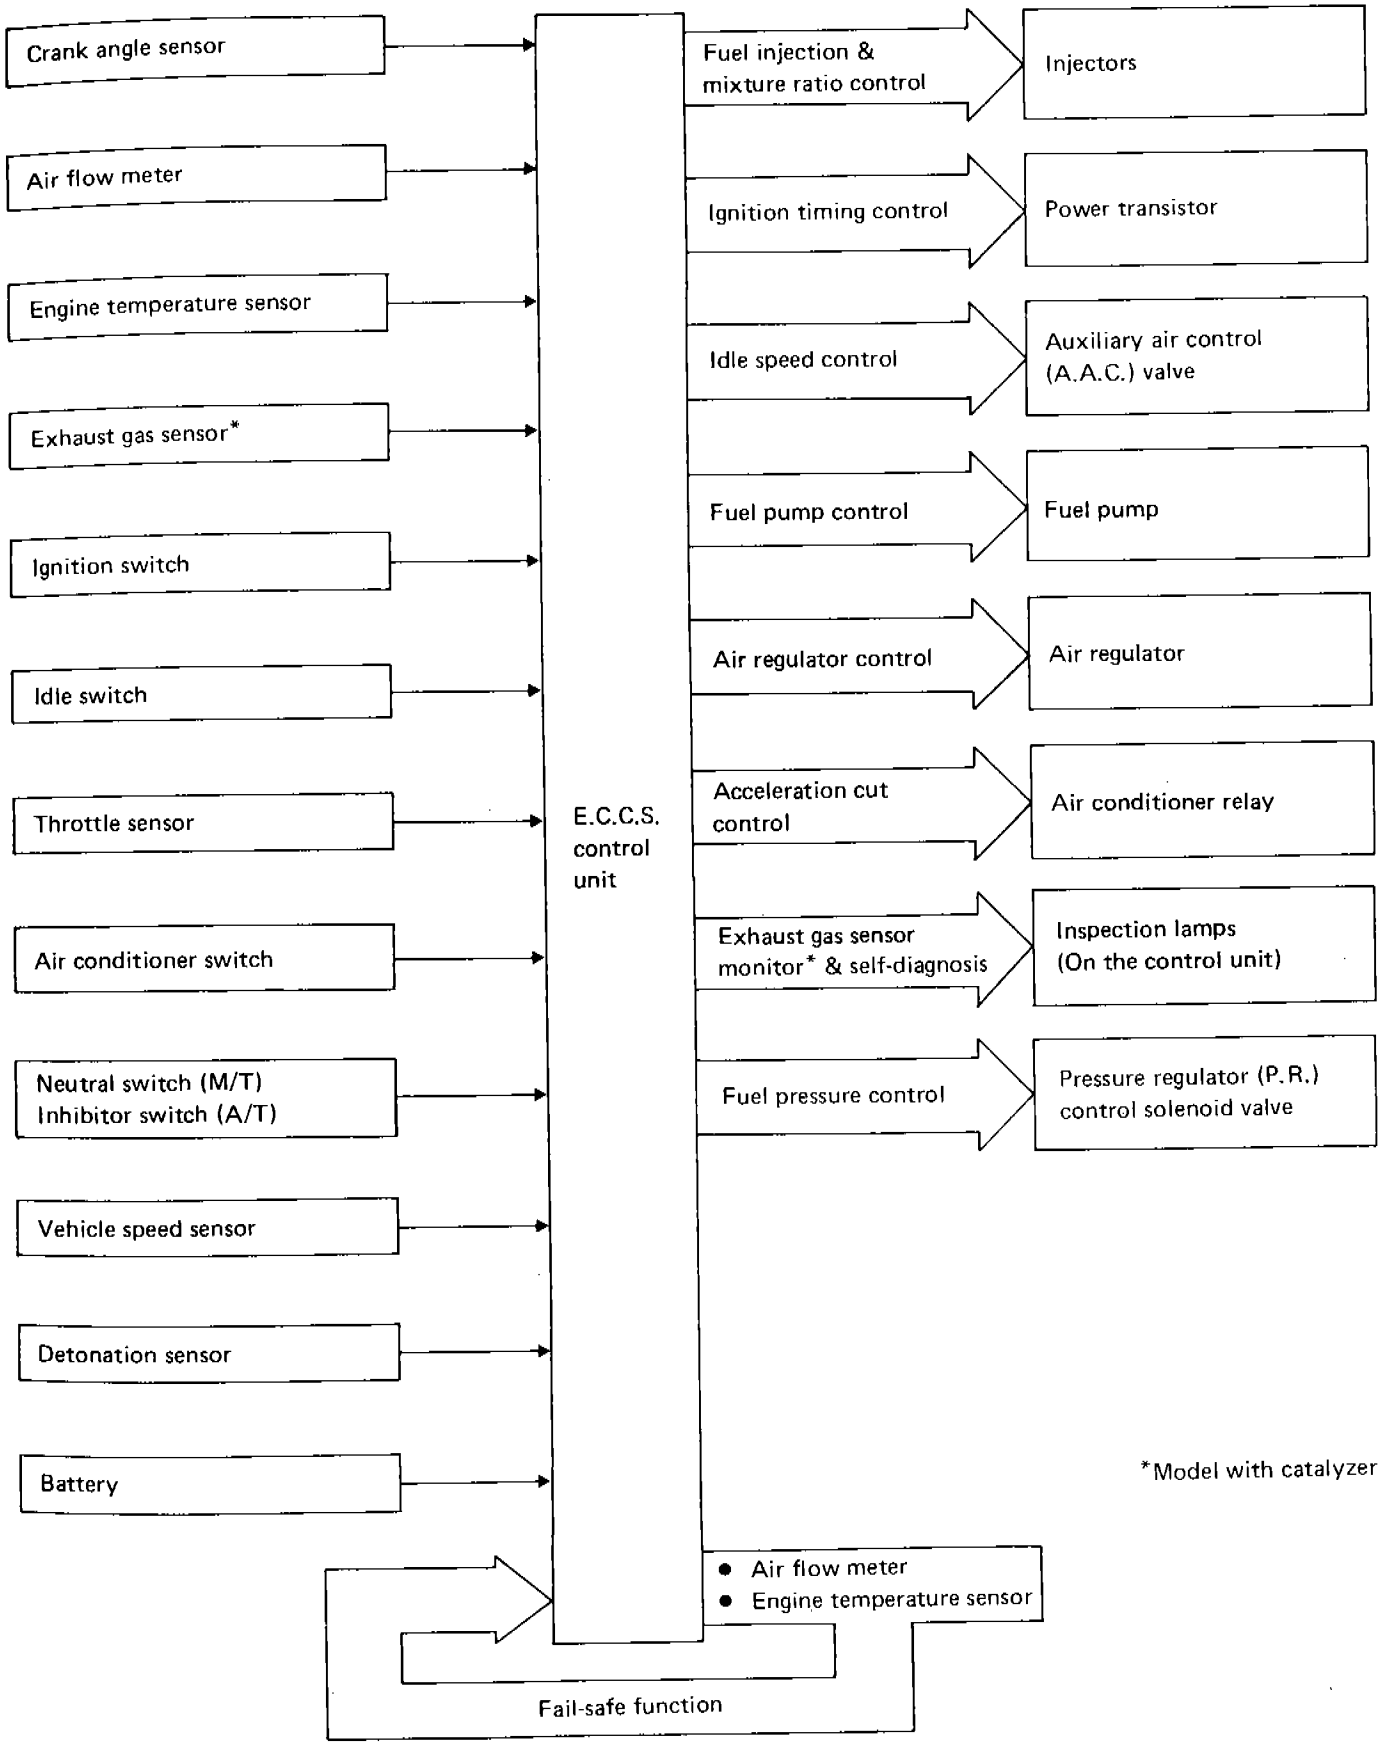


*Model with catalyzer

Circuit Diagram


(For Wiring Diagram — see pull-out following page EL-108.)

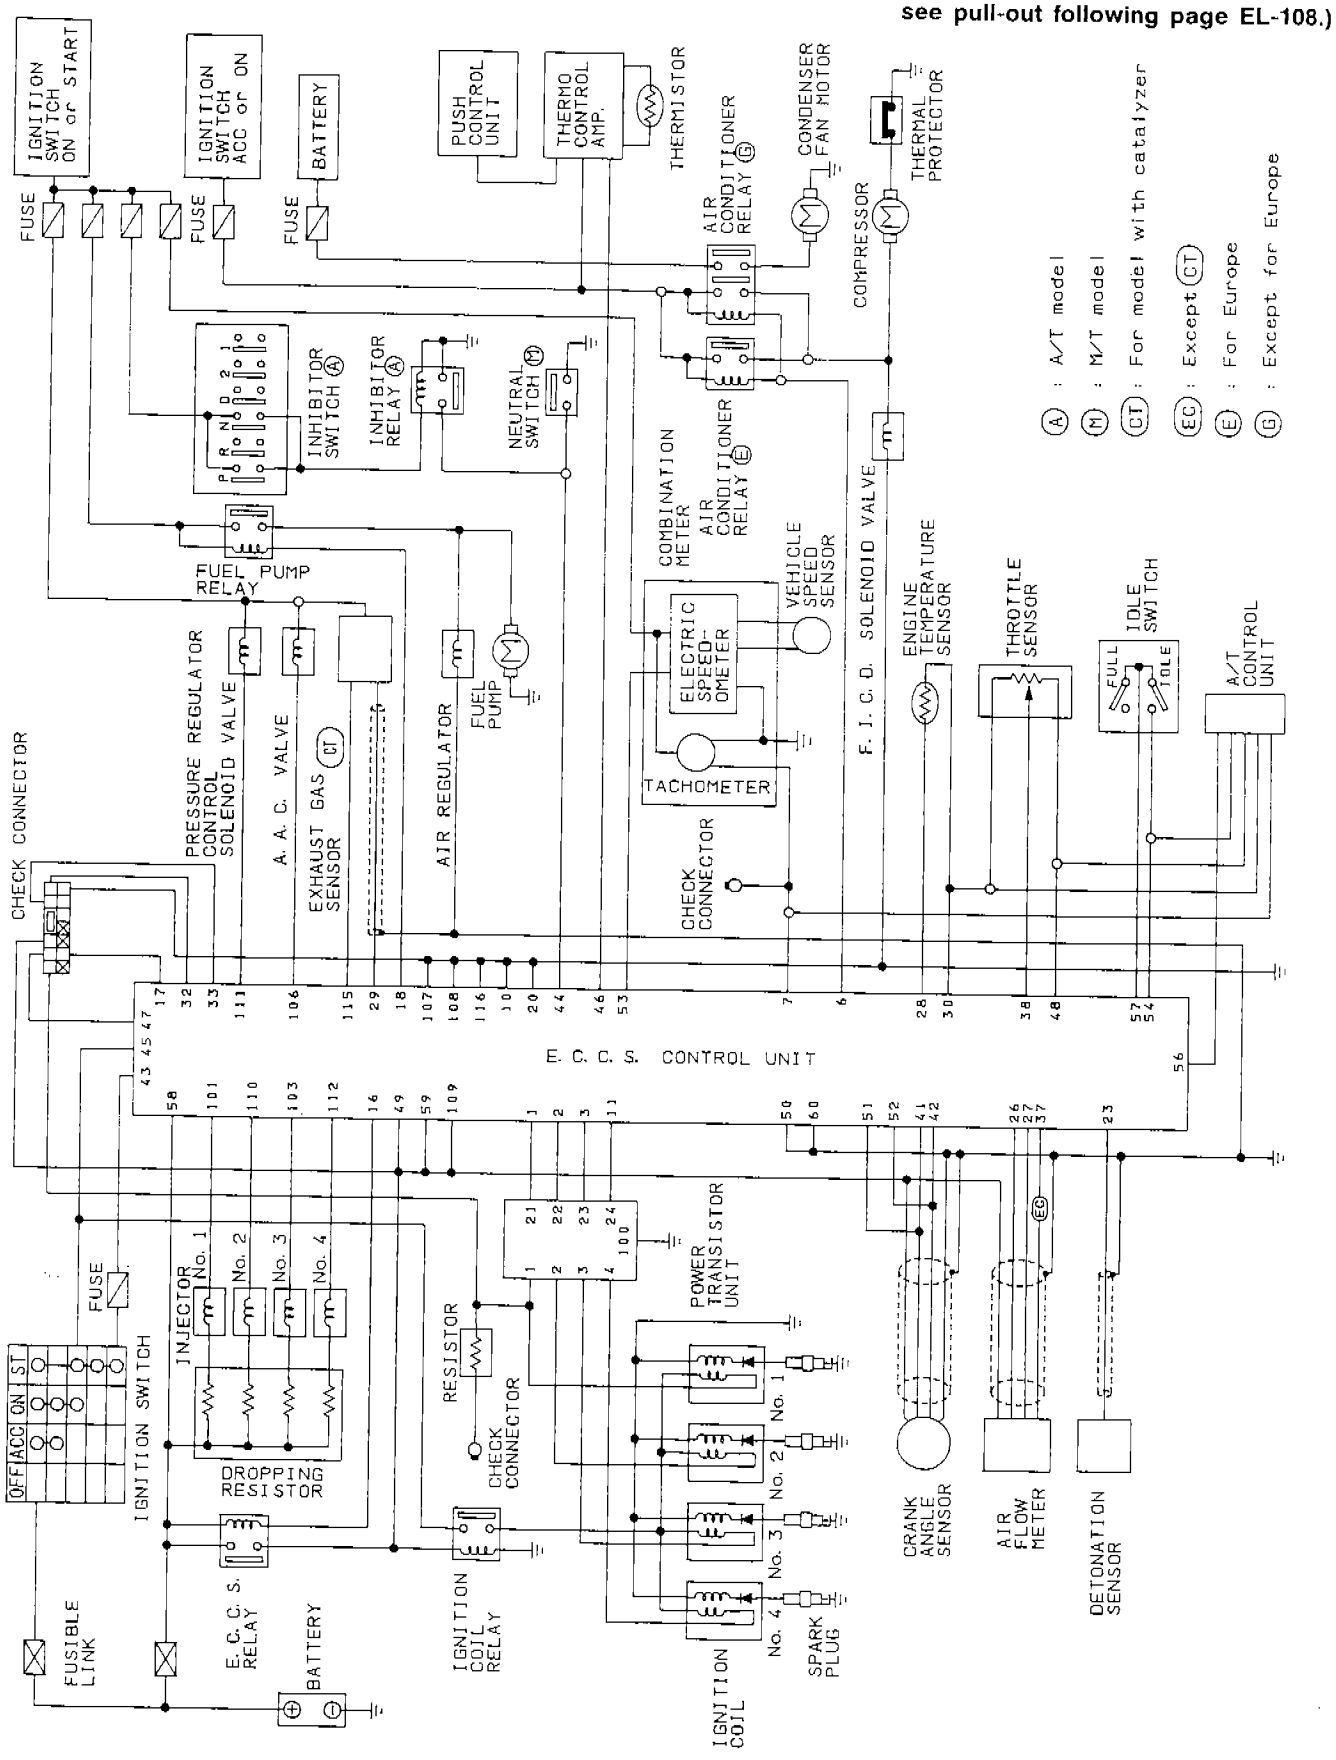

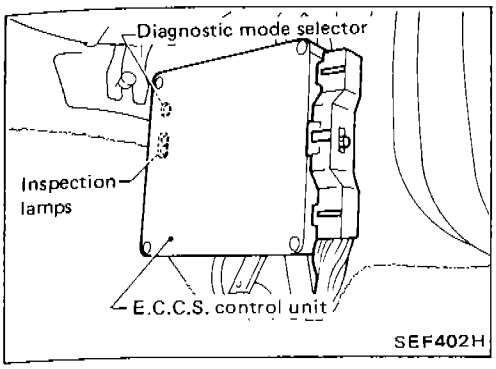


E.C.C.S. Control Unit (E.C.U.)

The E.C.U. consists of a microcomputer, inspection lamps, a diagnostic mode selector, and connectors for signal input and output and for power supply. The unit controls the engine.

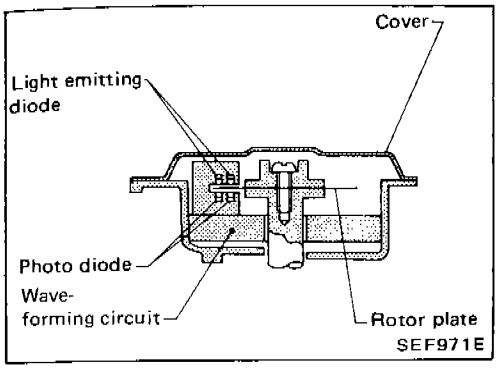


Crank Angle Sensor

The crank angle sensor is a basic component of the entire E.C.C.S. It monitors engine speed and piston position, and sends signals to the E.C.U. to control fuel injection, ignition timing and other functions.

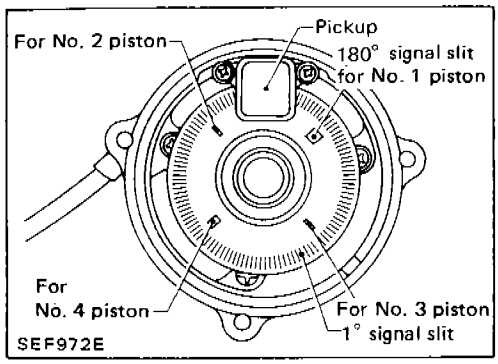



The crank angle sensor has a rotor plate and a wave-forming circuit. The rotor plate has 360 slits for 1° signal and 4 slits for 180° signal. Light Emitting Diodes (L.E.D.) and photo diodes are built in the wave-forming circuit.
When the rotor plate passes between the L.E.D. and the photo diode, the slits in the rotor plate continually cut the light being transmitted to the photo diode from the L.E.D. This generates rough-shaped pulses which are converted into on-off pulses by the wave-forming circuit, which are sent to the E.C.U.

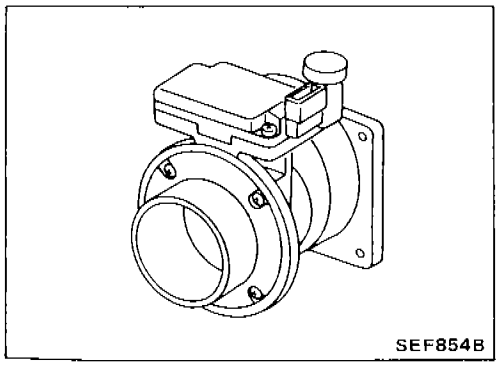

Air Flow Meter

The air flow meter measures the mass flow rate of intake air. Measurements are made so that the control circuit will emit an electrical output signal corresponding to the amount of heat dissipated from a hot wire placed in the stream of intake air.
The airflow past the hot wire removes the heat from the hot wire. The temperature of the hot wire is very sensitive to the mass flow rate. The higher the temperature of the hot wire, the greater its resistance value. This temperature change (resistance) is determined by the mass air flow rate. The control circuit accurately regulates current (I) in relation to the varying resistance value (R_H) so that V_A always equals V_B. The air flow meter transmits an output for voltage V_A to the control unit where the output is converted into an intake air signal.

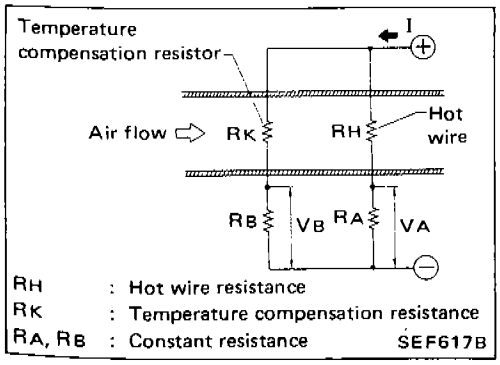


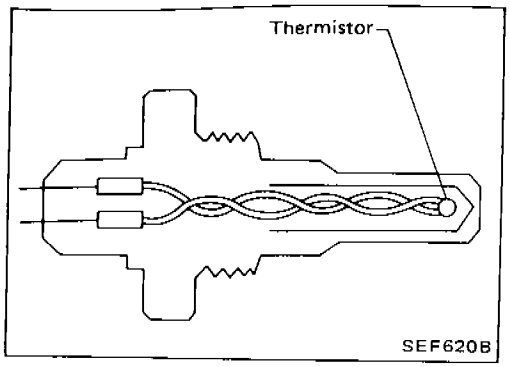

Engine Temperature Sensor

The engine temperature sensor detects the engine temperature, which is dependent on engine coolant, and transmits a signal to the E.C.U.


The temperature sensing unit employs a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

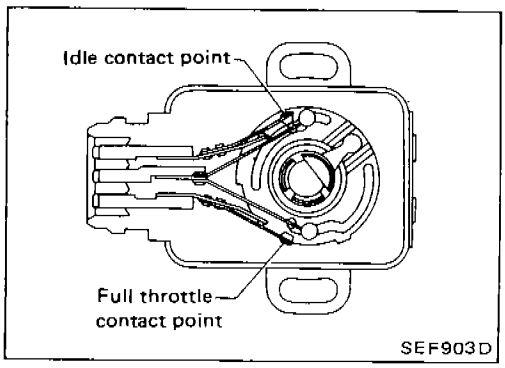


Throttle Sensor and Idle Switch

The throttle sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle valve position into output voltage, and emits the voltage signal to the E.C.U. In addition the sensor detects the opening and closing speed of the throttle valve, and feeds the voltage signal to the A/T control unit. The idle switch actuates in response to accelerator pedal movement.


This switch has idle contact and full throttle contact. The idle contact is used for engine control. It closes when the throttle valve is positioned at idle and opens when it is at any other position.

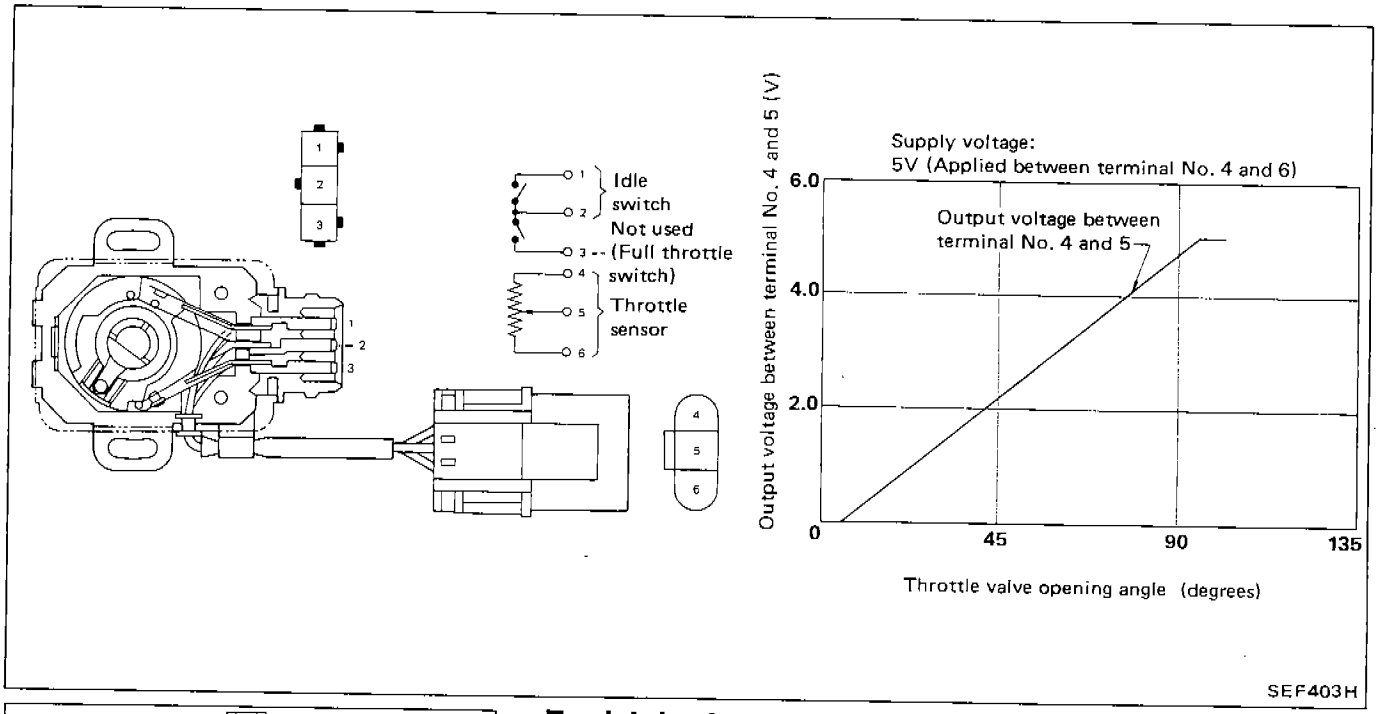

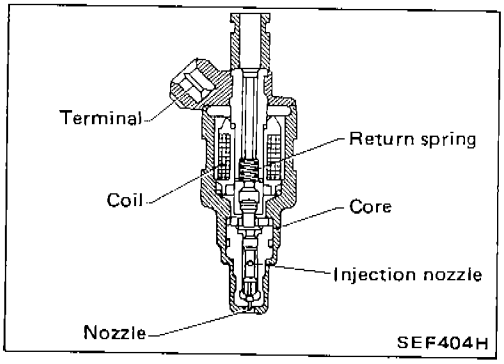


Fuel Injector

The fuel injector is a small, elaborate solenoid valve. As the E.C.U. sends injection signals to the injector, the coil in the injector pulls the needle valve back and fuel is released into the intake manifold through the nozzle. The injected fuel is controlled by the E.C.U. in terms of injection pulse duration.

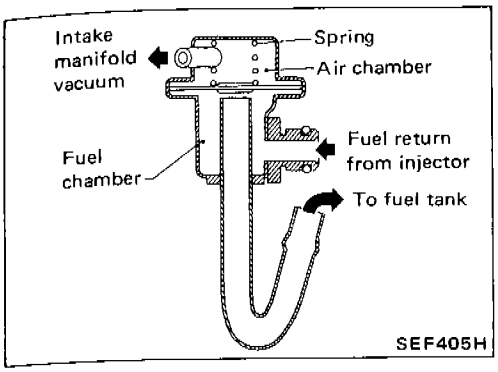


Pressure Regulator

The pressure regulator maintains the fuel pressure at 250.1 kPa (2.501 bar, 2.55 kg/cm^2, 36.3 psi). Since the injected fuel amount depends on injection pulse duration, it is necessary to maintain the pressure at the above value.

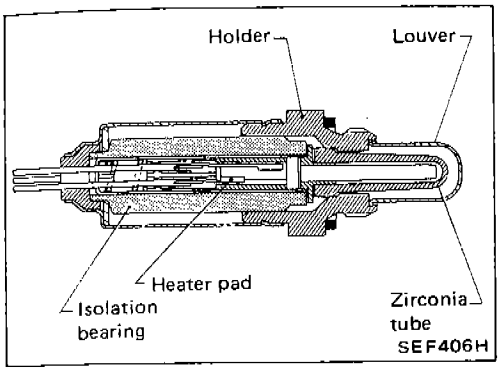


Exhaust Gas Sensor (For catalyzer model)

The exhaust gas sensor, which is placed into the exhaust outlet, monitors the amount of oxygen in the exhaust gas.
The sensor has a closed-end tube made of ceramic zirconia. The outer surface of the tube is exposed to exhaust gas, and the inner surface to atmosphere. The zirconia of the tube compares the oxygen density of exhaust gas with that of atmosphere, and generates electricity. In order to improve generating power of the zirconia, its tube is coated with platinum. The voltage is approximately 1V in a richer condition of the mixture ratio than the ideal air-fuel ratio, while approximately 0V in leaner conditions. The radical change from 1V to 0V occurs at around the ideal mixture ratio. In this way, the exhaust gas sensor detects the amount of oxygen in the exhaust gas and sends the signal of approximately 1V or 0V to the E.C.U. A heater is used to activate the sensor.

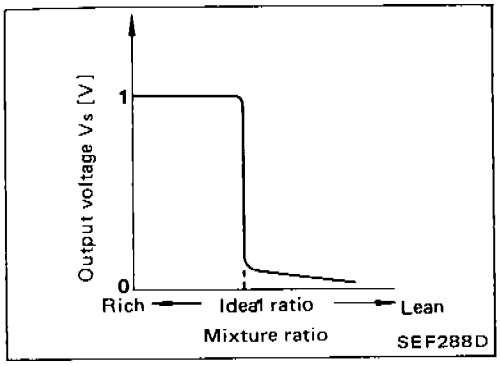


Fuel Pump


The fuel pump is an electric turbine type with the turbines directly connected to the motor. This assembly is located in the fuel tank.

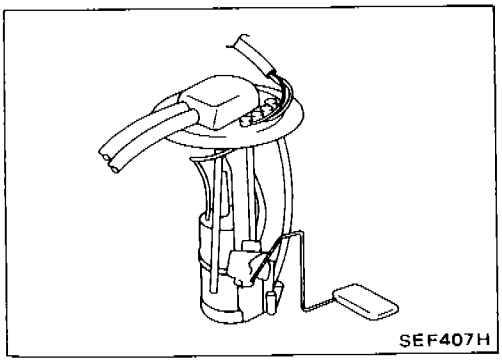

Ignition Coil


The ignition coil is a small, molded type.

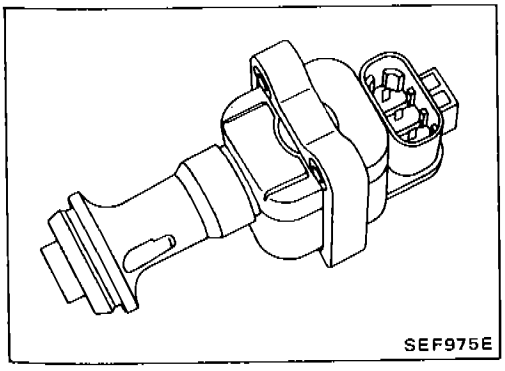

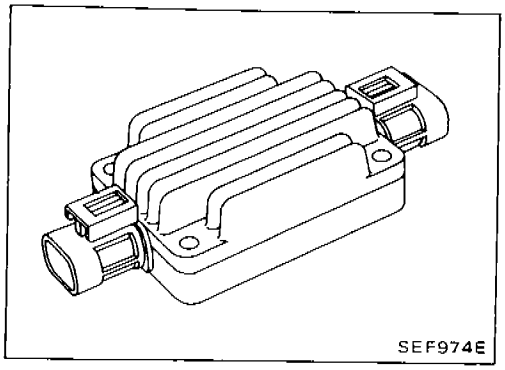
SEF974E

Power Transistor


The ignition signal from the E.C.U. is amplified by the power transistor, which turns the ignition coil primary circuit on and off, inducing the proper high voltage in the secondary circuit.

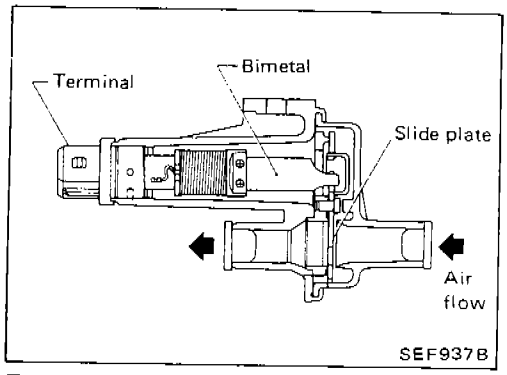

SEF937B

Air Regulator


The air regulator provides an air by-pass when the engine is cold for a fast idle during warm-up.
A bimetal, heater and rotary shutter are built into the air regulator. When the bimetal temperature is low, the air by-pass port opens. As the engine starts and electric current flows through a heater, the bimetal begins to turn the shutter to close the by-pass port. The air passage remains closed until the engine stops and the bimetal temperature drops.

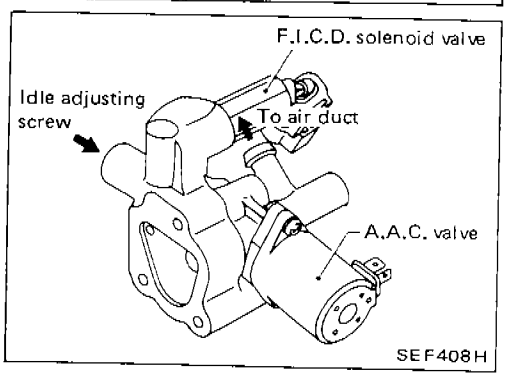

SEF408H

Idle Air Adjusting (I.A.A.) Unit


The I.A.A. unit is made up of the A.A.C. valve, F.I.C.D. solenoid valve and idle adjust screw. It receives the signal from the E.C.U. and controls the idle speed at the preset value.
The F.I.C.D. solenoid valve compensates for changes in idle speed caused by the operation of the air compressor.

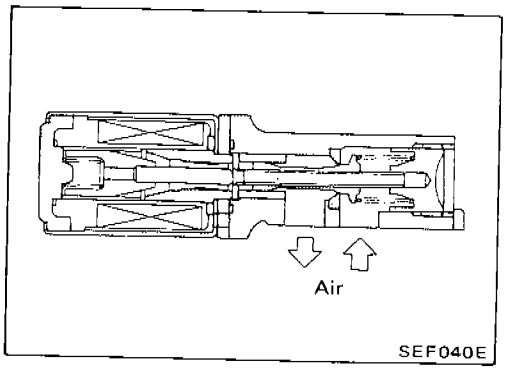

SEF040E

Auxiliary Air Control (A.A.C.) Valve


The E.C.U. actuates the A.A.C. valve by an ON/OFF pulse. The longer that ON duty is left on, the larger the amount of air that will flow through the A.A.C. valve.

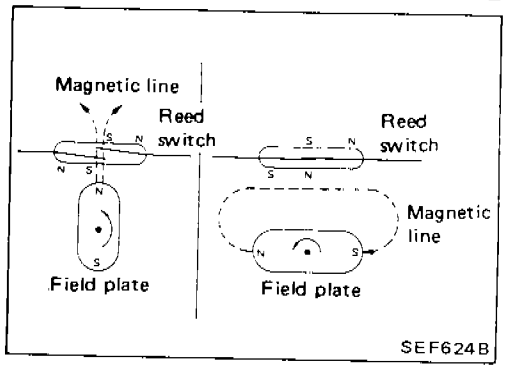

SEF624B


Vehicle Speed Sensor

The vehicle speed sensor provides a vehicle speed signal to the E.C.U.
The speed sensor consists of a reed switch and a speedometer pinion, which are installed in the transmission, and transforms vehicle speed into pulse signals.

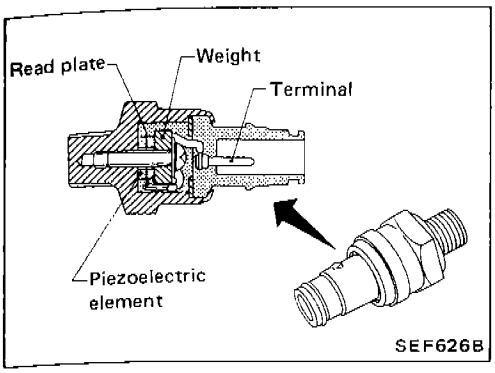


Detonation Sensor

The detonation sensor is attached to the cylinder block and senses engine knocking conditions.
A knocking vibration from the cylinder block is applied as pressure to the piezoelectric element. This vibrational pressure is then converted into a voltage signal which is delivered as output.

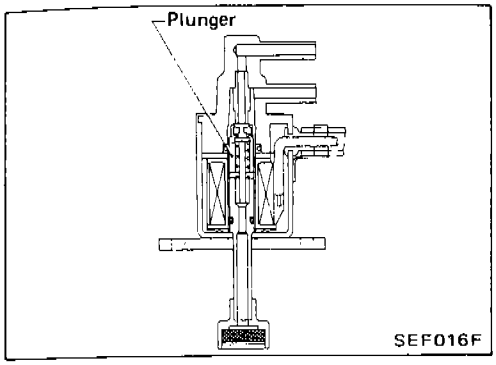

Pressure Regulator (P.R.) Control Solenoid Valve

The solenoid valve responds to the ON/OFF signal from the E.C.U. When it is off, a vacuum signal from the intake manifold is fed into the pressure regulator. When the control unit sends an ON signal, the coil pulls the plunger downward and cuts the vacuum signal.

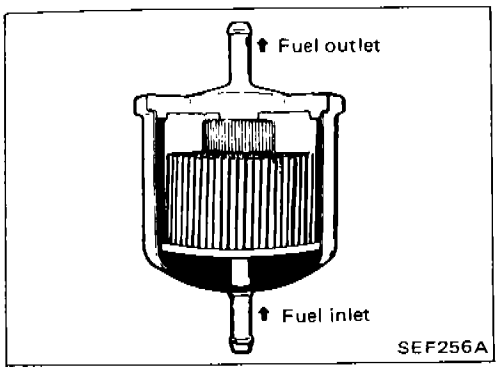


Fuel Filter

The specially designed fuel filter has a metal case in order to withstand high fuel pressure.

Carbon Canister (For catalyzer model)

The carbon canister is filled with active charcoal to absorb evaporative gases produced in the fuel tank. These absorbed gases are then delivered to the intake manifold by manifold vacuum for combustion purposes.

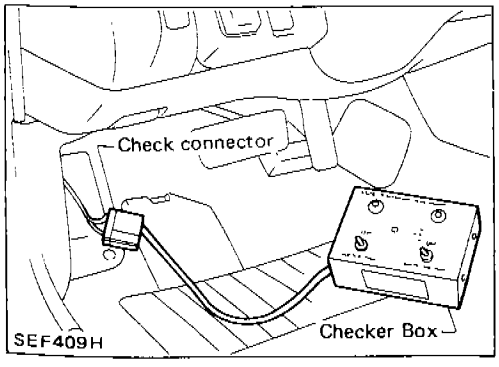


Check Connector for E.C.C.S. Checker Box

The check connector for E.C.C.S. Checker Box is in the vicinity of the fuse box.

Fuel Injection Control

INPUT/OUTPUT SIGNAL LINE

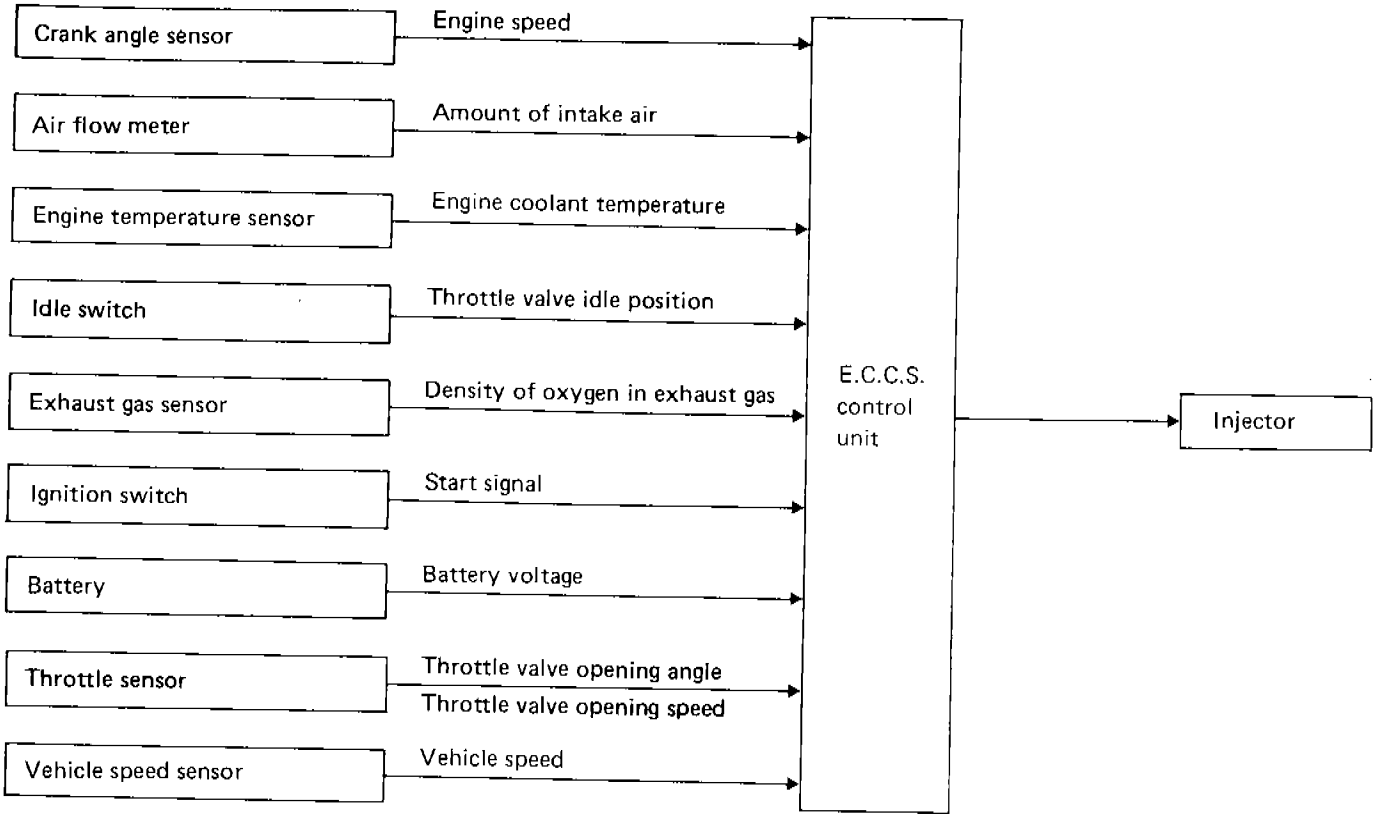

BASIC FUEL INJECTION CONTROL

The amount of fuel injected from the fuel injector, or the length of time the valve remains open, is determined by the E.C.U. The basic amount of fuel injected is a program value mapped in the E.C.U. ROM memory. In other words, the program value is preset by engine operating conditions determined by input signals (for engine rpm and air intake) from both the crank angle sensor and the air flow meter.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION


In addition, the amount of fuel injection is compensated for to improve engine performance under various operating conditions as listed below:

<Fuel increase>

1) During warm-up
2) When starting the engine
3) During acceleration
4) Hot-engine operation

<Fuel decrease>

1) During deceleration

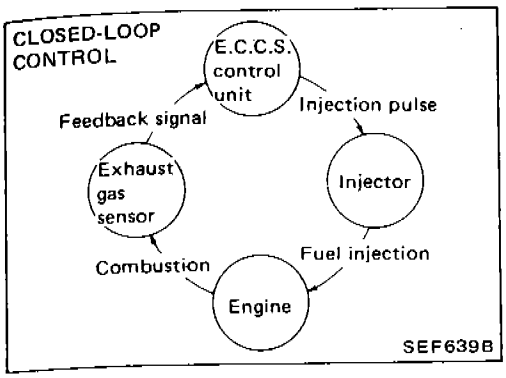

Fuel Injection Control (Cont'd)

MIXTURE RATIO FEEDBACK CONTROL (For catalyzer model)

Mixture ratio feedback system is designed to precisely control the mixture ratio to the stoichiometric point so that the three-way catalyst can reduce CO, HC and NOx emissions. This system uses an exhaust gas sensor in the exhaust manifold to check the air-fuel ratio. The control unit adjusts the injection pulse width according to the sensor voltage so the mixture ratio will be within the range of the stoichiometric air-fuel ratio.


This stage refers to the closed-loop control condition. The open-loop control condition refers to that under which the E.C.U. detects any of the following conditions and feedback control stops in order to maintain stabilized fuel combustion.

1) Deceleration
2) High-load, high-speed operation
3) Engine idling
4) Malfunctioning of exhaust gas sensor or its circuit
5) Insufficient activation of exhaust gas sensor at low engine temperature
6) Engine starting

MIXTURE RATIO SELF-LEARNING CONTROL (For catalyzer model)


The air-fuel ratio feedback control system monitors the air-fuel signal transmitted from the exhaust gas sensor. This feedback signal is then sent to the E.C.U. to control the amount of fuel injection to provide a basic air-fuel ratio as close to the theoretical air-fuel ratio as possible. However, the basic air-fuel ratio is not necessarily controlled as originally designed. This is due to manufacturing errors (e.g., air flow meter hot wire) and changes during operation (injector clogging, etc.) of E.C.C.S. parts which directly affect the air-fuel ratio.

Accordingly, a difference between the basic and theoretical air-fuel ratios is quantitatively monitored in this system. It is then computed in terms of "fuel injection duration" to automatically compensate for the difference between the two ratios.

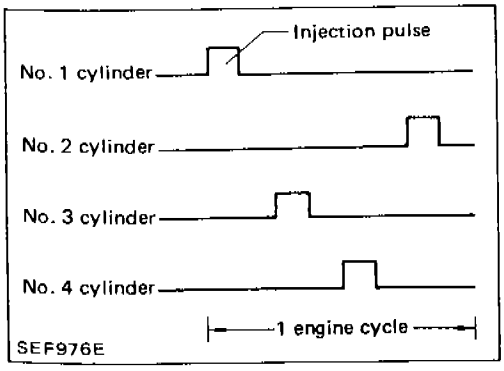

FUEL INJECTION TIMING

Fuel is injected once a cycle for each cylinder in the firing order.

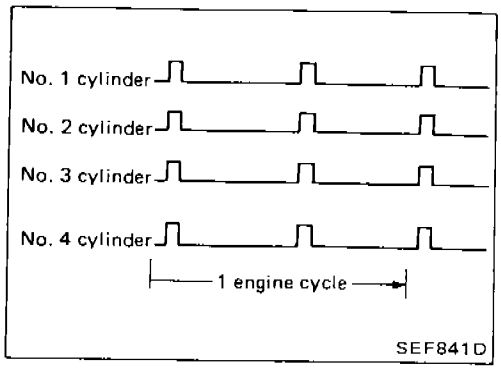

Fuel Injection Control (Cont'd)


When engine temperature is low, engine starts, or engine load is heavy, fuel is injected into all four cylinders simultaneously twice a cycle.

FUEL SHUT-OFF

Fuel to all cylinders is cut off during deceleration or high-speed operation.

Ignition Timing Control

INPUT/OUTPUT SIGNAL LINE

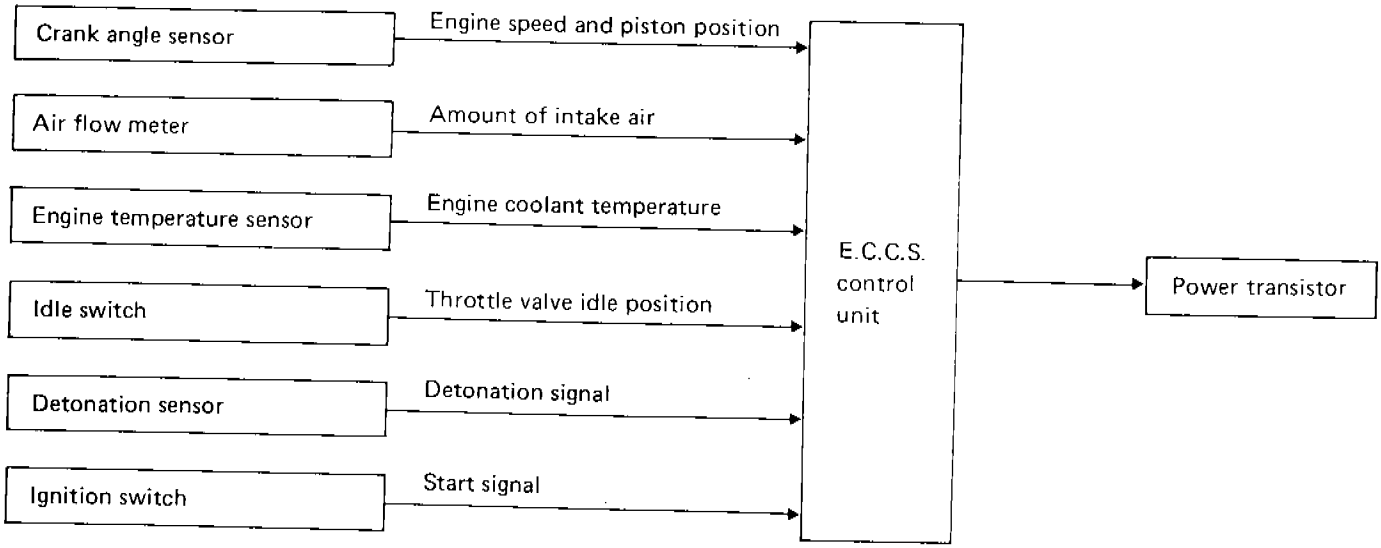

Ignition Timing Control (Cont'd)

SYSTEM DESCRIPTION


The ignition timing is controlled by the E.C.U. in order to maintain the best air-fuel ratio in response to every running condition of the engine.
The ignition timing data is stored in the ROM located in the E.C.U., in the form of the map shown below.
The E.C.U. detects information such as the injection pulse width and crank angle sensor signal which varies every moment. Then responding to this information, ignition signals are transmitted to the power transistor.

e.g. N: 1,800 rpm, Tp: 1.50 msec.
A °B.T.D.C.

In addition to this,
1 At starting
2 During warm-up
3 At idle
4 At low battery voltage
the ignition timing is revised by the E.C.U. according to the other data stored in the ROM.

The retard system by detonation sensor is designed only for emergencies. The basic ignition timing is pre-programmed within the anti-knocking zone, even if recommended fuel is used under dry conditions. Consequently, the retard system does not operate under normal driving conditions.


However, if engine knocking occurs, the detonation sensor monitors the condition and the signal is transmitted to the E.C.C.S. control unit. After receiving it, the control unit retards the ignition timing to avoid the knocking condition.

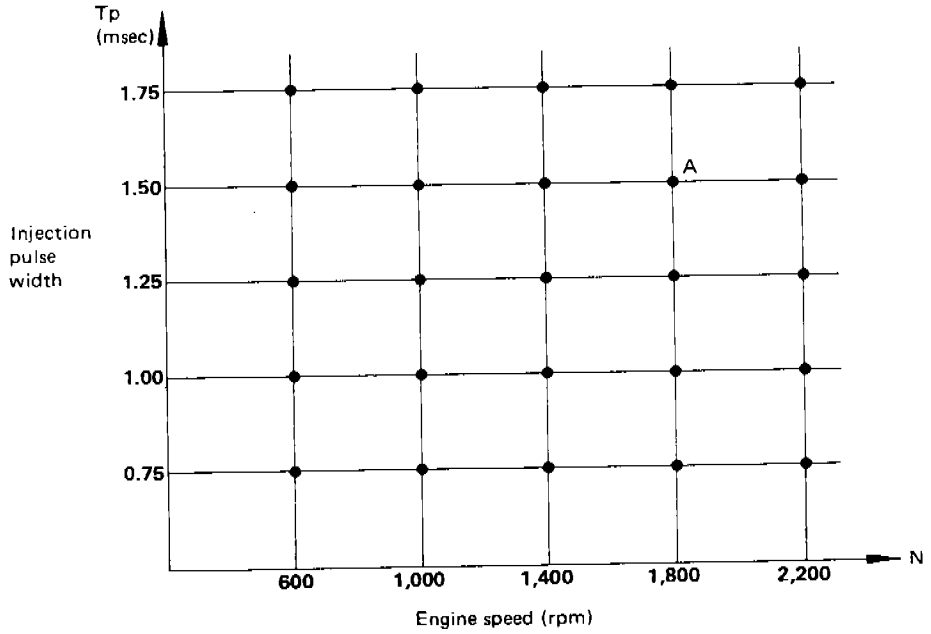

SEC750A

Idle Speed Control

INPUT/OUTPUT SIGNAL LINE

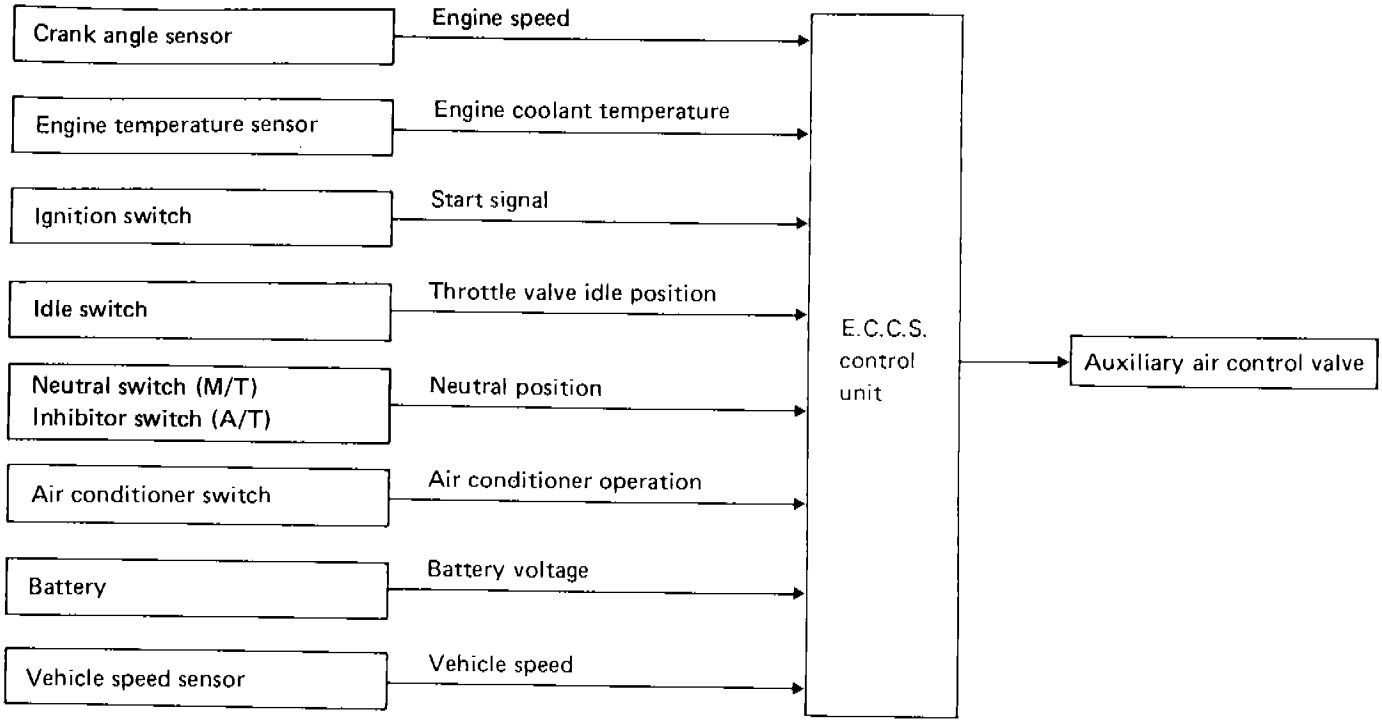


SYSTEM DESCRIPTION

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via A.A.C. valve. The A.A.C. valve repeats ON/OFF operation according to the signal sent from the E.C.U. The crank angle sensor detects the actual engine speed and sends a signal to the E.C.U. The E.C.U. then controls the ON/OFF time of the A.A.C. valve so that engine speed coincides with the target value memorized in ROM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ROM is determined by taking into consideration various engine conditions, such as noise and vibration transmitted to the compartment, fuel consumption, and engine load.

Fuel Pump Control

INPUT/OUTPUT SIGNAL LINE

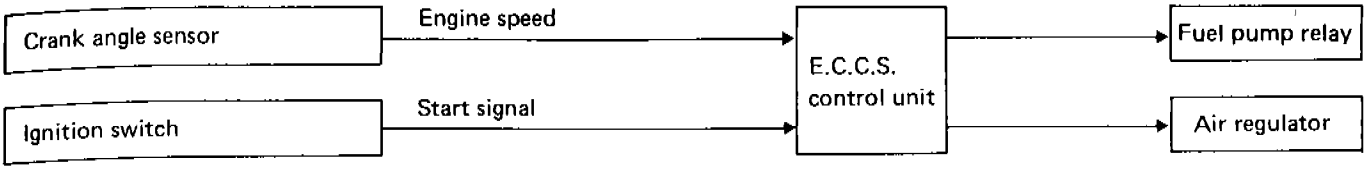

SYSTEM DESCRIPTION

The E.C.U. activates the fuel pump for several seconds after the ignition switch is turned on to improve engine startability. If the E.C.U. receives a 1° signal from the crank angle sensor, it knows that the engine is rotating, and causes the pump to rotate. If the 1° signal is not received when the ignition switch is on, the engine stalls. The E.C.U. stops pump operation and prevents battery discharging, thereby improving safety. The E.C.U. does not directly drive the fuel pump. It controls ON/OFF of the fuel pump relay, which in turn controls the fuel pump.

Fuel pump and air regulator ON-OFF control

Ignition switch position	Engine condition	Fuel pump/ Air regulator operation
ON	Stopped	Operates for 5 seconds
	Running	Operates
	After stopped	Stops after 1 second
START	Starting	Operates


Air Regulator Control

SYSTEM DESCRIPTION

The air regulator is controlled by the E.C.U. at the same time as fuel pump ON-OFF control.

Fuel Pressure Regulator Control


INPUT/OUTPUT SIGNAL LINE

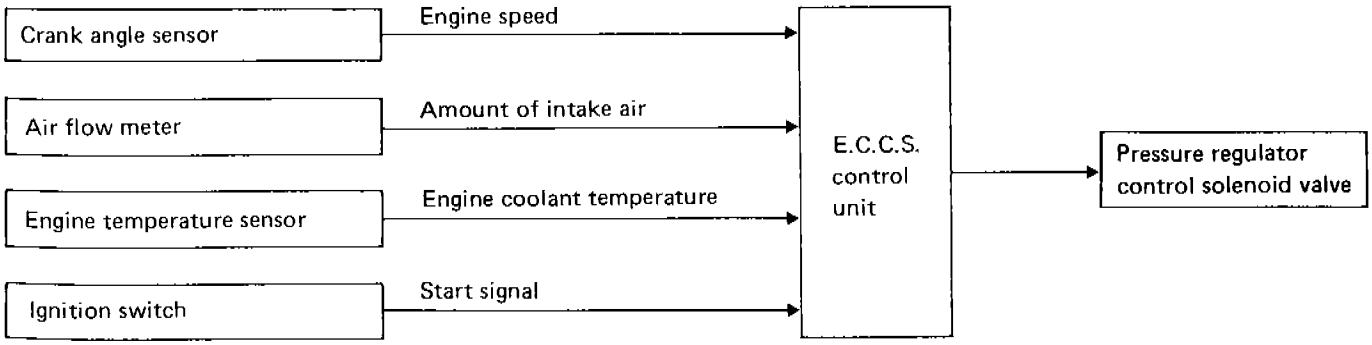

Fuel Pressure Regulator Control (Cont'd)


SYSTEM DESCRIPTION

The fuel "pressure-up" control system briefly increases fuel pressure for improved starting performance of a hot engine. Under normal operating conditions, manifold vacuum is applied to the fuel pressure regulator. When starting the engine, however, the E.C.U. allows current to flow through the ON/OFF solenoid valve in the control vacuum line, opening this line to the atmosphere. As a result, atmospheric pressure is applied, throttling the fuel passage to increase fuel pressure.

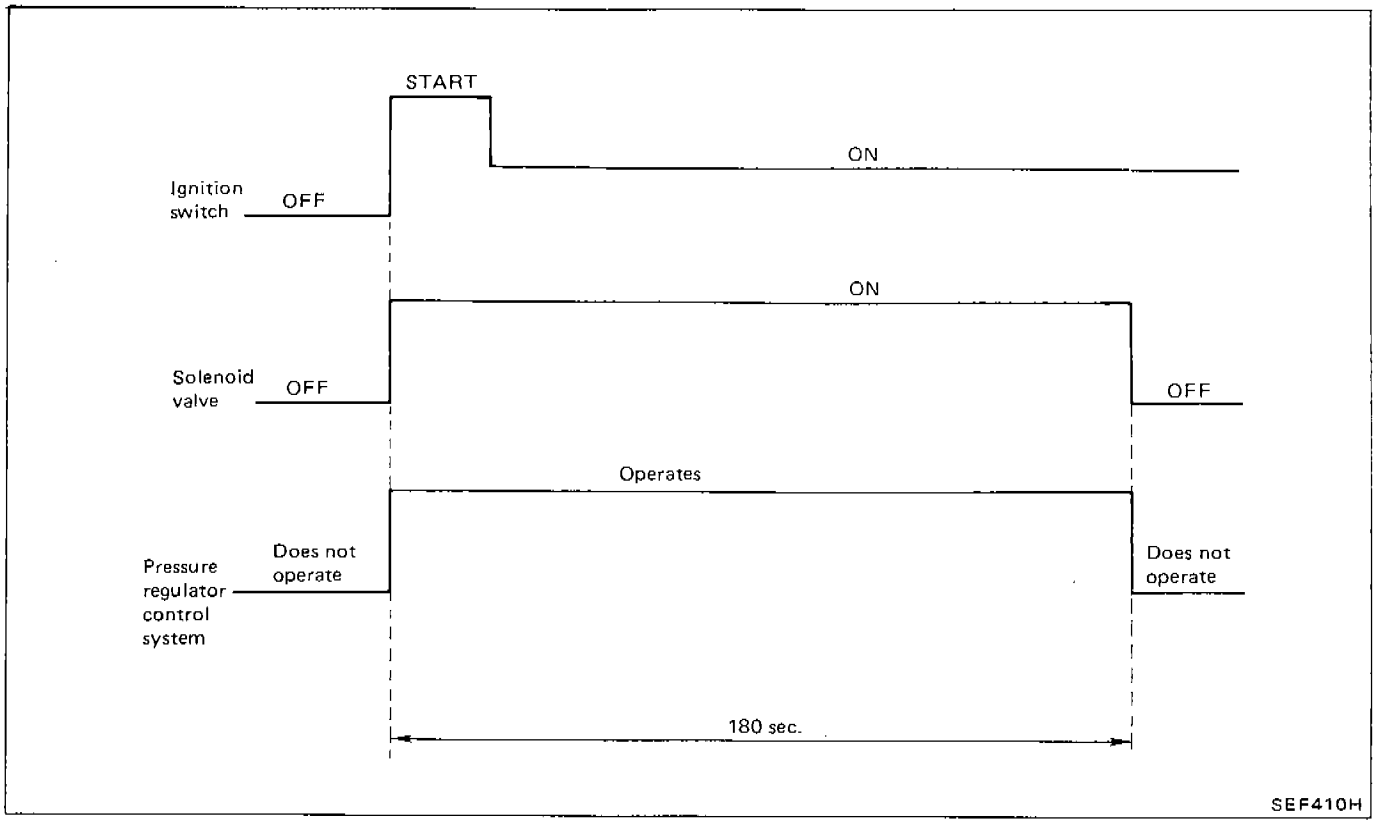

Acceleration Cut Control

INPUT/OUTPUT SIGNAL LINE

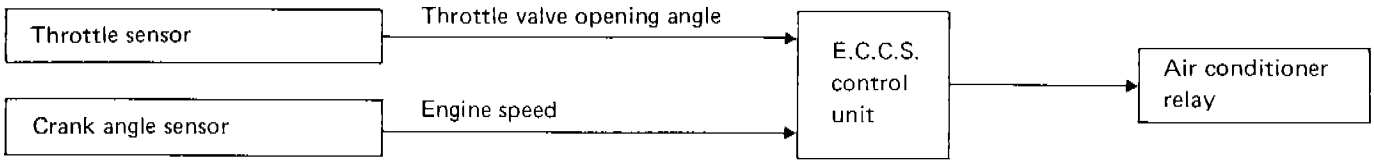


SYSTEM DESCRIPTION

When E.C.U. detects heavy load conditions, air conditioner is turned off for a few seconds.
This system improves acceleration when air conditioner is used.

Exhaust Gas Sensor Heater Control (For catalyzer model)

INPUT/OUTPUT SIGNAL LINE

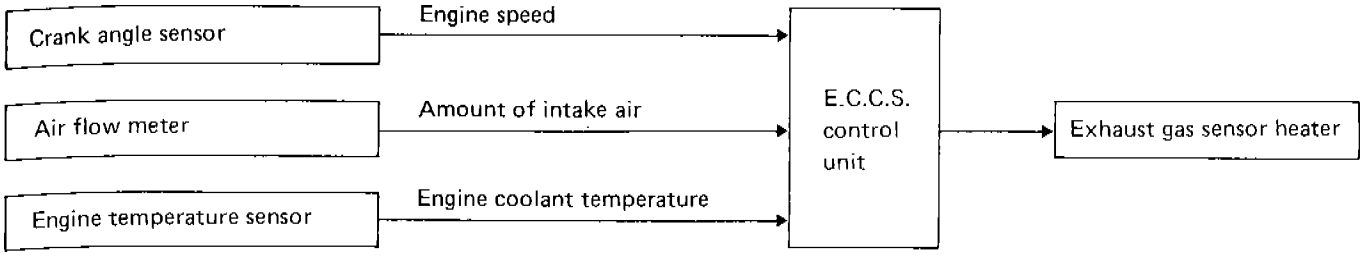

SYSTEM DESCRIPTION

The exhaust gas sensor heater helps activate the sensor quickly to stabilize closed-loop control under all operating conditions.

Fail-safe System

AIR FLOW METER MALFUNCTION

If the air flow meter output voltage is above or below the specified value, the E.C.U. senses an air flow meter malfunction. In case of a malfunction, the throttle sensor substitutes for the air flow meter.

Though air flow meter is malfunctioning, it is possible to drive the vehicle and start the engine. But engine speed will not rise more than 2,000 rpm in order to inform the driver of fail-safe system operation while driving.


ENGINE TEMPERATURE SENSOR MALFUNCTION

When engine temperature sensor output voltage is below or above the specified value, engine temperature is fixed at the preset value as follows:

Engine condition	Engine temperature preset value °C (°F)
Start	20 (68)
Running	80 (176)

Direct Ignition System

This system has no conventional distributor and high-tension wires. Small, very efficient ignition coils are fitted directly to each spark plug.

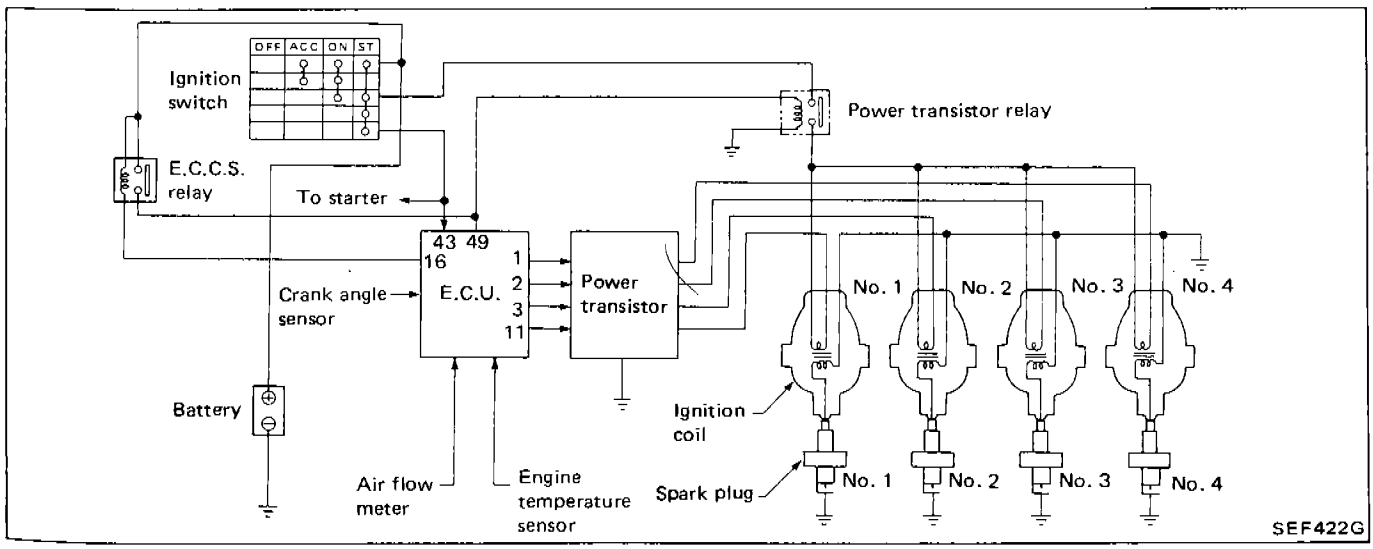

Direct Ignition System (Cont'd)

CHECKING IGNITION TIMING AND IDLE SPEED


Checking idle speed

Idle speed:

M/T: 850 ± 50 rpm


A/T: 850 ± 50 rpm (in "N" position)

If idle speed is not within specific value, refer to IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION.

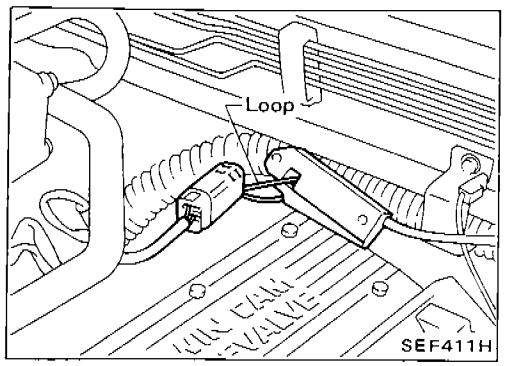


- METHOD A (With pulse type tachometer)

Clamp loop wire as shown.

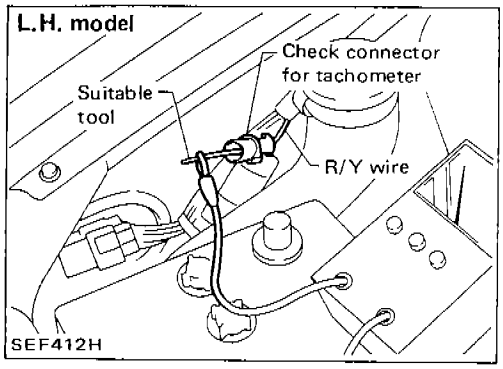

- METHOD B (With voltage type tachometer)

1. Disconnect check connector for tachometer.

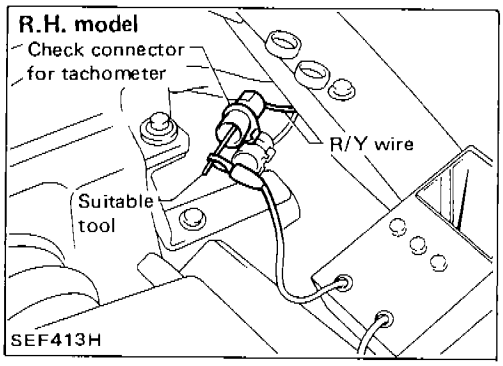


2. Connect tachometer using suitable tool.

Checking ignition timing


Ignition timing: 15° ± 2° B.T.D.C.

If ignition timing is not within specific value, adjust ignition timing as shown.

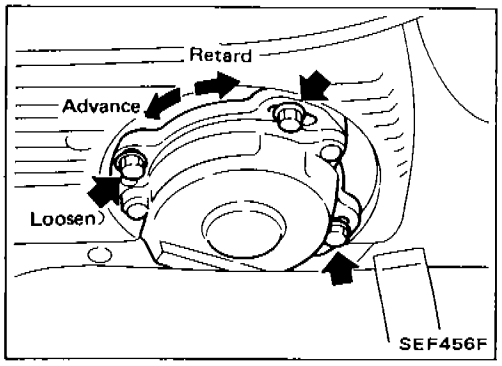


- METHOD A (Without Tool)


1. Remove ornament cover.

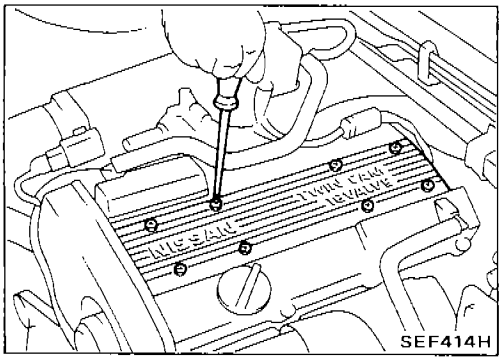


Direct Ignition System (Cont'd)

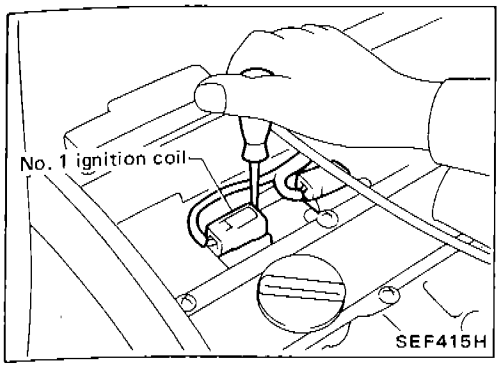


2. Remove No. 1 ignition coil.

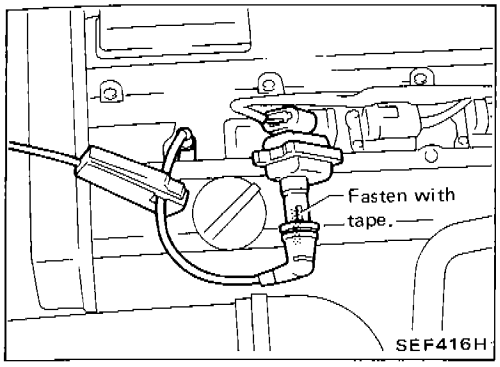

3. Connect No. 1 ignition coil and No. 1 spark plug with suitable high-tension wire as shown, and clamp this wire with timing light clamp.

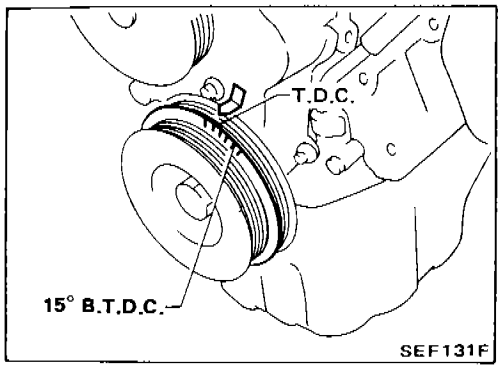


4. Check ignition timing.
5. Install No. 1 ignition coil and ornament cover.

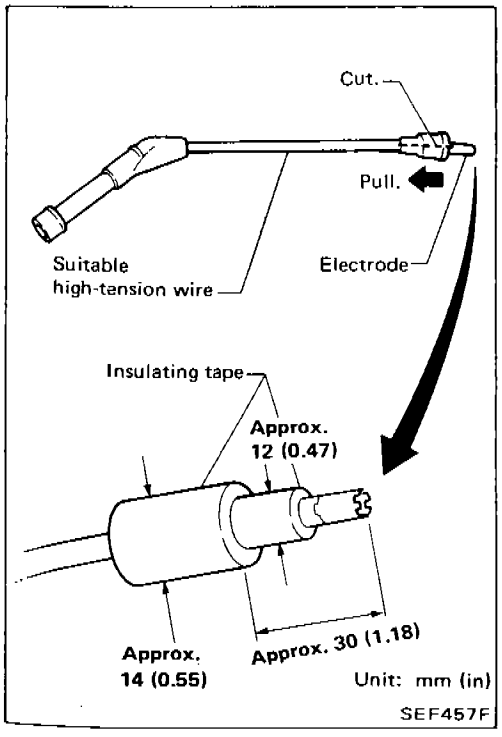


For above procedures, enlarge suitable high-tension wire end with insulating tape as shown.

Direct Ignition System (Cont'd)

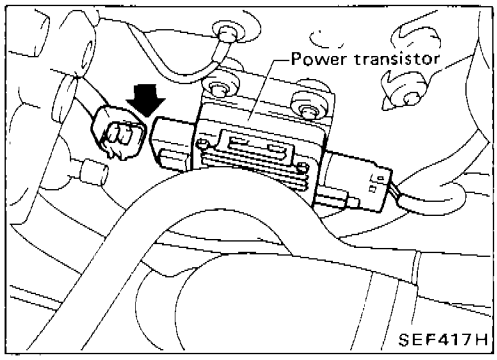


- METHOD B (With Tool KV109D10S0)

1. Disconnect connector of power transistor unit.

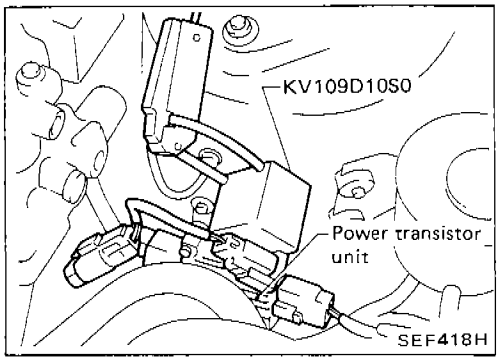

2. Connect Tool and clamp wire as shown.

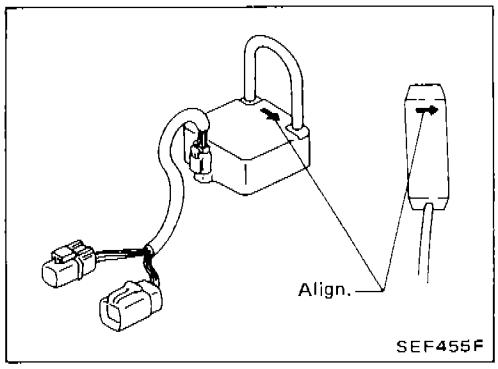

Align direction marks on Tool and timing light clamp if aligning mark is punched.

Preparation

Make sure that the following parts are in good condition.

- **Battery**
- **Ignition system**
- **Engine oil and coolant levels**
- **Fuses**
- **E.C.C.S. harness connectors**
- **Vacuum hoses**
- **Air intake system (oil filler cap, oil level gauge, etc.)**
- **Fuel pressure**
- **Engine compression**
- **Throttle valve**
- **Fuel pressure regulator control system**

Notice


1. Turn off air conditioner and headlamps.
2. During checking and adjusting, make sure engine is at normal operating temperature.
3. Set shift lever in "Neutral" position ("N" or "P" position for automatic transmission).
4. Engage parking brake and lock both front and rear wheels with wheel chocks.
5. Measure "CO"% with air cleaner installed.
6. When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tailpipe.
7. Make sure fuel pressure regulator control system does not operate.

INSPECTION PROCEDURE

For catalyzer model


INSPECTION START

Visually check the following:
- Air cleaner clogging
- Hoses and ducts for leaks
- Electrical connectors
- Gaskets
- Throttle valve and throttle valve switch operation

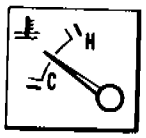

SEF457C

Start engine and warm it up until water temperature indicator points to the middle of gauge.

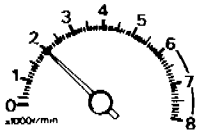

SEF477B

Open engine hood and run engine at about 2,000 rpm for about 2 minutes under no-load.

Perform E.C.C.S. self-diagnosis. (Select mode III)


O.K. / N.G.

Check, correct or replace malfunctioning parts.

Does engine run smoothly?

O.K. / N.G.

Check and clean injectors, and replace injectors if necessary.

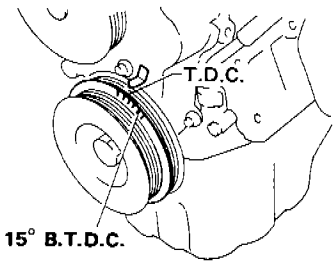

SEF131F

Race engine two or three times under no-load, then run engine at idle speed.

Check idle speed.

M/T: 850±50 rpm
A/T: 850±50 rpm (in "N" position)

O.K. / N.G.


Check ignition timing with a timing light. **Refer to page EF & EC-22.**

15°±2° B.T.D.C.

N.G.

Adjust ignition timing by turning crank angle sensor after loosing bolts which secure it.

O.K.

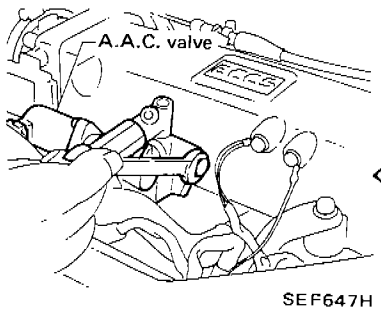

SEF647H


Disconnect A.A.C. valve harness connector.

Adjust idle speed to 800 rpm by turning idle speed adjusting screw.

Connect A.A.C. valve harness connector.


Ⓐ

Ⓑ

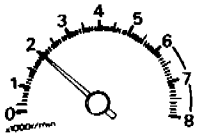
SEF477B

Run engine at about 2,000 rpm for about 2 minutes under no-load.

Make sure that inspection lamp (Green) on control unit goes on and off periodically more than 9 times during 10 seconds at 2,000 rpm under no-load. (Select mode I or II)

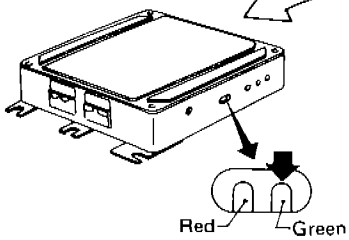

SEF433D

O.K. / N.G.


Race engine two or three times under no-load, then run engine at idle speed.

Set the diagnosis mode of E.C.U. to No. 2 mode and check that inspection lamps (Red and Green) on control unit blink at 2,000 rpm under no-load. They should blink simultaneously.

No → Ⓒ

Yes → INSPECTION END

Check exhaust gas sensor harness:
1) Turn off engine and disconnect battery ground cable.
2) Disconnect connector from Control Unit.
3) Disconnect exhaust gas sensor harness connector and connect terminal for exhaust gas sensor harness connector to ground with a jumping wire.
4) Check for continuity between terminal No. 29 and ground metal on vehicle body.
5) Connect Control Unit connector and battery ground cable.

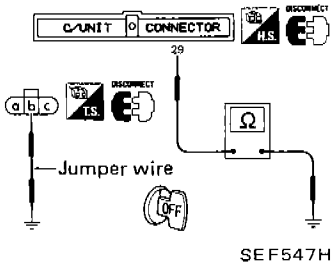


SEF547H

Continuity exists ..... O.K.
Continuity does not exist ..... N.G.

O.K. / N.G.

Repair or replace E.C.C.S. harness.

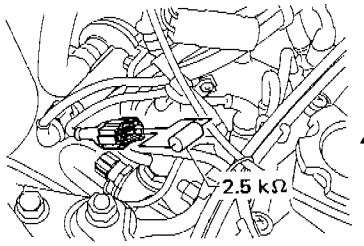


SEF333C

- Disconnect engine temperature sensor harness connector.
- Connect a resistor (2.5 kΩ) between terminals of engine temperature sensor harness connector.
- Disconnect A.A.C. valve harness connector.

Ⓓ


Ⓑ

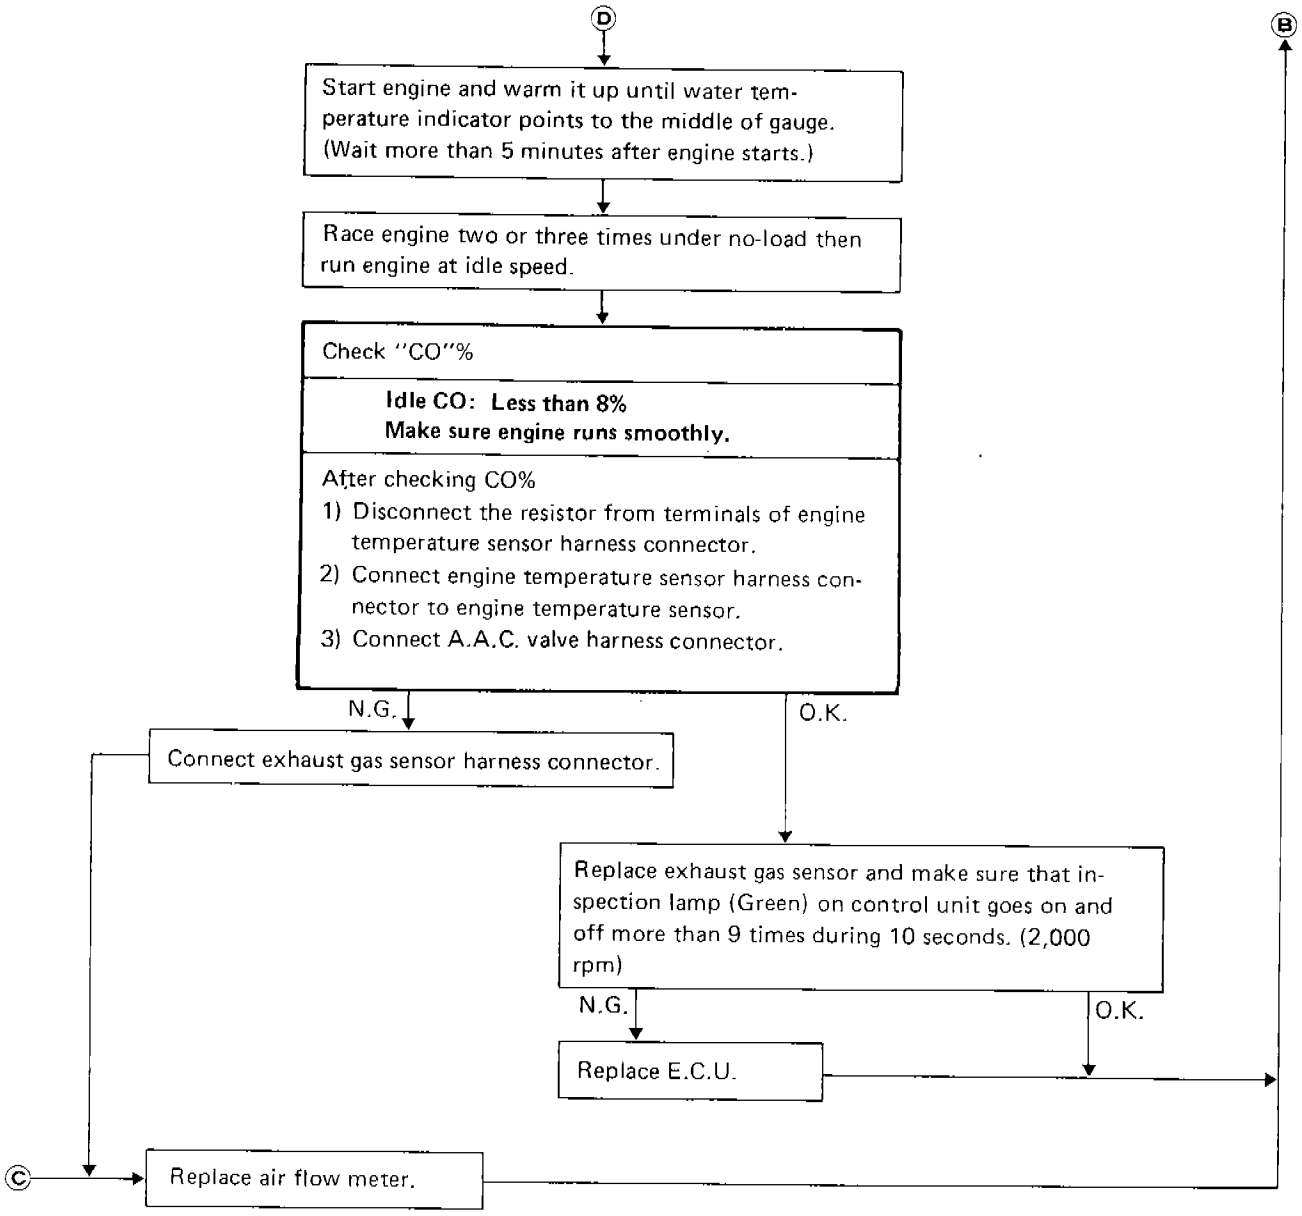
D
Start engine and warm it up until water temperature indicator points to the middle of gauge. (Wait more than 5 minutes after engine starts.)
Race engine two or three times under no-load then run engine at idle speed.
Check "CO"%
Idle CO: Less than 8%
Make sure engine runs smoothly.
After checking CO%
1) Disconnect the resistor from terminals of engine temperature sensor harness connector.
2) Connect engine temperature sensor harness connector to engine temperature sensor.
3) Connect A.A.C. valve harness connector.
N.G.
O.K.
Connect exhaust gas sensor harness connector.
Replace exhaust gas sensor and make sure that inspection lamp (Green) on control unit goes on and off more than 9 times during 10 seconds. (2,000 rpm)
N.G.
O.K.
Replace E.C.U.
C
Replace air flow meter.
B

For non-catalyzer model
[With "CO"-meter]

INSPECTION START


Confirm that engine is at normal operating temperature.

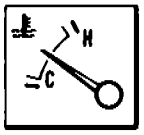

SEF457C

Check and adjust idle speed and ignition timing.

Idle speed: rpm M/T 850±50
A/T 850±50 (in "N" position)
Ignition timing: 15° ±2° B.T.D.C.
Refer to page EF & EC-22.

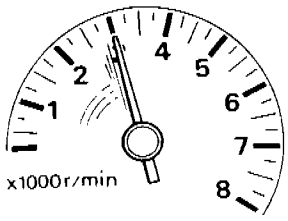

SMA957A

Race engine (2,000 - 3,000 rpm) 2 or 3 times under no-load, then run engine at idle speed.

Check "CO" with "CO"-meter.

Idle "CO"%:
2.0 or lower


O.K.

N.G.

Turn off engine and remove air flow meter from vehicle.

Drill a hole in seal plug which seals air flow meter variable resister and remove seal plug.

Install air flow meter on vehicle.
Start engine and warm it up untill water temperature indicator points to the middle of gauge.

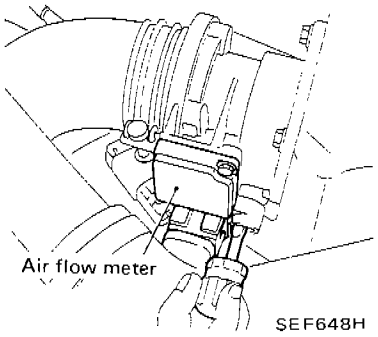

SEF648H

Adjust "CO"% by turning variable resistor on air flow meter.

Idle "CO"%:
2.0 or lower

Race engine two or three times under no-load, then run engine at idle speed.

Check idle speed.

Idle speed: rpm M/T 850±50
A/T 850±50 (in "N" position)


N.G.

O.K.

Stop engine.

INSPECTION END

Ⓐ Ⓑ

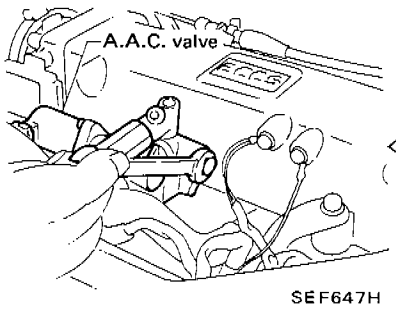

SEF647H

Ⓐ

Disconnect A.A.C. valve harness connector.

Adjust idle speed to 800 rpm by turning idle speed adjusting screw.


Connect A.A.C. valve harness connector.

Ⓑ

For non-catalyzer model
[Without "CO"-meter]

INSPECTION START

Confirm that engine is at normal operating temperature.

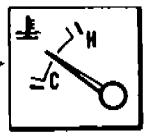

SEF457C


Check and adjust idle speed and ignition timing.

Idle speed: rpm M/T 850±50
A/T 850±50 (in "N" position)
Ignition timing: 15°±2° B.T.D.C.
Refer to page EF & EC-22.

Turn off engine and remove air flow meter from vehicle.

Drill a hole in seal plug which seals air flow meter variable resister and remove seal plug.


Install air flow meter on vehicle.
Start engine and warm it up untill water temperature indicator points to the middle of gauge.

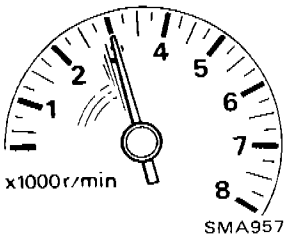

SMA957A

Race engine two or three times under no-load, then run engine at idle.

Adjust mixture ratio with engine speed set at maximum by turning variable resistor.

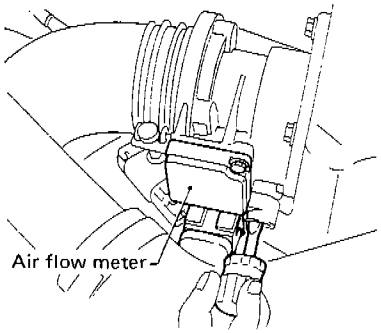

SEF648H

Turn variable resistor of air flow meter 2 full turns counterclockwise.

Check idle speed.


Idle speed: rpm M/T 850±50
A/T 850±50 (in "N" position)

N.G.

O.K.

Stop engine.

INSPECTION END

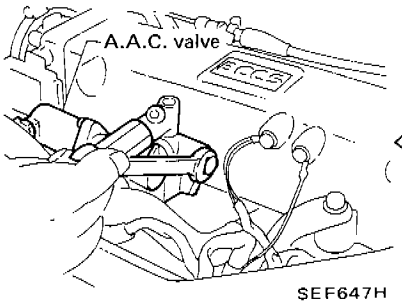

SEF647H

Disconnect A.A.C. valve harness connector.

Adjust idle speed to 800 rpm by turning idle speed adjusting screw.

Connect A.A.C. valve harness connector.


Contents


How to Perform Trouble Diagnoses for Quick and Accurate Repair ..... EF & EC- 34
Diagnostic Table ..... EF & EC- 38
1. Impossible to start — no combustion ..... EF & EC- 39
2. Impossible to start — partial combustion ..... EF & EC- 40
3. Impossible to start — partial combustion (not affected by throttle position) ..... EF & EC- 41
4. Impossible to start — partial combustion (throttle position changes combustion quality) ..... EF & EC- 42
5. Hard to start — before warm-up ..... EF & EC- 43
6. Hard to start — after warm-up ..... EF & EC- 44
7. Hard to start — every time ..... EF & EC- 45
8. Hard to start — morning after a rainy day ..... EF & EC- 46
9. Abnormal idling — no fast idle ..... EF & EC- 47
10. Abnormal idling — low idle (after warm-up) ..... EF & EC- 48
11. Abnormal idling — high idle (after warm-up) ..... EF & EC- 49
12. Unstable idling — before warm-up ..... EF & EC- 50
13. Unstable idling — after warm-up ..... EF & EC- 51
14. Poor driveability — stumble (while accelerating) ..... EF & EC- 52
15. Poor driveability — surge (while cruising) ..... EF & EC- 53
16. Poor driveability — lack of power ..... EF & EC- 54
17. Poor driveability — detonation ..... EF & EC- 55
18. Engine stall — during start-up ..... EF & EC- 56
19. Engine stall — while idling ..... EF & EC- 57
20. Engine stall — while accelerating ..... EF & EC- 58
21. Engine stall — while cruising ..... EF & EC- 59
22. Engine stall — while decelerating/just after stopping ..... EF & EC- 60
23. Engine stall — while loading ..... EF & EC- 61
24. Backfire — through the intake ..... EF & EC- 62
25. Backfire — through the exhaust ..... EF & EC- 63


Self-diagnosis — Description ..... EF & EC- 64
Self-diagnosis — Mode I & II (Model with catalyzer) ..... EF & EC- 67
Self-diagnosis — Mode III ..... EF & EC- 68
Self-diagnosis — Mode IV ..... EF & EC- 73
Self-diagnosis — Mode V ..... EF & EC- 75
Diagnostic Procedure ..... EF & EC- 78
Diagnostic Procedure 1
POWER SOURCE AND GROUND CIRCUIT FOR E.C.U. ..... EF & EC- 80
Diagnostic Procedure 2
CRANK ANGLE SENSOR ..... EF & EC- 82
Diagnostic Procedure 3
AIR FLOW METER ..... EF & EC- 84
Diagnostic Procedure 4
ENGINE TEMPERATURE SENSOR ..... EF & EC- 86
Diagnostic Procedure 5
VEHICLE SPEED SENSOR ..... EF & EC- 88
Diagnostic Procedure 6
IGNITION SIGNAL & DETONATION SENSOR ..... EF & EC- 90
Diagnostic Procedure 7
IDLE SWITCH ..... EF & EC- 94
Diagnostic Procedure 8
EXHAUST GAS SENSOR ..... EF & EC- 96
Diagnostic Procedure 9
THROTTLE SENSOR ..... EF & EC- 98
Diagnostic Procedure 10
FUEL PUMP ..... EF & EC-102
Diagnostic Procedure 11
START SIGNAL ..... EF & EC-104

Contents (Cont'd)

Diagnostic Procedure 12
AUXILIARY AIR CONTROL (A.A.C.) VALVE ..... EF & EC-106
Diagnostic Procedure 13
I.A.A. CONTROL (F.I.C.D. CONTROL) ..... EF & EC-108
Diagnostic Procedure 14
AIR REGURATOR ..... EF & EC-110
Diagnostic Procedure 15
INJECTOR ..... EF & EC-112
Diagnostic Procedure 16
PRESSURE REGULATOR (P.R.) CONTROL SOLENOID VALVE ..... EF & EC-114
Diagnostic Procedure 17
NEUTRAL AND INHIBITOR SWITCH ..... EF & EC-116
Diagnostic Procedure 18
ACCELERATION CUT CONTROL ..... EF & EC-118
Electrical Components Inspection ..... EF & EC-119

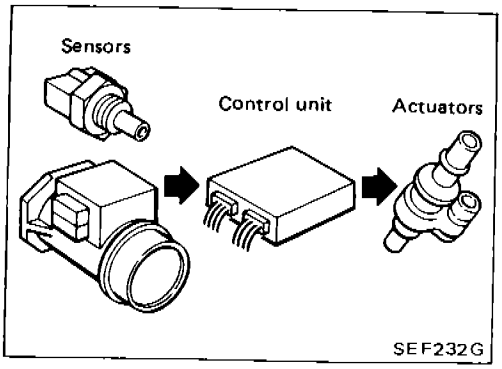

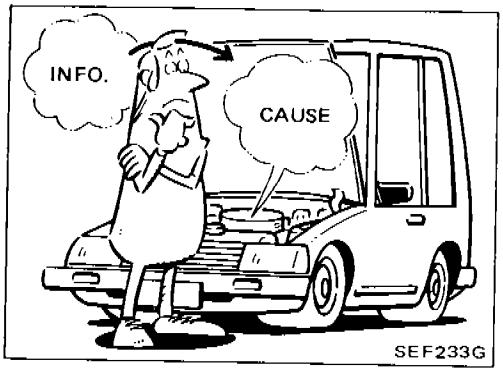

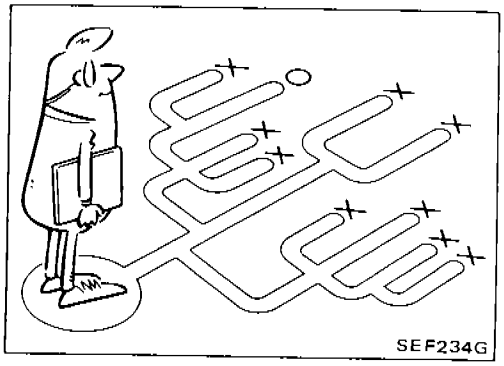

How to Perform Trouble Diagnoses for Quick and Accurate Repair

INTRODUCTION

The engine has an electronic control unit to control major systems such as fuel control, ignition control, idle speed control, etc. The control unit accepts input signals from sensors and instantly drives actuators. It is essential that both kinds of signals are proper and stable. At the same time, it is important that there are no conventional problems such as vacuum leaks, fouled spark plugs, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or faulty wiring. In this case, careful checking of suspicious circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the problems. A road test with a circuit tester connected to a suspected circuit should be performed.

Before undertaking actual checks, take just a few minutes to talk with a customer who approaches with a driveability complaint. The customer is a very good supplier of information on such problems, especially intermittent ones. Through the talks with the customer, find out what symptoms are present and under what conditions they occur.

Start your diagnosis by looking for "conventional" problems first. This is one of the best ways to troubleshoot driveability problems on an electronically controlled engine vehicle.

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

WORK FLOW

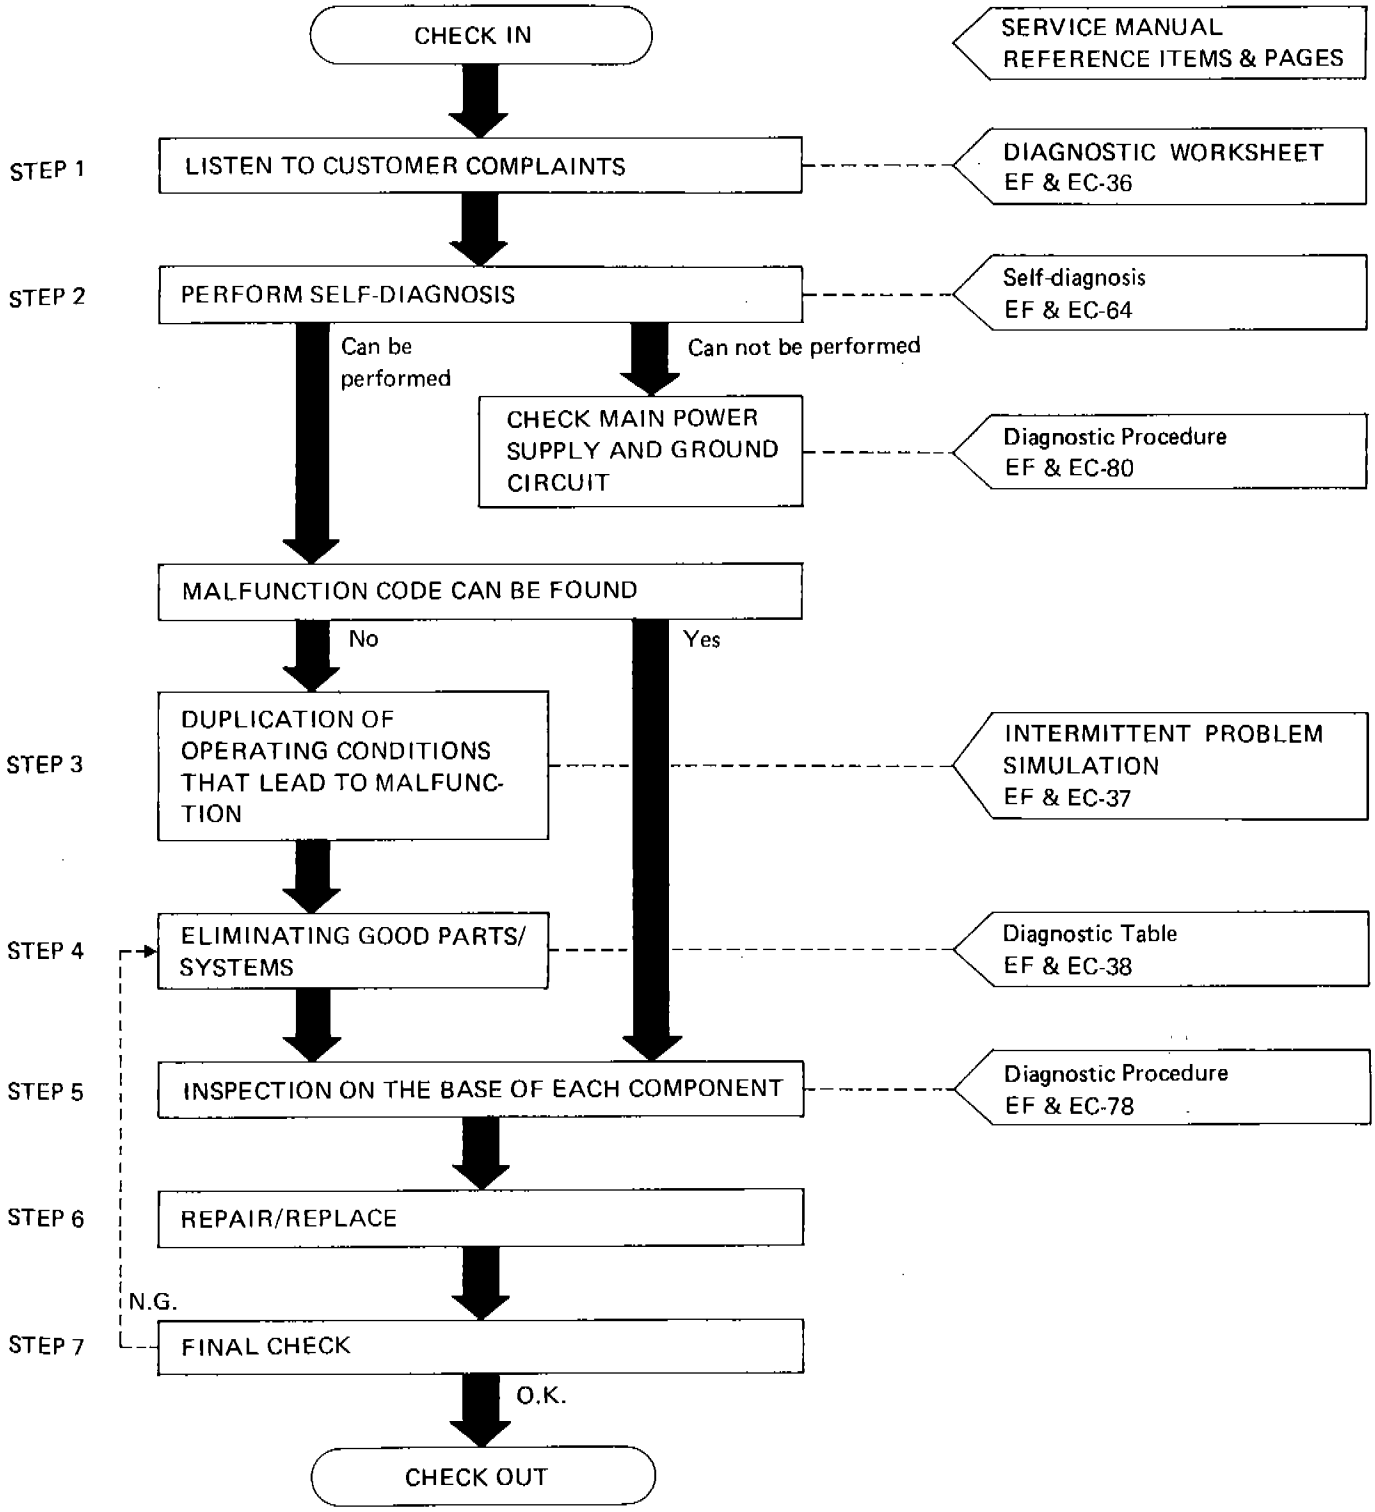

KEY POINTS

WHAT ..... Vehicle & engine model
WHEN ..... Date, Frequencies
WHERE ..... Road conditions
HOW ..... Operating conditions, Weather conditions, Symptoms

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)


DIAGNOSTIC WORKSHEET

There are many kinds of operating conditions that lead to malfunctions on engine components.
A good grasp of such conditions can make trouble-shooting faster and more accurate.
In general, feelings for a problem depend on each customer. It is important to fully understand the symptoms or under what conditions a customer complains.
Make good use of a diagnostic worksheet such as the one shown below in order to utilize all the complaints for trouble-shooting.

Worksheet sample

Customer name MR/MS	Model & Year	VIN
Engine #	Trans.	Mileage (kilometer)
Incident Date	Manuf. Date	In Service Date

Symptoms	☐ Startability	☐ Impossible to start ☐ No combustion ☐ Partial combustion ☐ Partial combustion affected by throttle position ☐ Partial combustion NOT affected by throttle position ☐ Possible but hard to start ☐ Others [ ]
	☐ Idling	☐ No fast idle ☐ Unstable ☐ High idle ☐ Low idle ☐ Others [ ]
	☐ Driveability	☐ Stumble ☐ Surge ☐ Detonation ☐ Lack of power ☐ Intake backfire ☐ Exhaust backfire ☐ Others [ ]
	☐ Engine stall	☐ At the time of start ☐ While idling ☐ While accelerating ☐ While decelerating ☐ Just after stopping ☐ While loading
Incident occurrence		☐ Just after delivery ☐ Recently ☐ In the morning ☐ At night ☐ In the daytime
Frequency		☐ All the time ☐ Under certain conditions ☐ Sometimes
Weather conditions		☐ Not effected
	Weather	☐ Fine ☐ Raining ☐ Snowing ☐ Others [ ]
	Temperature	☐ Hot ☐ Warm ☐ Cool ☐ Cold ☐ Humid °F
Engine conditions		☐ Cold ☐ During warm-up ☐ After warm-up Engine speed 0 2,000 4,000 6,000 8,000 rpm
Road conditions		☐ In town ☐ In suburbs ☐ Highway ☐ Off road (up/down)
Driving conditions		☐ Not affected ☐ At starting ☐ While idling ☐ At racing ☐ While accelerating ☐ While cruising ☐ While decelerating ☐ While turning (RH/LH) Vehicle speed 0 10 20 30 40 50 60 MPH
Check engine light		☐ Turned on ☐ Not turned on

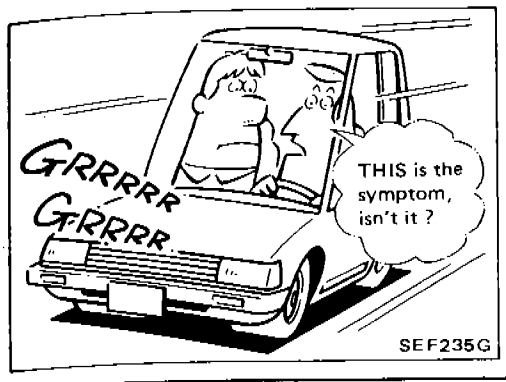

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

INTERMITTENT PROBLEM SIMULATION

In order to duplicate an intermittent problem, it is effective to create similar conditions for component parts, under which the problem might occur.

Perform the activity listed under Service procedure and note the result.

	Variable factor	Influential part	Target condition	Service procedure
1	Mixture ratio	Pressure regulator	Made lean	Remove vacuum hose and apply vacuum.
			Made rich	Remove vacuum hose and apply pressure.
2	Ignition timing	Crank angle sensor	Advanced	Rotate crank angle sensor counterclockwise.
			Retarded	Rotate crank angle sensor clockwise.
3*	Mixture ratio feedback control	Exhaust gas sensor	Suspended	Disconnect exhaust gas sensor harness connector.
		Control unit	Operation check	Perform self-diagnosis (Mode I/II) at 2,000 rpm.
4	Idle speed	I.A.A. unit	Raised	Turn idle adjust screw counterclockwise.
			Lowered	Turn idle adjust screw clockwise.
5	Electric connection (Electric continuity)	Harness connectors and wires	Poor electric connection or faulty wiring	Tap or wiggle.
				Race engine rapidly. See if the torque reaction of the engine unit causes electric breaks.
6	Temperature	Control unit	Cooled	Cool with an icing spray or similar device.
			Warmed	Heat with a hair drier. **[WARNING: Do not overheat the unit.]**
7	Moisture	Electric parts	Damp	Wet **[WARNING: Do not directly pour water on components. Use a mist sprayer.]**
8	Electric loads	Load switches	Loaded	Turn on head lights, air conditioner, rear defogger, etc.
9	Idle switch condition	Control unit	ON-OFF switching	Perform self-diagnosis (Mode IV).
10	Ignition spark	Timing light	Spark power check	Try to flash timing light for each cylinder.

***For catalyzer model**

Diagnostic Table

To assist with your trouble diagnoses, some typical diagnostic procedures for the following symptoms are described.

REMARKS

In the following pages, the numbers such as ❶, ❷ in the above chart correspond to those in the service procedure described below.
Possible causes can be checked through the service procedure shown by the mark "○".


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 1 **Impossible to start – no combustion**

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼
SPECIFICATIONS	Mixture ratio (too lean)	○	○					
	Ignition sparks (weak, missing)				○	○		
	Ignition timing						○	
FUEL SYSTEM	Fuel pump (no operation)	○						
	Fuel pump relay (open circuited)	○						
	Injectors (no operation, clogged)		○					
IGNITION SYSTEM	Ignition switch	○	○	○	○		○	
	E.C.C.S. relay	○	○	○	○		○	
	Power transistor			○	○		○	
	Ignition coil				○		○	
	Spark plugs					○		
CONTROL SYSTEM	Crank angle sensor	○	○		○		○	○

SERVICE PROCEDURE


❶ **LISTEN**

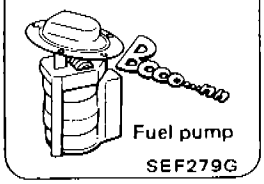

Listen for fuel pump operating sound.

N.G. → Check fuel pump and/or related circuits. [See page EF & EC-102.]


❷ **LISTEN**

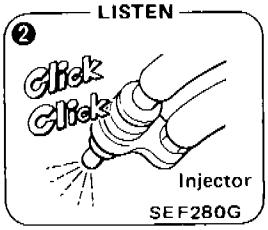

Listen for injector operating sound.

N.G. → Check injector circuit. [See page EF & EC-112.]


❸ **CHECK**

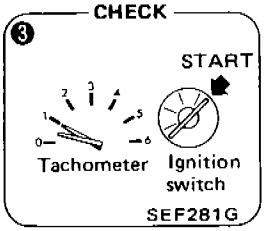

Make sure tachometer needle moves when cranking.

N.G. →


❹ **CHECK**

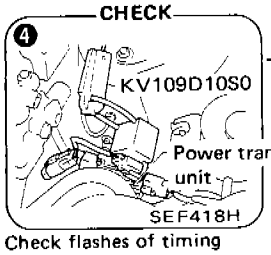

Check flashes of timing light for weakness.


N.G. → Check ignition signal circuit. [See page EF & EC-90.]

❺ **CHECK** Ignition coil

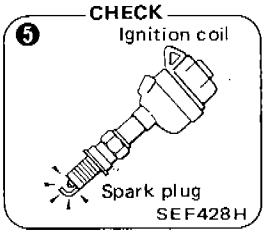

Remove spark plugs and check their ignition sparks.

❻ **CHECK**

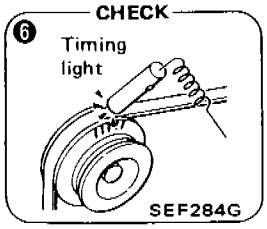


Check ignition timing.

N.G. → Adjust ignition timing. [See page EF & EC-22.]

❼ **PERFORM**

Self-diagnosis Mode III

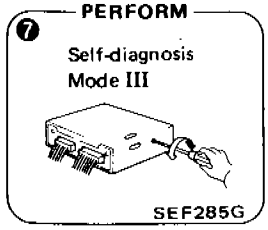

Perform self-diagnosis Mode III (for crank angle sensor).

N.G. → Check crank angle sensor and/or related circuits. [See page EF & EC-82.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 2 **Impossible to start — partial combustion**

POSSIBLE CAUSES		❶	❷	❸	❹	❺
SPECIFICATIONS	Mixture ratio	○	○	○		
	Fuel pressure (too low)				○	
	Ignition timing					○
FUEL SYSTEM	Fuel pump	○				
	Fuel pump relay (open circuited)	○				
	Injectors (clogged)		○			

SERVICE PROCEDURE

❶ **LISTEN**

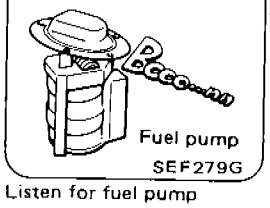


Listen for fuel pump operating sound.

N.G. → Check fuel pump and/or related circuits. [See page EF & EC-102.]

O.K. →

❷ **LISTEN**

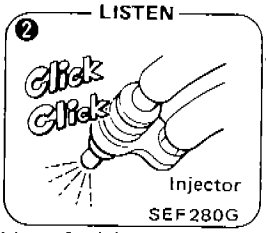


Listen for injector operating sound.

N.G. → Check injector circuit. [See page EF & EC-112.]

O.K. →


❸ **APPLY**

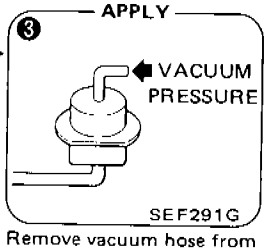

Remove vacuum hose from pressure regulator, and apply vacuum and/or pressure, and try to start.

Improved →


❹ **MEASURE** Fuel pressure gauge

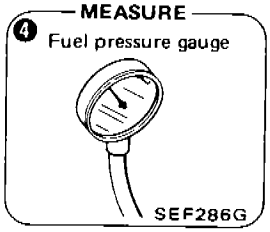

Connect vacuum hose to pressure regulator and measure fuel pressure.

Check idle mixture ratio. [See page EF & EC-25.]

❺ **CHECK**

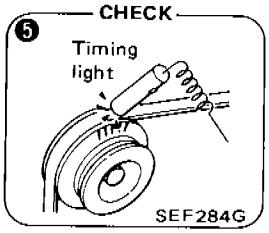

Check ignition timing.

Adjust ignition timing. [See page EF & EC-22.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 3 | **Impossible to start – partial combustion (not affected by throttle position)**

	POSSIBLE CAUSES	❶	❷	❸	❹	❺	❻	❼	❽	❾	❿	⓫
SPECIFICATIONS	Mixture ratio	○		○	○							
	Fuel pressure (too low)			○	○	○						
	Ignition timing						○					
FUEL SYSTEM	Fuel filter (clogged)					○						
	Fuel line (clogged)					○						
	Injectors (clogged)	○										
	Pressure regulator				○							
	Pressure regulator vacuum hose (clogged)			○								
IGNITION SYSTEM	Spark plugs (wet with fuel)								○			
	Ignition switch	○						○		○		
INTAKE SYSTEM	Throttle chamber (with ports clogged)		○									
	Throttle valve (clogged)		○									
CONTROL SYSTEM	Engine temperature sensor										○	○
	Crank angle sensor	○						○			○	

SERVICE PROCEDURE

❶ **LISTEN**

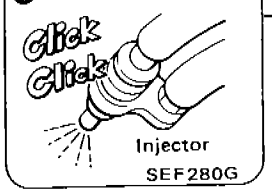


Listen for injector operating sound.

N.G. → Check injector circuit. [See page EF & EC-112.]

O.K. ↓


❷ **CHECK** Throttle chamber

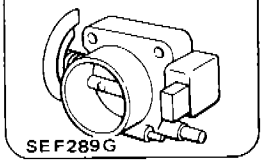

Check throttle chamber ports and valve for clogging.

N.G. → Clean the ports and/or throttle valve.

❸ **CHECK**

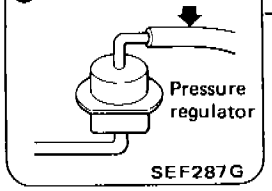


Check vacuum hose of pressure regulator for clogging.

N.G. ↓

Repair or replace the hose.

O.K. → ❹ **REMOVE** Pressure regulator

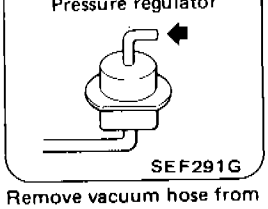


Remove vacuum hose from pressure regulator, and try to start.

Improved → ❺ **MEASURE** Fuel pressure

Connect vacuum hose to pressure regulator and measure fuel pressure.

→ Check idle mixture ratio. [See page EF & EC-25.]

❻ **CHECK**

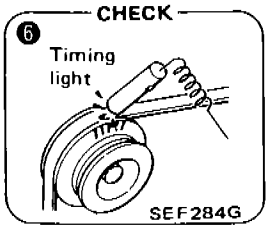


Check ignition timing.

N.G. ↓

Adjust ignition timing. [See page EF & EC-22.]


❼ **CHECK**

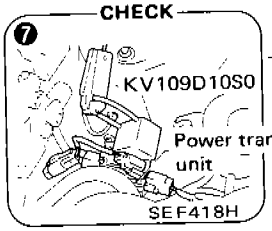

Check flashes of timing light for weakness.

N.G. → Check ignition signal circuit. [See page EF & EC-90.]

❽ **CHECK** Ignition coil

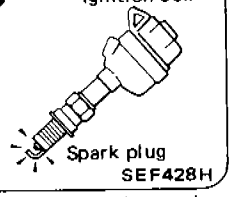

Remove spark plugs and check their ignition sparks by cranking.

❾ **PERFORM** Self-diagnosis Mode IV

Perform self-diagnosis Mode IV (for start signal).

N.G. → Check starter circuit. [See page EF & EC-104.]


❿ **PERFORM** Self-diagnosis Mode III

Perform self-diagnosis Mode III (for engine temp. sensor and crank angle sensor).

For crank angle sensor → Check the sensor circuits. [See page EF & EC-86 (engine temp. sensor), page EF & EC-82 (crank angle sensor).]

For engine temp. sensor →

⓫ **CRANK**

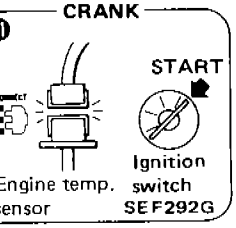

Start with engine temp. sensor connector disconnected.

N.G. →


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 4 **Impossible to start — partial combustion (throttle position changes combustion quality)**

POSSIBLE CAUSES		❶	❷	❸	❹	❺
INTAKE SYSTEM	Throttle chamber (with ports clogged)	○				
	Throttle valve (clogged)		○			
	Air regulator (stuck closed)			○		
CONTROL SYSTEM	Engine temperature sensor				○	
	Idle switch				○	
	Neutral switch					○

SERVICE PROCEDURE


❶ **CHECK** Throttle chamber

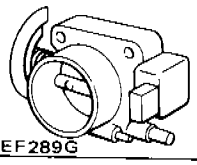

N.G. → Clean the ports.

Check throttle chamber ports for clogging.


❷ **CHECK** Throttle chamber

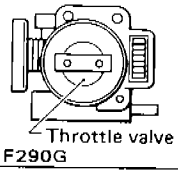

N.G. → Clean the valve.

Check throttle valve for clogging.

❸ **CHECK** Air regulator

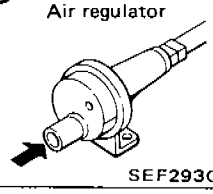

N.G. → Check air regulator and/or its circuit. [See page EF & EC-110.]


Make sure air regulator stays open before warm-up

❹ **PERFORM**

Self-dragnosis Mode III/IV

Perform self-diagnosis Mode III (for engine temp. sensor), Mode IV (for idle switch).

❺ **CHECK**

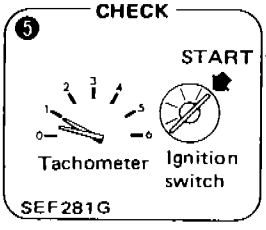

N.G. → Check neutral switch and/or its circuit. [See page EF & EC-116.]

Make sure tachometer indicates about 300 rpm while cranking.


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 5 **Hard to start — before warm-up**

	POSSIBLE CAUSES	❶	❷	❸	❹	❺	❻
SPECIFICATIONS	Mixture ratio			○			○
IGNITION SYSTEM	Ignition switch (no start signal)	○			○		
INTAKE SYSTEM	Air regulator			○			
CONTROL SYSTEM	Engine temperature sensor					○	○
	Idle switch				○		
	Neutral switch	○					
OTHERS	Starter (operation too slow)	○					
	Battery (voltage too low)	○	○				

SERVICE PROCEDURE


❶ **CHECK**

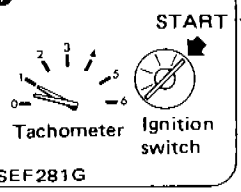

Make sure tachometer indicates about 300 rpm while cranking.

N.G. →


❷ **MEASURE**

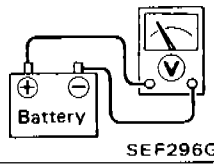

Measure battery voltage.

N.G. (less than 12V) → Charge the battery.


❸ **CHECK**

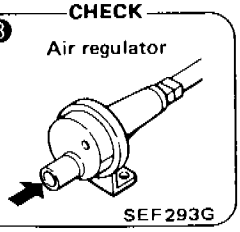

Make sure air regulator stays open before warm-up.

N.G. → Check air regulator and/or its circuit. [See page EF & EC-110.]


❹ **PERFORM**

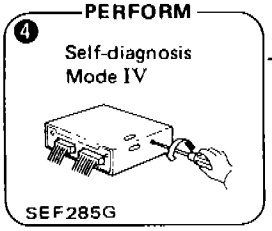

Perform self-diagnosis Mode IV (for start signal and idle switch).

N.G. → Check the malfunctioning switches and/or circuits. [See page EF & EC-104 (start signal), page EF & EC-94 (idle switch).]


❺ **PERFORM**

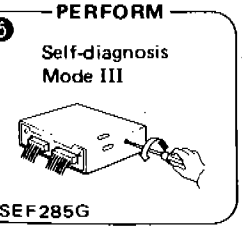

Perform sel-diagnosis Mode III (for engine temp. sensor).

N.G. →

❻ **CRANK**

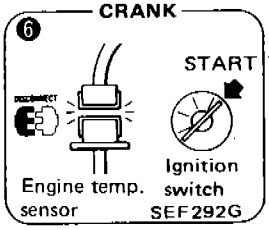

Start with engine temp. sensor connector disconnected.

N.G. → Check sensor circuit. [See page EF & EC-86 (engine temp. sensor).]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 6 Hard to start — after warm-up

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼	❽
SPECIFICATIONS	Mixture ratio			○			○		
	Fuel pressure			○			○	○	
FUEL SYSTEM	Fuel line (hot fuel)			○					
	Pressure regulator (low fuel pressure)						○		
	Pressure regulator vacuum hose (clogged)						○		
	Pressure regulator control solenoid							○	○
	Pressure regulator control solenoid vacuum hose						○		
IGNITION SYSTEM	Ignition switch (no start signal)	○				○			
CONTROL SYSTEM	Engine temperature sensor				○				
	Air flow meter				○				
OTHERS	Starter (operation too slow)	○							
	Battery (voltage too low)	○	○						

SERVICE PROCEDURE


❶ CHECK

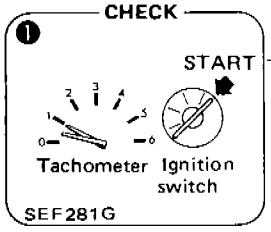

Make sure tachometer indicates about 300 rpm while cranking.

N.G. →

❷ MEASURE

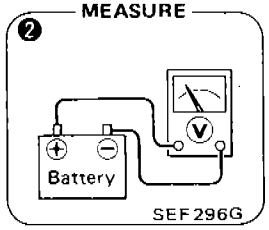


Measure battery voltage.

N.G. (less than 12V) ↓

Charge the battery.

❸ CRANK

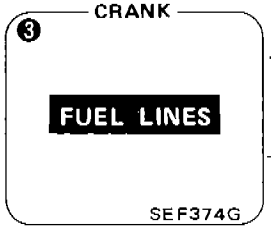


Cool fuel lines with wet rags, etc. and try to start.

No change → Proceed to other steps.

Improved → Proceed to other steps. If everything is O.K., check fuel vapor pressure.


❹ PERFORM

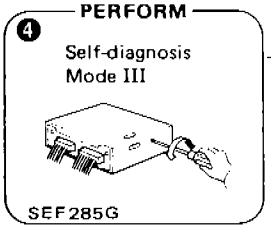

Perform self-diagnosis Mode III (for engine temp. sensor and air flow meter).

N.G. → Check sensor circuits. [See page EF & EC-86 (engine temp. sensor), page EF & EC-84 (air flow meter).]


❺ PERFORM

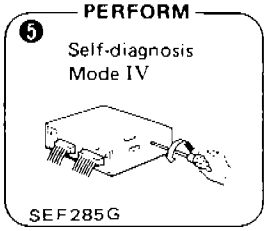

Perform self-diagnosis Mode IV (for start signal).

N.G. → Check starter circuit. [See page EF & EC-104.]

❻ CHECK

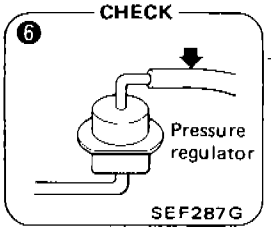


Check vacuum hose of pressure regulator for clogging.

N.G. ↓

Repair or replace the hose.

O.K. →


❼ CHECK

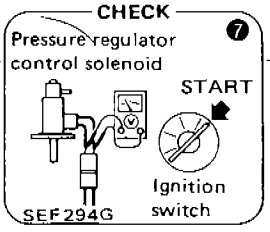

Check terminal voltage of pressure regulator control solenoid while cranking.

N.G. →

❽ LISTEN

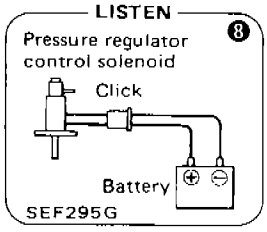

Listen for clicking sound from pressure regulator control solenoid when applying battery voltage.

N.G. ↓ Replace the solenoid.

O.K. ↓ Check the solenoid circuit. [See page EF & EC-114.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 7 **Hard to start – every time**

	POSSIBLE CAUSES	❶	❷	❸	❹	❺	❻	❼	❽	❾	❿	⓫
SPECIFICATIONS	Mixture ratio	○				○	○					
	Fuel pressure						○	○				
	Ignition sparks (missing)								○		○	
	Ignition timing				○							
FUEL SYSTEM	Fuel pump (improper operation)	○										
	Fuel line (clogged)							○				
	Canister (air leaks)					○						
	Pressure regulator (low fuel pressure)						○					
IGNITION SYSTEM	Spark plugs (improper gap)									○		
CONTROL SYSTEM	Crank angle sensor	○							○			○
	Engine temperature sensor											○
	Idle switch											○
	Neutral switch		○									
OTHERS	Starter (operation too slow)		○									
	Battery (voltage too low)		○	○								

SERVICE PROCEDURE


❶ **LISTEN**

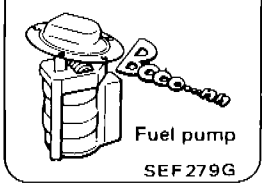

Listen for fuel pump operating sound.

N.G. → Check fuel pump and/or related circuits. [See page EF & EC-102.]

❷ **CHECK**

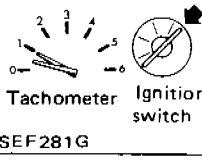


Make sure tachometer indicates about 300 rpm while cranking.

N.G. → ❸ **MEASURE** Battery

Measure battery voltage.

N.G. → Charge the battery.


❹ **CRANK**

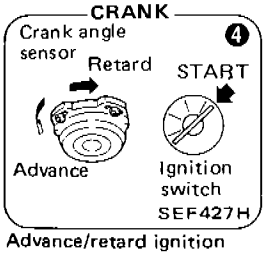

Advance/retard ignition timing and try to start.

No change → [Proceed to other steps.]

❺ **CHECK**

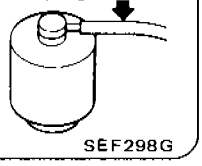


Check vacuum hose of canister for air leaks.

N.G. → Repair or replace the hose.

Improved → Check idle mixture ratio. [See page EF & EC-25.]

❻ **REMOVE**

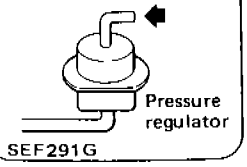

Remove vacuum hose from pressure regulator, and try to start.

❼ **MEASURE** Fuel pressure


Connect vacuum hose to pressure regulator and measure fuel pressure.

⓫ **PERFORM** Self-diagnosis Mode III/IV

Perform self-diagnosis Mode III (for engine temp. sensor and crank angle sensor), Mode IV (for idle switch).

N.G. → Check the malfunctioning circuits. [See page EF & EC-86 (engine temp. sensor), page EF & EC-82 (crank angle sensor), page EF & EC-94 (idle switch).]


❽ **CHECK**

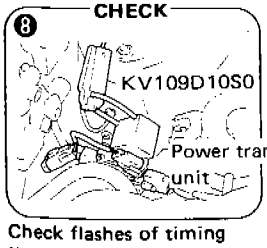

Check flashes of timing light for weakness.

N.G. → Check ignition signal circuit. [See page EF & EC-90.]


❾ **MEASURE**

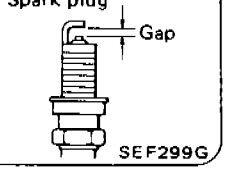

Remove spark plugs and measure their gaps.

N.G. → Replace the wires.

O.K. → ❿ **CHECK** Ignition coil

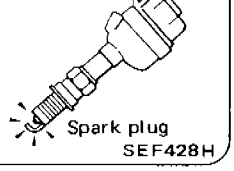

Check ignition sparks.


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 8 Hard to start — morning after a rainy day

POSSIBLE CAUSES		❶	❷	❸	❹
SPECIFICATIONS	Ignition sparks (weak)	○			○
IGNITION SYSTEM	Power transistor	○			○
	Ignition coil	○	○		○
	Spark plugs (improper gap)			○	○

SERVICE PROCEDURE


❶ CHECK

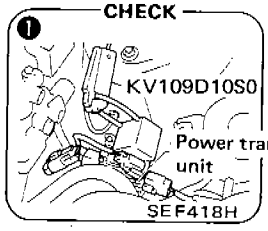

Check flashes of timing light for weakness.

N.G. → Check ignition signal circuit. [See page EF & EC-90.]

❷ DRY

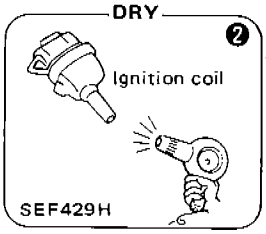


Dry ignition coil and try to start.

Can start → Replace the parts.

No change →


❸ MEASURE

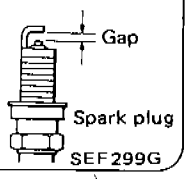

Remove spark plugs and measure their gaps. (For conventional type plug)

O.K. →

❹ CHECK

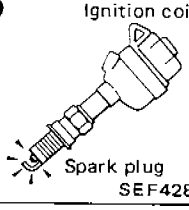

Check ignition sparks.


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 9 **Abnormal idling – no fast idle**

	POSSIBLE CAUSES	❶	❷	❸	❹	❺	❻
SPECIFICATIONS	Mixture ratio	○	○		○		
	Ignition timing			○			
INTAKE SYSTEM	Blow-by hose (clogged)		○				
	Air regulator (stuck closed)	○					
CONTROL SYSTEM	Engine temperature sensor					○	○

SERVICE PROCEDURE


❶ **CHECK**

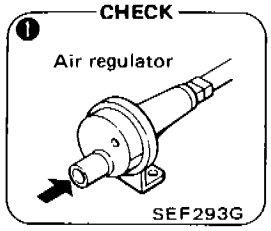

N.G. → Check air regulator and/or its circuit. [See page EF & EC-110.]

Make sure air regulator stays open before warm-up.


❷ **CHECK**

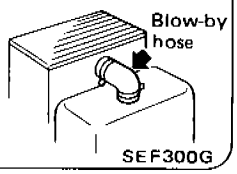

N.G. → Clean or replace the hose.

Check blow-by hose for clogging.


❸ **APPLY**

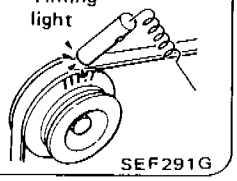

Improved → Adjust ignition timing. [See page EF & EC-22.]

Check ignition timing.


❹ **CHECK**

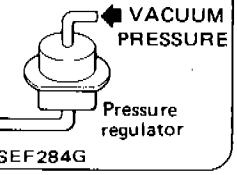

N.G. → Check idle mixture ratio. [See page EF & EC-25.]

Apply vacuum/pressure to pressure regulator after disconnecting vacuum hose, and check idling.


❺ **PERFORM**

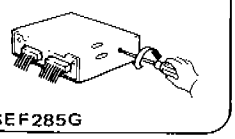

N.G. →

Perform self-diagnosis Mode III (for engine temp. sensor).

❻ **CRANK**

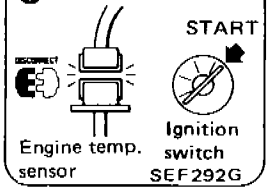

N.G. → Check sensor circuit. [See page EF & EC-86 (engine temp. sensor).]

Start with engine temp. sensor connector disconnected.


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 10 Abnormal idling – low idle (after warm-up)

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼
SPECIFICATIONS	Mixture ratio		○			○		
	Ignition timing (too retarded)	○						
INTAKE SYSTEM	Throttle chamber (with ports clogged)			○				
	Throttle valve (clogged)				○			
CONTROL SYSTEM	Crank angle sensor						○	
	Air flow meter						○	
	Engine temperature sensor						○	○

SERVICE PROCEDURE

❶ CHECK

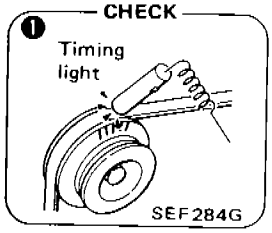


Check ignition timing.

N.G.

Adjust ignition timing. [See page EF & EC-22.]

❷ CHECK

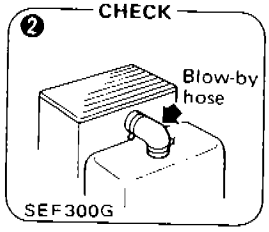


Check blow-by hose for clogging.

N.G.

Clean or replace the hose.

❸ CHECK

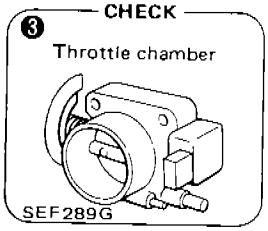


Check throttle chamber ports for clogging.

N.G.

Clean the ports.

❹ CHECK

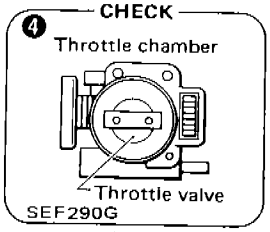


Check throttle valve for clogging.

N.G.

Clean the valve.

❺ APPLY

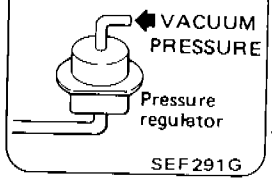


Apply vacuum/pressure to pressure regulator after disconnecting vacuum hose, and check idling.

Improved → Check idle mixture ratio. [See page EF & EC-25.]

No change → Check load signal circuit. [See EL section.]

❻ PERFORM

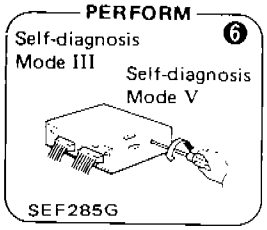


Perform self-diagnosis Modes III and V (for air flow meter, and engine temp. sensor.)

N.G.

Check the malfunctioning parts and/or circuits. [See page EF & EC-84 (air flow meter), page EF & EC-86 (engine temp. sensor).]

❼ RUN

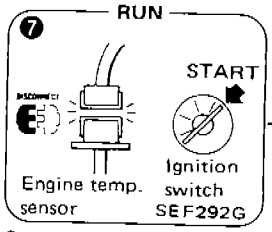

N.G.

Start and run engine with engine temp. sensor connector disconnected.


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 11 — Abnormal idling – high idle (after warm-up)

	POSSIBLE CAUSES	❶	❷	❸	❹	❺	❻	❼	❽	❾	❿	⓫
SPECIFICATIONS	Mixture ratio		○	○		○	○			○		
	Ignition timing (too advanced)	○										
INTAKE SYSTEM	Air duct (leaks)		○									
	Throttle chamber (air leaks)				○							
	Throttle valve (stuck control wire)				○							
	Intake manifold (gasket) (air leaks)		○									
	Air regulator (stuck open)			○								
	A.A.C. valve							○				
	F.I.C.D. solenoid (remaining ON)								○			
CONTROL SYSTEM	Crank angle sensor										○	
	Air flow meter										○	
	Engine temperature sensor										○	○
	Idle switch (remaining OFF)							○		○		
OTHERS	Battery (voltage too low)											

SERVICE PROCEDURE

❶ CHECK

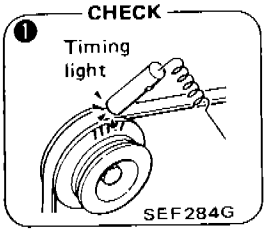


Check ignition timing.

N.G. ↓

Adjust ignition timing.
[See page EF & EC-22.]

❷ CHECK

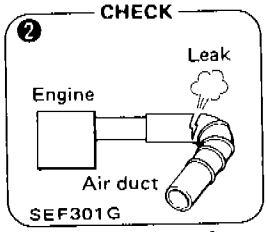

Check intake system for air leaks.


O.K. ↓

N.G. ↓

Check throttle wire for rough sliding.

Repair/replace the part.

❸ CHECK

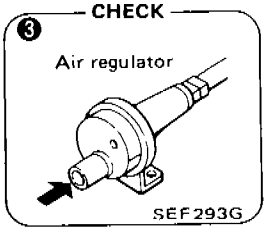


Make sure air regulator stays closed after warm-up.

N.G. ↓

Check air regulator and/or its circuit.
[See page EF & EC-110.]

❹ CHECK

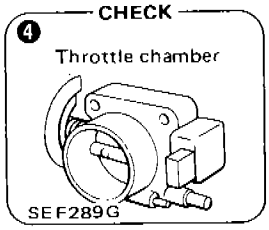


Check throttle chamber ports and valve for clogging.

N.G. ↓

Clean the ports and/or throttle valve.

❺ REMOVE

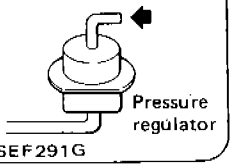

Remove vacuum hose from pressure regulator, and try to start.

Improved →

❻ MEASURE

Fuel pressure

Connect vacuum hose to pressure regulator and measure fuel pressure.


↓

Check idle mixture ratio.
[See page EF & EC-25.]

❼ CHECK

Check A.A.C. valve and/or its circuit
[See page EF & EC-106.]

❽ CHECK

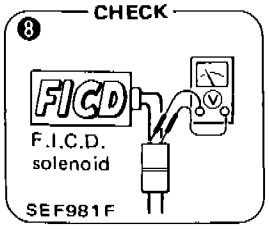

Check terminal voltage of F.I.C.D. solenoid while idling.

↓

Check the part and/or circuit.
[See HA section.]

❾ PERFORM

Self-diagnosis Mode IV

Perform self-diagnosis Mode IV (for idle switch).

N.G. ↓

Check the idle switch circuit.
[See page EF & EC-94.]


❿ PERFORM

Self-diagnosis Mode III

N.G. → Check sensor circuit.
[See page EF & EC-86 (engine temp. sensor), page EF & EC-82 (crank angle sensor), page EF & EC-84 (air flow meter).]

Perform self-diagnosis Mode III (for engine temp. sensor, crank angle sensor and air flow meter).

⓫ CRANK

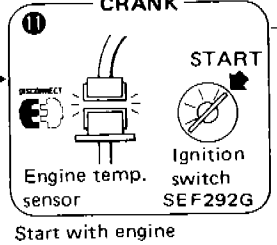

N.G. → Check sensor circuit.
[See page EF & EC-86 (engine temp. sensor), page EF & EC-82 (crank angle sensor), page EF & EC-84 (air flow meter).]

Start with engine temp. sensor connector disconnected.


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 12 **Unstable idling – before warm-up**

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻
SPECIFICATIONS	Mixture ratio		○	○			
	Ignition timing	○					
INTAKE SYSTEM	Air regulator (not open enough)		○				
	A.A.C. valve				○		
CONTROL SYSTEM	Engine temperature sensor					○	○

SERVICE PROCEDURE


❶ CHECK

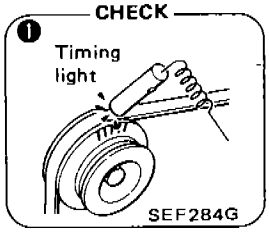

Check ignition timing.

N.G. → Adjust ignition timing. [See page EF & EC-22.]


❷ CHECK

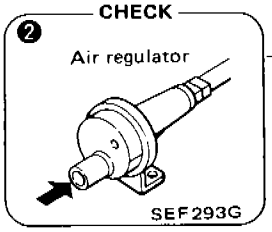

Make sure air regulator stays open before warm-up.

N.G. → Check air regulator and/or its circuit. [See page EF & EC-110.]

❸ APPLY

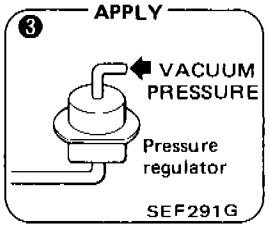


Apply vacuum/pressure to pressure regulator after disconnecting vacuum hose, and check idling.

Improved → Check idle mixture ratio. [See page EF & EC-25.]

❹ CHECK

Check A.A.C. valve and/or its circuit. [See page EF & EC-106.]


❺ PERFORM

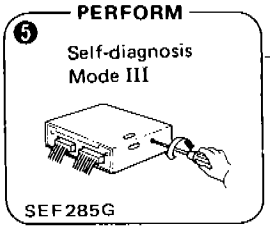

Perform self-diagnosis Mode III (for engine temp. sensor).

N.G. → Check sensor circuit. [See page EF & EC-86.]

❻ RUN

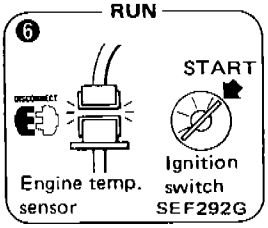

Start and run engine with engine temp. sensor connector disconnected.

N.G. → Check sensor circuit. [See page EF & EC-86.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 13 Unstable idling – after warm-up

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼	❽	❾
SPECIFICATIONS	Mixture ratio	○	○	○	○					
	Ignition sparks					○	○			
	Ignition timing							○		
	Compression pressure								○	
FUEL SYSTEM	Fuel line (clogged)									
	Canister (air leaks)			○						
	Pressure regulator control solenoid				○					
IGNITION SYSTEM	Power transistor					○	○			
	Ignition coil					○	○			
INTAKE SYSTEM	Blow-by hose (leaks)	○								
	Air duct (leaks)		○							
CONTROL SYSTEM	Idle switch									○

SERVICE PROCEDURE

❶ CHECK

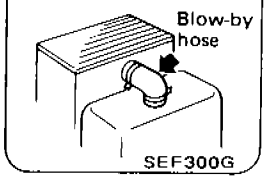


Check blow-by hose for leaks.

↓ N.G.

Repair/replace the hose.

❷ CHECK

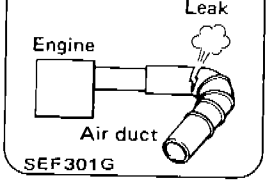


Check intake system for air leaks.

↓ N.G.

Repair/replace the part.

❸ CHECK

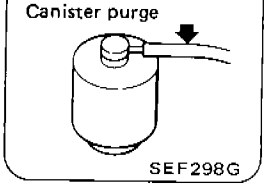


Check purge line for leaks.

↓ N.G.

Repair/replace the hose.

❹ CHECK

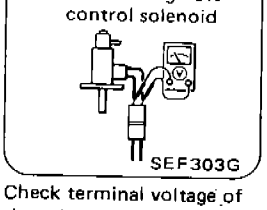


Check terminal voltage of the solenoid while idling.

↓ N.G.

Check the solenoid circuit.
[See page EF & EC-114.]

❺ CHECK

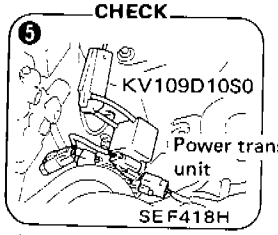


Check flashes of timing light for weakness.

↓ N.G.


Check ignition signal circuit.
[See page EF & EC-90.]

❻ CHECK

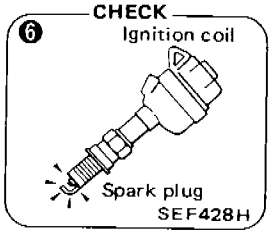

Remove spark plugs and check their ignition sparks.

❼ CHECK

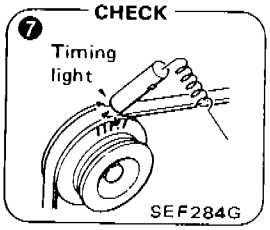


Check ignition timing.

↓ N.G.

Adjust ignition timing.
[See page EF & EC-22.]

❽ MEASURE

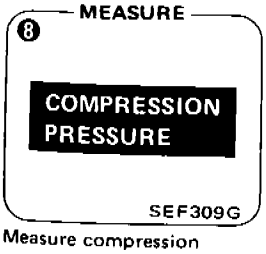


Measure compression pressure.

↓ N.G.

Check cylinder head and gasket.
[See EM section.]

❾ PERFORM

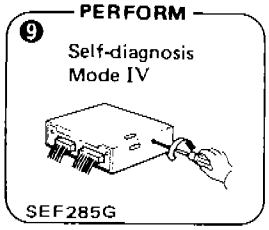

Perform self-diagnosis Mode IV (for idle switch).

↓ N.G.

Check the idle switch circuit.
[See page EF & EC-94.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 14 Poor driveability – stumble (while accelerating)

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼	❽
SPECIFICATIONS	Mixture ratio			○		○	○		○
	Fuel pressure					○	○		
FUEL SYSTEM	Fuel filter (clogged)						○		
	Fuel line (clogged)						○		
	Injectors (clogged)						○		
IGNITION SYSTEM	Power transistor	○	○						
	Ignition coil	○	○						
	Spark plugs (ignition leaks, improper gap)		○						
INTAKE SYSTEM	Air duct (leaks)			○					
CONTROL SYSTEM	Crank angle sensor	○						○	
	Air flow meter							○	
	Engine temperature sensor	○						○	
	Exhaust gas sensor								○
	Idle switch (remaining OFF)				○				
OTHERS	Fuel (poor quality)								

SERVICE PROCEDURE


❶ CHECK

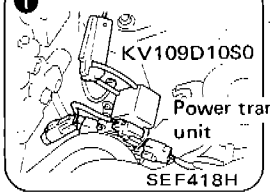

N.G. → Check ignition signal circuit. [See pgae EF & EC-90.]


Check flashes of timing light for weakness.

❷ CHECK Ignition coil

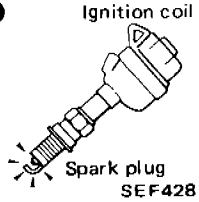

Remove spark plugs and check their ignition sparks.


❸ CHECK

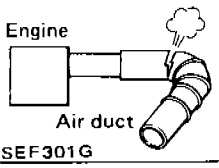

N.G. → Repair/replace the part.

Check intake system for air leaks.


❹ PERFORM Self-diagnosis Mode IV



N.G. → Check the idle switch circuit. [See page EF & EC-94.]

Perform self-diagnosis Mode IV (for idle switch).


❺ REMOVE Pressure regulator

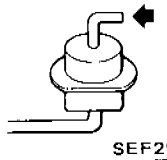

Improved →

Remove vacuum hose from pressure regulator, and try to drive.


❻ MEASURE Fuel pressure gauge

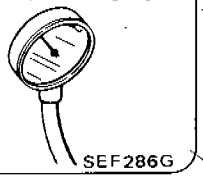

Connect vacuum hose to pressure regulator and measure fuel pressure while driving.

→ Check idle mixture ratio. [See page EF & EC-25.]


❼ PERFORM Self-diagnosis Mode III, Self-diagnosis Mode V

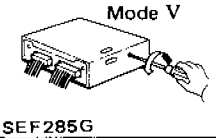

N.G. → Check the malfunctioning parts and/or circuits. [See page EF & EC-84 (air flow meter), page EF & EC-82 (crank angle sensor), page EF & EC-86 (engine temp. sensor).]

Perform self-diagnosis Mode III and V (for air flow meter, crank angle sensor and engine temp. sensor).

❽ DISCONNECT

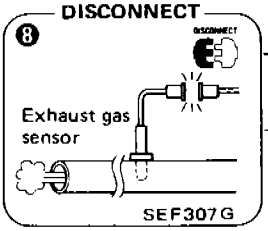

Improved → Replace the sensor.

No change → Check idle mixture ratio. [See page EF & EC-25.]

Disconnect exhaust gas sensor connector, and try to drive.


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 15 Poor driveability — surge (while cruising)

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼
SPECIFICATIONS	Mixture ratio (too lean)	○		○	○			○
	Fuel pressure (low)			○	○			
	Ignition timing		○					
IGNITION SYSTEM	(missing)						○	
INTAKE SYSTEM	Air duct (leaks)	○						
	Throttle chamber (air leaks)	○						
	Intake manifold (gasket) (air leaks)	○						
CONTROL SYSTEM	Crank angle sensor						○	
	Air flow meter						○	
	Exhaust gas sensor							○
	Idle switch					○		

SERVICE PROCEDURE

❶ **CHECK**

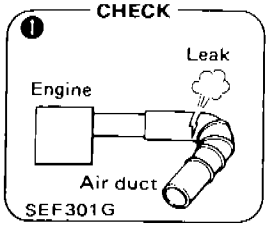


Check intake system for air leaks.

↓ N.G.

Repair/replace the part.

❷ **CHECK**

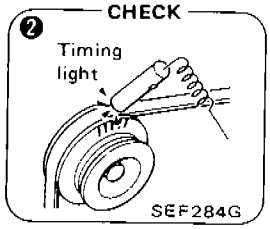


Check ignition timing.

↓ N.G.

Adjust ignition timing. [See page EF & EC-22.]

❸ **REMOVE**

Pressure regulator

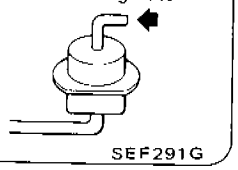


Remove vacuum hose from pressure regulator, and try to drive.

Improved →

❹ **MEASURE**

Fuel pressure gauge

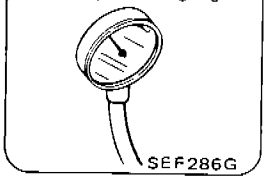


Connect vacuum hose to pressure regulator and measure fuel pressure while driving.

→ Check idle mixture ratio. [See page EF & EC-25.]

❺ **PERFORM**

Self-diagnosis Mode IV

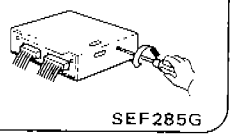

Perform self-diagnosis Mode IV (for idle switch).


↓ N.G.

Check the idle switch circuit. [See page EF & EC-94.]

❻ **PERFORM**

Self-diagnosis Mode III

Self-diagnosis Mode V

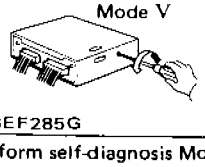


Perform self-diagnosis Mode III and V (for crank angle sensor, air flow meter and ignition signal).

N.G. →

Check the malfunctioning parts and/or circuits. [See page EF & EC-82 (crank angle sensor), page EF & EC-84 (air flow meter), page EF & EC-90 (ignition signal).]

❼ **DISCONNECT**

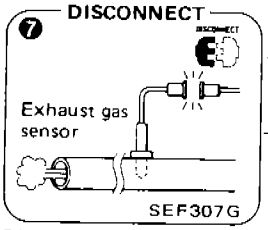

Disconnect exhaust gas sensor connector, and try to drive.

Improved → Replace the sensor.

No change → Check idle mixture ratio. [See page EF & EC-25.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 16 Poor driveability — lack of power

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼	❽	❾
SPECIFICATIONS	Fuel pressure						○	○		
	Ignition timing		○							
	Compression pressure (too low)					○				
FUEL SYSTEM	Fuel pump (low fuel output)							○		
	Fuel filter (clogged)							○		
	Fuel line (clogged)							○		
	Injectors (clogged)							○		
IGNITION SYSTEM	Spark plugs (improper gap)				○					
INTAKE SYSTEM	Air cleaner element (clogged)	○								
	Throttle chamber (clogged)			○						
	Throttle valve (not open enough)			○						
CONTROL SYSTEM	Air flow meter								○	
	Exhaust gas sensor									○

SERVICE PROCEDURE

❶ CHECK — AIR CLEANER ELEMENT

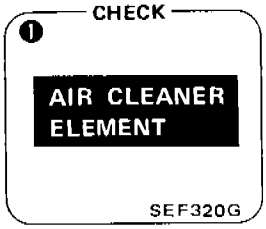


Check air cleaner element for clogging.

N.G. ↓

Replace the part.

❷ CHECK — Timing light

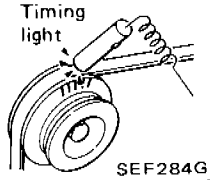


Check ignition timing with a timing light.

N.G. ↓

Adjust ignition timing.
[See page EF & EC-22.]

❸ CHECK — Throttle chamber

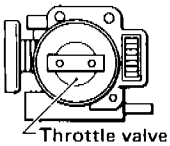


Check throttle valve for rough movement.

N.G. ↓


Repair/replace the part.

❹ CHECK — Ignition coil

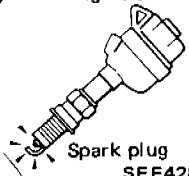

Remove spark plugs and check their ignition sparks.


❺ MEASURE — COMPRESSION PRESSURE

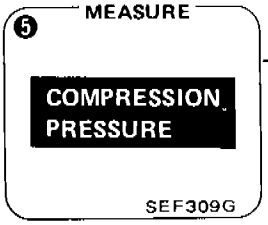

Measure compression pressure.

→ Check cylinder head and gasket.
[See EM section.]

❻ REMOVE — Pressure regulator

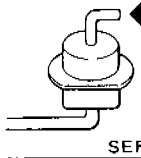

Remove vacuum hose from pressure regulator, and try to drive.

Improved →

❼ MEASURE — Fuel pressure gauge




Connect vacuum hose to pressure regulator and measure fuel pressure while driving.

↓

Check idle mixture ratio.
[See page EF & EC-25.]

❽ PERFORM — Self-diagnosis Mode III, Self-diagnosis Mode V

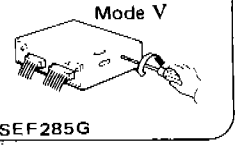


Perform self-diagnosis Mode III and V (for air flow meter).

N.G. ↓

Check the malfunctioning parts and/or circuit.
[See page EF & EC-84.]

❾ DISCONNECT — Exhaust gas sensor

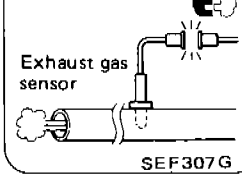

Disconnect exhaust gas sensor connector, and try to drive.

No change ↓ / Improved ↓

Replace the sensor.

Check idle mixture ratio.
[See page EF & EC-25.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 17 Poor driveability — detonation

POSSIBLE CAUSES		❶	❷	❸	❹	❺
SPECIFICATIONS	Mixture ratio (too lean)			○	○	
	Fuel pressure (low)			○		
	Ignition timing (too advanced)		○			
FUEL SYSTEM	Fuel filter (clogged)				○	
	Fuel line (clogged)				○	
	Injectors (clogged)				○	
CONTROL SYSTEM	Crank angle sensor (improper 1°-signals)					○
	Air flow meter					○
	Engine temperature sensor					○
OTHERS	Engine coolant temperature (too high)	○				
	Fuel (low octane rating, poor quality)					

SERVICE PROCEDURE


❶ **CHECK** Engine coolant temperature

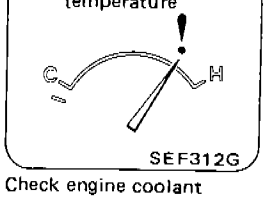

Check engine coolant temperature.

Too high → Check cooling system. [See LC section.]


❷ **CHECK** Timing light

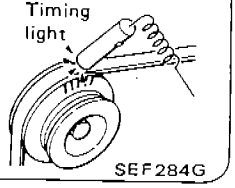

Check ignition timing.

N.G. → Adjust ignition timing. [See page EF & EC-22.]


❸ **REMOVE** Pressure regulator

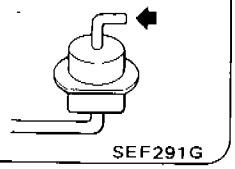

Remove vacuum hose from pressure regulator, and try to drive.


Improved →

❹ **MEASURE** Fuel pressure gauge

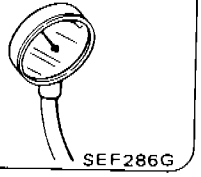

Connect vacuum hose to pressure regulator, and measure fuel pressure while driving.

PERFORM ❺ Self-diagnosis Mode III, Self-diagnosis Mode V

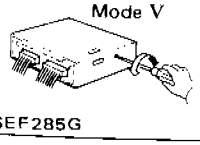

Perform self-diagnosis Mode III and V (for crank angle sensor, air flow meter and engine temp. sensor).


N.G. → Check the malfunctioning parts. [See page EF & EC-82 (crank angle sensor), page EF & EC-84 (air flow meter), page EF & EC-86 (engine temp. sensor).]


Diagnostic Table (Cont'd)


SYMPTOM & CONDITION 18 **Engine stall — during start-up**


POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼	❽
SPECIFICATIONS	Mixture ratio (too rich/too lean)						○	○	○
	Ignition sparks (weak)			○					
	Ignition timing	○							
	Compression pressure (too low)					○			
FUEL SYSTEM	Canister (too much evaporation to intake)						○		
IGNITION SYSTEM	Spark plugs (wet with fuel, improper gap)				○				
INTAKE SYSTEM	Throttle valve (not open enough)		○						
CONTROL SYSTEM	Exhaust gas sensor								○

SERVICE PROCEDURE

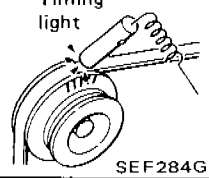
❶ CHECK
Timing light

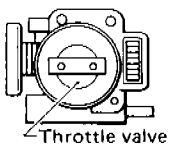SEF284G
N.G. → Adjust ignition timing. [See page EF & EC-22.]
Check ignition timing.

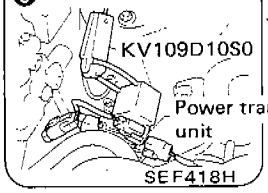
❷ CHECK
Throttle chamber

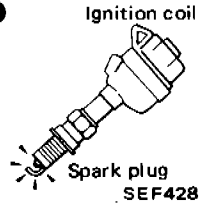Throttle valve
SEF290G
N.G. → Repair/replace the part.
Check throttle valve for rough movement.


❸ CHECK

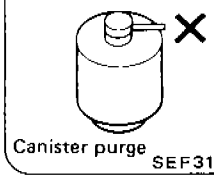KV109D10S0
Power transistor unit
SEF418H
N.G. → Check ignition signal circuit. [See page EF & EC-90.]
Check flashes of timing light for weakness.

❹ CHECK
Ignition coil

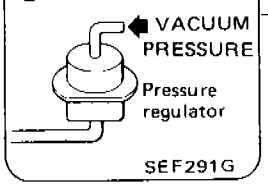Spark plug
SEF428H
Remove spark plugs and check their ignition sparks.

❺ MEASURE
COMPRESSION PRESSURE
SEF309G
Measure compression pressure.
↓
Check cylinder head and gasket. [See EM section.]

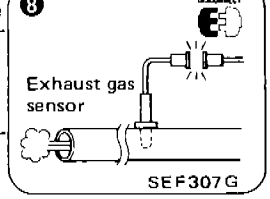❻ TRY

Canister purge
SEF314G
Improved → Replace the canister and/or the hoses.
No change
Shut evaporated fuel to intake valve and try to drive.

❼ APPLY

VACUUM PRESSURE
Pressure regulator
SEF291G
Improved → Check idle mixture ratio. [See page EF & EC-25.]
Apply vacuum/pressure to pressure regulator after disconnecting vacuum hose, and try to drive.

❽ DISCONNECT

Exhaust gas sensor
SEF307G
No change → Replace the sensor.
Improved
Disconnect exhaust gas sensor connector and try to drive.


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 19 Engine stall – while idling

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼	❽	❾
SPECIFICATIONS	Mixture ratio (too rich/too lean)	○	○							
	Fuel pressure (low)	○	○							
	Ignition sparks (weak, missing)				○					
	Idle speed (low)			○						
FUEL SYSTEM	Fuel line (clogged)		○							
IGNITION SYSTEM	Spark plugs (wet with fuel, improper gap)					○	○			
INTAKE SYSTEM	A.A.C. valve			○				○		
	F.I.C.D. solenoid (improper operation)			○					○	
CONTROL SYSTEM	Idle switch (remaining OFF)									○
	Neutral switch (remaining OFF)			○						

SERVICE PROCEDURE


❶ REMOVE
Pressure regulator

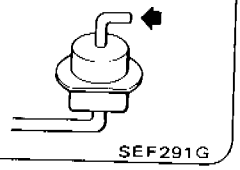

Remove vacuum hose from pressure regulator, and check idling.

Improved →

❷ MEASURE
Fuel pressure gauge

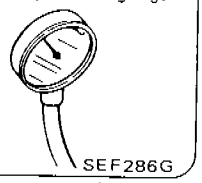

Connect vacuum hose to pressure regulator and measure fuel pressure.


→ Check idle mixture ratio.
[See page EF & EC-25.]

❸ MEASURE
Tachometer




Measure idle speed.
↓ N.G.
Adjust idle speed.
[See page EF & EC-25.]

❹ CHECK

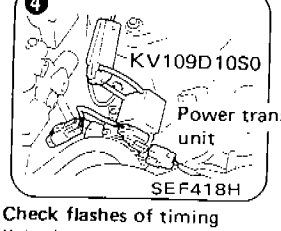

Check flashes of timing light for weakness.
↓ N.G.
Check ignition signal circuit.
[See page EF & EC-90.]


❺ CHECK

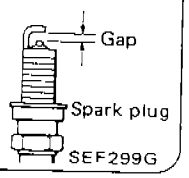

Remove spark plugs and check their gaps and tips.
(For conventional type plug)

and/or


❻ CHECK
Spark plug

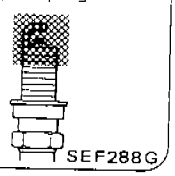

Check spark plugs for being foul or wet with fuel.


❼ CHECK
Check A.A.C. valve and/or its circuit.
[See page EF & EC-106.]

❽ CHECK

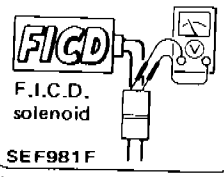

Check terminal voltage of F.I.C.D. solenoid.
↓ N.G.
Check the part and/or circuit.
[See HA section.]

❾ PERFORM
Self-diagnosis Mode IV

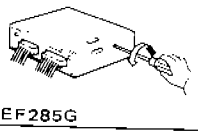

Perform self-diagnosis Mode IV (for idle switch).

N.G. → Check the idle switch circuit.
[See page EF & EC-94.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 20 **Engine stall — while accelerating**

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻
SPECIFICATIONS	Mixture ratio				○	○	
	Ignition sparks (weak, missing)	○	○				
	Compression pressure (low)			○			
CONTROL SYSTEM	Crank angle sensor	○					○
	Air flow meter						○
	Exhaust gas sensor				○	○	

SERVICE PROCEDURE


❶ **CHECK**

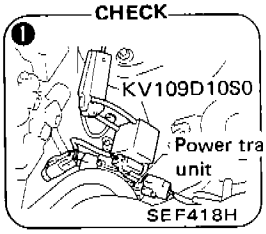

Check flashes of timing light for weakness during acceleration.

N.G. → Check ignition signal circuit. [See page EF & EC-90.]

❷ **CHECK** Ignition coil

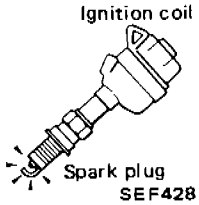

Remove spark plugs and check their ignition sparks.


❸ **MEASURE**



Measure compression pressure.

N.G. → Check cylinder head and gasket. [See EM section.]


❹ **CHECK** Self-diagnosis Mode II

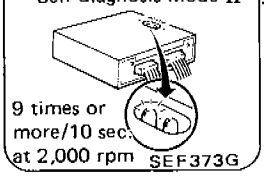

Check mixture ratio by flashes of inspection lamps.

N.G. →

❺ **DISCONNECT**

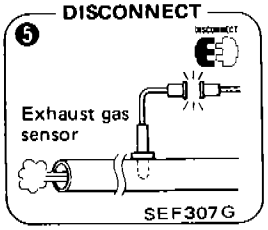


Disconnect exhaust gas sensor connector, and try to drive.

Improved → Replace the sensor.

No change → Check idle mixture ratio. [See page EF & EC-25.]

❻ **PERFORM**

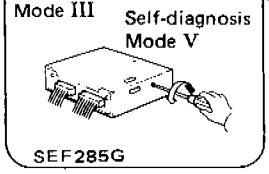

Perform self-diagnosis Mode III and V (for crank angle sensor and air flow meter).

N.G. → Check the malfunctioning parts and/or circuits. [See page EF & EC-82 (crank angle sensor), page EF & EC-84 (air flow meter).]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 21 Engine stall — while cruising

POSSIBLE CAUSES		❶	❷	❸	❹	❺
SPECIFICATIONS	Mixture ratio			○	○	
	Ignition sparks (weak, missing)	○	○			
CONTROL SYSTEM	Crank angle sensor					○
	Air flow meter					○
	Exhaust gas sensor			○	○	

SERVICE PROCEDURE


❶ CHECK

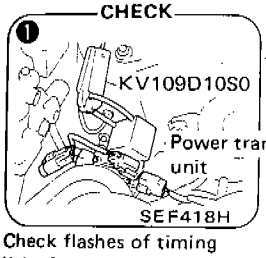

Check flashes of timing light for weakness at constant engine rev. (1,000 to 2,000 rpm).


N.G. → Check ignition signal circuit. [See page EF & EC-90.]

❷ CHECK Ignition coil

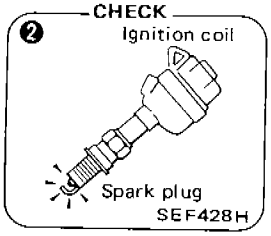

Remove spark plugs and check their ignition sparks.


❸ CHECK Self-diagnosis Mode II

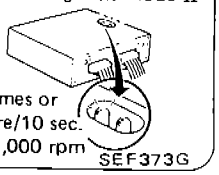

Check mixture ratio by flashes of inspection lamps.

N.G. →

❹ DISCONNECT

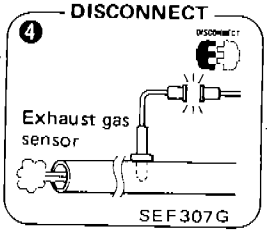


Disconnect exhaust gas sensor connector, and try to drive.

Improved → Replace the sensor.

No change → Check idle mixture ratio. [See page EF & EC-25.]

❺ PERFORM Self-diagnosis Mode III, Self-diagnosis Move V

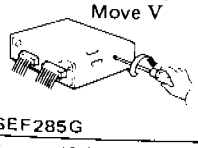

Perform self-diagnosis Mode III and V (for air flow meter and crank angle sensor).

N.G. → Check the circuits. [See page EF & EC-82 (crank angle sensor), page EF & EC-84 (air flow meter).]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 22 | Engine stall – while decelerating/just after stopping

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻
SPECIFICATIONS	Mixture ratio					○	○
	Ignition sparks (missing)	○					
	Idle speed (too low)			○			
IGNITION SYSTEM	(missing)	○	○				
INTAKE SYSTEM	A.A.C. valve			○	○		
CONTROL SYSTEM	Exhaust gas sensor					○	○
	Crank angle sensor		○				
	Idle switch (remaining OFF)			○			

SERVICE PROCEDURE

❶ CHECK

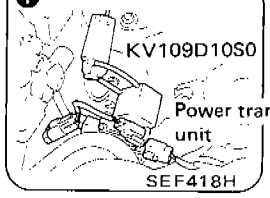


Check flashes of timing light while decreasing engine speed.

N.G. →

❷ PERFORM

Self-diagnosis Mode V



Perform self-diagnosis Mode V (for ignition signal and crank angle sensor).

N.G. → Check the malfunctioning parts and/or circuits. [See page EF & EC-90 (ignition siglal), page EF & EC-82 (crank angle sensor).]

❸ MEASURE

Tachometer



Measure idle speed.


N.G. → Adjust idle speed. [See page EF & EC-25.]

❹ CHECK

Check A.A.C. valve and/or its circuit. [See page EF & EC-106.]

❺ CHECK


Self-diagnosis Mode II

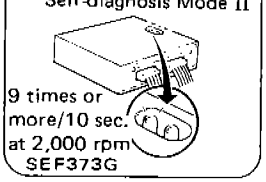

Check mixture ratio by flashes of inspection lamps.

N.G. →

❻ DISCONNECT

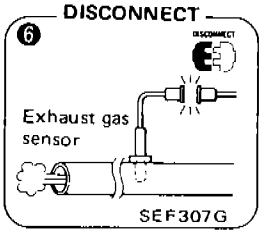

Disconnect exhaust gas sensor connector, and try to drive.

Improved → Replace the sensor.

No change → Check idle mixture ratio. [See page EF & EC-25.]

Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 23 Engine stall – while loading

POSSIBLE CAUSES		❶	❷	❸	❹	❺
SPECIFICATIONS	Ignition timing		○			
	Idle speed (too low)	○				
INTAKE SYSTEM	A.A.C. valve	○		○		
	F.I.C.D. solenoid (remaining OFF)	○			○	
CONTROL SYSTEM	Idle switch (remaining OFF)	○				○

SERVICE PROCEDURE

❶ MEASURE

Tachometer




SEF316G

Measure idle speed.

N.G. → Adjust idle speed. [See page EF & EC-25.]

❷ CHECK

Timing light

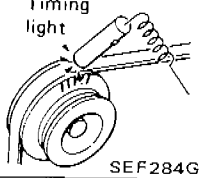

SEF284G


Check ignition timing.

N.G. → Adjust ignition timing. [See page EF & EC-22.]

❸ CHECK

Check A.A.C. valve and/or its circuit. [See page EF & EC-106.]

❹ CHECK

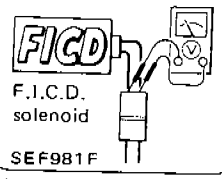

F.I.C.D. solenoid


SEF981F

Check terminal voltage of F.I.C.D. solenoid.

→ Check the part and/or circuit. [See HA section.]

❺ PERFORM

Self-diagnosis Mode IV



SEF285G

Perform self-diagnosis Mode IV (for idle switch).

N.G. → Check the idle switch circuit. [See page EF & EC-94.]


Diagnostic Table (Cont'd)

SYMPTOM & CONDITION 24 Backfire — through the intake

POSSIBLE CAUSES		❶	❷	❸	❹	❺	❻	❼
SPECIFICATIONS	Mixture ratio (too lean)	○		○		○	○	
	Ignition timing (too retarded)		○					
FUEL SYSTEM	Injectors (clogged)				○			
INTAKE SYSTEM	Air duct (air leaks)	○						
	Intake manifold (gaskets) (air leaks)	○						
CONTROL SYSTEM	Air flow meter							○
	Exhaust gas sensor					○	○	

SERVICE PROCEDURE


❶ CHECK

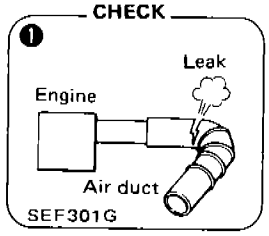

N.G. → Repair/replace the part.

Check intake system for air leaks.


❷ CHECK

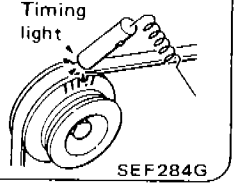

N.G. → Adjust ignition timing. [See page EF & EC-22.]

Check ignition timing.

❸ REMOVE

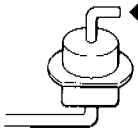


Improved → Check idle mixture ratio. [See page EF & EC-25.]

Remove vacuum hose from pressure regulator, and try to drive.


No change ↓

❹ CLEAN

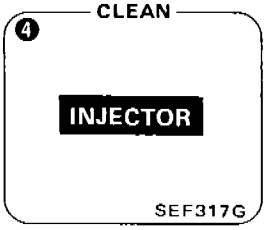

Clean the injector.


❺ PERFORM

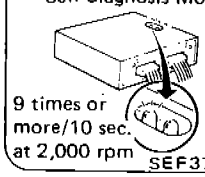

N.G. →

Check mixture ratio by flashes of inspection lamps.

❻ DISCONNECT

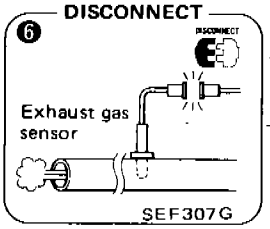


Improved → Replace the sensor.

No change → Check idle mixture ratio. [See page EF & EC-25.]

Disconnect exhaust gas sensor connector, and try to drive.

❼ CHECK

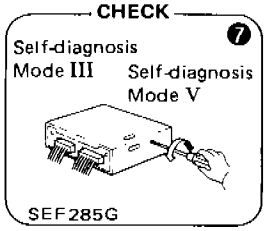

Perform self-diagnosis Mode III and V (for air flow meter).

N.G. ↓

Check the circuits. [See page EF & EC-84 (air flow meter).]

Diagnostic Table (Cont'd)


SYMPTOM & CONDITION 25 **Backfire — through the exhaust**

POSSIBLE CAUSES		❶	❷	❸	❹
SPECIFICATIONS	Mixture ratio (too rich)	○	○		
FUEL SYSTEM	Injectors (fuel leaks)		○		
IGNITION SYSTEM	(missing)				○
INTAKE SYSTEM	Air cleaner element (clogged)	○			
CONTROL SYSTEM	Idle switch (remaining OFF)			○	

SERVICE PROCEDURE

❶ CHECK


AIR CLEANER ELEMENT

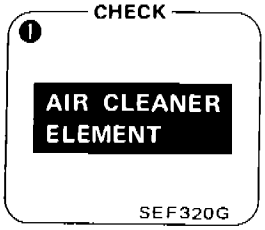

N.G. → Replace the element.

Check air cleaner element for clogging.


❷ APPLY PRESSURE

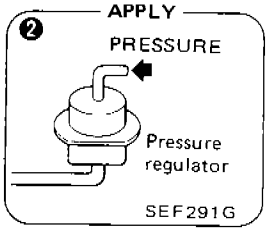

Improved → Check idle mixture ratio. [See page EF & EC-25.]

Apply pressure to pressure regulator after disconnecting vacuum hose, and try to drive.


❸ PERFORM Self-diagnosis Mode IV

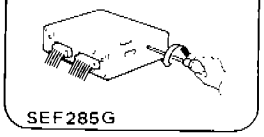

N.G. → Check idle switch and/or its circuit. [See page EF & EC-94.]

Perform self-diagnosis Mode IV (for idle switch).

❹ PERFORM Self-diagnosis Mode V

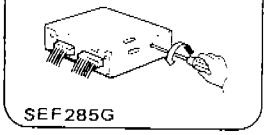

N.G. → Check the malfunctioning part and/or circuit. [See page EF & EC-90 (ignition signal).]


Perform self-diagnosis Mode V (for ignition signal).

Self-diagnosis — Description

The self-diagnosis is useful to diagnose malfunctions in major sensors and actuators of the E.C.C.S. system. There are 5 modes in the self-diagnosis system.

Mode I and Mode II apply only for model with catalyzer.

1. **Mode I — Mixture ratio feedback control monitor A**
   - During closed loop condition:
     The green inspection lamp turns ON when lean condition is detected and goes OFF by rich condition.
   - During open loop condition:
     The green inspection lamp remains ON or OFF.
2. **Mode II — Mixture ratio feedback control monitor B**
   The green inspection lamp function is the same as Mode I.
   - During closed loop condition:
     The red inspection lamp turns ON and OFF simultaneously with the green inspection lamp when the mixture ratio is controlled within the specified value.
   - During open loop condition:
     The red inspection lamp remains ON or OFF.
3. **Mode III — Self-diagnosis**
   This mode is the same as the former self-diagnosis in self-diagnosis mode.
4. **Mode IV — Switches ON/OFF diagnosis**
   During this mode, the inspection lamps monitor the switch ON-OFF condition.
   - Idle switch
   - Ignition switch "START"
   - Vehicle speed sensor
5. **Mode V — Real-time diagnosis**
   The moment the malfunction is detected, the display will be presented immediately. That is, the condition at which the malfunction occurs can be found by observing the inspection lamps during driving test.

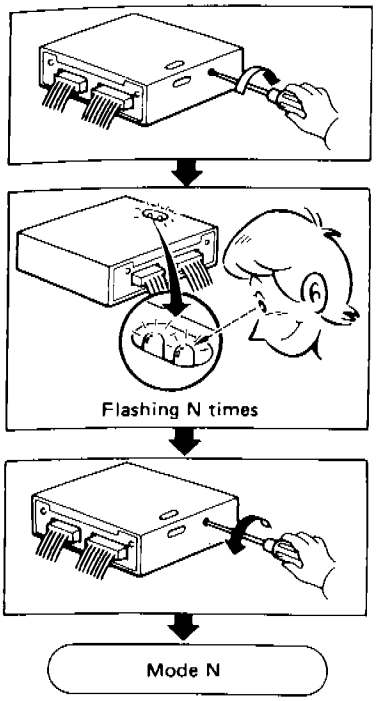


SEF872D

Self-diagnosis — Description (Cont'd)

SWITCHING THE MODES

1. Turn ignition switch "ON".
2. Turn diagnostic mode selector on E.C.U. fully clockwise and wait the inspection lamps flash.
3. Count the number of the flashing time, and after the inspection lamps have flashed the number of the required mode, turn diagnostic mode selector fully counterclockwise immediately.

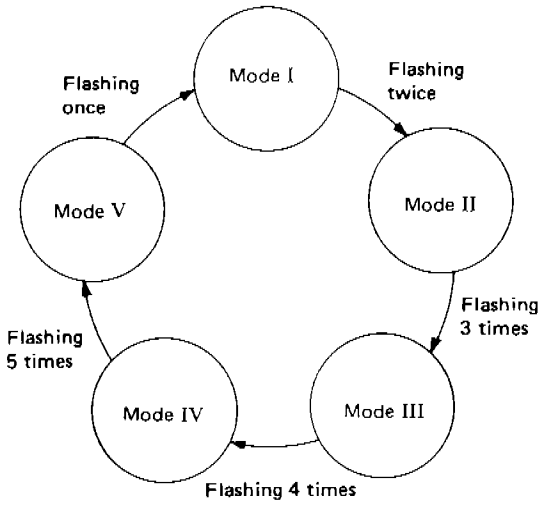

SEF989D

When the ignition switch is turned off during diagnosis, in each mode, and then turned back on again after the power to the E.C.U. has dropped off completely, the diagnosis will automatically return to Mode I.

The stored memory would be lost if:


1. Battery terminal is disconnected.
2. After selecting Mode III, Mode IV is selected.
   However, if the diagnostic mode selector is kept turned fully clockwise, it will continue to change in the order of Mode I → II → III → IV → V → I ... etc., and in this state the stored memory will not be erased.


Self-diagnosis — Description (Cont'd)


CHECKER BOX


The Checker Box is used to control and read the self-diagnosis systems on models equipped with the "check connector" harness. It is a tool which can be used to operate the self-diagnosis system easily.


The Checker Box switch is used to trigger each of the self-diagnosis modes. You can read the red and green light emitting diode (L.E.D.) codes in the Checker Box, so it is not necessary to remove the E.C.U. The Checker Box also has an audible tone for each L.E.D. signal, so you can "hear" the codes instead of looking at the L.E.D. if necessary.

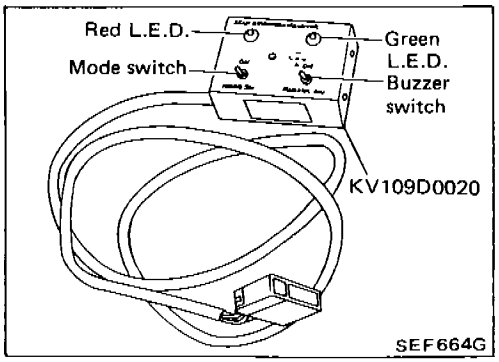

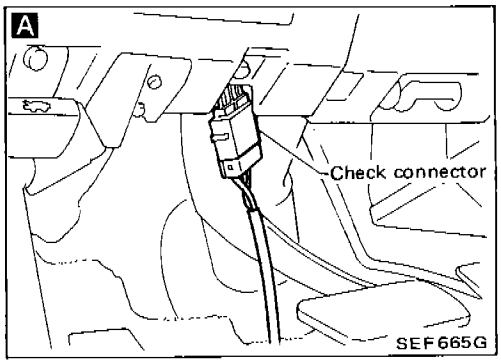

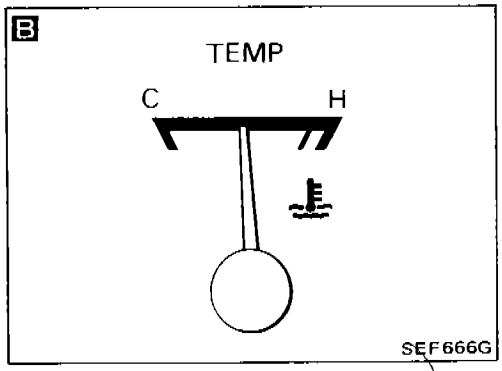

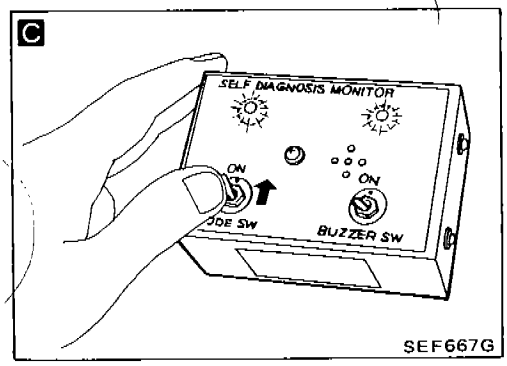

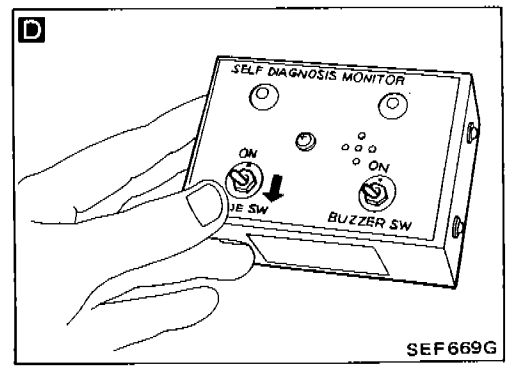

Self-diagnostic procedure

DIAGNOSIS START

A Connect Checker Box harness to the check connector on the vehicle.

- **Connect the Checker Box to the check connector only when the ignition key is in the "OFF" position.**

B Start engine and warm it up to normal operating temperature.

C Push and hold the mode switch in the "ON" position and wait for the inspection lamps to flash.

D Count the number of flashes, and after the lamps have flashed the number for the required mode, immediately release the mode switch.

Perform the required self-diagnostic procedure.

- **You can erase the stored memory by changing from diagnostic mode to Mode IV using the mode switch on the Checker Box.**

Stop engine and disconnect Checker Box harness from the check connector on the vehicle.

- **Disconnect the Checker Box from the check connector only when the ignition key is in the "OFF" position and the inspection lamps turn off.**

DIAGNOSIS END

Service procedures and instructions except for the above are the same as those where Checker Box is not used.

Self-diagnosis — Modes I & II (Model with catalyzer)

In these modes, the control unit provides the mixture ratio monitor presentation and the mixture ratio feedback coefficient monitor presentation.

<table>
<tr><td rowspan="2">Mode</td><td rowspan="2">L.E.D.</td><td rowspan="2">Engine stopped (Ignition switch "ON")</td><td colspan="4">Engine running</td></tr>
<tr><td>Open loop condition</td><td colspan="3">Closed loop condition</td></tr>
<tr><td rowspan="2">Mode I (Monitor A)</td><td>Green</td><td>ON</td><td>*Remains ON or OFF</td><td colspan="3">Blinks</td></tr>
<tr><td>Red</td><td>ON</td><td colspan="4">OFF</td></tr>
<tr><td rowspan="4">Mode II (Monitor B)</td><td>Green</td><td>ON</td><td>*Remains ON or OFF</td><td colspan="3">Blinks</td></tr>
<tr><td rowspan="3">Red</td><td rowspan="3">OFF</td><td rowspan="3">*Remains ON or OFF (synchronous with green L.E.D.)</td><td colspan="3">Compensating mixture ratio</td></tr>
<tr><td>More than 5% rich</td><td>Between 5% lean and 5% rich</td><td>More</td></tr>
<tr><td>OFF</td><td>Synchronized with green L.E.D.</td><td>Remains ON</td></tr>
</table>

*Maintains conditions just before switching to open loop

Modes I & II are not available for non-catalyzer model.

Self-diagnosis — Mode III

The E.C.U. constantly monitors the function of these sensors and actuators, regardless of ignition key position. If a malfunction occurs, the information is stored in the E.C.U. and can be retrieve from the memory by turning on the diagnostic mode selector, located on the side of the E.C.U. When activated, the malfunction is indicated by flashing a red and a green L.E.D. (Light Emitting Diode), also located on the E.C.U. Since all the self-diagnostic results are stored in the E.C.U.'s memory even intermittent malfunctions can be diagnosed.

A malfunctioning part's group is indicated by the number of both the red and the green L.E.D.s flashing. First, the red L.E.D. flashes and the green flashes follow. The red L.E.D. refers to the number of tens while the green one refers to the number of units. For example, when the red L.E.D. flashes once and then the green one flashes twice, this means the number "12" showing the air flow meter signal is malfunctioning. In this way, all the problems are classified by the code numbers.

- **When engine fails to start, crank engine more than two seconds before starting self-diagnosis.**
- **Before starting self-diagnosis, do not erase stored memory. If doing so, self-diagnosis function for intermittent malfunctions would be lost.**

The stored memory would be lost if:

1. **Battery terminal is disconnected.**
2. **After selecting Mode III, Mode IV is selected.**

DISPLAY CODE TABLE


Code No.	Detected items
11	Crank angle sensor circuit
12	Air flow meter circuit
13	Engine temperature sensor circuit
21	Ignition signal circuit
34	Detonation sensor circuit
43	Throttle sensor circuit
55	No malfunctioning in the above circuit

Self-diagnosis — Mode III (Cont'd)

RETENTION OF DIAGNOSTIC RESULTS

The diagnostic result is retained in E.C.U. memory until the starter is operated fifty times after a diagnostic item is judged to be malfunctioning. The diagnostic result will then be cancelled automatically. If a diagnostic item which has been judged to be malfunctioning and stored in memory is again judged to be malfunctioning before the starter is operated fifty times, the second result will replace the previous one. It will be stored in E.C.U. memory until the starter is operated fifty times more.


RETENTION TERM CHART (Example)

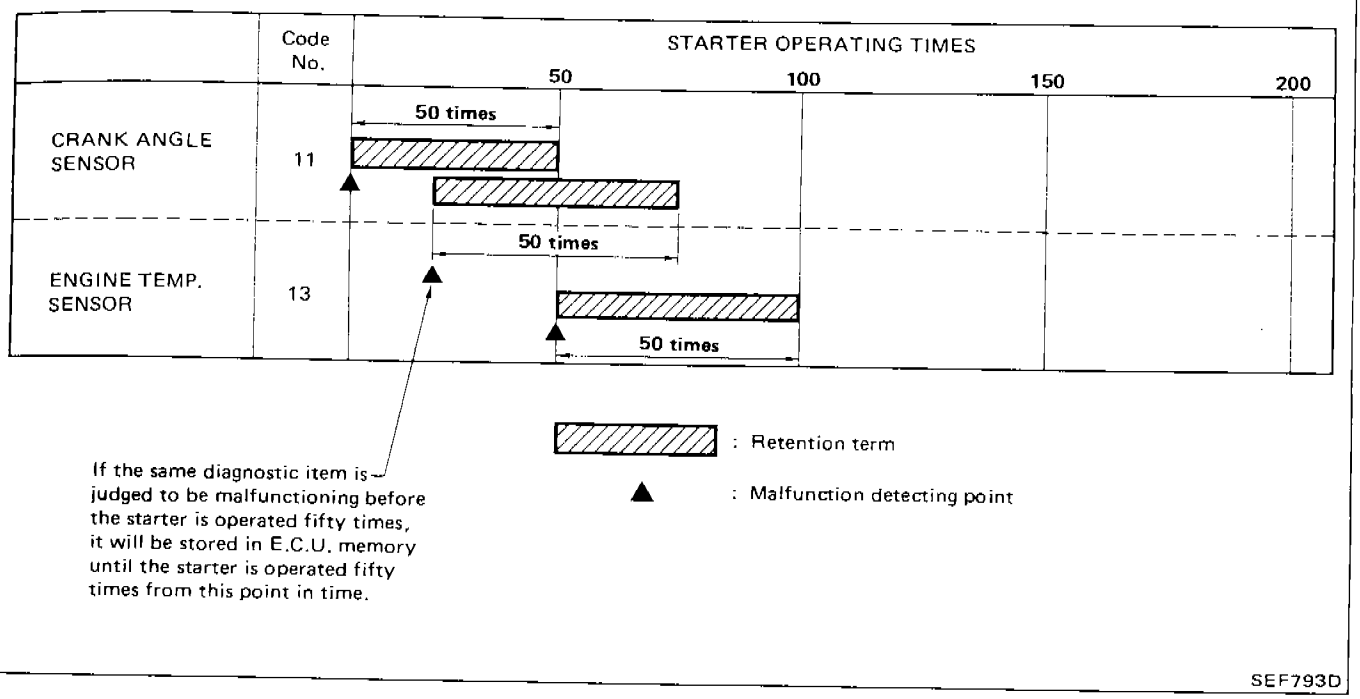

SEF793D

Self-diagnosis — Mode III (Cont'd)

SELF-DIAGNOSTIC PROCEDURE

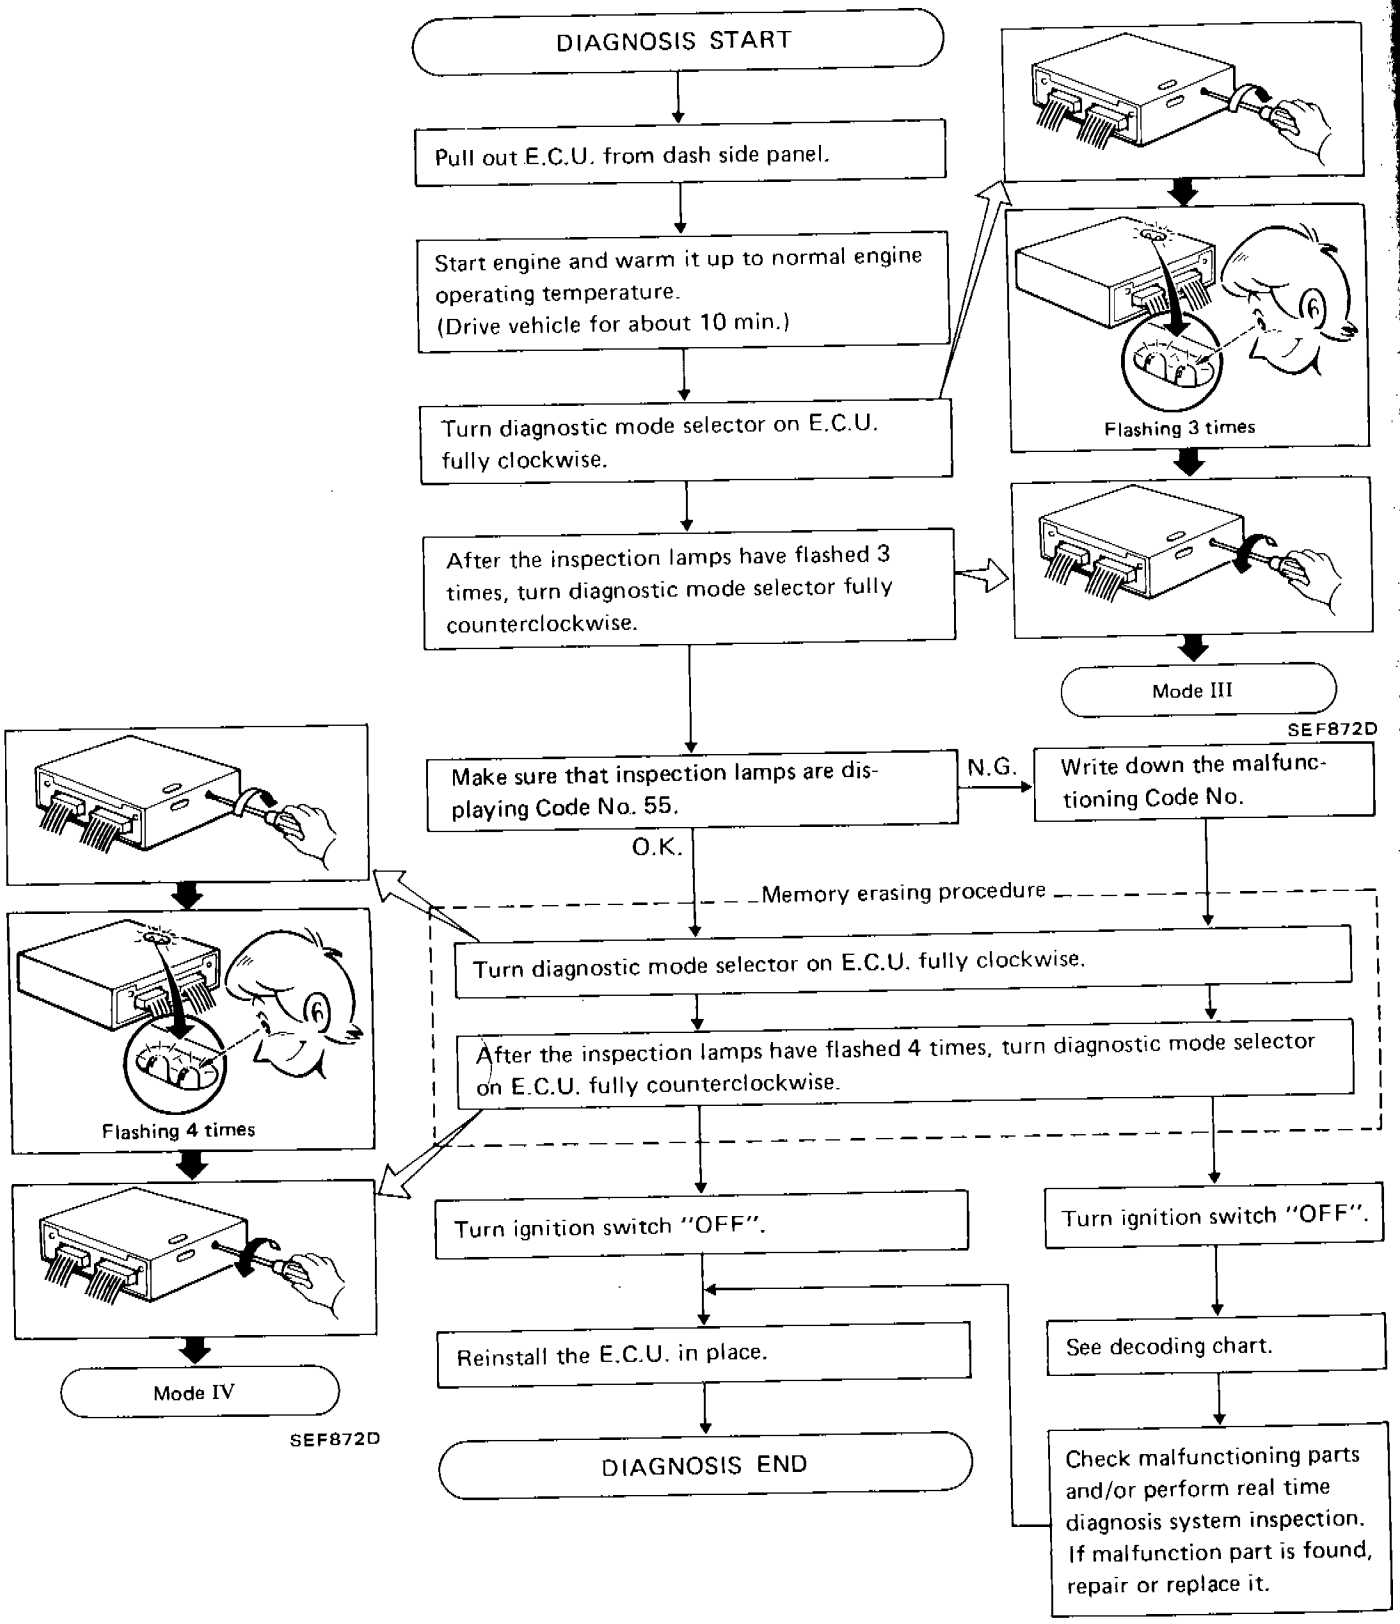

CAUTION:
During displaying Code No. in self-diagnosis mode (Mode III), if the other diagnostic mode should be done, make sure to write down the malfunctioning Code No. before turning diagnostic mode selector on E.C.U. fully clockwise, or select the diagnostic mode after turning switch "OFF". Otherwise self-diagnosis information stored in E.C.U. memory until now would be lost.


Self-diagnosis — Mode III (Cont'd)

DECODING CHART

Display code	Malfunctioning circuit or parts	Control unit shows a malfunction signal when the following conditions are detected.

CRANK ANGLE SENSOR

Code No. 11

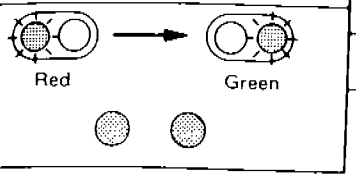

Crank angle sensor circuit


- Either 1° or 180° signal is not entered for the first few seconds during engine cranking.
- Either 1° or 180° signal is not input often enough while the engine speed is higher than the specified rpm.

SYSTEM INSPECTION
See page EF & EC-82.

SEF042F

AIR FLOW METER

Code No. 12

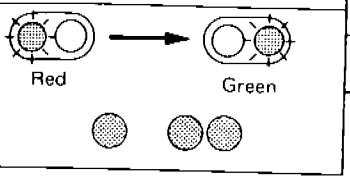

Air flow meter circuit


- The air flow meter circuit is open or shorted.
  (An abnormally high or low voltage is entered.)

SYSTEM INSPECTION
See page EF & EC-84.

SEF043F

ENGINE TEMPERATURE SENSOR

Code No. 13

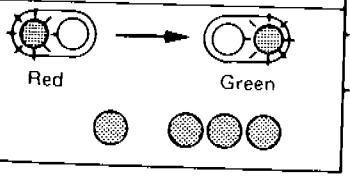

Engine temperature sensor circuit


- The engine temperature sensor circuit is open or shorted.
  (An abnormally high or low output voltage is entered.)

SYSTEM INSPECTION
See page EF & EC-86.

SEF044F

IGNITION SIGNAL

Code No. 21

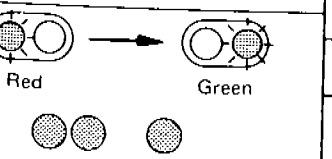

Ignition signal circuit

- The circuit between power transistor unit and E.C.U. is opened.

SYSTEM INSPECTION
See page EF & EC-90.


SEF045F

Self-diagnosis — Mode III (Cont'd)

Display code	Malfunctioning circuit or parts	Control unit shows a malfunction signal when the following conditions are detected.

DETONATION SENSOR

Code No. 34

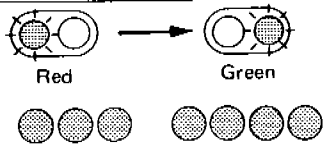

Detonation sensor circuit


- The detonation sensor circuit is open or shorted.

SYSTEM INSPECTION
See page EF & EC-90.

SEF132F

THROTTLE SENSOR

Code No. 43

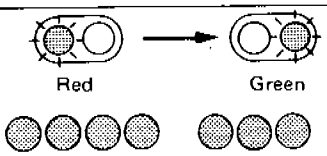


Throttle sensor circuit

- Throttle sensor circuit is open or short.
  (Output voltage is too high or too low.)

SYSTEM INSPECTION
See page EF & EC-98.

SEF079G

Code No. 55

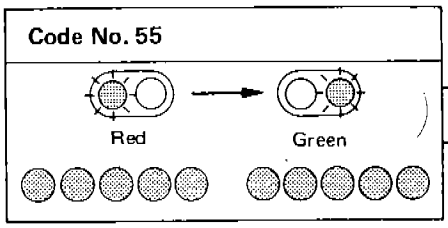

E.C.C.S. normal operation.

SEF984F

Self-diagnosis — Mode IV

In switches ON/OFF diagnosis system, ON/OFF operation of the following switches can be detected continuously.


- Idle switch
- Ignition switch "START"
- Vehicle speed sensor

(1) Idle switch & Ignition switch "START"
The switches ON/OFF status at the point when mode IV is selected is stored in E.C.U. memory. When either switch is turned from "ON" to "OFF" or "OFF" to "ON", the red L.E.D. on E.C.U. alternately comes on and goes off each time switching is detected.

(2) Vehicle speed sensor
The switches ON/OFF status at the point when mode IV is selected is stored in E.C.U. memory. When vehicle speed is 20 km/h (12 MPH) or slower, the green L.E.D. on E.C.U. is off. When vehicle speed exceeds 20 km/h (12 MPH), the green L.E.D. on E.C.U. comes "ON".

Self-diagnosis — Mode IV (Cont'd)

SELF-DIAGNOSTIC PROCEDURE

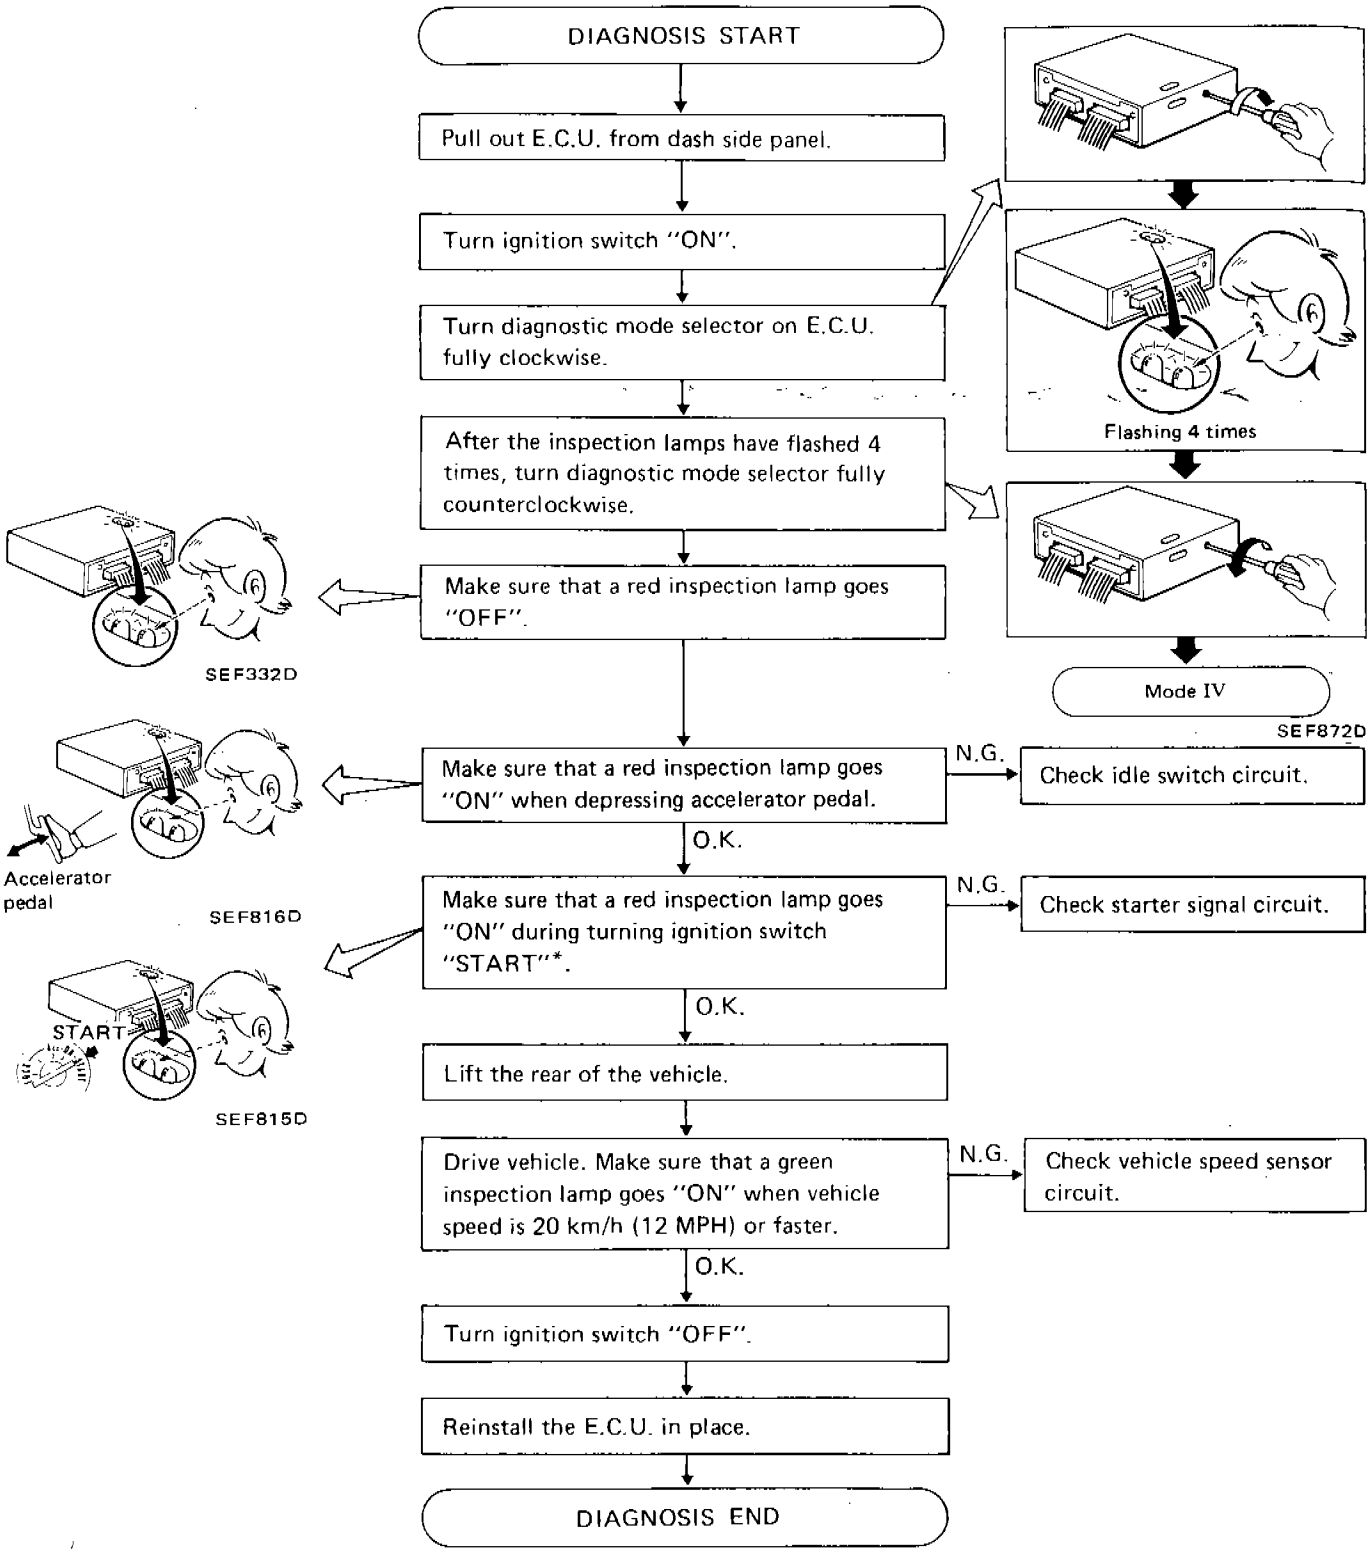

CAUTION:

- ***If ignition switch is turned to "START" an even number of times, a red inspection lamp goes "OFF" when depressing accelerator pedal.**
- **For safety, do not turn front wheel at higher speed than required.**


Self-diagnosis — Mode V

In real-time diagnosis, if any of the following items are judged to be faulty, a malfunction is indicated immediately.

- Crank angle sensor (180° signal & 1° signal)
- Ignition signal
- Air flow meter output signal

Consequently, this diagnosis is a very effective measure to diagnose whether the above systems cause the malfunction or not, during driving test. Compared with self-diagnosis, real-time diagnosis is very sensitive, and can detect malfunctioning conditions in a moment. Further, items regarded to be malfunctions in this diagnosis are not stored in E.C.U. memory.

SELF-DIAGNOSITC PROCEDURE

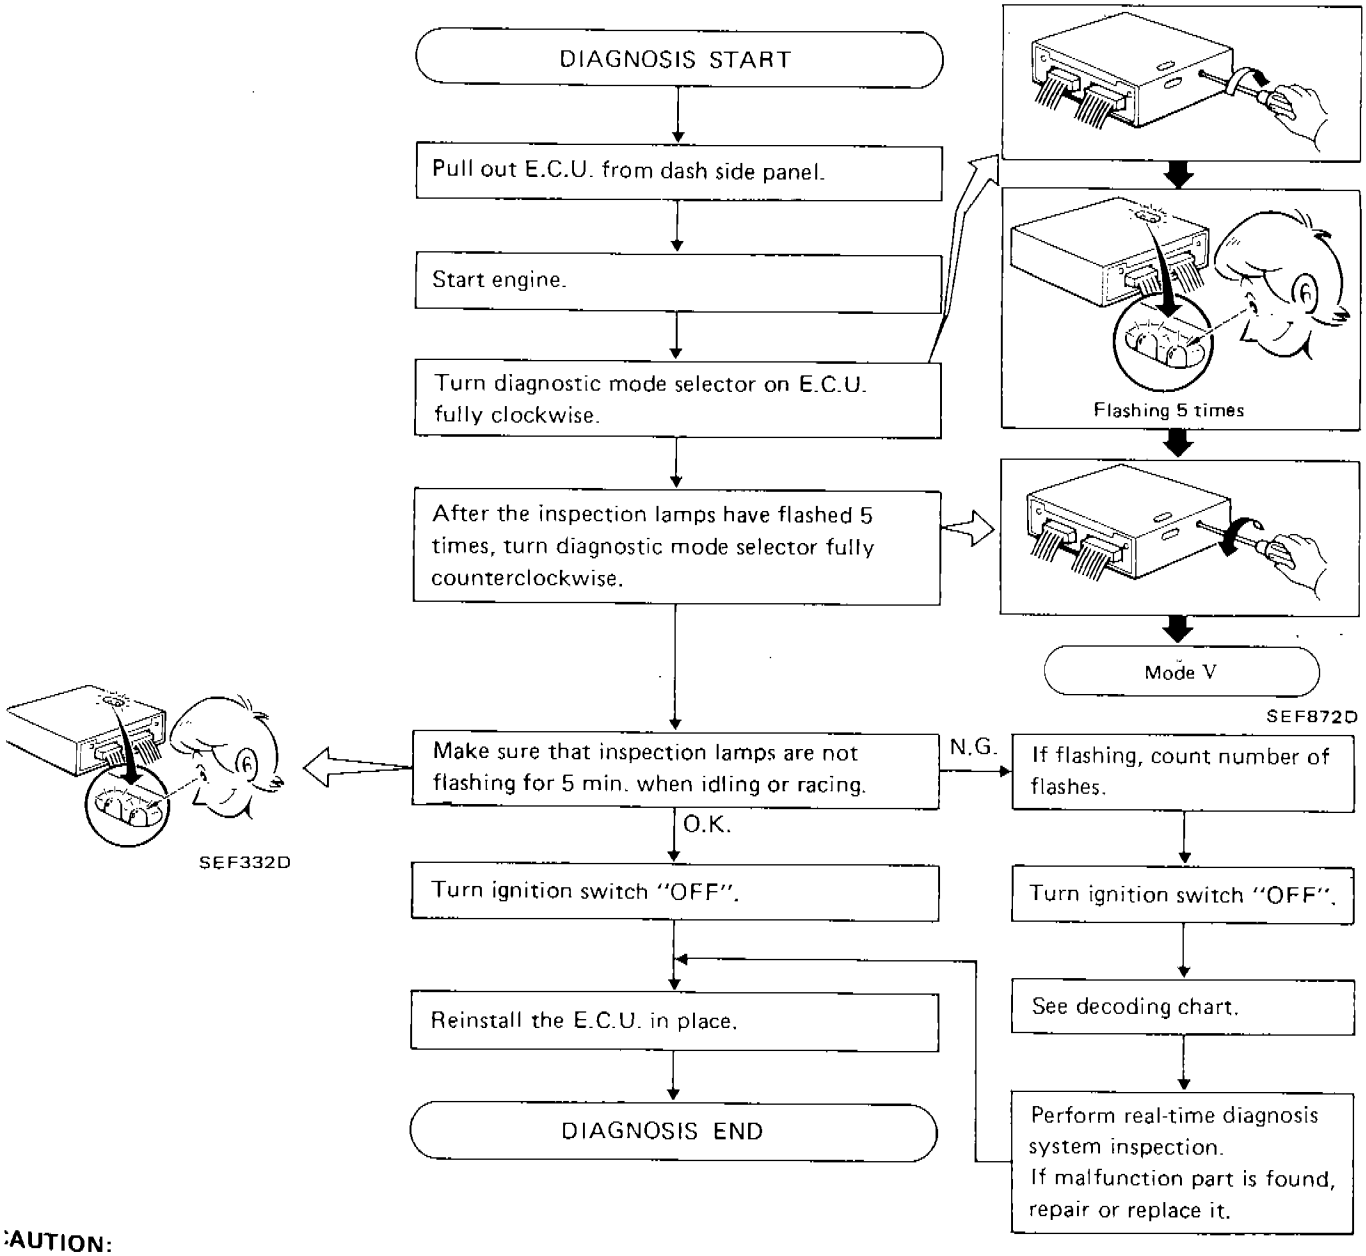

CAUTION:


In real-time diagnosis, pay attention to inspection lamp flashing. E.C.U. displays the malfunction code only once, and does not memorize the inspection.

Self-diagnosis — Mode V (Cont'd)

DECODING CHART

Display code	Malfunctioning circuit or parts	Control unit shows a malfunction signal when the following conditions are detected. (Compare with Self-diagnosis —Mode III.)
CRANK ANGLE SENSOR	Malfunction of crank angle sensor circuit	• The 1° or 180° signal is momentarily missing, or, multiple, momentary noise signals enter.
AIR FLOW METER	Malfunction of air flow meter circuit	• Abnormal, momentary increase in air flow meter output signal
IGNITION SIGNAL	Malfunction of ignition signal	• Signal from the primary ignition coil momentarily drops off.


CRANK ANGLE SENSOR

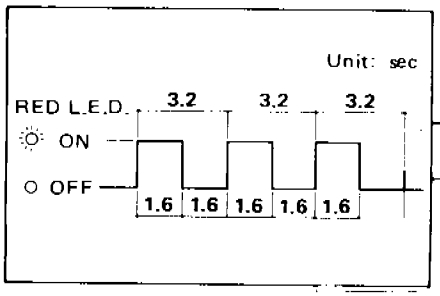

REAL-TIME DIAGNOSTIC INSPECTION
See page EF & EC-77.

SEF047F


AIR FLOW METER

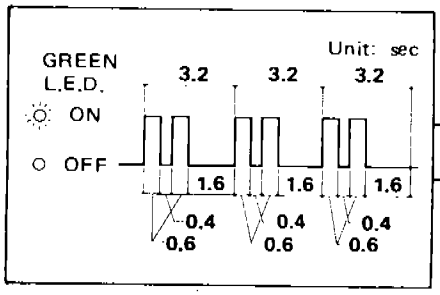

REAL-TIME DIAGNOSTIC INSPECTION
See page EF & EC-77.

SEF048F

IGNITION SIGNAL

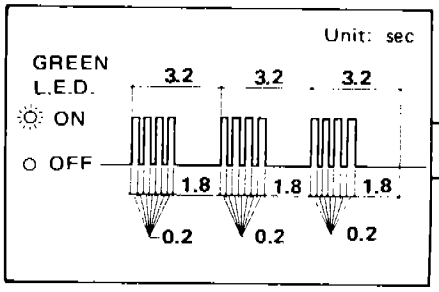

REAL-TIME DIAGNOSTIC INSPECTION
See page EF & EC-77.

SEF049F


Self-diagnosis — Mode V (Cont'd)

REAL-TIME DIAGNOSTIC INSPECTION


X: Available
—: Not available

Crank Angle Sensor, Air Flow Meter and Ignition Signal

Check sequence	Check items	Check conditions	Check parts			If malfunction, perform the following items.
			Harness connectors	Sensor & actuator	E.C.U. connectors	
1	Tap harness connector or component during real-time diagnosis.	During real-time diagnosis	X	X	X	Go to check item 2.
2	Check harness continuity at connector.	Engine stopped	X	—	—	Go to check item 3.
3	Disconnect harness connector, and then check dust adhesion to harness connector.	Engine stopped	X	—	X	Clean terminal surface.
4	Check pin terminal bend.	Engine stopped	—	—	X	Take out bend.
5	Reconnect harness connector and then recheck harness continuity at connector.	Engine stopped	X	—	—	Replace terminal.
6	Tap harness connector or component during real-time diagnosis.	During real-time diagnosis	X	X	X	If malfunction codes are displayed during real-time diagnosis, replace terminal.

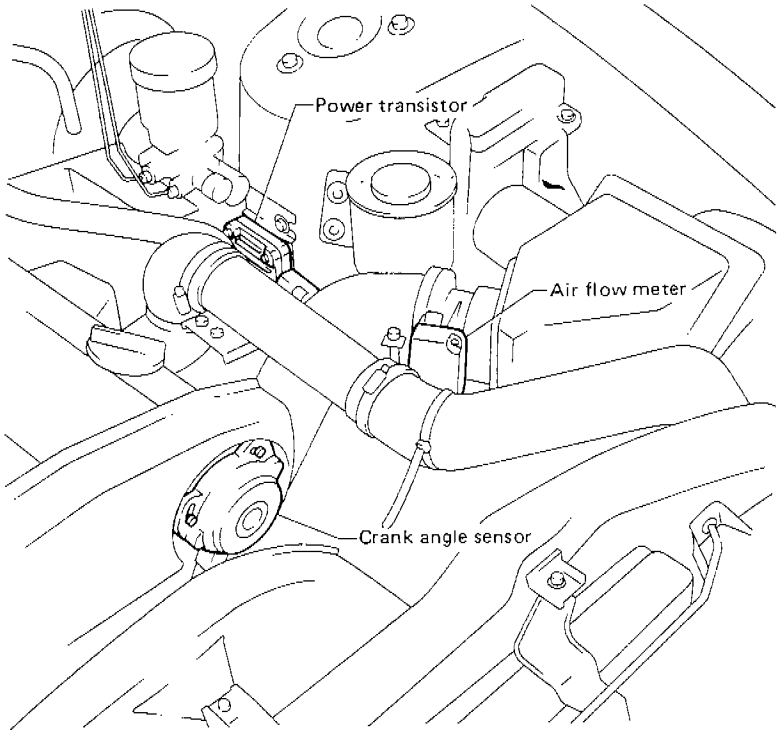


SEF426H

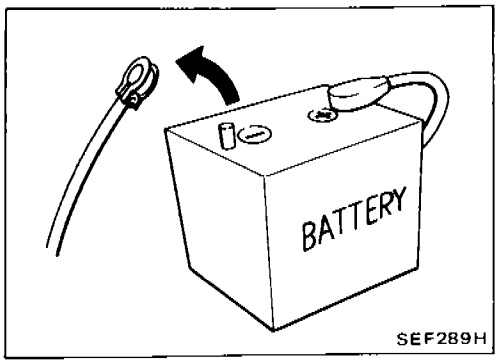


Diagnostic Procedure

CAUTION:


1. Before connecting or disconnecting E.C.U. harness connector to or from any E.C.U., be sure to turn the ignition switch to the "OFF" position and disconnect the negative battery terminal in order not to damage E.C.U. as battery voltage is applied to E.C.U. even if ignition switch is turned off. Otherwise, there may be damage to the E.C.U.

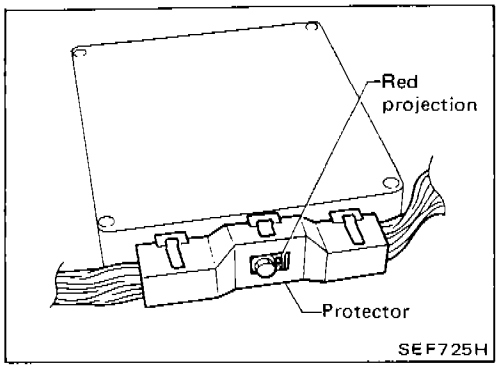

2. When connecting E.C.U. harness connector into E.C.U. or disconnecting it from E.C.U., take care not to damage pin terminal of E.C.U. (Bend or break).
3. Make sure that there are not any bends or breaks on E.C.U. pin terminal, when connecting pin connectors into E.C.U.
4. When connecting E.C.U. harness connector, tighten securing bolt until red projection is in line with connector face.

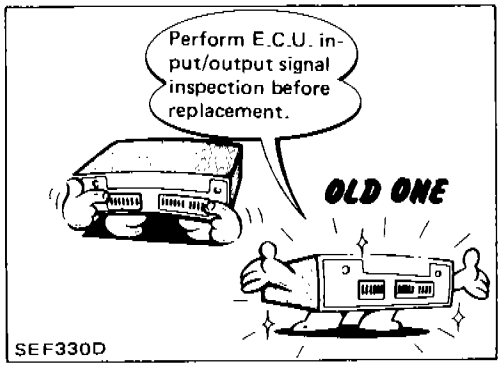


5. Before replacing E.C.U. perform E.C.U. input/output signal inspection and make sure whether E.C.U. functions properly or not. (See page EF & EC-120.)

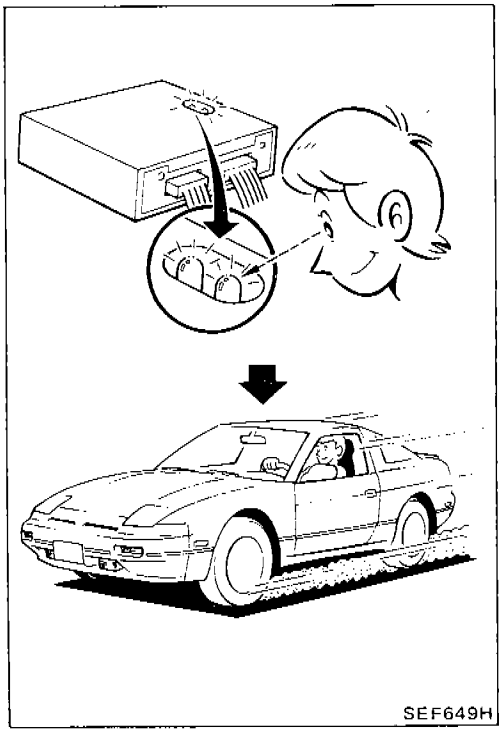


6. After performing this "Diagnostic Procedure", perform E.C.C.S. self-diagnosis and driving test.

Diagnostic Procedure (Cont'd)

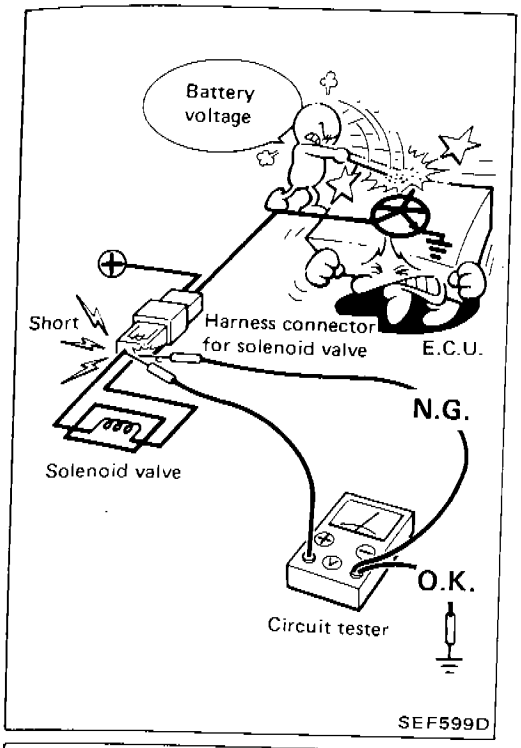


7. When measuring supply voltage of E.C.U. controlled components with a circuit tester, separate one tester probe from the other.
   If the two tester probes accidentally make contact with each other during measurement, the circuit will be shorted, resulting in damage to the power transistor of the control unit.

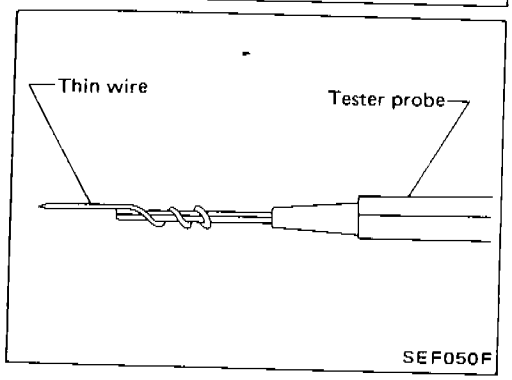


8. Improve tester probe as shown to perform test easily.
9. For the first trouble-shooting procedure, perform POWER SOURCE & GROUND CIRCUIT FOR E.C.U. check.

Diagnostic Procedure 1


POWER SOURCE & GROUND CIRCUIT FOR E.C.U. (Not self-diagnostic item)

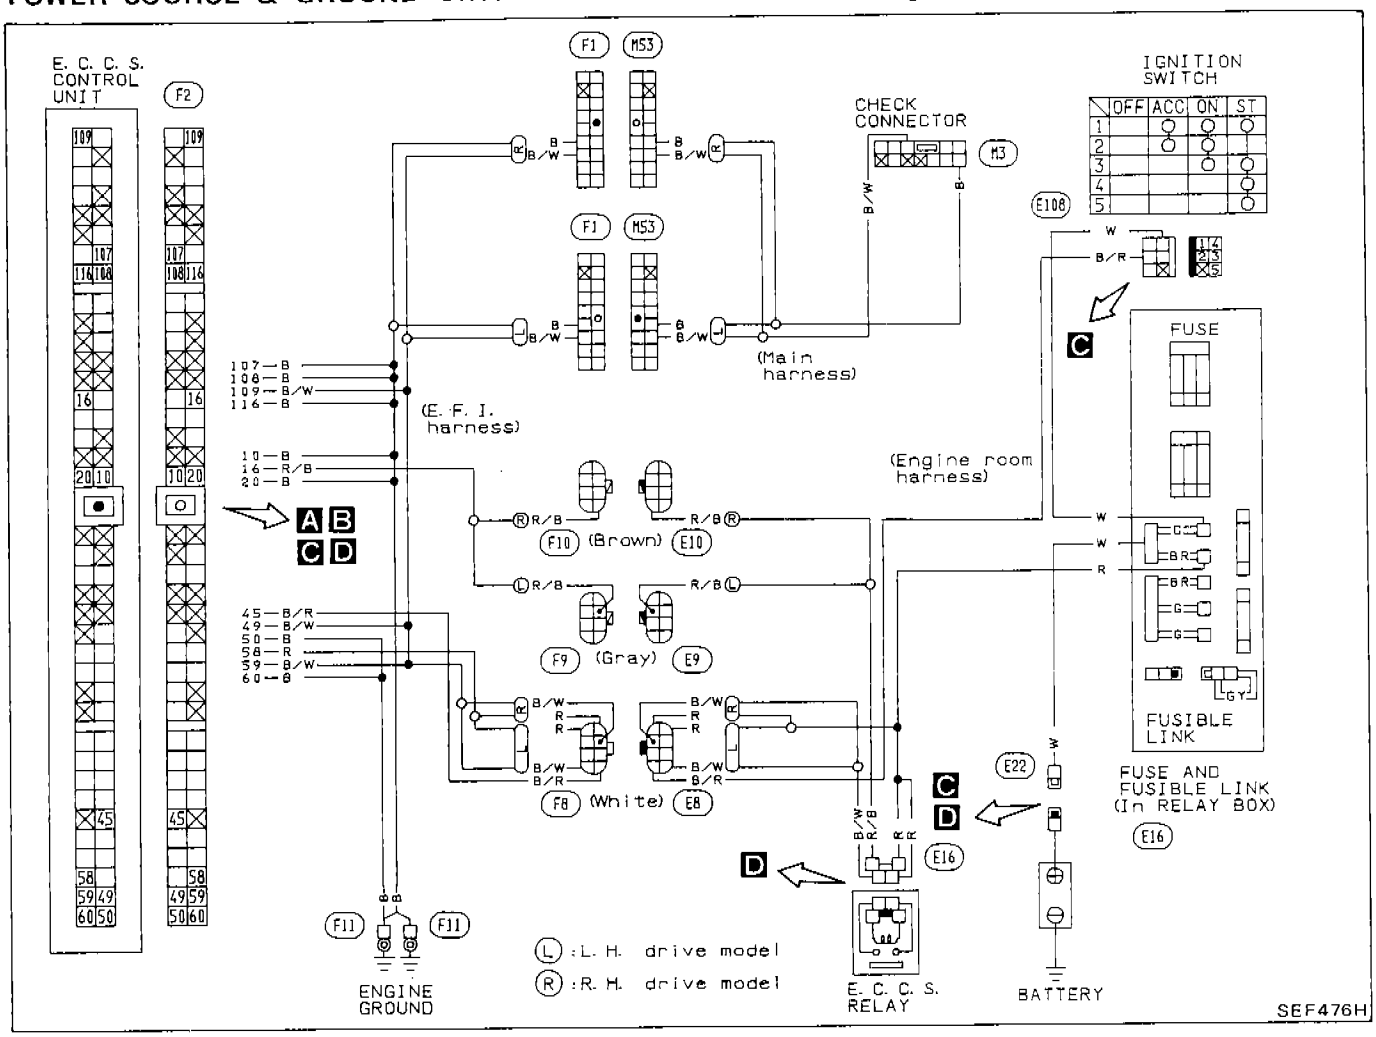



Component location

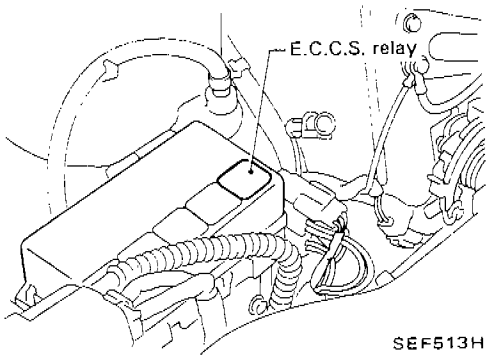


Diagnostic Procedure 1 (Cont'd)

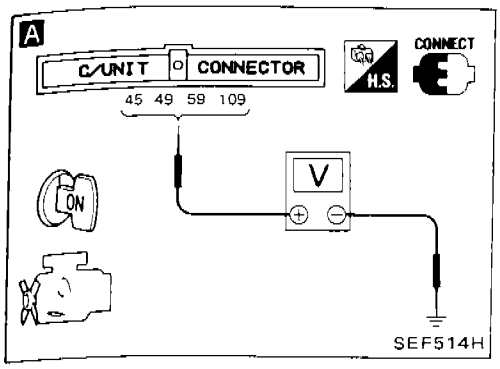

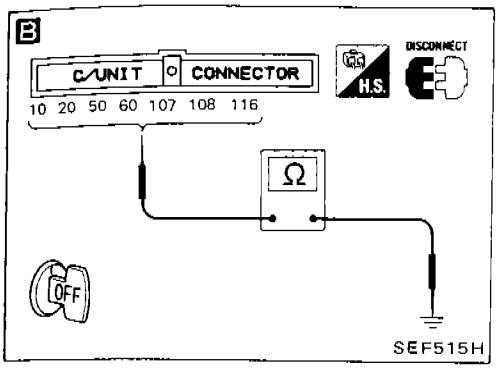

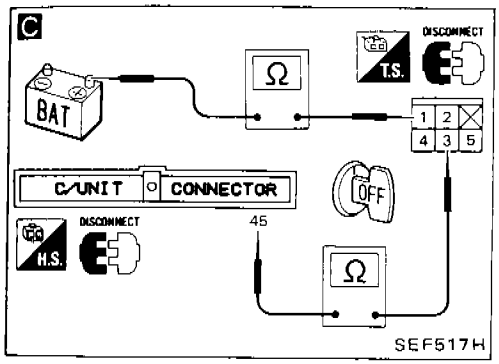

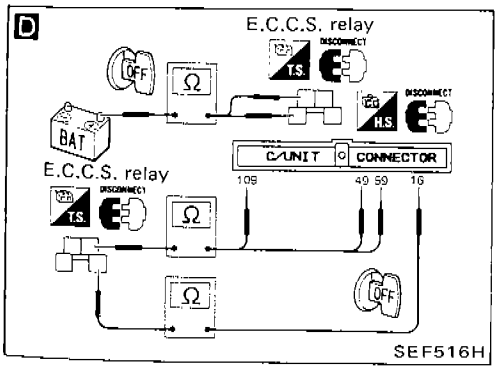

INSPECTION START

A

CHECK POWER SOURCE FOR E.C.U.
1) Turn ignition switch "ON".
2) Check voltage between terminals (45), (49), (59), (109) and ground.
Voltage: Battery voltage

N.G. (45) → Check ignition switch and "G" fusible link.

O.K. → **C**

1) Check harness continuity between ignition switch and battery ⊕ terminal.
Continuity should exist.
2) Check harness continuity between ignition switch and E.C.U.
Continuity should exist.
If N.G., replace harness or connector.

O.K. ↑

CHECK COMPONENT (E.C.C.S. relay).
Refer to "Electrical Components Inspection".
(See page EF & EC-128.)
If N.G., replace E.C.C.S. relay.

O.K. → **D**

1) Check harness continuity between E.C.C.S. relay and E.C.U.
Continuity should exist.
2) Check harness continuity between E.C.C.S. relay and battery ⊕ terminal.
Continuity should exist.
If N.G., replace harness or connectors.

O.K. → **B**


1) Turn ignition switch "OFF".
2) Disconnect connectors from E.C.U.
3) Check resistance between terminals (10), (20), (50), (60), (107), (108), (116) and ground.
Resistance:
Approximately 0Ω
If N.G., repair harness or connectors.

O.K. → INSPECTION END


N.G. (49), (59), (109) → CHECK COMPONENT (E.C.C.S. relay).

Diagnostic Procedure 2


CRANK ANGLE SENSOR (Code No. 11)

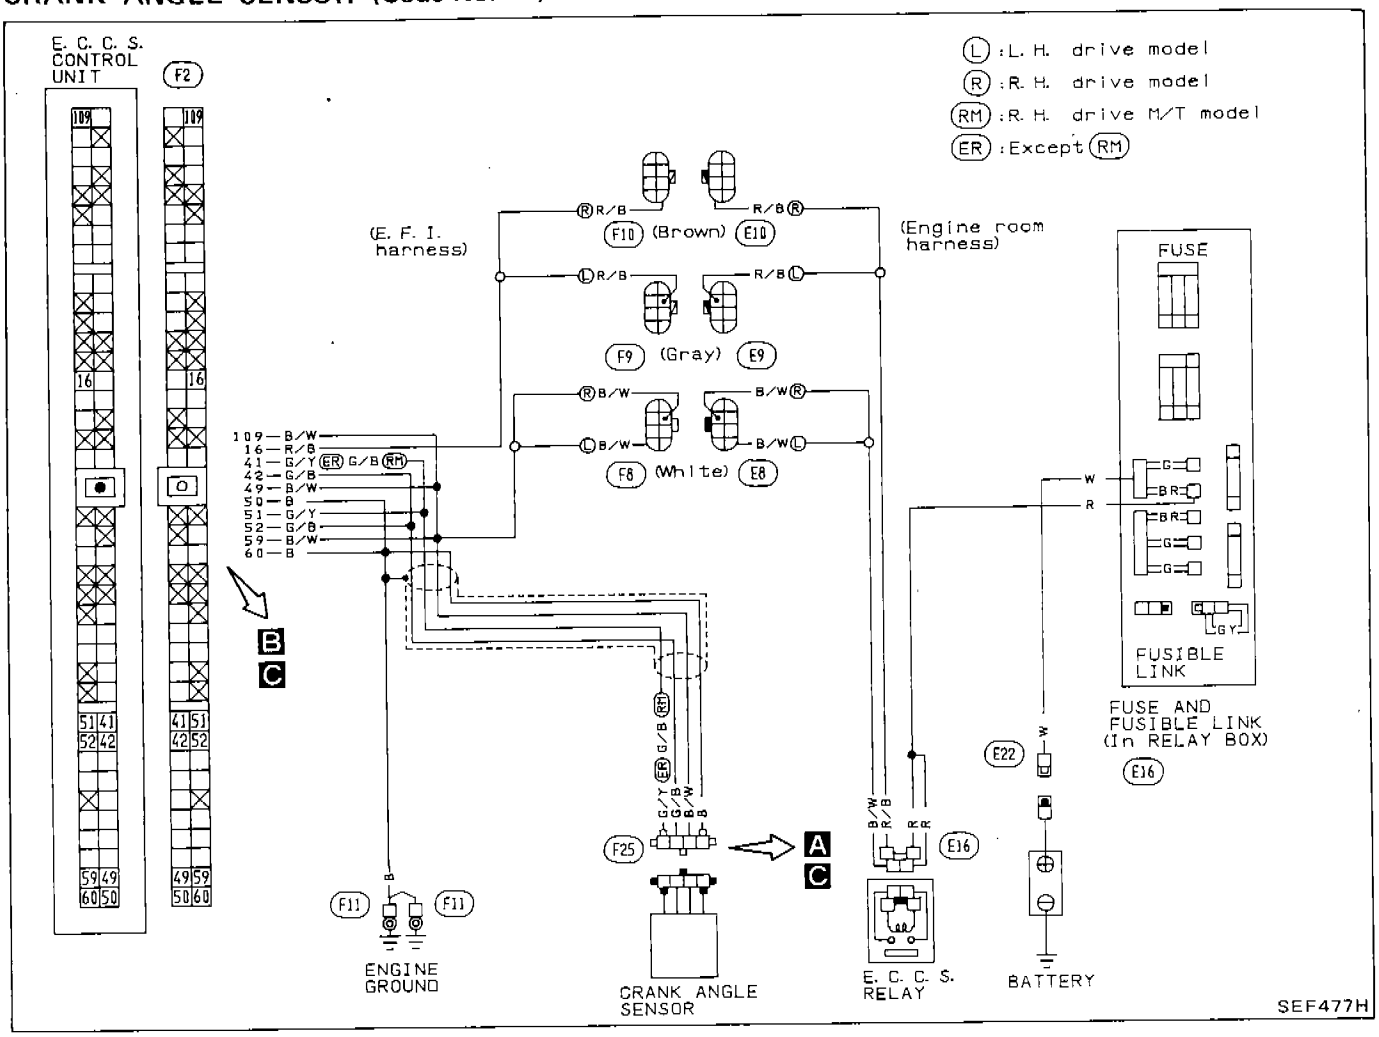



Component location

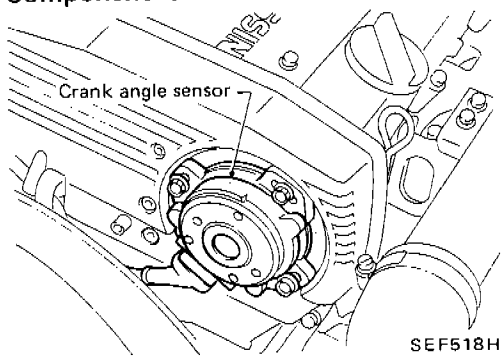

Diagnostic Procedure 2 (Cont'd)

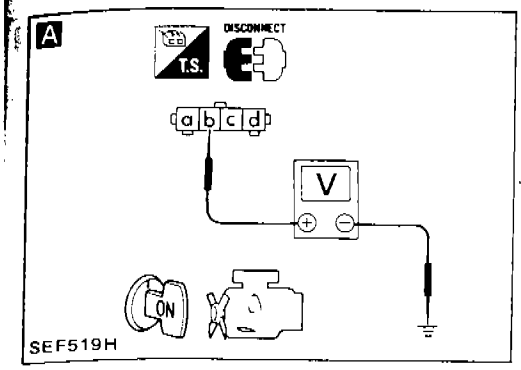

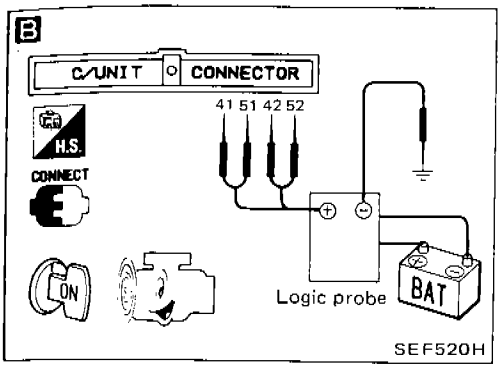

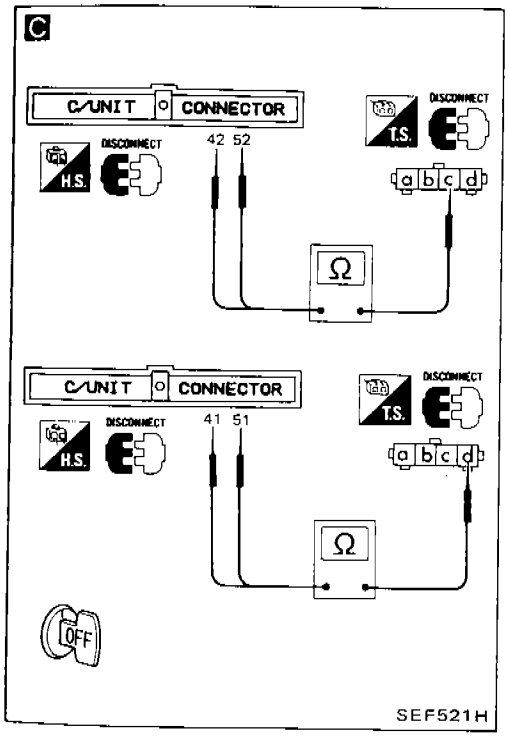

INSPECTION START

Perform self-diagnosis (Mode III).
Is Code No. 11 indicated?

No → INSPECTION END

Yes

A

CHECK POWER SOURCE.
1) Disconnect crank angle sensor harness connector.
2) Turn ignition switch "ON".
3) Check voltage between terminal ⓑ and ground.
Voltage: Battery voltage

N.G. → Repair harness or connectors.

O.K.

B

CHECK INPUT SIGNAL.
1) Reconnect crank angle sensor harness connector.
2) Start engine.
3) Check that pulse signals exist in E.C.U. terminals ㊷, ㊷ and ㊶, ㊶ with logic probe.
Pulse signals should exist.
㊷, ㊷: 1° signal
㊶, ㊶: 180° signal

N.G. → **C**

CHECK CONTINUITY BETWEEN E.C.U. AND CRANK ANGLE SENSOR.
1) Turn ignition switch "OFF".
2) Disconnect E.C.U. harness connector.
3) Disconnect crank angle sensor harness connector.
4) Check continuity between terminal ⓐ and ground, terminals ⓒ and ㊷, ㊷ and terminals ⓓ and ㊶, ㊶.
Resistance:
Approximately 0Ω

O.K.


CHECK COMPONENT
(Crank angle sensor).
Refer to "Electrical Components Inspection".
(See page EF & EC-124.)

O.K.


INSPECTION END

Diagnostic Procedure 3


AIR FLOW METER (Code No. 12)

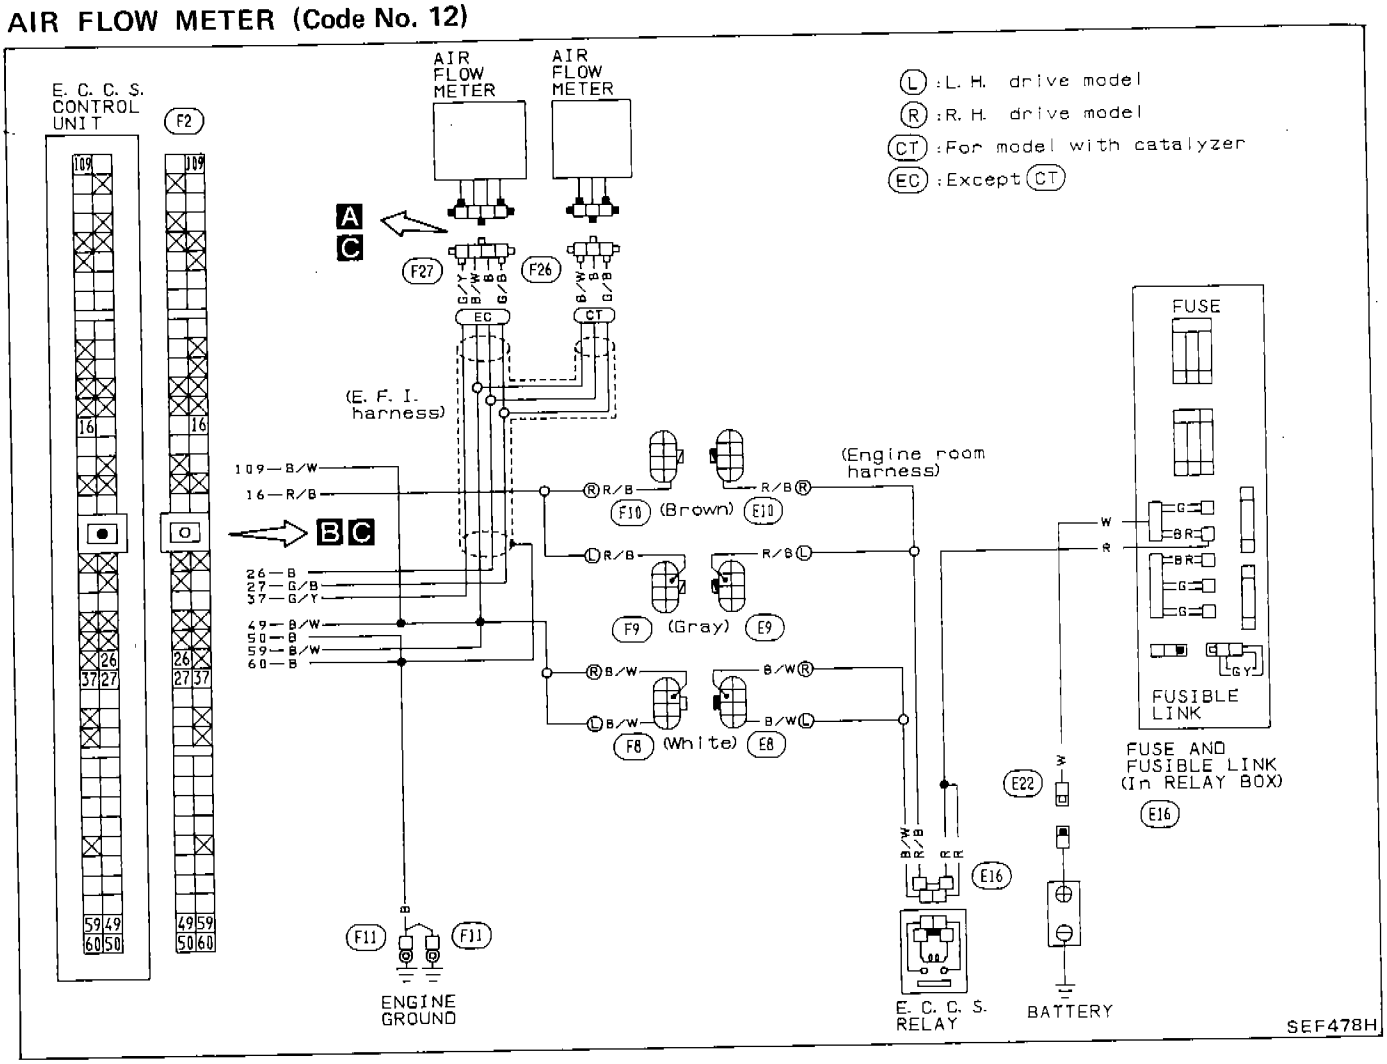



Component location

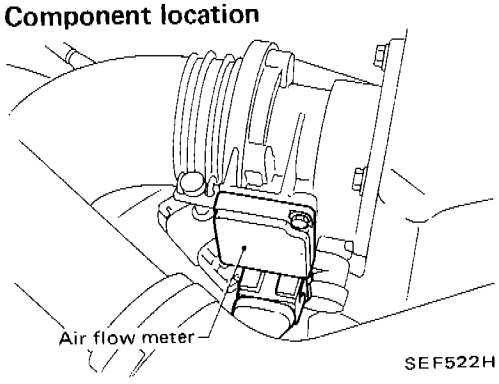

Diagnostic Procedure 3 (Cont'd)

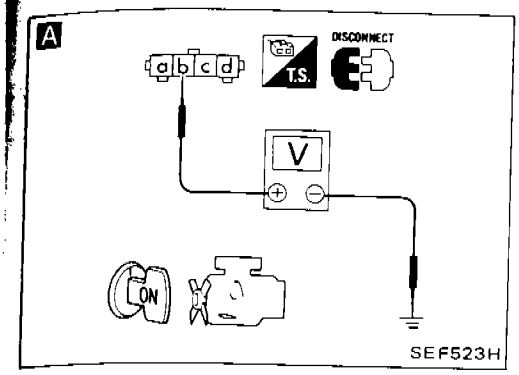

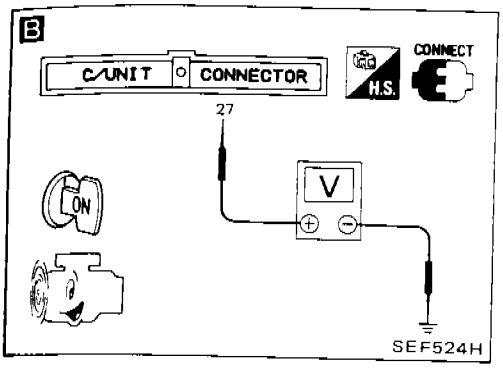

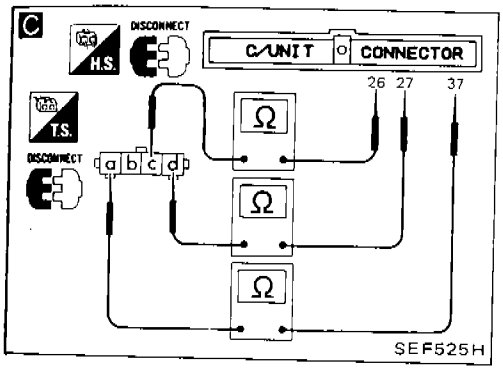

INSPECTION START

Perform self-diagnosis (Mode III).
Is Code No. 12 indicated?

No → INSPECTION END

Yes

A

CHECK POWER SOURCE.
1) Disconnect air flow meter harness connector.
2) Turn ignition switch "ON".
3) Check voltage between terminal ⓑ and ground.
Battery voltage should exist.

N.G. → Repair harness or connectors.

O.K.

B

CHECK INPUT SIGNAL.
1) Reconnect air flow meter harness connector.
2) Start engine and warm it up sufficiently.
3) Make sure that voltage exists between E.C.U. terminal ㉗ and ground.
Voltage:
Approximately 1.5V (at idle)

N.G. → **C**

CHECK CONTINUITY BETWEEN E.C.U. AND AIR FLOW METER.
1) Turn ignition switch "OFF".
2) Disconnect E.C.U. harness connector.
3) Disconnect air flow meter harness connector.
4) Check continuity between terminals ⓐ and ㊲, ⓒ and ㉖, and ⓓ and ㉗.
Resistance:
Approximately 0Ω

O.K.


CHECK COMPONENT (Air flow meter).
Refer to "Electrical Components Inspection".
(See page EF & EC-124.)

O.K.


INSPECTION END

Diagnostic Procedure 4


ENGINE TEMPERATURE SENSOR (Code No. 13)

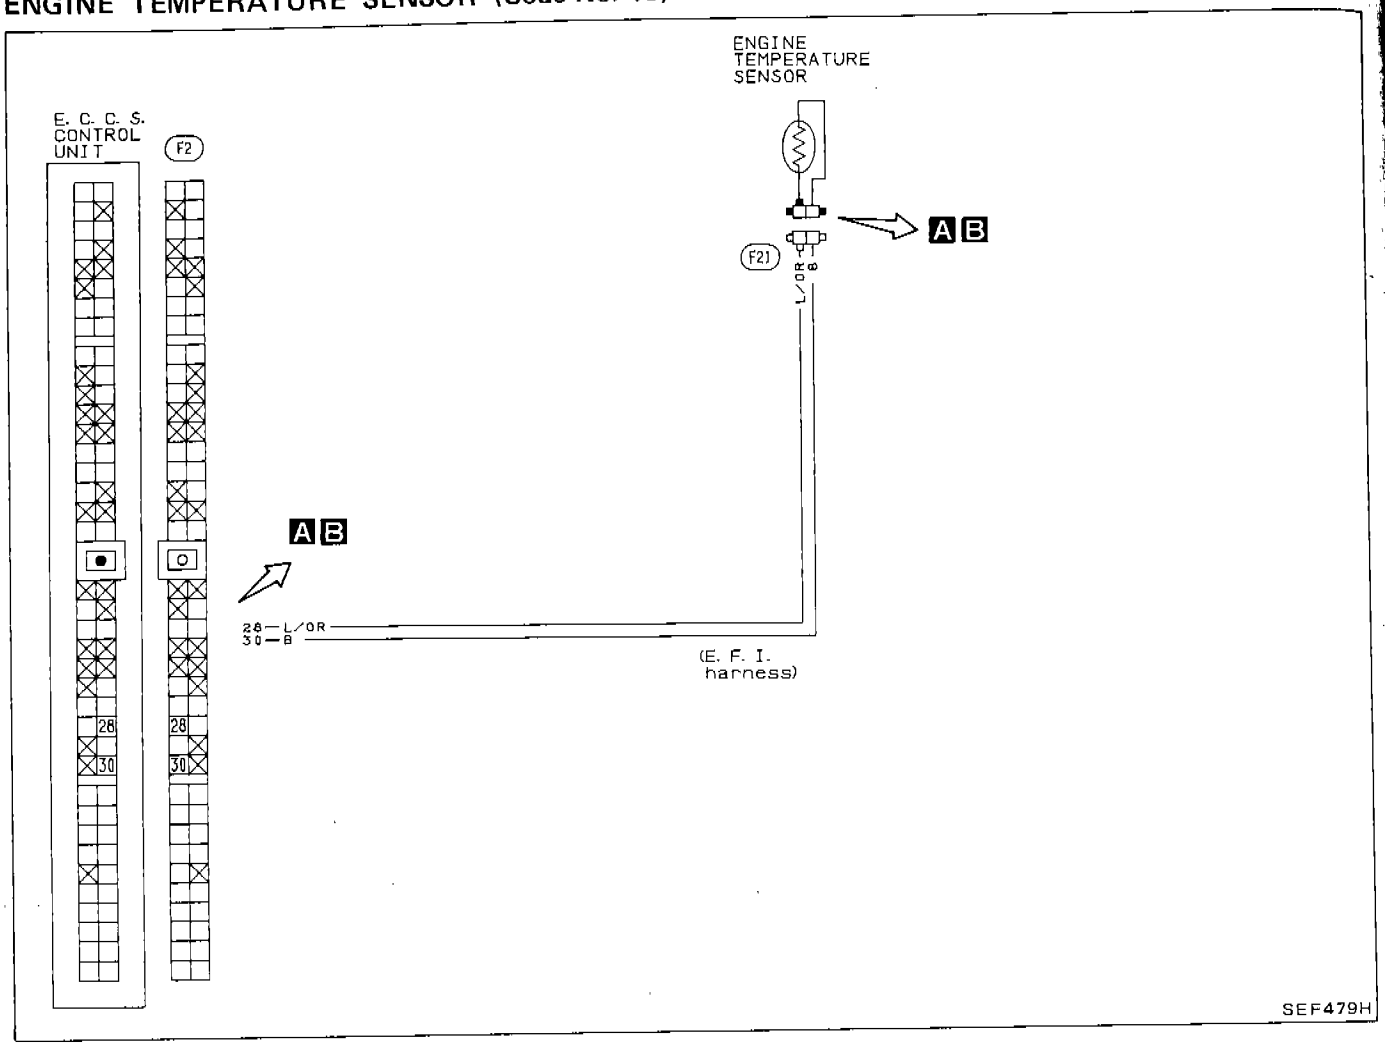


Component location

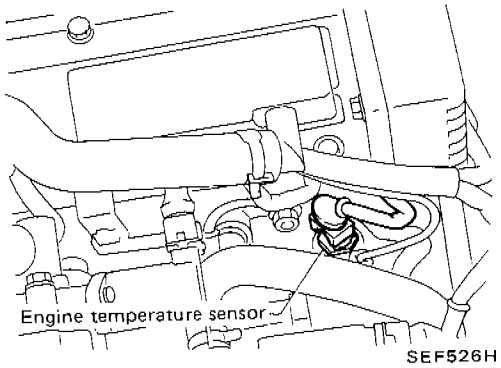

Diagnostic Procedure 4 (Cont'd)

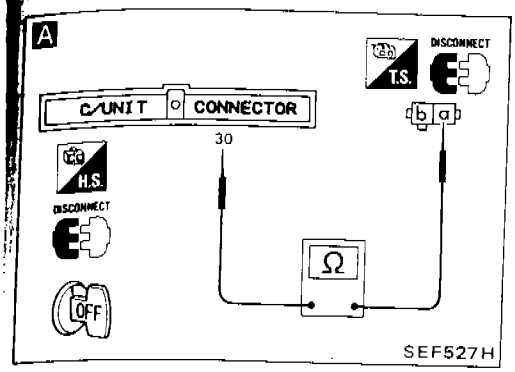

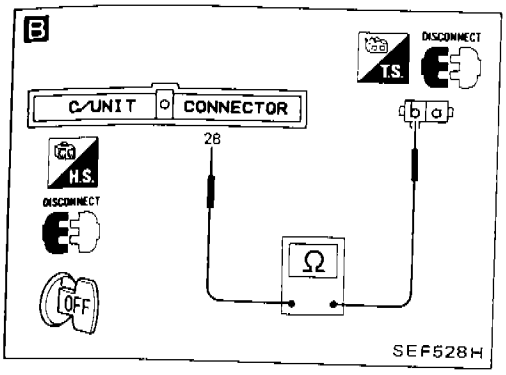

INSPECTION START

Perform self-diagnosis (Mode III).
Is code No. 13 indicated?

No → INSPECTION END

Yes

CHECK COMPONENT
(Engine temperature sensor).
Refer to "Electrical Components Inspection".
(See page EF & EC-124.)

N.G. → Replace engine temperature sensor.

O.K.

A

CHECK GROUND CIRCUIT.
1) Disconnect E.C.U. harness connector.
2) Check continuity between terminals ⓐ and ㉚.
Continuity should exist.

N.G. → Repair harness or connectors.

O.K.

B

CHECK INPUT SIGNAL CIRCUIT.
Check continuity between terminals ⓑ and ㉘.
Continuity should exist.


N.G. → Repair harness or connectors.

O.K.


INSPECTION END

Diagnostic Procedure 5

VEHICLE SPEED SENSOR

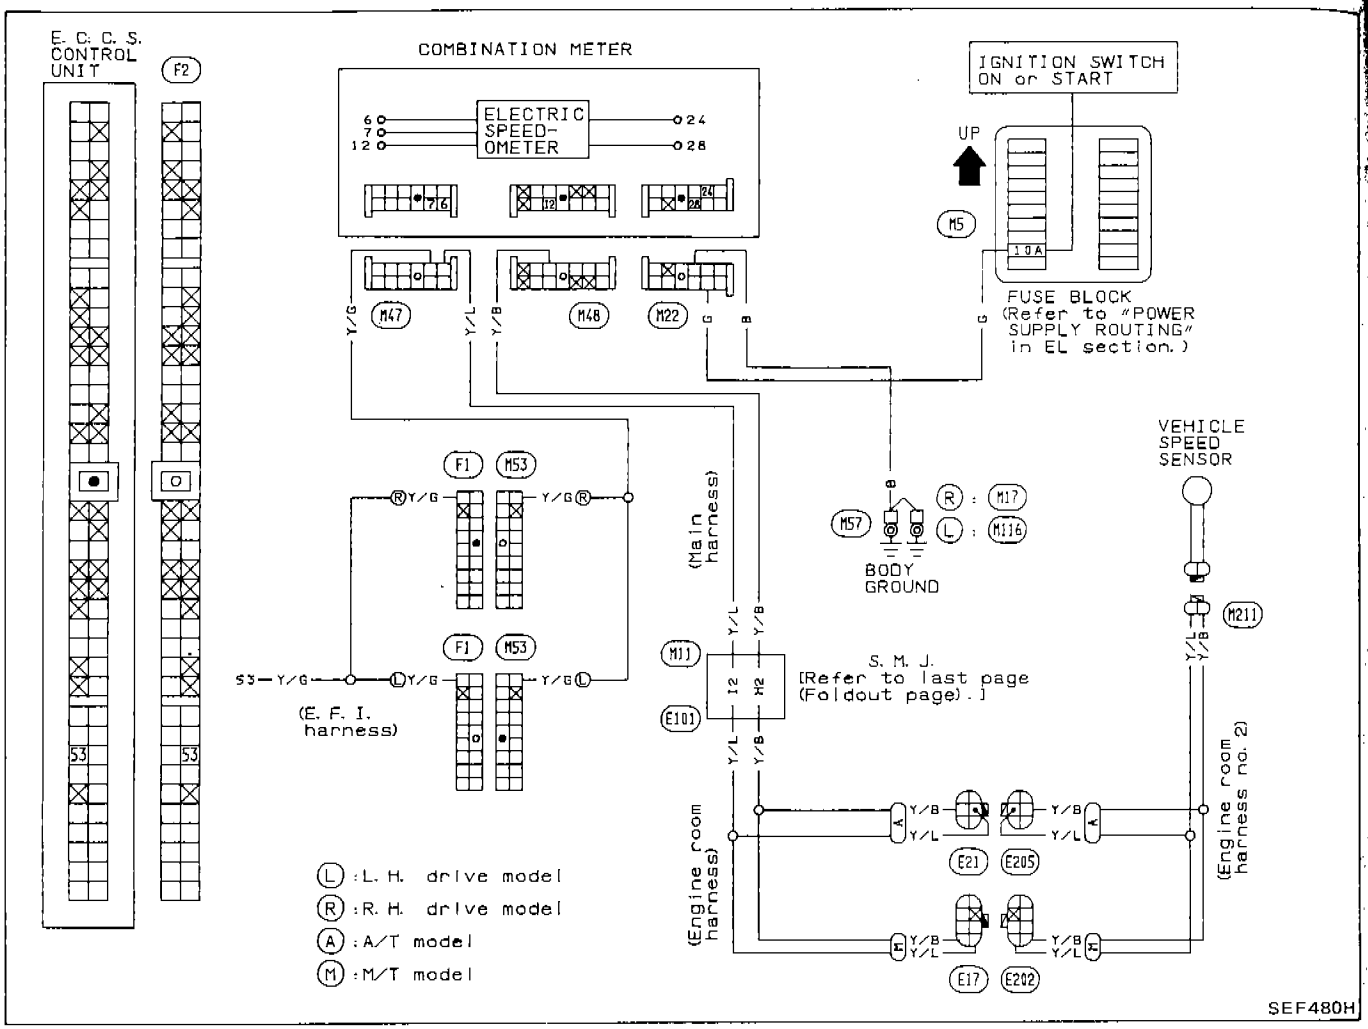

Diagnostic Procedure 5 (Cont'd)

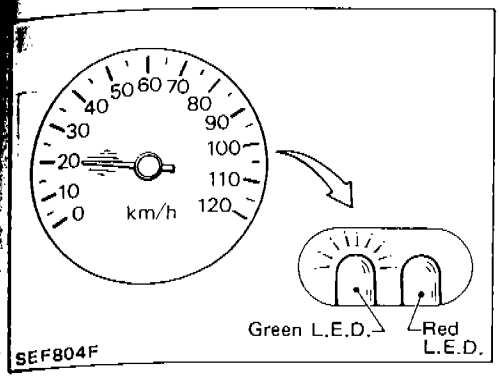

INSPECTION START

CHECK INPUT SIGNAL.
1) Perform switch ON/OFF diagnosis (in Mode IV).
2) Make sure green L.E.D. on E.C.U. comes "ON" when vehicle speed reaches 20 km/h (12 MPH).

O.K. → INSPECTION END

N.G. ↓

CHECK COMPONENT
(Vehicle speed sensor).
Refer to "Electrical Components Inspection".
(See page EF & EC-128.)

O.K. →
1) Repair or replace harness.
2) Check middle harness connector for proper connection.
3) Check S.M.J.

N.G. ↓

Repair or replace vehicle speed sensor.

↓

Reinstall any part removed.

↓


1) Perform switch ON/OFF diagnosis (in Mode IV) again.
2) Make sure green L.E.D. on E.C.U. comes "ON" when vehicle speed reaches 20 km/h (12 MPH).

↓


INSPECTION END


Diagnostic Procedure 6


IGNITION SIGNAL (Code No. 21) & DETONATION SENSOR (Code No. 34)

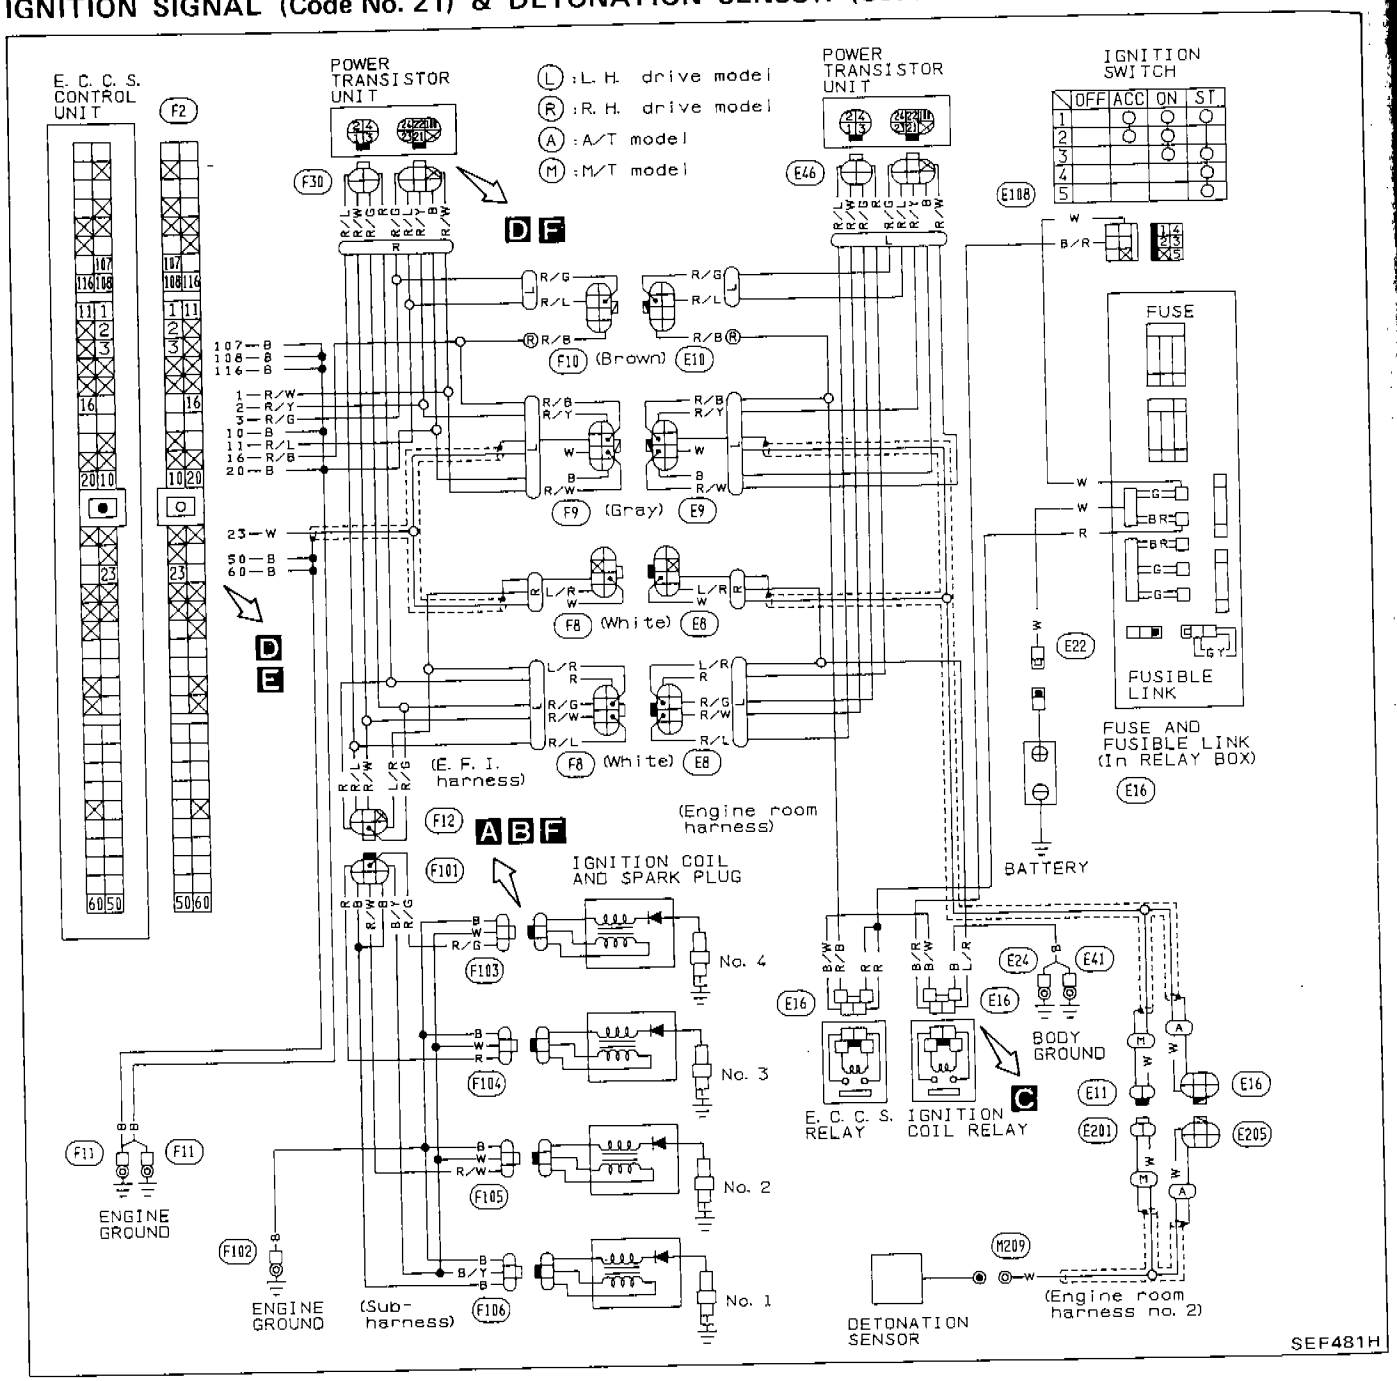

Component location

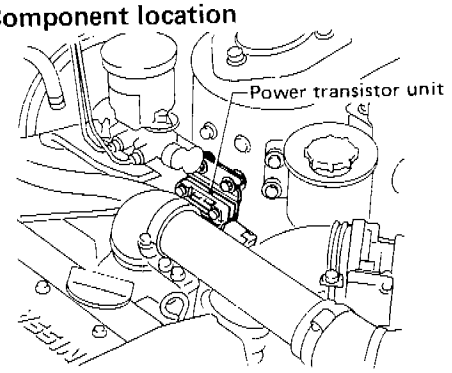


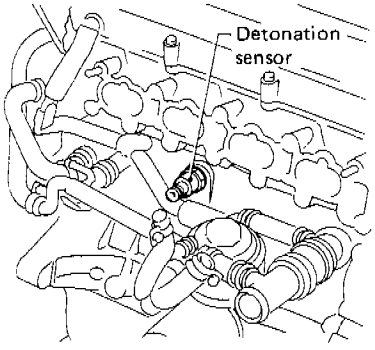


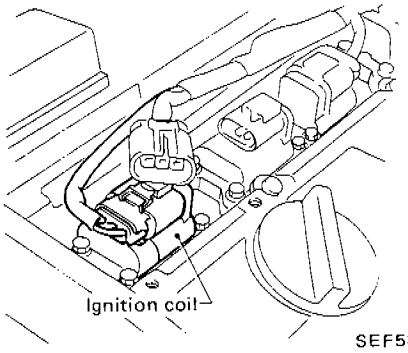



SEF530H

Diagnostic Procedure 6 (Cont'd)

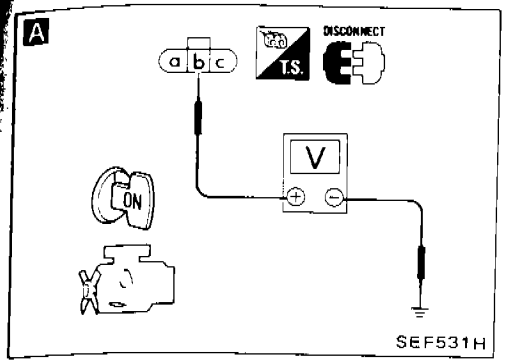

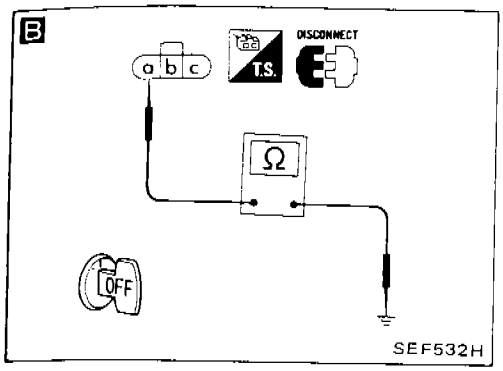

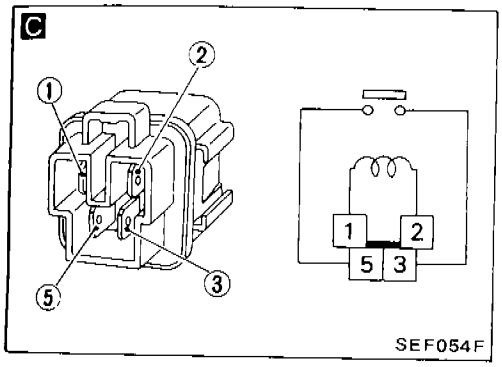

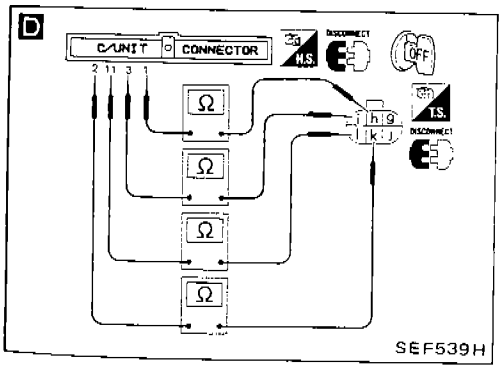

INSPECTION START

Perform self-diagnosis (Mode III).
Is code No. 21 or 34 indicated?

No → INSPECTION END

Yes (Code 21)

Yes (Code 34) → CHECK COMPONENT (Detonation sensor). Refer to "Electrical Components Inspection". (See page EF & EC-128.)

CHECK COMPONENT (Ignition coil). Refer to "Electrical Components Inspection". (See page EF & EC-125.)

N.G. → Replace ignition coil.

O.K.

A

CHECK POWER SOURCE
1) Turn ignition switch "ON".
2) Check voltage between terminal ⓑ and ground.
Voltage: Battery voltage

N.G. → **C**

Check ignition coil relay.

Condition	Continuity between terminals ③ and ⑤
Supply 12V direct current between terminals ① and ②	Yes
Not supply	No

If N.G., replace relay.

O.K. → Repair harness or connectors.

O.K.

B

CHECK GROUND CIRCUIT.
1) Turn ignition switch "OFF".
2) Check continuity between terminal ⓐ and ground.
Continuity should exist.

N.G. → Repair harness or connectors.

O.K.


D


CHECK HARNESS CONTINUITY BETWEEN POWER TRANSISTOR AND E.C.U.
1) Disconnect E.C.U. harness connector.
2) Disconnect power transistor harness connector.
3) Check continuity between terminals ⓗ and ①, ⓘ and ③, ⓚ and ②, ⓙ and ⑪.
Continuity:
Approximately 0Ω

N.G. → Repair harness or connectors.

O.K.

Diagnostic Procedure 6 (Cont'd)

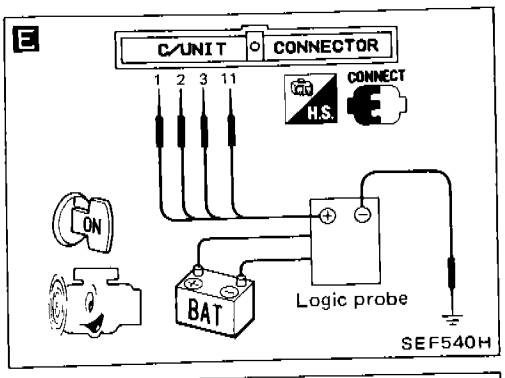

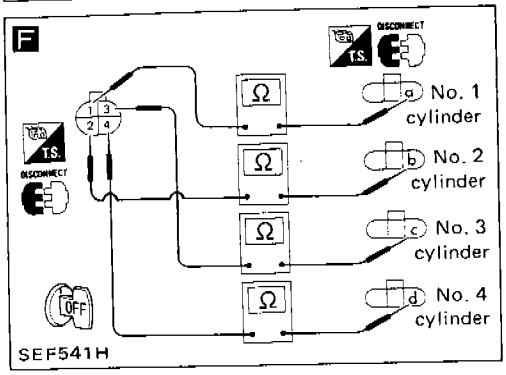

E

CHECK OUTPUT SIGNAL.
1) Reconnect power transistor harness connector.
2) Reconnect E.C.U. harness connector.
3) Reconnect ignition coil harness connector.
4) Start engine.
5) Make sure that pulse signals exist between E.C.U. terminals ①, ②, ③, ⑪ and ground with logic probe.
Pulse signal should exist.

N.G. → CHECK COMPONENT (Power transistor). Refer to "Electrical Components Inspection". (See page EF & EC-125.)

O.K. ↓

F

CHECK HARNESS CONTINUITY BETWEEN POWER TRANSISTOR AND IGNITION COIL.
1) Stop engine and turn ignition switch "OFF".
2) Disconnect power transistor harness connector and ignition coil harness connector.
3) Check continuity between terminals ⓐ and ①, ⓑ and ②, ⓒ and ③, ⓓ and ④.
Continuity:
Approximately 0Ω

N.G. → 1) Check middle harness connector. 2) Repair harness or connectors.


O.K. ↓

INSPECTION END


NOTE

Diagnostic Procedure 7


IDLE SWITCH (Switch ON/OFF diagnosis)

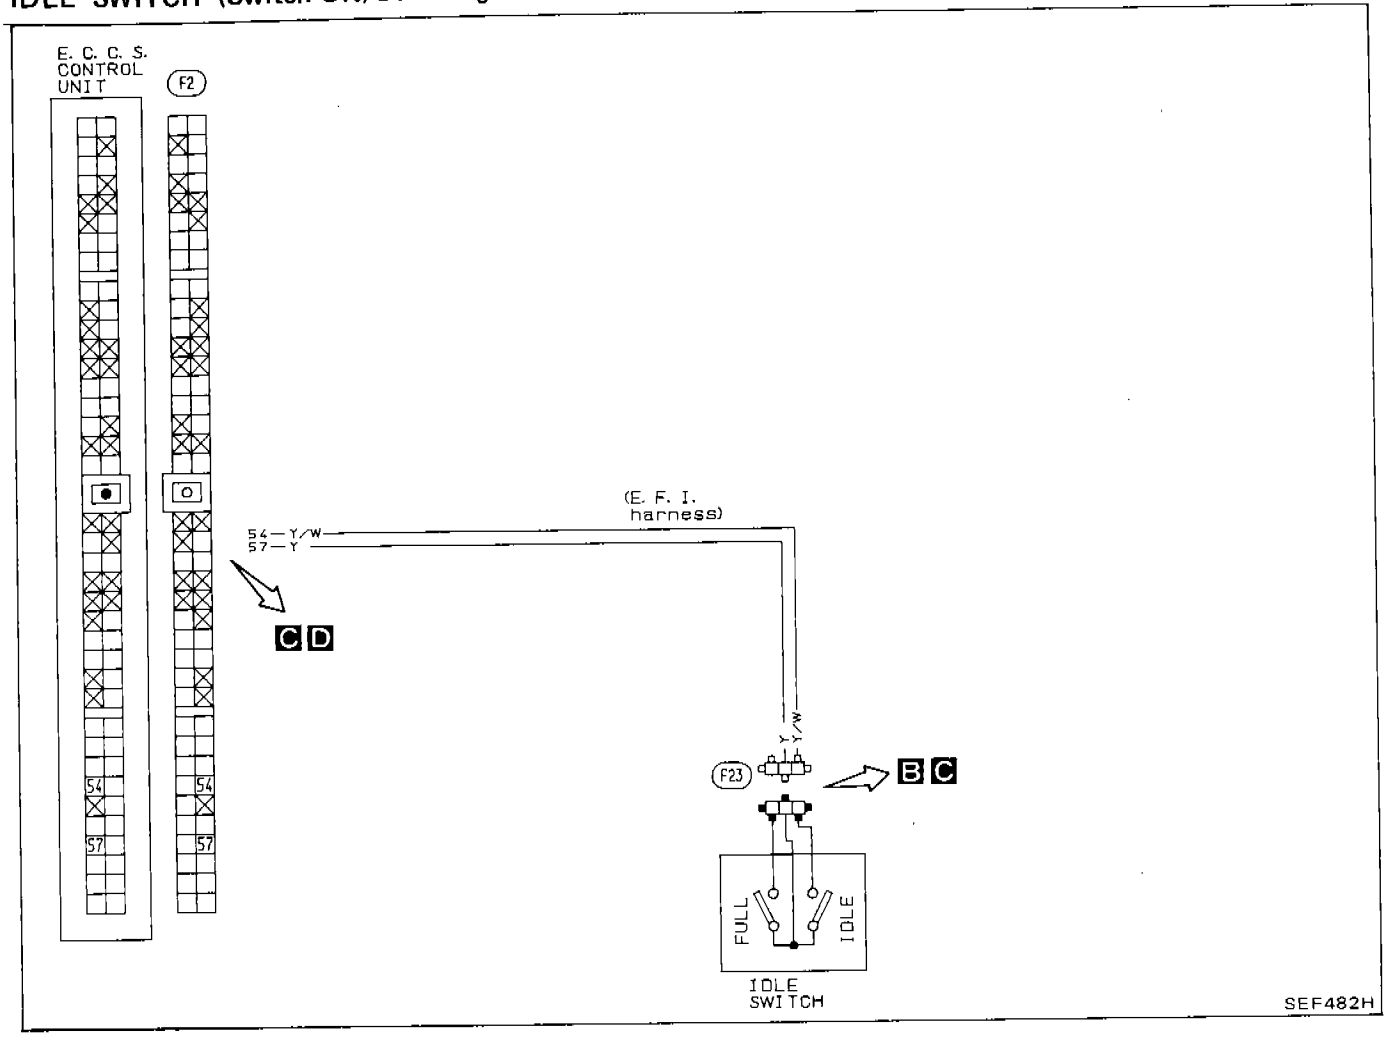



Component location

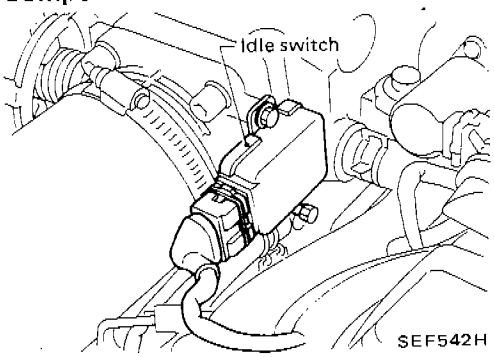


Diagnostic Procedure 7 (Cont'd)

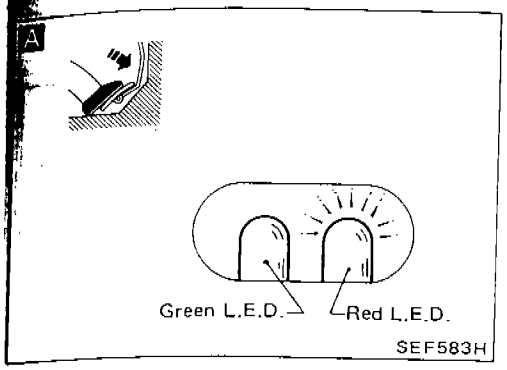

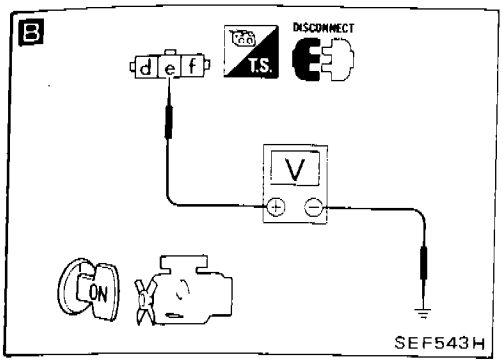

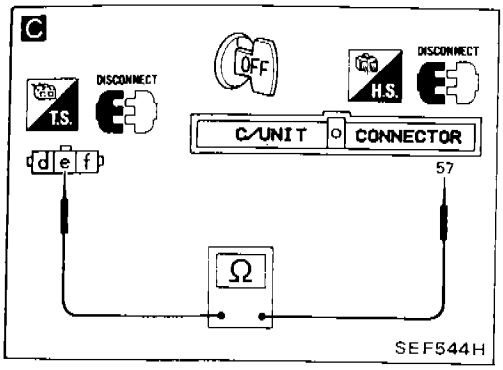

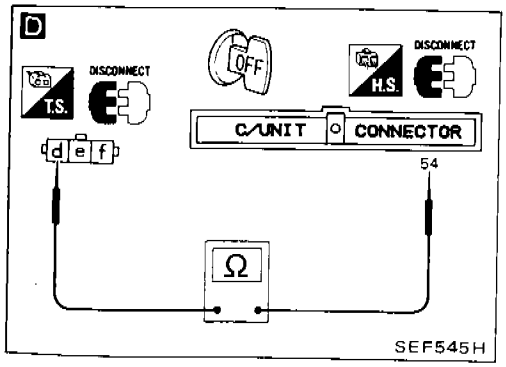

INSPECTION START

A

CHECK INPUT SIGNAL.
1) Perform switch ON/OFF diagnosis (in Mode IV).
2) Make sure red L.E.D. comes "ON" or goes "OFF" when accelerator pedal is depressed.

O.K. → INSPECTION END

N.G. ↓

B

CHECK POWER SOURCE.
1) Disconnect idle switch harness connector.
2) Turn ignition switch "ON".
3) Check voltage between terminal ⓔ and ground.
Voltage:
Approximately 9 - 10V

N.G. → **C**

CHECK CONTINUITY BETWEEN E.C.U. AND IDLE SWITCH.
1) Turn ignition switch "OFF".
2) Disconnect E.C.U. connector.
3) Disconnect idle switch harness connector.
4) Check resistance between E.C.U. terminal ⑰ and terminal ⓔ.
Resistance:
Approximately 0Ω
If N.G., repair or replace harness.

O.K. ↓

CHECK COMPONENT (Idle switch).
Refer to "Electrical Components Inspection".
(See page EF & EC-124.)

N.G. → Check if idle switch is installed in proper position.
If N.G., adjust it by turning idle switch.
If O.K., replace idle switch.

O.K. ↓

D

CHECK GROUND CIRCUIT.
Check resistance between E.C.U. terminal ⑭ and terminal ⓓ.
Resistance:
Approximately 0Ω

N.G. → Repair or replace harness.

O.K. ↓

Reinstall any part removed.

↓


CHECK IDLE SWITCH OPERATION.
1) Perform switch ON/OFF diagnosis (in Mode IV).
2) Make sure that red L.E.D. comes "ON" or goes "OFF" when accelerator pedal is depressed.

↓


INSPECTION END

Diagnostic Procedure 8


EXHAUST GAS SENSOR (Not self-diagnostic item)

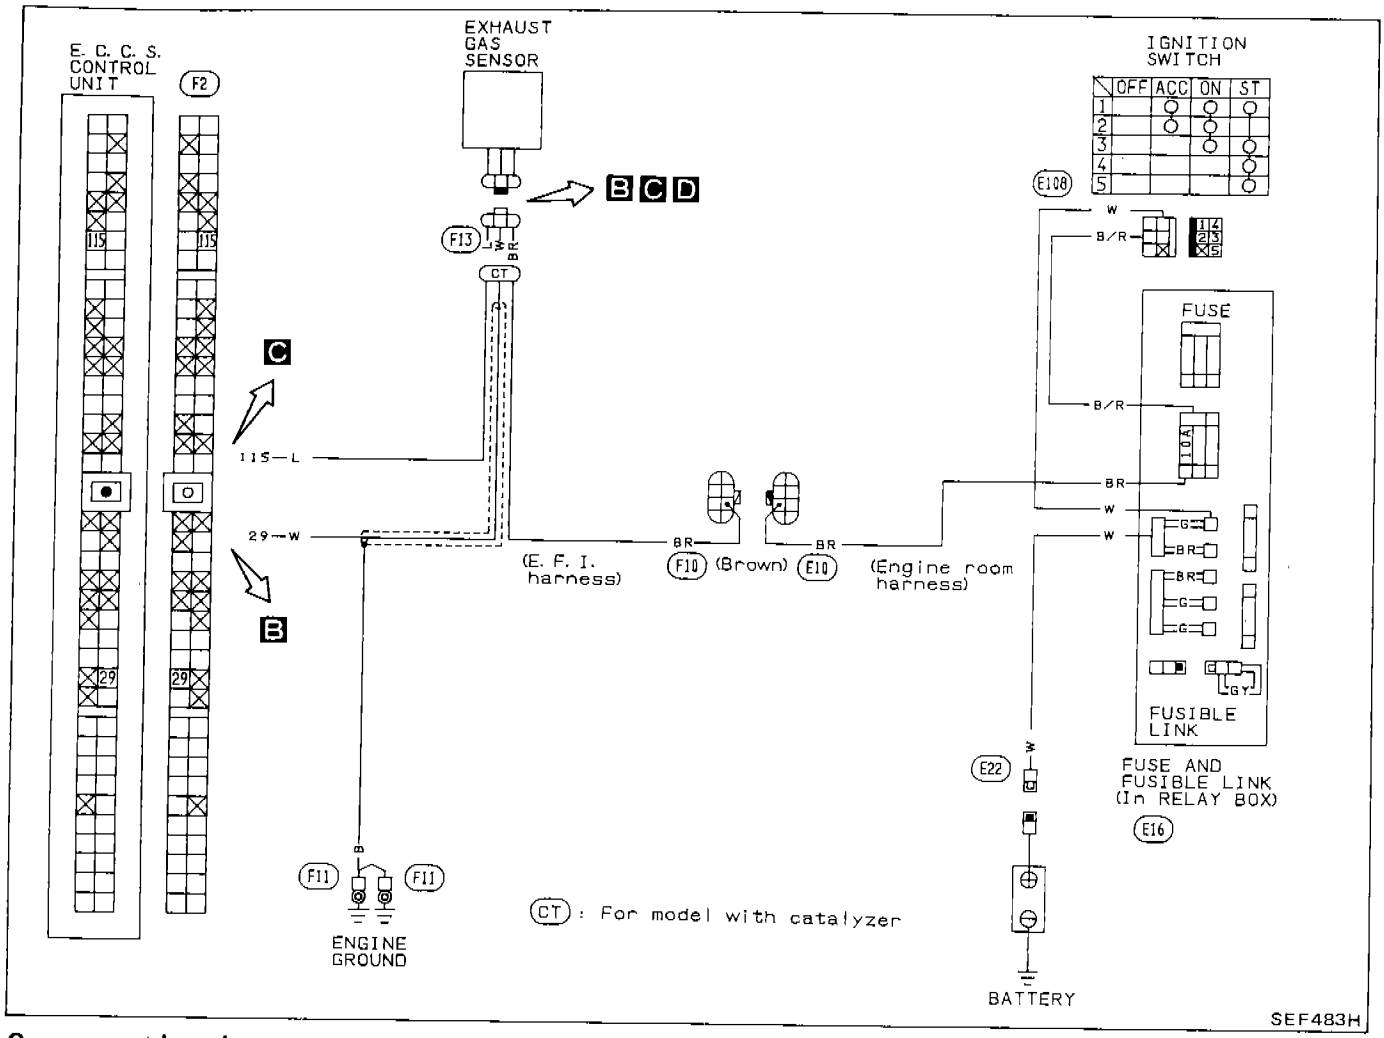



Component location

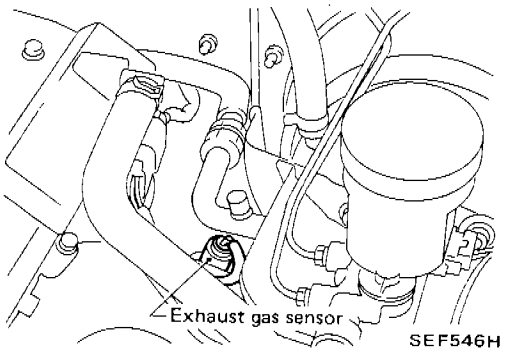


Diagnostic Procedure 8 (Cont'd)

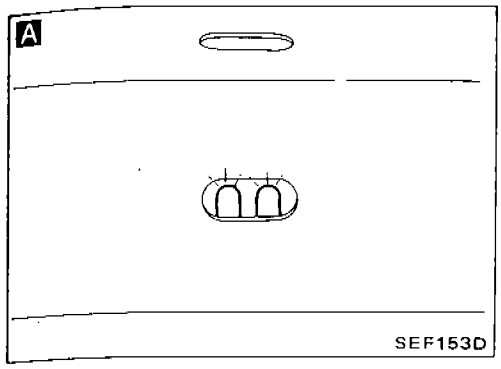

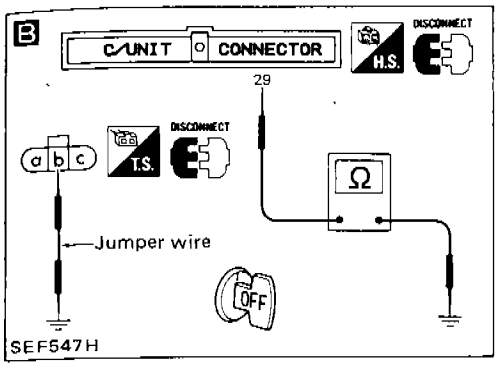

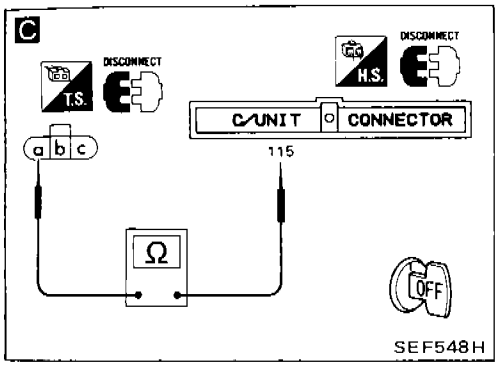

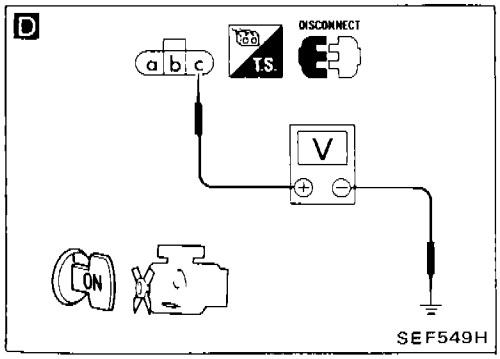

INSPECTION START

A CHECK INPUT SIGNAL.
1) Start engine and warm it up sufficiently.
2) Make sure green L.E.D. on E.C.U. blinks at 2,000 rpm.

O.K. → INSPECTION END

N.G.

B CHECK EXHAUST GAS SENSOR CIRCUIT.
1) Turn off engine.
2) Disconnect E.C.U. harness connector.
3) Disconnect exhaust gas sensor harness connector.
4) Connect a jumper wire from exhaust gas sensor harness connector terminal ⓑ to ground.
5) Check resistance between E.C.U. terminal ㉙ and ground.
Resistance:
Approximately 0Ω

N.G. → Repair or replace harness.

O.K.

C CHECK EXHAUST GAS SENSOR HEATER CIRCUIT.
Check resistance between terminals ⓐ and ⑮.
Resistance:
Approximately 0Ω

N.G. → Repair or replace harness.

O.K.

D CHECK POWER SOURCE.
1) Turn ignition switch "ON".
2) Check voltage between terminal ⓒ and ground.
Voltage: Battery voltage

N.G. →
1) Check fuse.
2) Check middle harness connector for proper connection.

O.K.

Replace exhaust gas sensor.

Reinstall any part removed.

1) Warm up engine sufficiently.
2) Set diagnosis mode to Mode I.
3) Make sure that inspection lamp (Green) on E.C.U. goes on and off periodically more than 9 times during 10 seconds at 2,000 rpm.


N.G. → Perform IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION.
(See page EF & EC-25.)

O.K.


INSPECTION END

Diagnostic Procedure 9


THROTTLE SENSOR (Code No. 43)

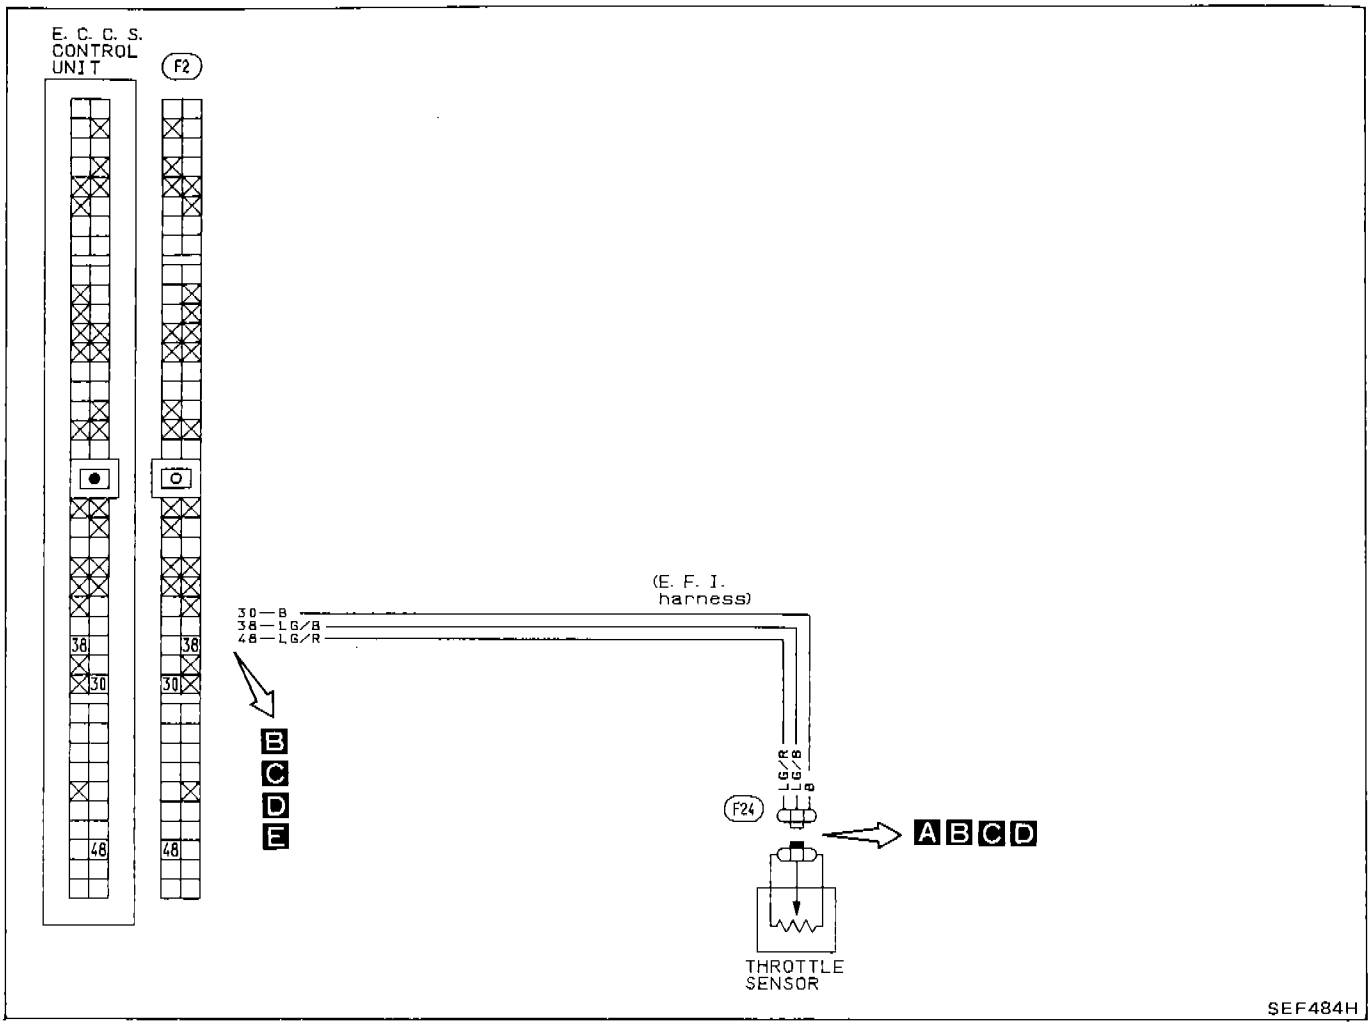



Component location

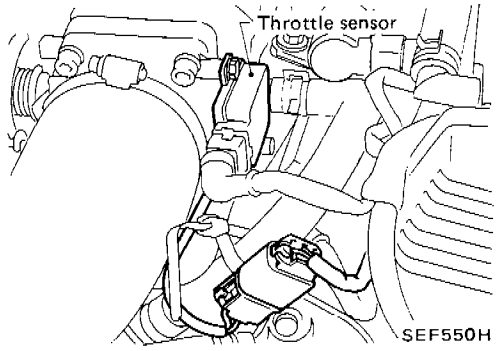



Diagnostic Procedure 9 (Cont'd)

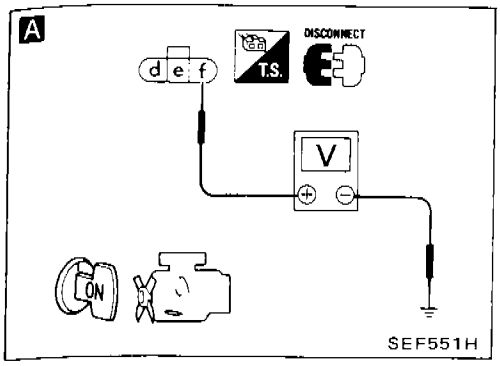

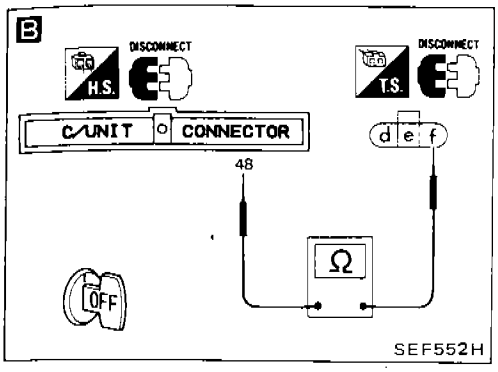

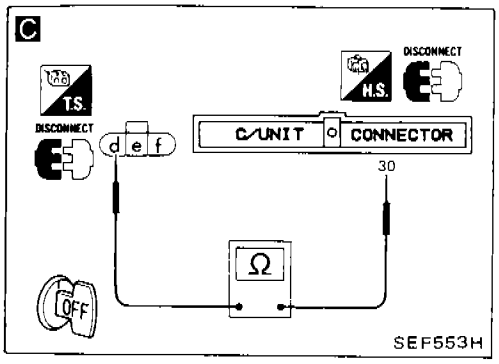

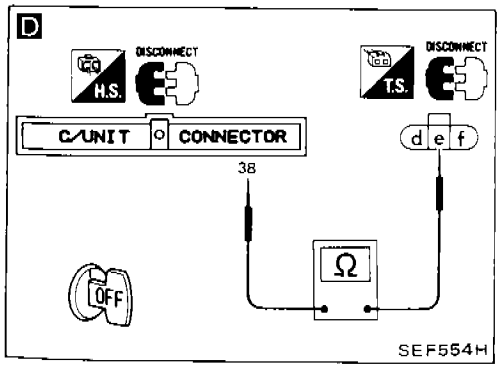

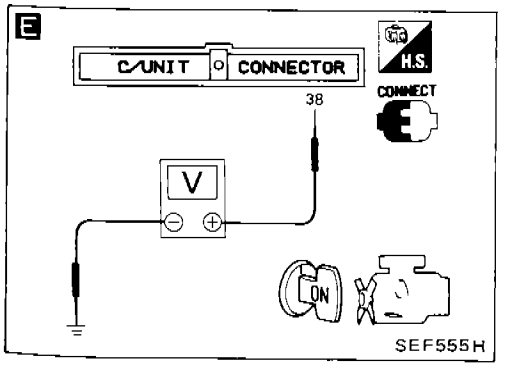

INSPECTION START

Perform self-diagnosis (Mode III).
Is code No. 43 indicated?

N.G. → INSPECTION END

O.K.

A

CHECK POWER SOURCE.
1) Disconnect throttle sensor harness connector.
2) Turn ignition switch "ON".
3) Check voltage between terminal ⓕ and ground.
Voltage:
Approximately 5.0V

N.G. →
Check the following items.
B 1) Harness continuity between throttle sensor harness connector and E.C.U.
a. Turn ignition switch "OFF".
b. Disconnect E.C.U. harness connector.
c. Check resistance between ⓕ and ㊽.
Resistance:
Approximately 0Ω
2) Middle harness connector
3) E.C.C.S. relay
(Refer to page EF & EC-128.)

O.K.

C

CHECK GROUND CIRCUIT.
1) Turn ignition switch "OFF" and disconnect E.C.U. harness connector.
2) Disconnect throttle sensor harness connector.
3) Check resistance between terminal ⓓ and E.C.U. terminal ㉚.
Resistance:
Approximately 0Ω

N.G. →
1) Check harness continuity between throttle sensor and ground.
2) E.C.U. ground circuit.

O.K.

D

CHECK THROTTLE SENSOR CIRCUIT.
Check resistance between terminal ⓔ and E.C.U. terminal ㊳.
Resistance:
Approximately 0Ω

N.G. → Repair or replace harness.

O.K.


E


CHECK INPUT SIGNAL.
1) Reconnect E.C.U. harness connector and throttle sensor harness connector.
2) Turn ignition switch "ON".
3) Make sure that voltage between terminal ㊳ and ground changes when accelerator pedal is depressed.
Voltage:
Approximately 0.5 - 4.0V

O.K. → INSPECTION END

N.G.

Diagnostic Procedure 9 (Cont'd)

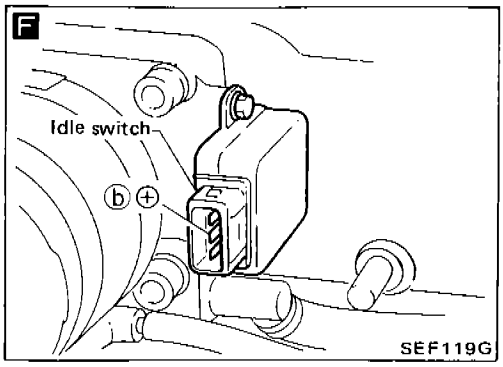

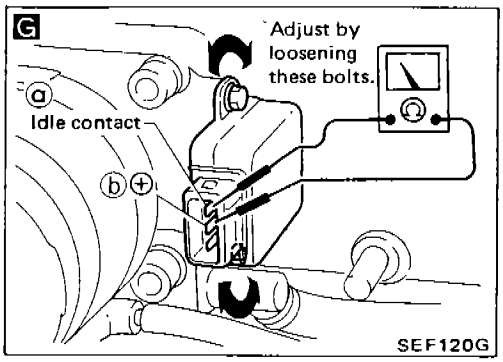

⊕

Disconnect throttle sensor harness connector.

CHECK COMPONENT (Throttle sensor).
Refer to "Electrical Components Inspection".
(See page EF & EC-124.)

CHECK IDLE SWITCH OFF → ON SPEED.


1) Reconnect throttle sensor harness connector.
F 2) Disconnect idle switch harness connector.
3) Start and warm up engine sufficiently.
4) Check idle switch OFF → ON speed with circuit tester, closing throttle valve manually.
   Idle switch OFF → ON speed:
   - M/T **Idle speed + 250±150 rpm**
   - A/T **Engine speed (Idle speed in "N" position) + 250±150 rpm**

G 5) If N.G., loosen throttle sensor installing screws, then set idle switch OFF → ON speed to the specified value by turning throttle sensor body. (Connect circuit tester with terminals ⓐ and ⓑ on idle switch side and find out OFF → ON point.)
6) Tighten throttle sensor installing screws after setting.

NOTE


Diagnostic Procedure 10


FUEL PUMP (Not self-diagnostic item)

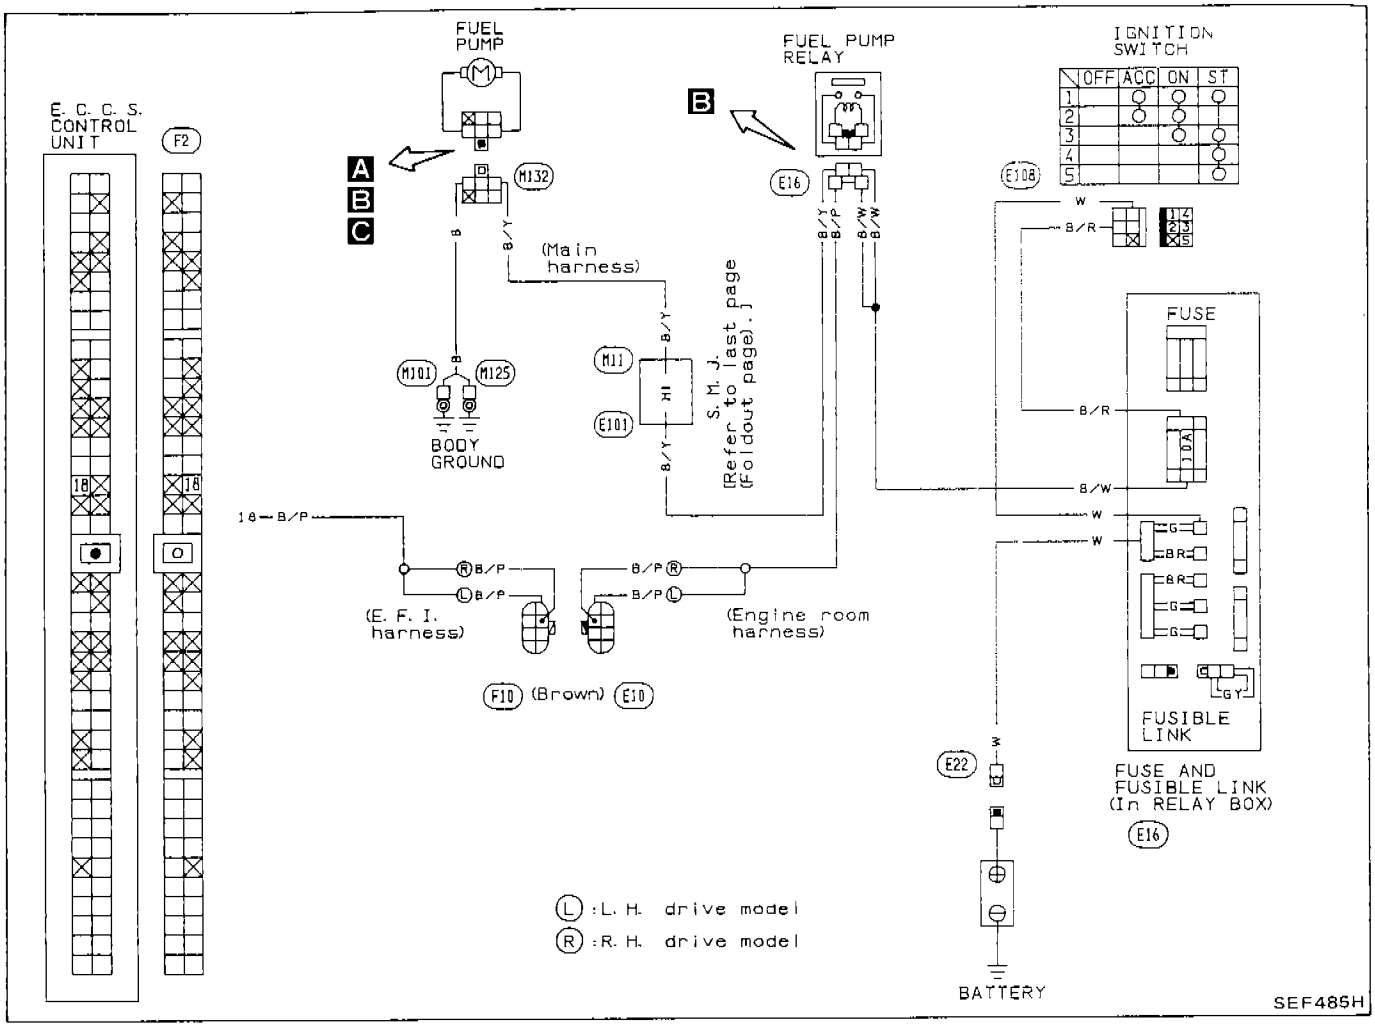


Component location


In the trunk room

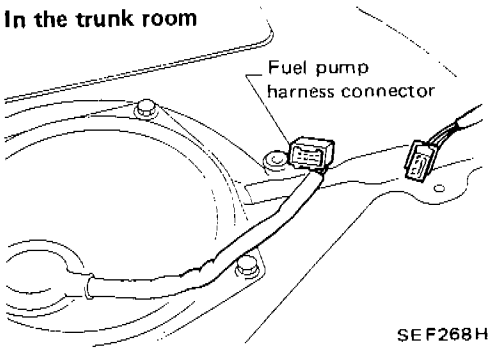


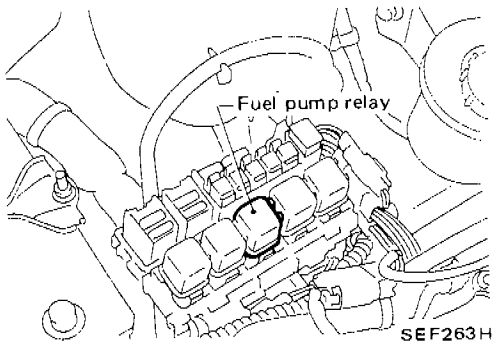

Diagnostic Procedure 10 (Cont'd)

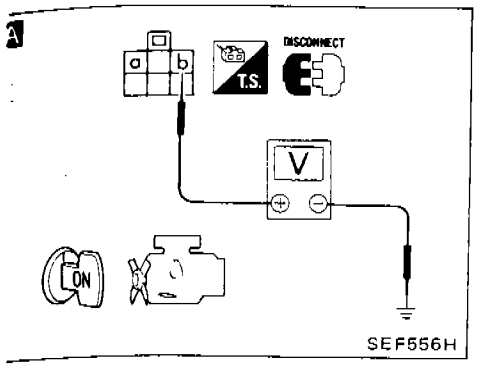

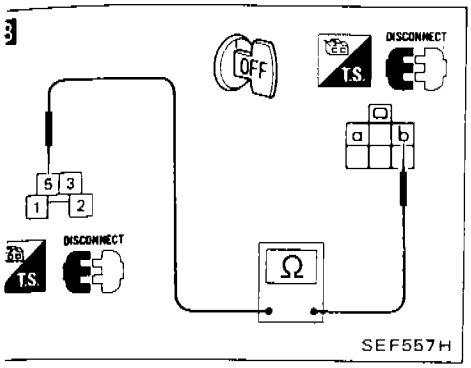

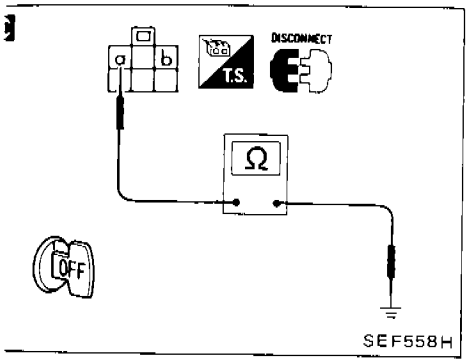

INSPECTION START

A

CHECK POWER SOURCE.
1) Disconnect fuel pump harness connector.
2) Turn ignition switch "ON".
3) Make sure there is battery voltage between terminal ⓑ and ground for 5 seconds after turning ignition switch "ON".

N.G. →

B

CHECK HARNESS CONTINUITY BETWEEN FUEL PUMP AND FUEL PUMP RELAY.
1) Turn ignition switch "OFF".
2) Disconnect fuel pump relay.
3) Disconnect fuel pump harness connector.
4) Check continuity between terminals ⑤ and ⓑ.

O.K. ↓

CHECK COMPONENT
(Fuel pump relay).
Refer to "Electrical Components Inspection".
(See page EF & EC-128.)

O.K. ↓

C

CHECK GROUND CIRCUIT.
1) Turn ignition switch "OFF".
2) Check continuity between terminal ⓐ and ground.
Continuity:
Approximately 0Ω

N.G. → Repair harness or connectors, if necessary.

O.K. ↓

CHECK COMPONENT
(Fuel pump).
Refer to "Electrical Components Inspection".
(See page EF & EC-126.)


N.G. → Replace fuel pump.

O.K. ↓


INSPECTION END


Diagnostic Procedure 11

START SIGNAL (Switch ON/OFF diagnosis)

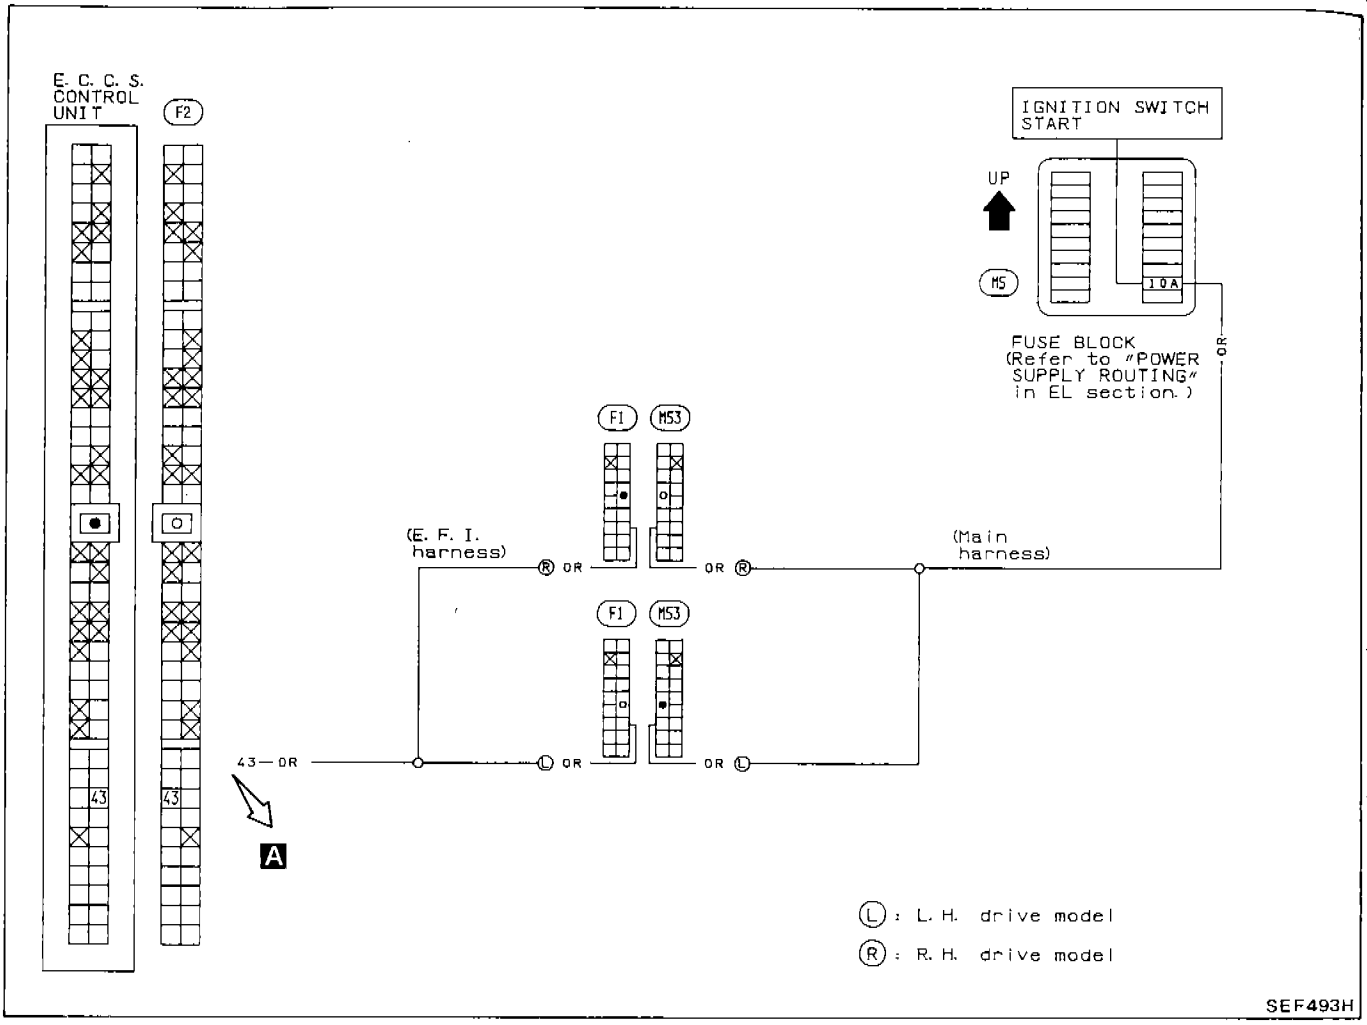


Diagnostic Procedure 11 (Cont'd)

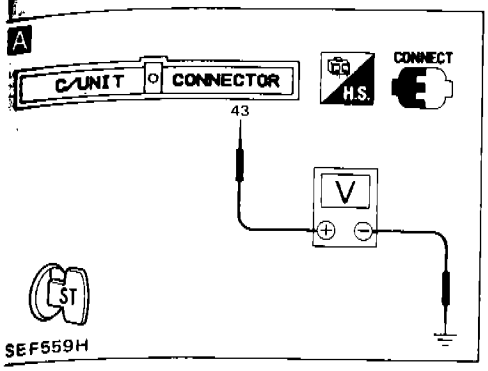

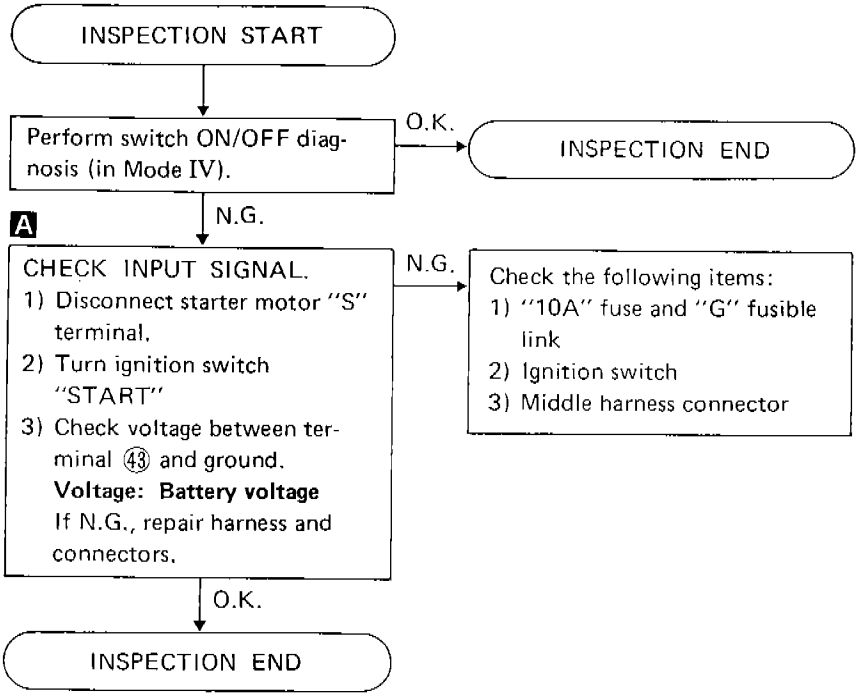


Diagnostic Procedure 12


AUXILIARY AIR CONTROL (A.A.C.) VALVE (Not self-diagnostic item)

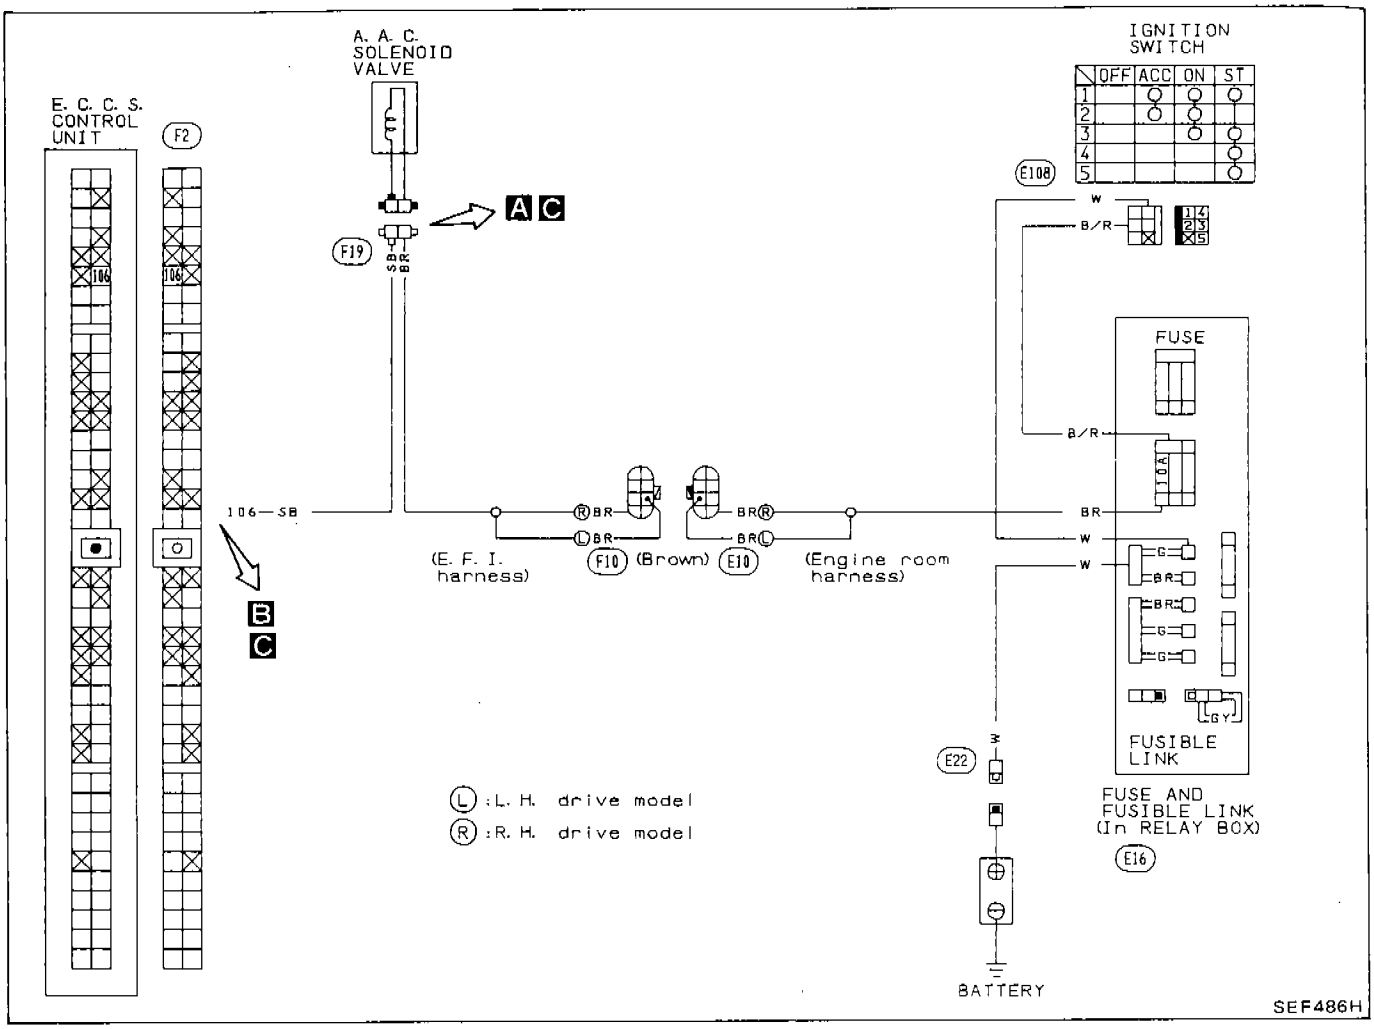



Component location

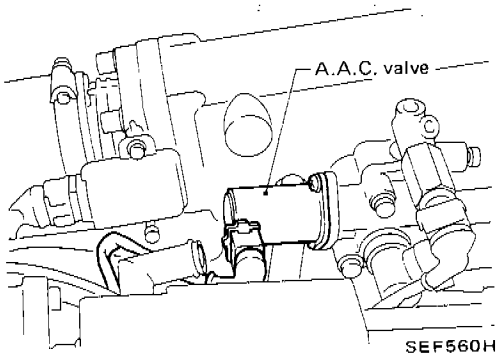

Diagnostic Procedure 12 (Cont'd)

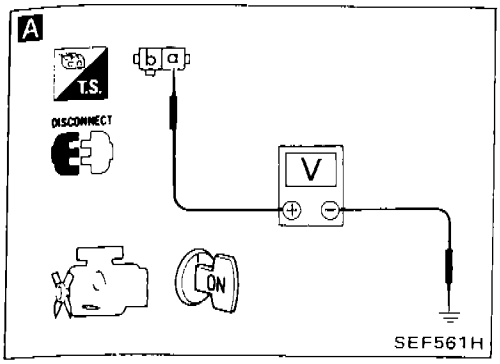

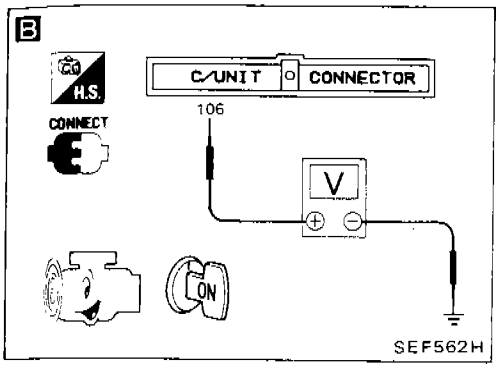

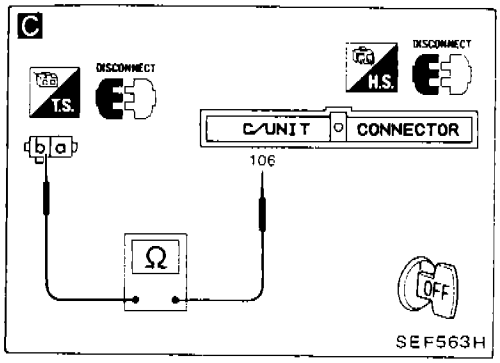

INSPECTION START

CHECK COMPONENT
(A.A.C. valve).
Refer to "Electrical Components Inspection".
(See page EF & EC-125.)

A

CHECK POWER SOURCE.
1) Disconnect A.A.C. valve harness connector.
2) Turn ignition switch "ON".
3) Check voltage between terminal ⓐ and ground.
Voltage: Battery voltage
If N.G., repair harness or connectors.

N.G. → Check the following items:
1) "10A" fuse
2) Ignition switch
3) Middle harness connector

O.K.

B

CHECK INPUT SIGNAL.
1) Reconnect A.A.C. valve harness connector.
2) Start engine and warm it up sufficiently.
3) Check voltage between E.C.U. terminal (106) and ground.
Voltage:
Approximately 6 - 12V

N.G. → C


CHECK CONTINUITY BETWEEN E.C.U. AND A.A.C. VALVE.
1) Stop engine.
2) Disconnect E.C.U. harness connector.
3) Disconnect A.A.C. valve harness connector.
4) Check resistance between terminals (106) and ⓑ.
Resistance:
Approximately 0Ω

O.K.


INSPECTION END

Diagnostic Procedure 13

I.A.A. CONTROL (F.I.C.D. CONTROL) (Not self-diagnostic item)

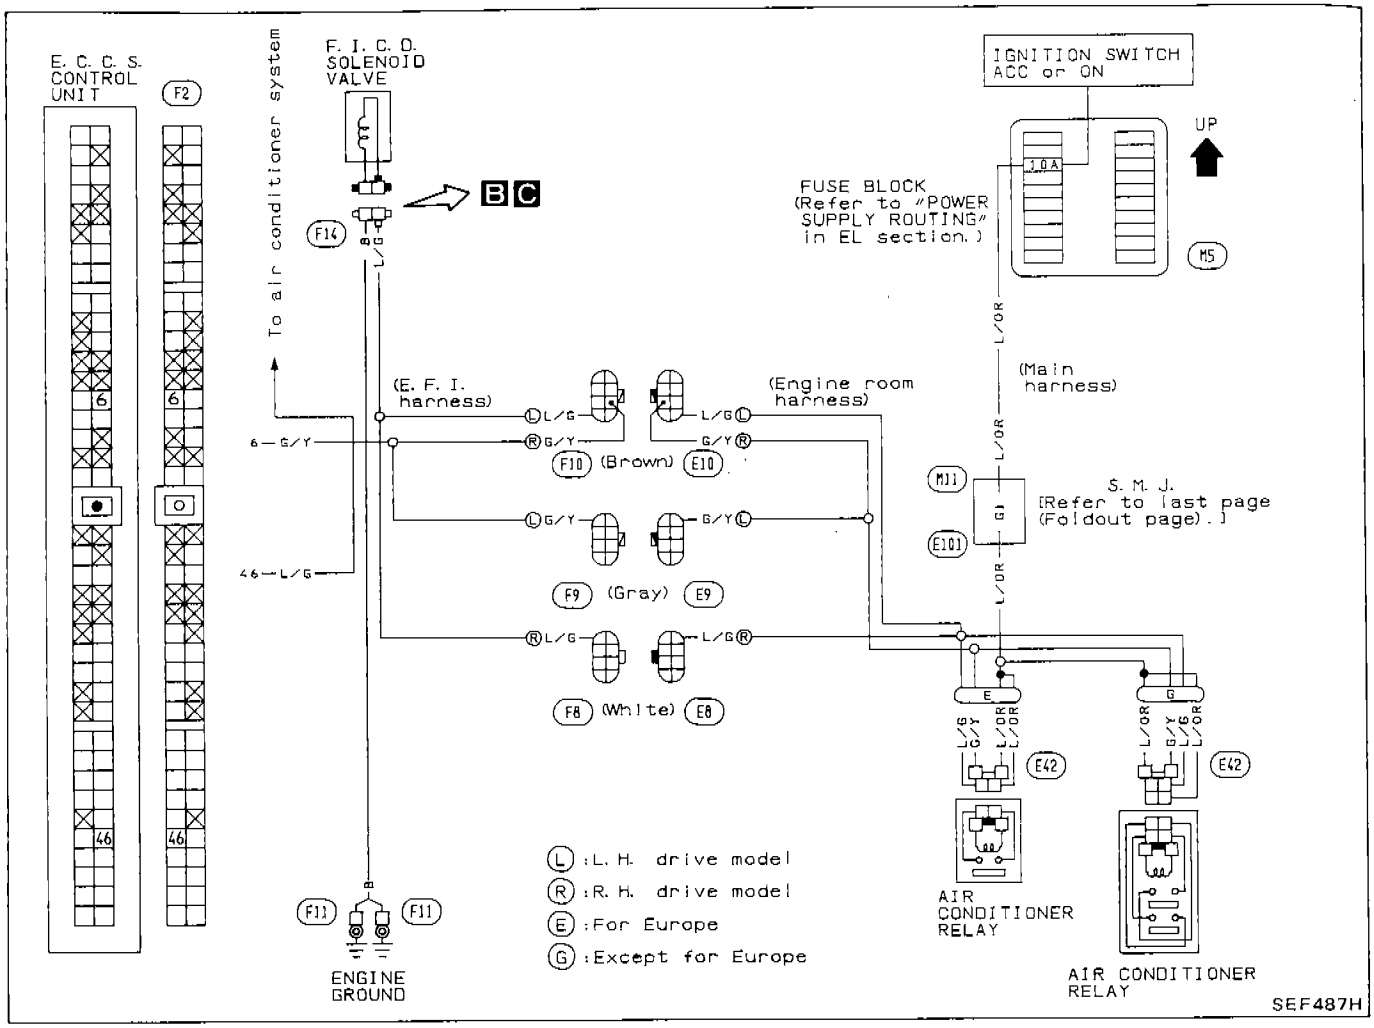


Component location

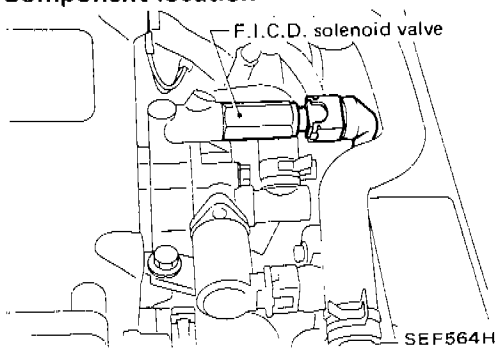


Diagnostic Procedure 13 (Cont'd)


A

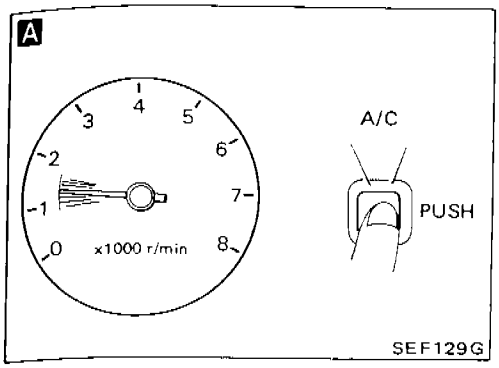

B

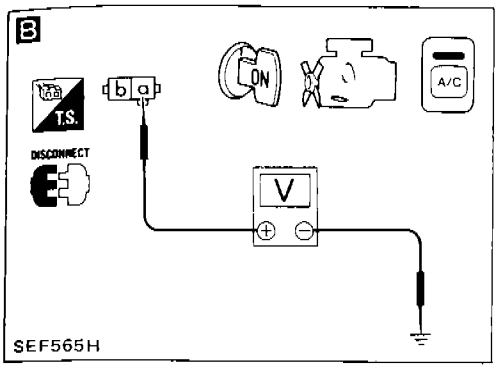

C

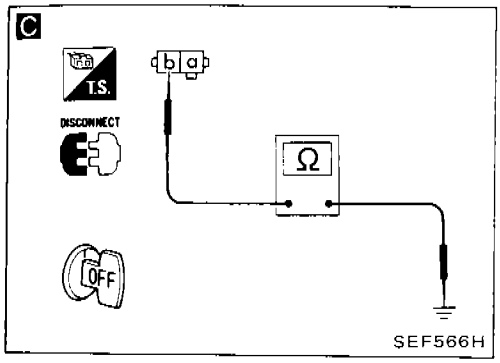

INSPECTION START

A

CHECK INPUT SIGNAL.
1) Start and warm up engine sufficiently.
2) Does engine revolution rise when air conditioner switch is turned "ON"?

Yes → CHECK IDLE SPEED WHEN AIR CONDITIONER SWITCH IS "ON".
M/T: 950±50 rpm
A/T: 900±50 rpm
If out of specification, adjust idle speed.
(See page EF & EC-25.)

O.K. → INSPECTION END

No

B

CHECK POWER SOURCE.
1) Stop engine.
2) Disconnect F.I.C.D. solenoid valve harness connector.
3) Turn ignition switch "ON".
4) Check voltage between terminal ⓐ and ground when air conditioner switch is turned "ON".

Air conditioner	Voltage between terminal ⓐ and ground
ON	Battery voltage
OFF	0V

N.G. → CHECK CONTINUITY BETWEEN AIR CONDITIONER RELAY AND F.I.C.D. SOLENOID VALVE.
Refer to HA section.

C

CHECK GROUND CIRCUIT.
1) Turn ignition switch "OFF".
2) Check resistance between terminal ⓑ and ground.
Resistance:
Approximately 0Ω

N.G. → Repair harness or connectors.

O.K.


CHECK COMPONENT
(F.I.C.D. solenoid valve).
Refer to "Electrical Components Inspection".
(See page EF & EC-127.)

N.G. → Replace F.I.C.D. solenoid valve.


O.K. → INSPECTION END

Diagnostic Procedure 14


AIR REGULATOR (Not self-diagnostic item)

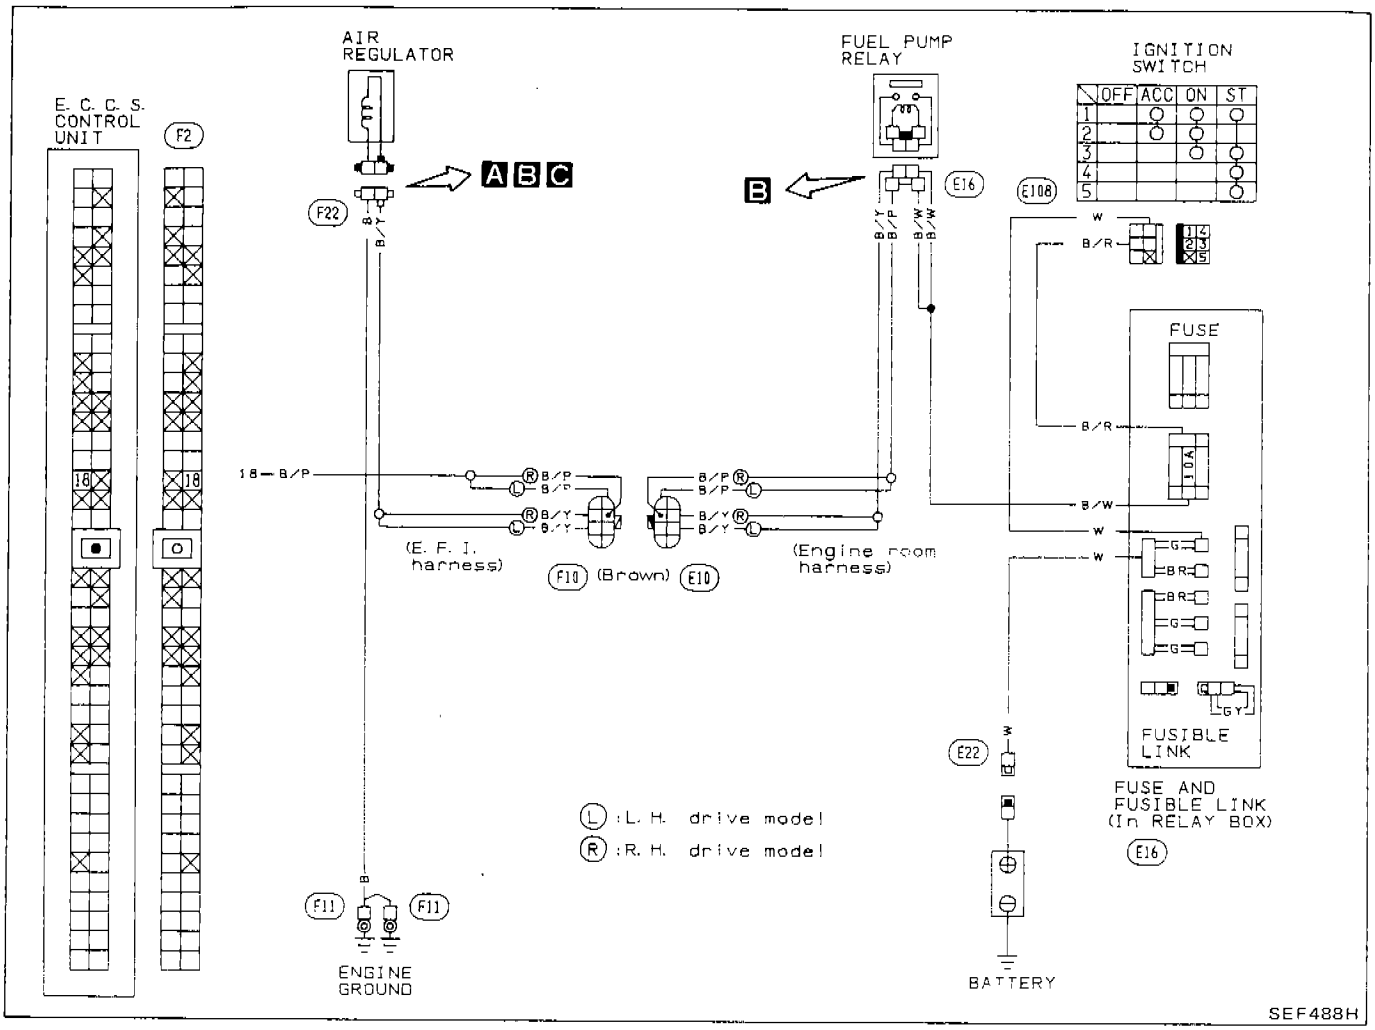



Component location

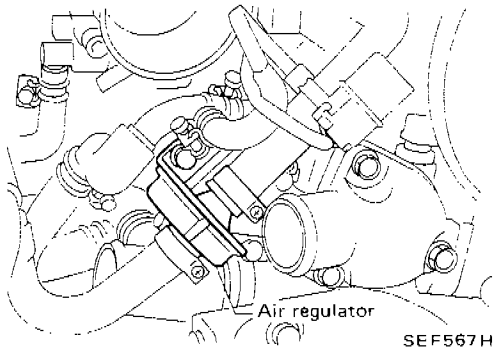

Diagnostic Procedure 14 (Cont'd)

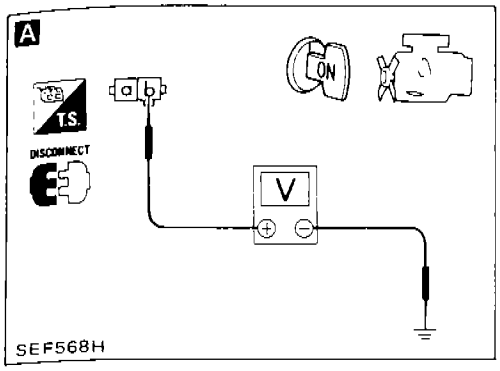

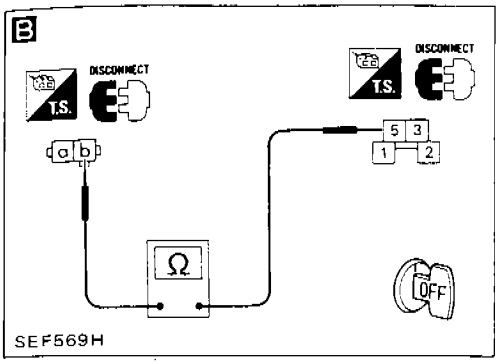

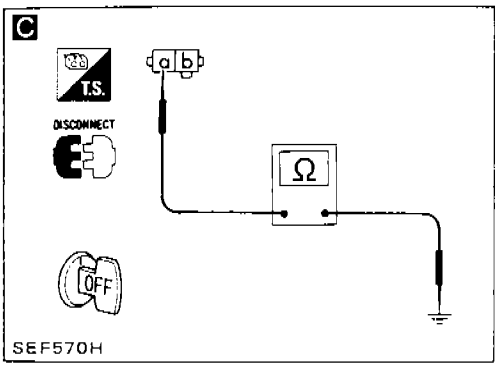

INSPECTION START

A

CHECK POWER SOURCE.
1) Disconnect air regulator harness connector.
2) Turn ignition switch "ON".
3) Make sure there is battery voltage between terminal ⓑ and ground for 5 seconds after turning ignition switch "ON".

N.G. →

B

CHECK HARNESS CONTINUITY BETWEEN AIR REGULATOR AND FUEL PUMP RELAY.
1) Turn ignition switch "OFF".
2) Disconnect fuel pump relay.
3) Check continuity between terminals ⑤ and ⓑ.
Continuity should exist.

O.K. ↓

CHECK COMPONENT (Fuel pump relay).
Refer to "Electrical Components Inspection".
(See page EF & EC-128.)

O.K. ↓

C

CHECK GROUND CIRCUIT.
1) Turn ignition switch "OFF".
2) Check continuity between terminal ⓐ and ground.
Resistance:
Approximately 0Ω

N.G. → Repair harness or connectors, if necessary.

O.K. ↓

CHECK COMPONENT (Air regulator).
Refer to "Electrical Components Inspection".
(See page EF & EC-126.)


N.G. → Replace air regulator.

O.K. ↓


INSPECTION END


Diagnostic Procedure 15

INJECTOR (Not self-diagnostic item)

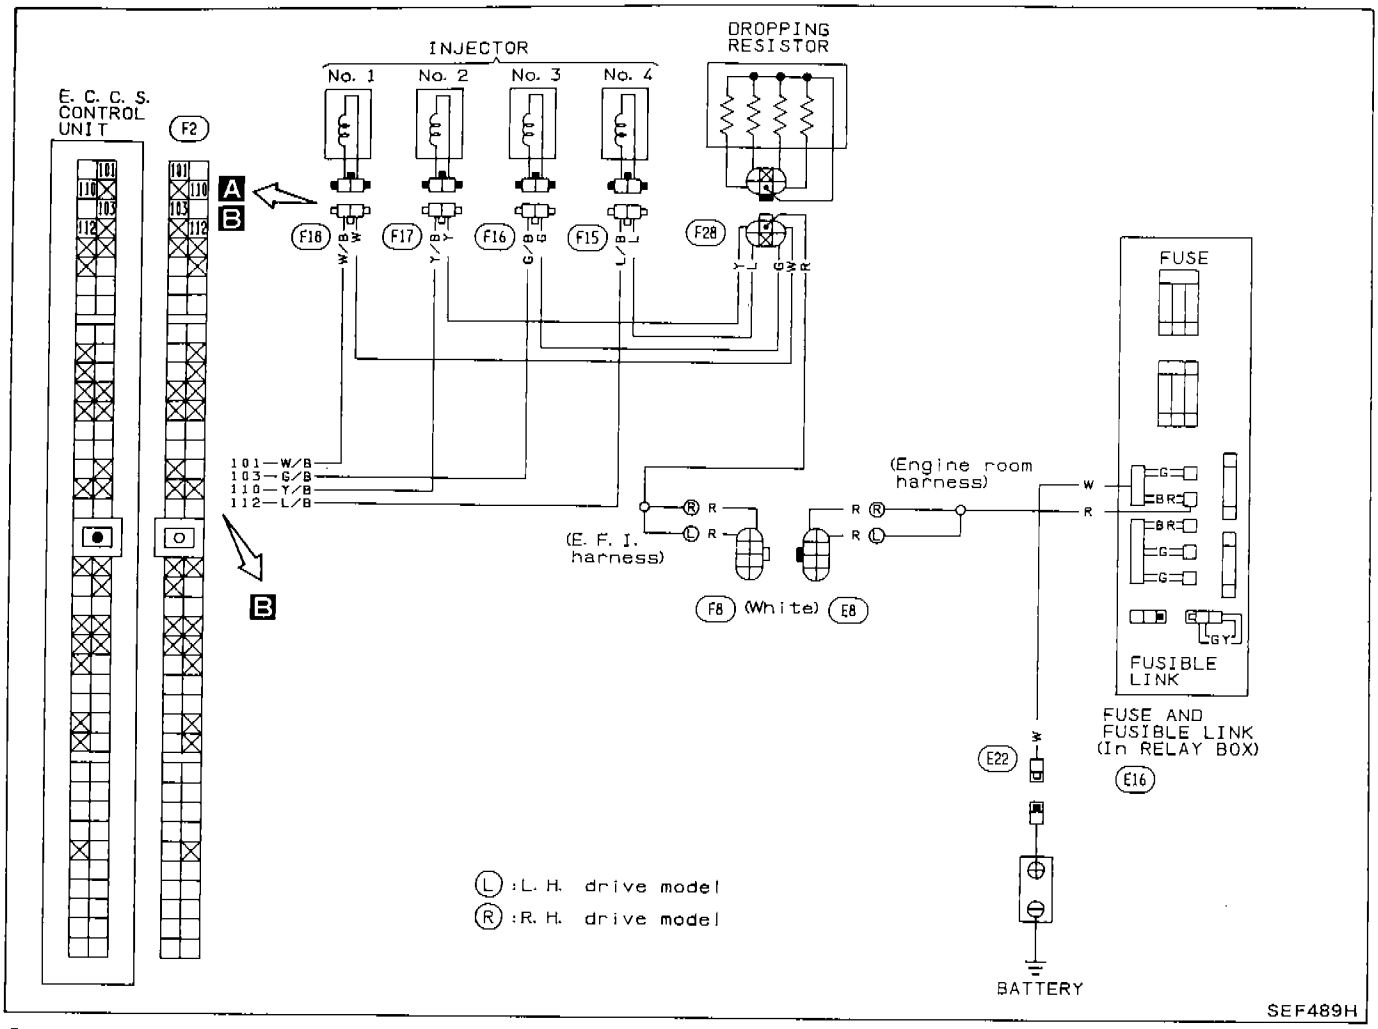



Component location

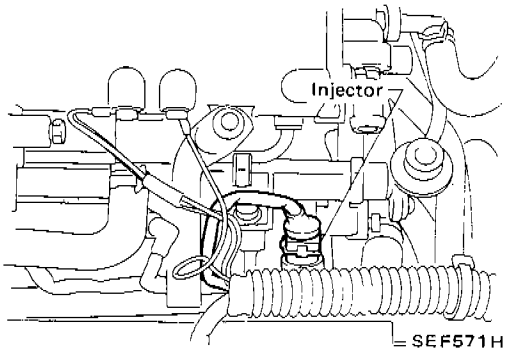

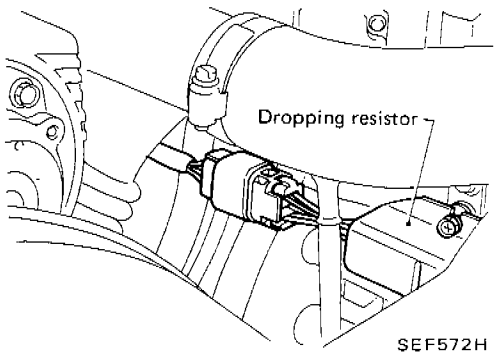

Diagnostic Procedure 15 (Cont'd)

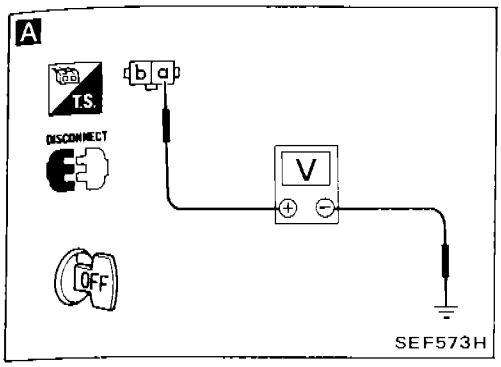

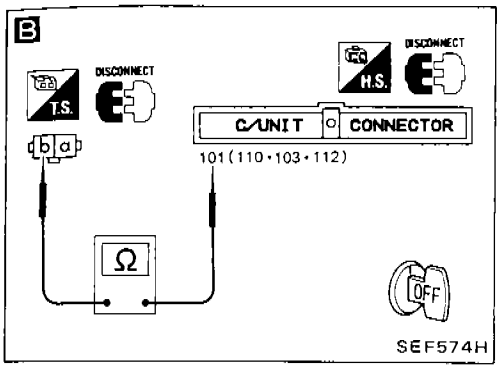

INSPECTION START

A

CHECK POWER SOURCE.
1) Disconnect injector harness connector.
2) Check voltage between terminal ⓐ and ground.
Voltage: Battery voltage

N.G. → Check the following items:
1) Dropping resistor (See page EF & EC-128.)
2) "BR" fusible link
3) Middle harness connector

O.K.

B

CHECK GROUND CIRCUIT.
1) Disconnect E.C.U. harness connector.
2) Check resistance between terminals ⓑ and (101) (No. 1 cylinder), (110) (No. 2 cylinder), (103) (No. 3 cylinder), (112) (No. 4 cylinder).
Resistance:
Approximately 0Ω

N.G. → Repair harness or connectors.

O.K.

CHECK COMPONENT (Injector).
Refer to "Electrical Components Inspection".
(See page EF & EC-125.)


N.G. → Replace injector.

O.K.


INSPECTION END

Diagnostic Procedure 16


PRESSURE REGULATOR (P.R.) CONTROL SOLENOID VALVE (Not self-diagnostic item)

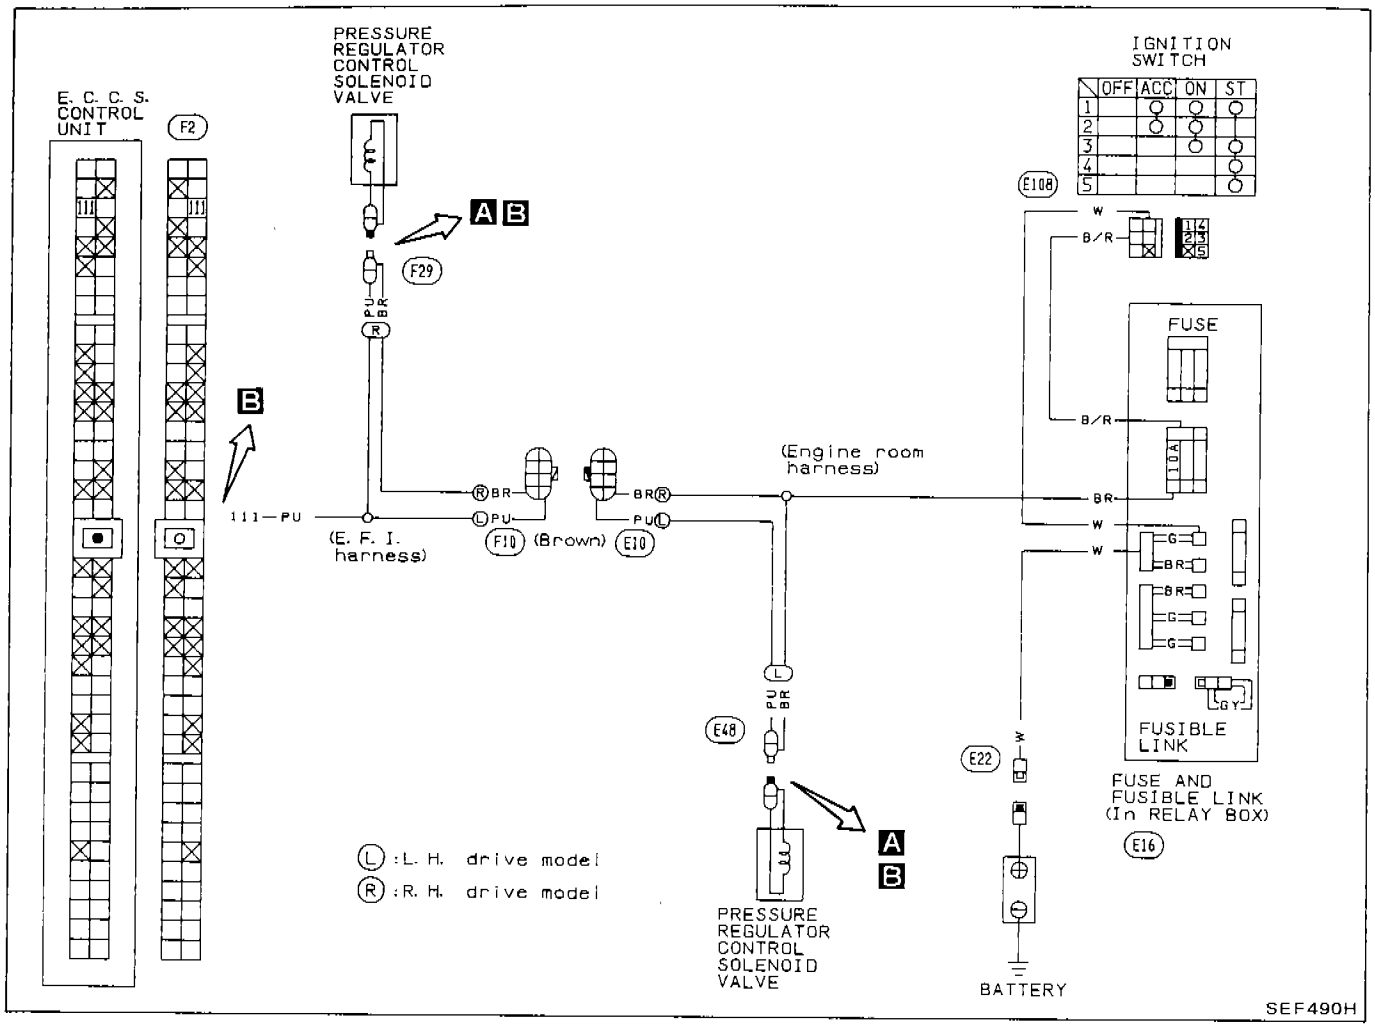


Component location

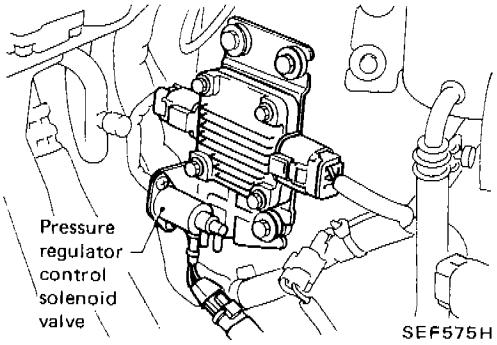

Diagnostic Procedure 16 (Cont'd)

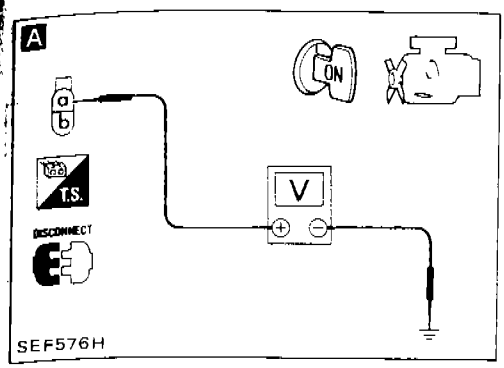

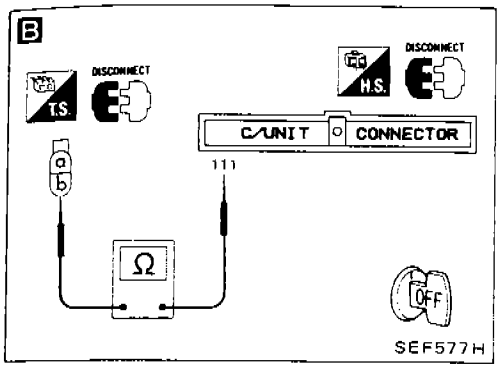

INSPECTION START

A

CHECK POWER SOURCE.
1) Disconnect pressure regulator control solenoid valve harness connector.
2) Turn ignition switch "ON".
3) Check voltage between terminal ⓐ and ground.
Voltage: Battery voltage

N.G. → Check the following items:
1) "10A" fuse
2) Ignition switch
3) Middle harness connector

O.K.

B

CHECK GROUND CIRCUIT.
1) Turn ignition switch "OFF".
2) Disconnect E.C.U. harness connector.
3) Check resistance between terminals ⓑ and (111).
Resistance:
Approximately 0Ω

N.G. → Repair harness or connectors.

O.K.

CHECK COMPONENT
(Pressure regulator control solenoid valve).
Refer to "Electrical Components Inspection".
(See page EF & EC-126.)


N.G. → Replace pressure regulator control solenoid valve.

O.K.


INSPECTION END


Diagnostic Procedure 17

NEUTRAL AND INHIBITOR SWITCH (Not self-diagnostic item)

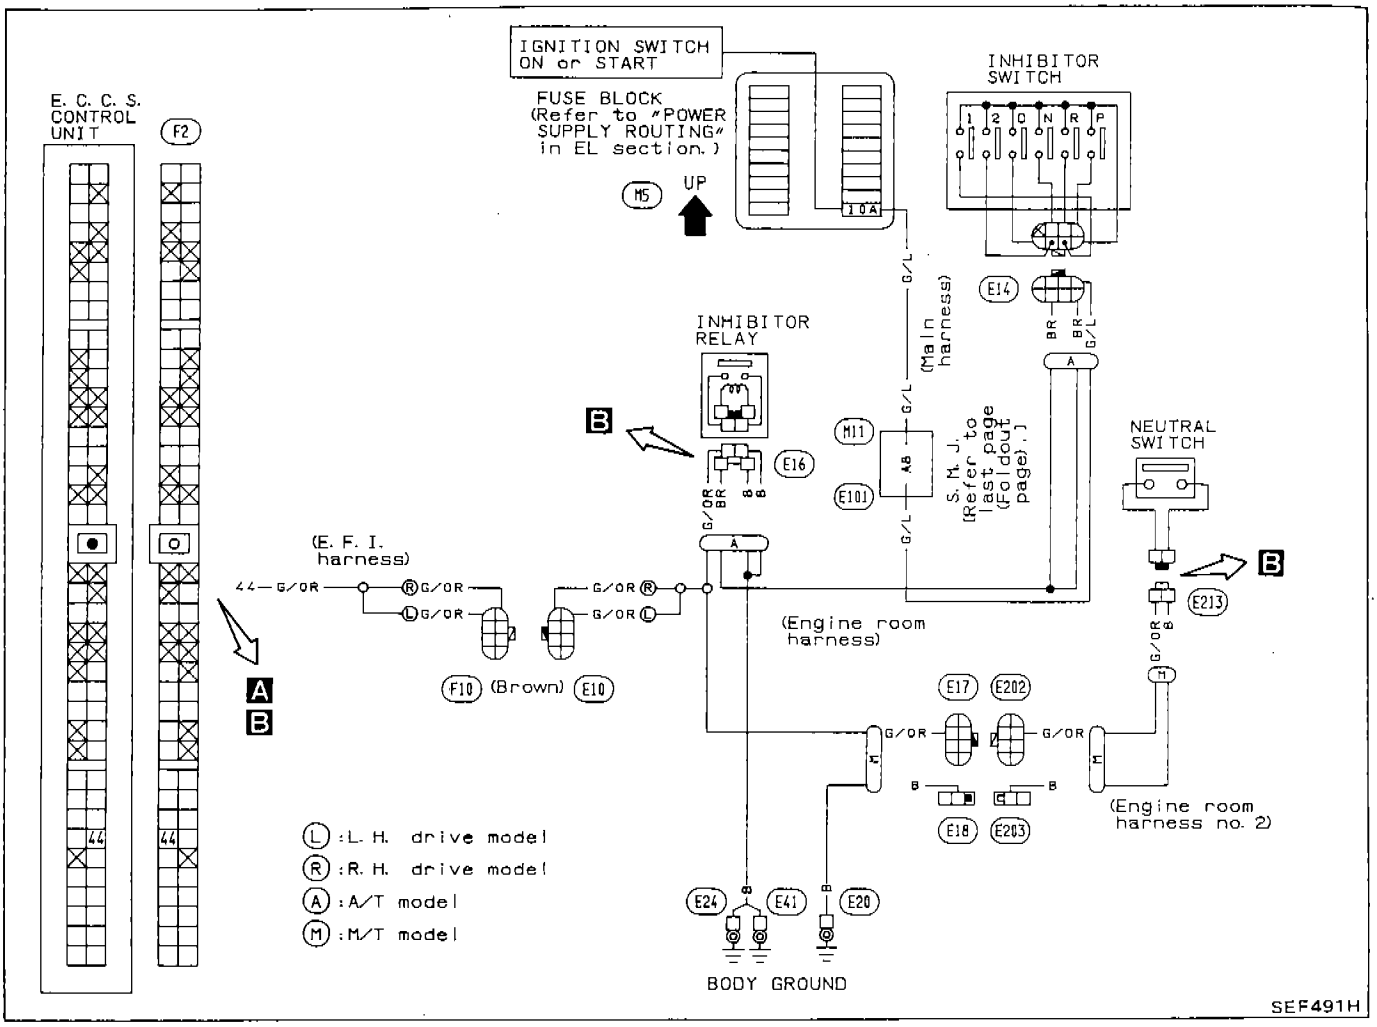

Diagnostic Procedure 17 (Cont'd)

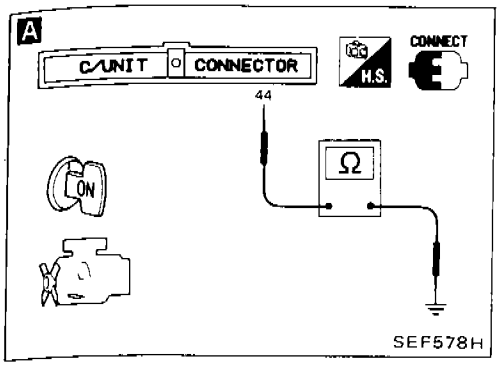

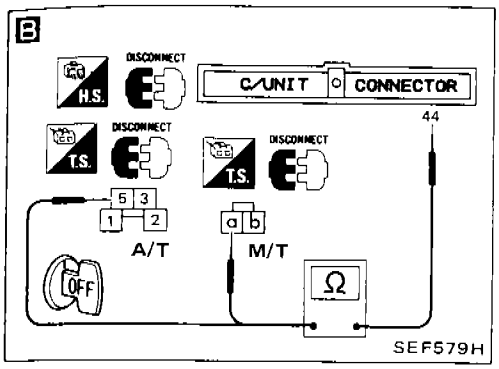

INSPECTION START

A

CHECK INPUT SIGNAL.
1) Turn ignition switch "ON".
2) Check continuity between terminal ㊹ and ground.

M/T model

Shift lever position	Continuity
"Neutral"	Yes
Except "Neutral"	No

A/T model

Shift lever position	Continuity
"Neutral" or "Park"	Yes
Except "Neutral" or "Park"	No

O.K. → INSPECTION END

N.G. ↓

B

1) Turn ignition switch "OFF".
— **M/T model** —
2) Disconnect E.C.U. harness connector and neutral switch harness connector.
3) Check resistance between terminals ㊹ and ⓐ.
— **A/T model** —
2) Disconnect E.C.U. harness connector and inhibitor relay.
3) Check resistance between terminals ㊹ and ⑤.
Resistance:
Approximately 0Ω

N.G. → Repair or replace harness or connectors.

O.K. ↓

CHECK COMPONENT.
M/T model
- Neutral switch

A/T model
- Inhibitor switch and relay

(See page EF & EC-127.)


N.G. → Repair or replace.

O.K. ↓


INSPECTION END

Diagnostic Procedure 18

ACCELERATION CUT CONTROL (Not self-diagnostic item)

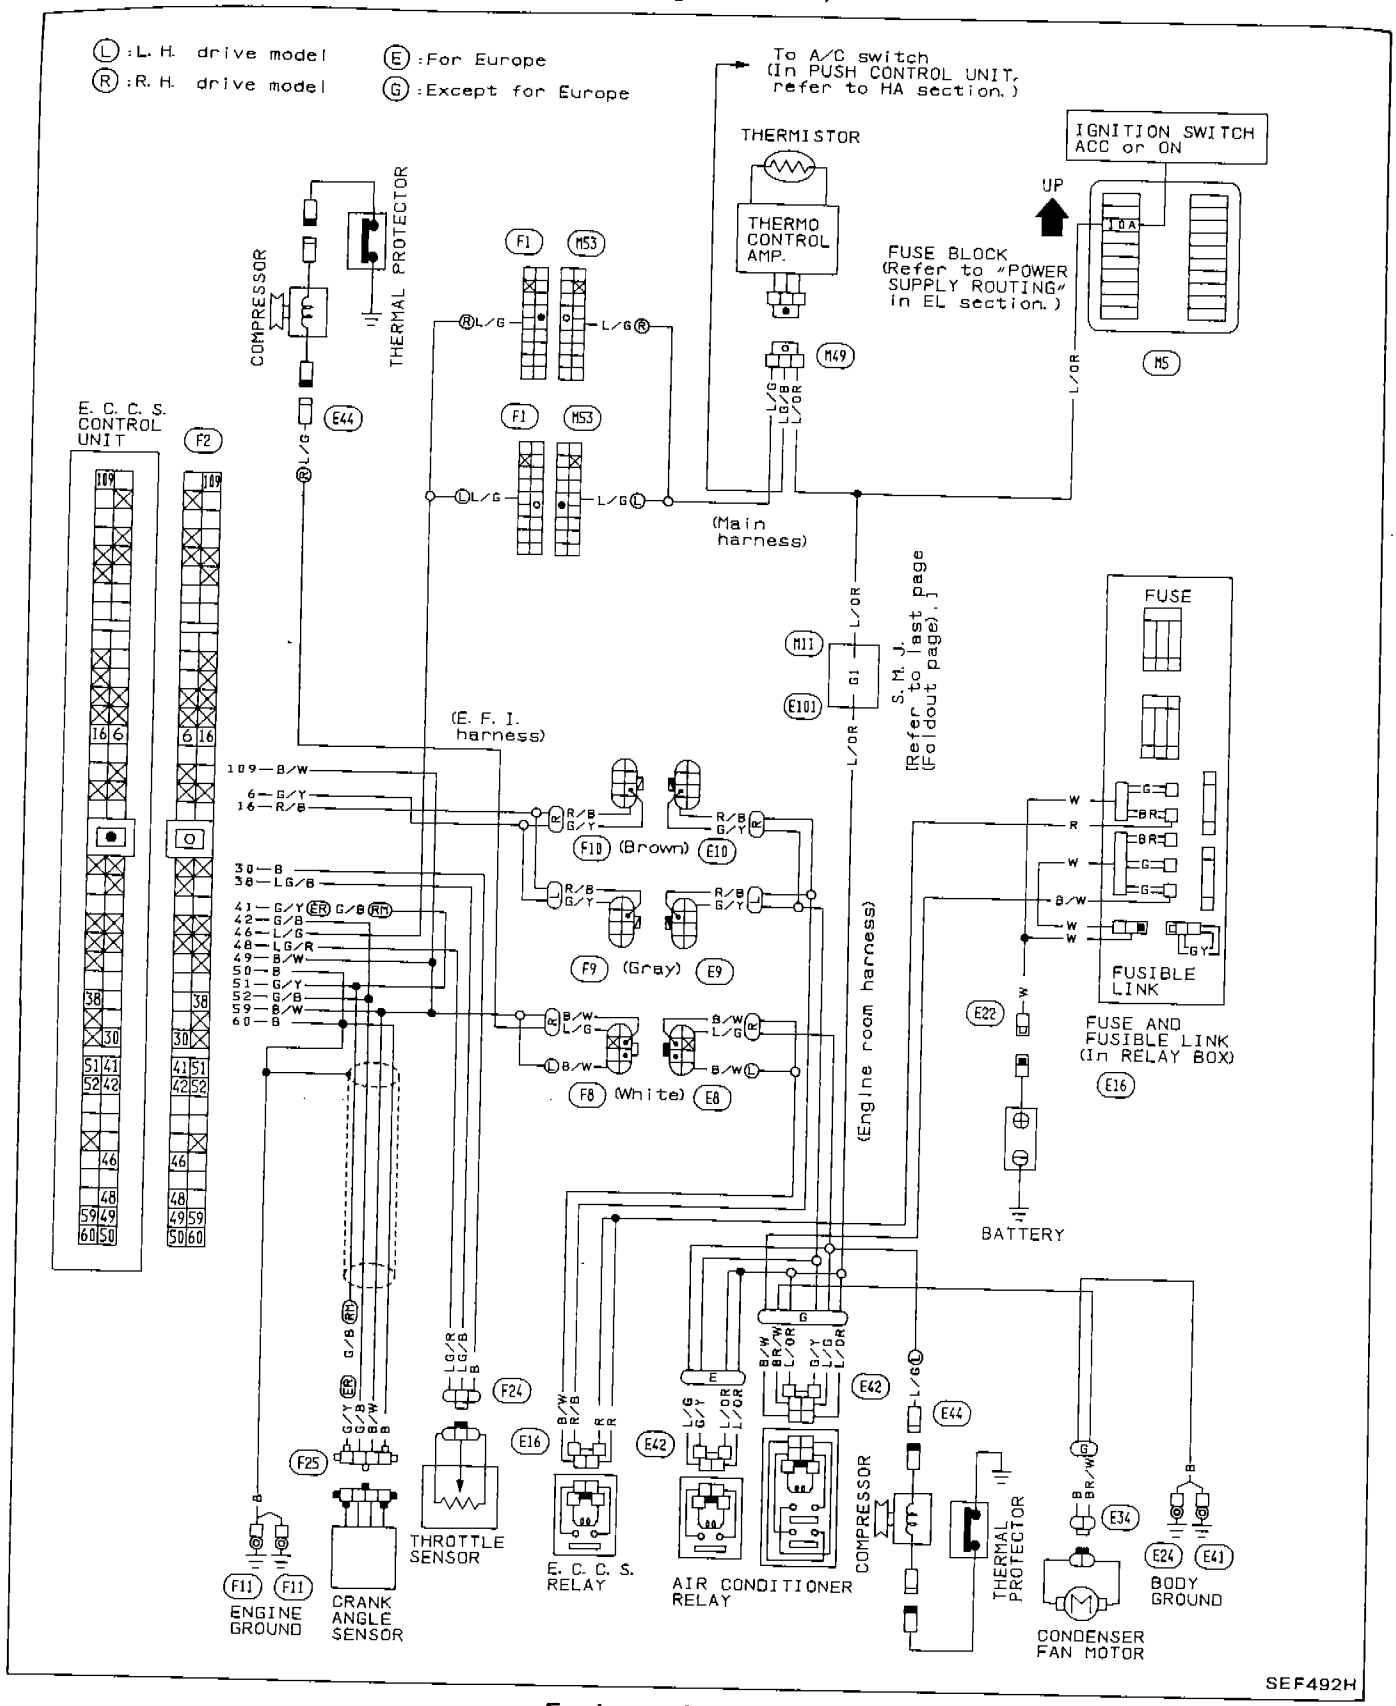


For inspection of this system, refer to HA section.

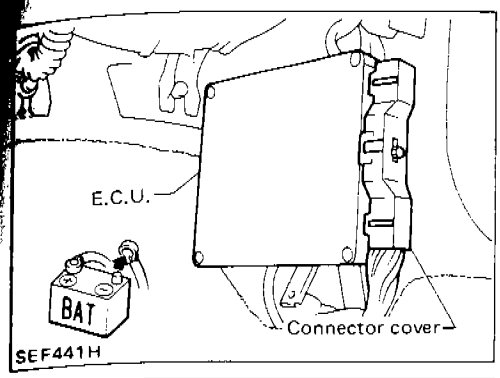


Electrical Components Inspection

MEASUREMENT VOLTAGE OR RESISTANCE OF E.C.U.

1. Disconnect battery ground cable.
2. Remove dash side panel from vehicle.
3. Disconnect connector cover from E.C.U.

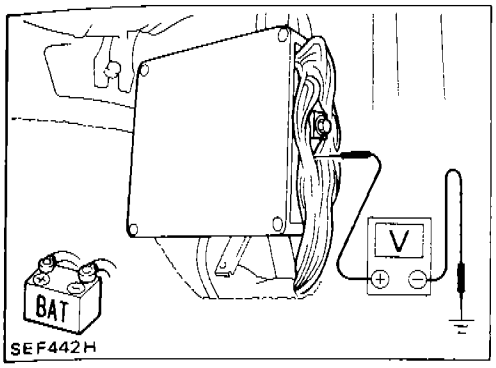

4. Connect battery ground cable.
5. Measure the voltage at each terminal by following "E.C.U. inspection table".

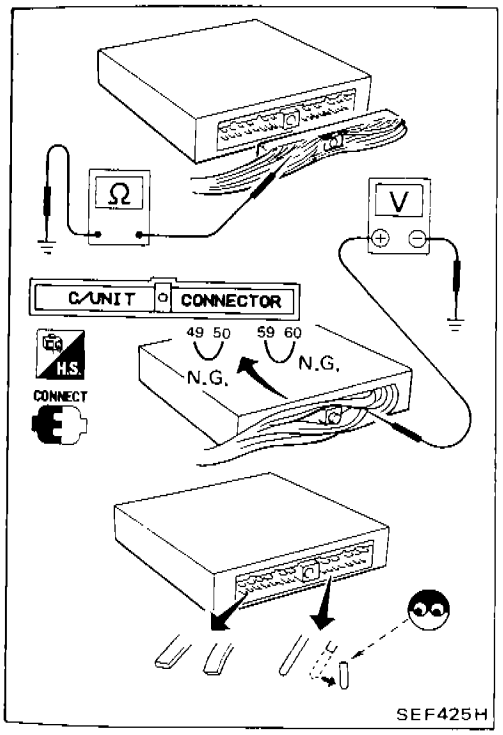

CAUTION:

a. **Perform all voltage measurements with the connectors connected.**
b. **Perform all resistance measurements with the connectors disconnected.**
c. **Make sure that there are not any bends or breaks on E.C.U. pin terminal before measurements.**
d. **Do not touch tester probes between terminals ㊾ and ㊿, ㊾ and ㊿.**

Electrical Components Inspection (Cont'd)

E.C.U. INPUT/OUTPUT SIGNAL INSPECTION

E.C.U. inspection table

*Data are reference values.

TERMINAL NO.	ITEM	CONDITION	DATA*
1	Ignition signal for No. 1 cylinder	Engine is running. — Idle speed — Engine speed is approximately 2,500 rpm.	0.06V 0.12 - 0.13V
2	Ignition signal for No. 2 cylinder		
3	Ignition signal for No. 3 cylinder		
11	Ignition signal for No. 4 cylinder		
6	Air conditioner relay	A/C switch "OFF"	BATTERY VOLTAGE (11 - 14V)
		A/C switch "ON"	0 - 1.0V
7	Tachometer	Engine is running. — Idle speed — Engine speed is approximately 2,500 rpm.	0.9V 1.7V
16	E.C.C.S. relay	Ignition switch "ON"	0 - 1.0V
		Ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
18	Fuel pump relay	Ignition switch "ON" — For 5 seconds after turning ignition switch "ON" Engine is running.	0.7 - 0.9V
		Ignition switch "ON" — In 5 seconds after turning ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
23	Detonation sensor	Engine is running. — Idle speed	3 - 4V

Electrical Components Inspection (Cont'd)

*Data are reference values.

TERMINAL NO.	ITEM	CONDITION	DATA*
27	Air flow meter	Engine is running. — Idle speed — Engine speed is approximately 2,500 rpm.	1.6V 2.2V Output voltage varies with engine revolution.
28	Engine temperature sensor	Engine is running.	1.0 - 5.0V Output voltage varies with engine coolant temperature.
29	Exhaust gas sensor	Engine is running. — After warming up sufficiently	0 - Approximately 1.0V
38	Throttle sensor	Ignition switch "ON"	0.5 - 4.0V Output voltage varies with the throttle valve opening angle.
41 51	Crank angle sensor (Reference signal)	Engine is running. **Do not run engine at high speed under no-load.**	0.6 - 0.8V
42 52	Crank angle sensor (Position signal)	Engine is running. **Do not run engine at high speed under no-load.**	2.0 - 2.6V
43	Start signal	Cranking	8 - 12V
44	Neutral switch & Inhibitor switch	Ignition switch "ON" — Neutral/Parking	0V
		Ignition switch "ON" — Except the above gear position	4 - 5V
45	Ignition switch	Ignition switch "OFF"	0V
		Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
46	Air conditioner	Engine is running. — Both air conditioner switch and blower switch are "ON".	0V

Electrical Components Inspection (Cont'd)

*Data are reference values.


TERMINAL NO.	ITEM	CONDITION	DATA*
49 59	Power source for E.C.U.	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
54	Idle switch (⊖ side)	Ignition switch "ON" └ Throttle valve: idle position	Approximately 8 - 10V
		Ignition switch "ON" └ Throttle valve: Any position except idle position	0V
57	Idle switch (⊕ side)	Ignition switch "ON" └ Throttle valve: idle position	Approximately 8 - 10V
		Ignition switch "ON" └ Throttle valve: Any position except idle position	BATTERY VOLTAGE (11 - 14V)
58	Power source (Back-up)	Ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
101	Injector No. 1	Engine is running.	BATTERY VOLTAGE (11 - 14V)
103	Injector No. 3		
110	Injector No. 2		
112	Injector No. 4		
106	Auxiliary air control (A.A.C.) valve	Engine is running. └ Idle speed	8 - 12V
		Engine is running. ├ Steering wheel is turned. ├ Air conditioner is operating. ├ Rear defogger is "ON". └ Headlamps are in high position.	6 - 8V

Electrical Components Inspection (Cont'd)

*Data are reference values.

TERMINAL NO.	ITEM	CONDITION	DATA*
111	Pressure regulator (P.R.) control solenoid valve	Ignition switch "ON" └For approximately 3 minutes after starting engine. Water temperature is above 60°C (140°F).	0.8 - 1.0V
		Ignition switch "ON" └In approximately 3 minutes after starting engine. [Water temperature is above 60°C (140°F).]	BATTERY VOLTAGE (11 - 14V)
		Ignition switch "ON" or "START". [Water temperature is below 60°C (140°F).]	

E.C.U. pin connector terminal layout




H.S.

SEF424H

Electrical Components Inspection (Cont'd)

CRANK ANGLE SENSOR

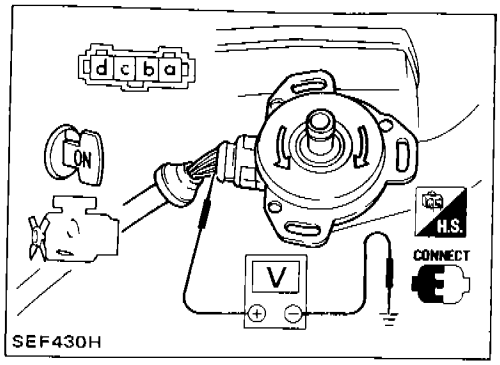

SEF430H


1. Remove crank angle sensor from engine.
2. Check voltage between terminal ⓐ and ground, and terminal ⓑ and ground while rotating the crank angle sensor shaft as shown. At this time make sure that injectors operating sound can be heard.

Voltage:

0V and approximately 5V appear alternately.

After this inspection, malfunction code No. 11 might be displayed though the crank angle sensor is functioning properly. In this case erase the stored memory.

AIR FLOW METER

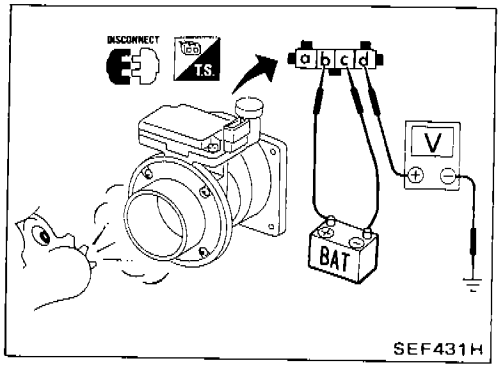


SEF431H

1. Remove air flow meter from vehicle and visually check hot wire air passage for dust.
2. Supply battery voltage between terminals ⓑ and ⓒ.
3. Check voltage between terminal ⓓ and ground while blowing air flow meter as shown.

Voltage:

When blowing Approximately 2V
Not blowing Approximately 1V

IDLE SWITCH

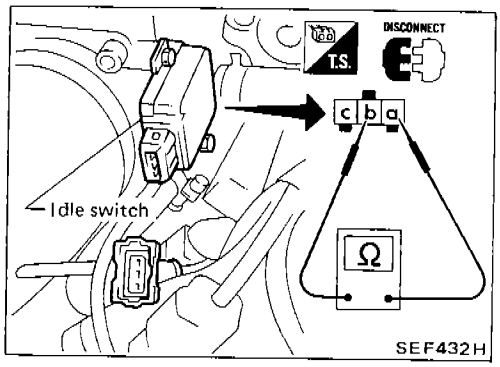


SEF432H

1. Disconnect idle switch harness connector.
2. Check continuity between terminals ⓐ and ⓑ.

Accelerator pedal	Continuity
Completely released	Yes
Depressed	No

THROTTLE SENSOR

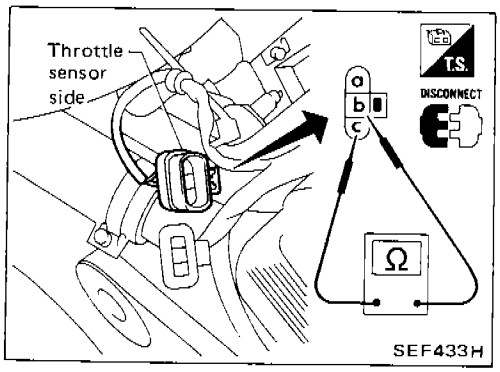


SEF433H

1. Disconnect throttle sensor harness connector.
2. Make sure that resistance between terminals ⓑ and ⓒ changes when opening throttle valve manually.

Accelerator pedal	Resistance
Completely released	Approximately 1 kΩ
Partially depressed	1 - 9 kΩ
Completely depressed	Approximately 9 kΩ

ENGINE TEMPERATURE SENSOR

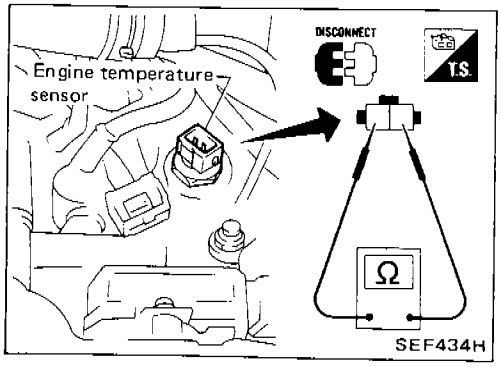


SEF434H

1. Disconnect engine temperature sensor harness connector.
2. Check engine temperature sensor resistance.


Temperature °C (°F)	Resistance (kΩ)
20 (68)	Approx. 2.5
80 (176)	Approx. 0.3

Electrical Components Inspection (Cont'd)

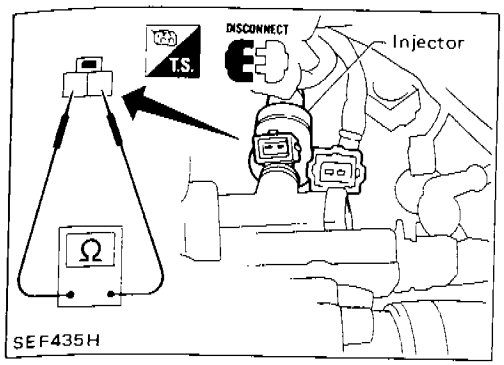

INJECTOR


1. Disconnect injector harness connector.
2. Check injector resistnace.
   Resistance:
   2 - 3Ω
3. Remove injector and check nozzle for clogging if necessary.

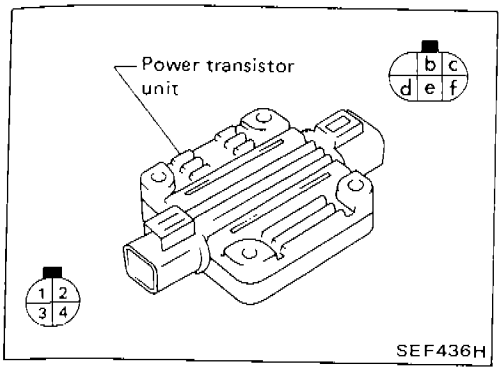

POWER TRANSISTOR


1. Disconnect power transistor harness connectors.
2. Check continuity between terminals as shown below:

Terminal combination				Tester polarity	Continuity	Tester polarity	Continuity
1 d	2 d	3 d	4 d	⊕ ⊖	Yes	⊖ ⊕	No
1 c	2 b	3 f	4 e	⊕ ⊖	Yes	⊖ ⊕	No
d c	d b	d f	d e	⊕ ⊖	Yes	⊖ ⊕	Yes

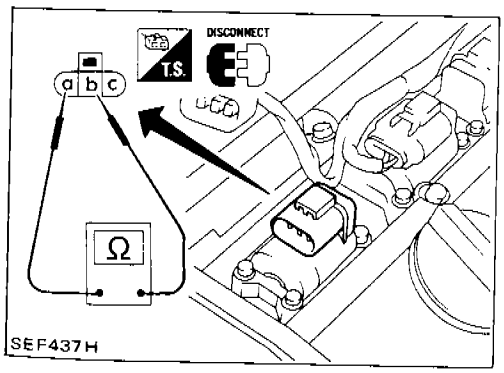

IGNITION COIL


1. Disconnect ignition coil harness connector.
2. Check resistance between terminals ⓐ and ⓑ.
   Resistance:
   0.6 - 0.8Ω

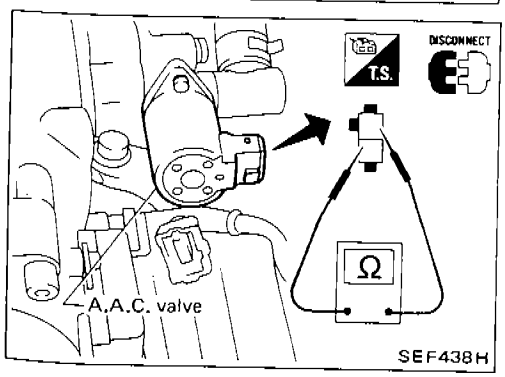

A.A.C. VALVE


1. Disconnect A.A.C. valve harness connector.
2. Check A.A.C. valve resistance.
   Resistance:
   Approximately 9 - 10Ω

Electrical Components Inspection (Cont'd)

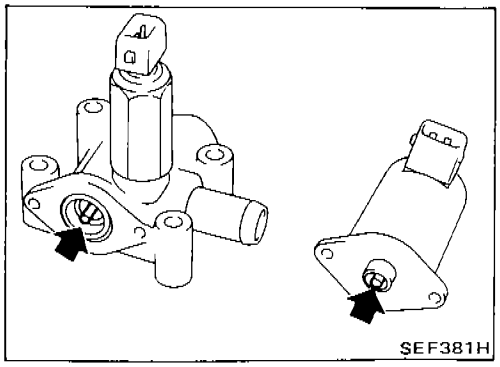
SEF381H


3. Remove A.A.C. valve
4. Check plunger for seizure or sticking.
5. Check spring for damage.

PRESSURE REGULATOR CONTROL SOLENOID VALVE

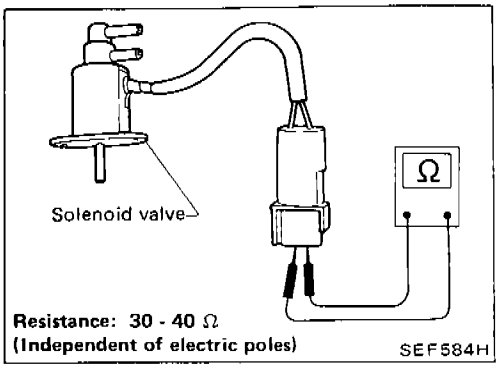

SEF584H

1. Check it for electric continuity.
   Resistance:
   30 - 40 Ω
   (Above resistance has no change even if the polarity of the circuit tester is changed when measuring it.)

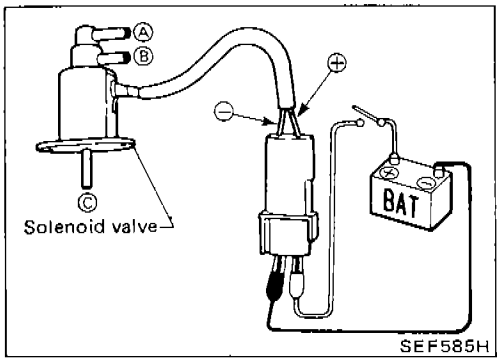


SEF585H

2. Check the solenoid valve for normal operation. Supply it with battery voltage, and check whether there is continuity between ports A, B and C.

Item \ Solenoid valve	OFF	ON
Continuity	B-C	A-B


AIR REGULATOR

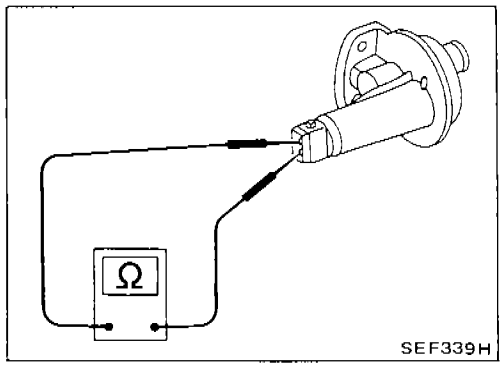

SEF339H

1. Check air regulator resistance.
   Resistance:
   Approximately 70 Ω
2. Check air regulator for clogging.


FUEL PUMP

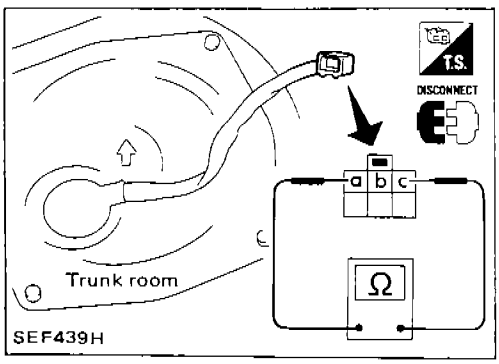

SEF439H


1. Disconnect fuel pump harness connector. Check resistance between terminals ⓐ and ⓒ.
   Resistance:
   Approximately 0.5 Ω

Electrical Components Inspection (Cont'd)

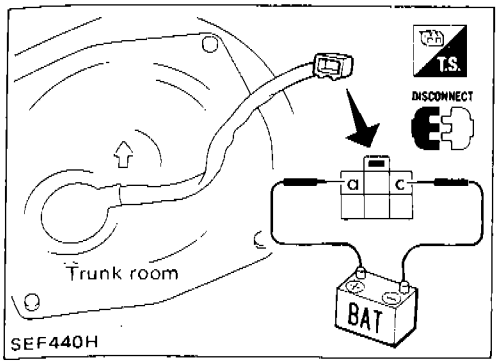


2. Check fuel pump for normal operation by supplying it with battery voltage between terminals ⓐ and ⓒ.

F.I.C.D. SOLENOID VALVE

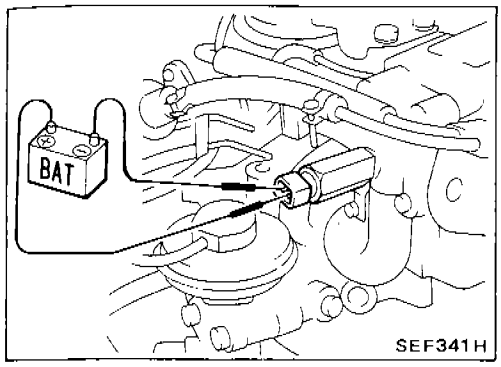


1. Check that clicking sound is heard when applying 12V direct current to terminals.

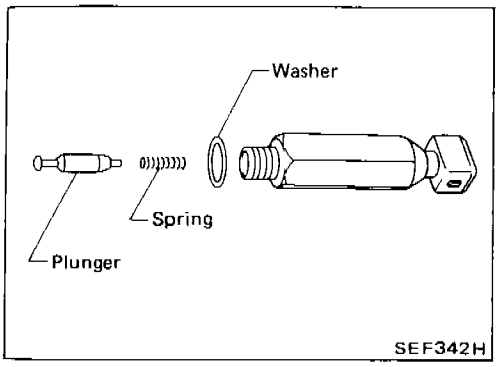

2. Check plunger for seizure or sticking.
3. Check for broken spring.


NEUTRAL SWITCH

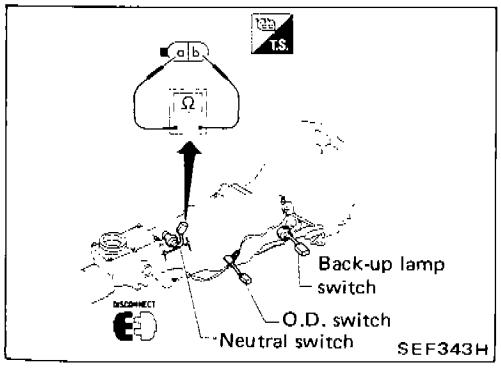

Check continuity between terminals ⓐ and ⓑ.

Conditions	Continuity
Shift to Neutral	Yes
Shift to other position	No

INHIBITOR SWITCH

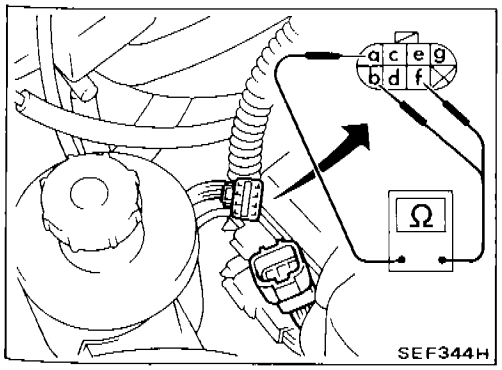


Check continuity between terminals ⓐ and ⓑ, ⓕ.

Conditions	Continuity between terminals ⓐ and ⓑ	Continuity between terminals ⓐ and ⓕ
Shift to "P" position	Yes	No
Shift to "N" position	No	Yes
Shift to positions other than "P" and "N"	No	No

Electrical Components Inspection (Cont'd)


E.C.C.S. RELAY, FUEL PUMP RELAY AND INHIBITOR RELAY

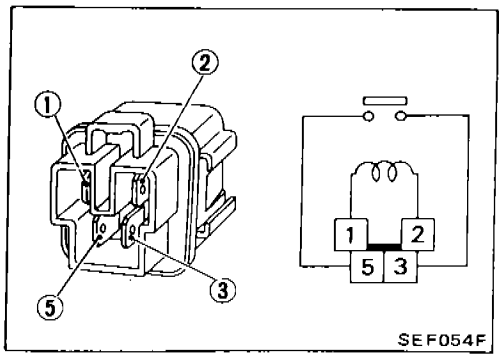

SEF054F

Check continuity between terminals ③ and ⑤.

Condition	Continuity
12V direct current supply between terminals ① and ②	Yes
No supply	No

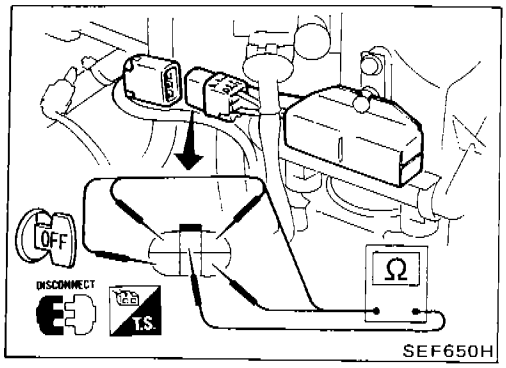


SEF650H

DROPPING RESISTOR

1. Disconnect dropping resistor harness connector.
2. Check dropping resistor resistance.

Resistance:

Approximately 6 Ω

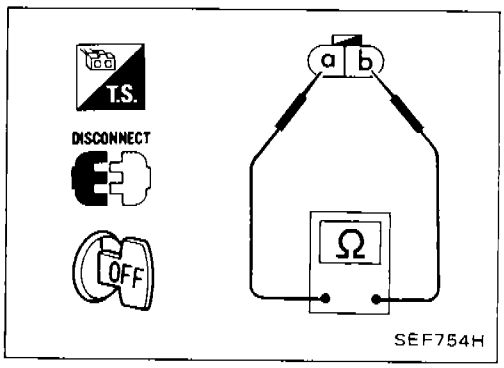


SEF754H

VEHICLE SPEED SENSOR

1. Jack up rear wheels.
2. Disconnect vehicle speed sensor harness connector.
3. Check continuity between terminals ⓐ and ⓑ while rotating rear wheel by hand.

Continuity should be intermittent.

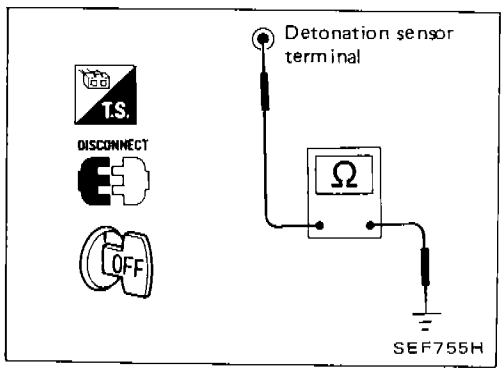


SEF755H

DETONATION SENSOR

1. Disconnect detonation sensor harness.
2. Check continuity between detonation sensor terminal and ground.


Continuity should exist.

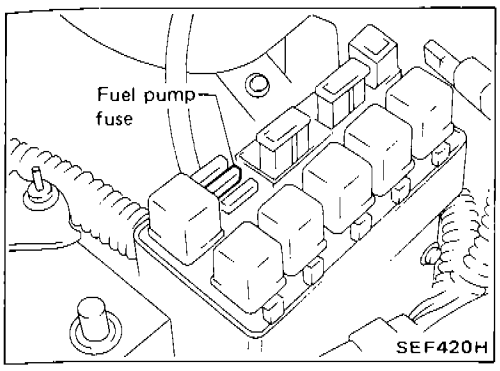

Releasing Fuel Pressure

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.


1. Remove fuse for fuel pump.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch off and reconnect fuel pump fuse.

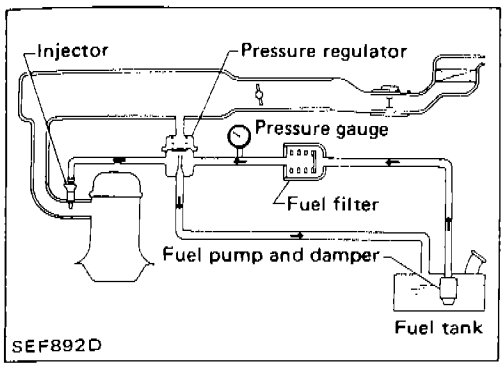

Fuel Pressure Check


a. When reconnecting fuel line, always use new clamps.
b. Make sure that clamp screw does not contact adjacent parts.
c. Use a torque driver to tighten clamps.
d. Use Pressure Gauge to check fuel pressure.
e. Do not perform fuel pressure check while fuel pressure regulator control system is operating; otherwise, fuel pressure gauge might indicate incorrect readings.

1. Release fuel pressure to zero.
2. Disconnect fuel hose between fuel filter and fuel tube (engine side).
3. Install pressure gauge between fuel filter and fuel tube.
4. Start engine and check for fuel leakage.

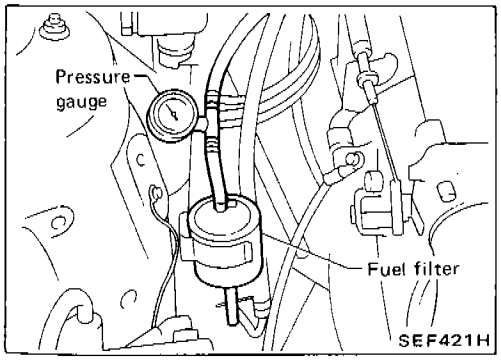

5. Read the indication of fuel pressure gauge.
   At idling:
   When fuel pressure regulator valve vacuum hose is connected.
   Approximately 196 kPa (1.96 bar, 2.0 kg/cm^2, 28 psi)
   When fuel pressure regulator valve vacuum is disconnected.
   Approximately 245 kPa (2.45 bar, 2.5 kg/cm^2, 36 psi)
6. Stop engine and disconnect fuel pressure regulator vacuum hose from intake manifold.
7. Plug intake manifold with a rubber cap.
8. Connect variable vacuum source to fuel pressure regulator.

Fuel Pressure Check (Cont'd)

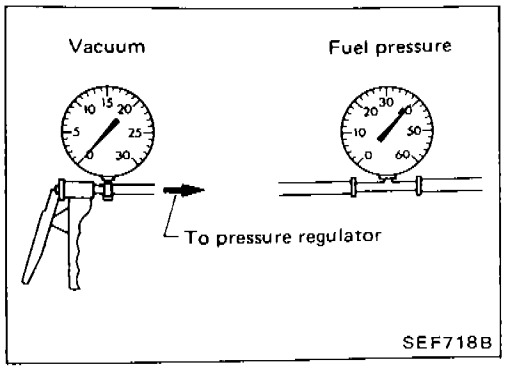

9. Start engine and read indication of fuel pressure gauge as vacuum is changed.


Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.

Injector Removal and Installation

1. Release fuel pressure to zero.
2. Remove I.A.A. unit and intake manifold stay.
3. Disconnect pressure regulator vacuum hose.
4. Remove fuel tube assembly fixing bolts.

Be careful not to damage the injector, nor to deform the fuel tube.

5. Remove injectors from fuel tube.

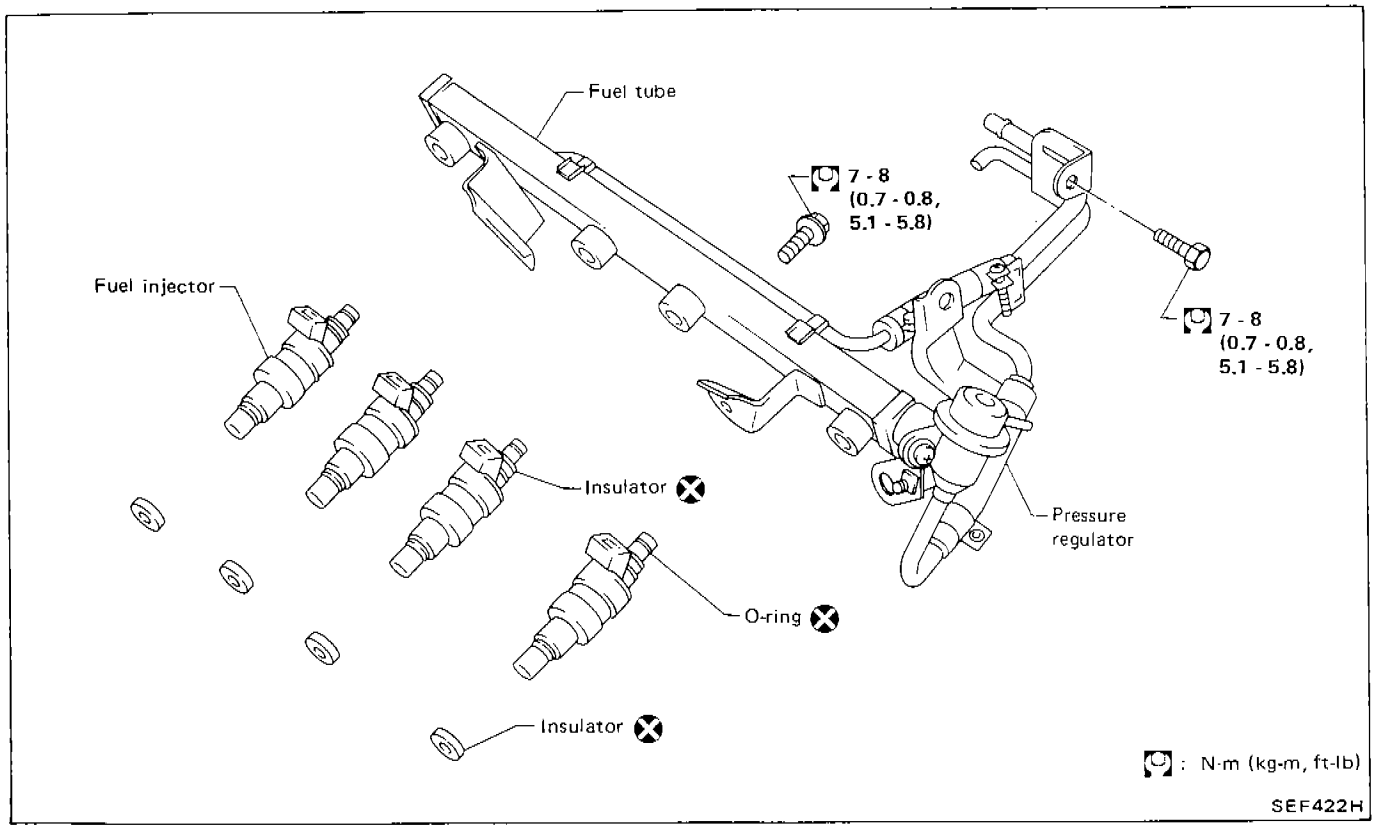

CAUTION:


- **Do not reuse old O-rings.**
- **Apply a coat of engine oil (SAE 10W-30) to new O-rings. Do not use solvent for wiping.**
- **Keep O-rings and their mating parts clean and free from foreign particles (dirt, ravelings, etc.) before installation.**
- **Do not scratch the O-ring either with tools or finger nails during installation. Be careful not to expand or twist excessively. Do not insert into fuel tube immediately after expansion.**

Injector Removal and Installation (Cont'd)

- **Do not attempt to rotate or twist fuel injector and pressure regulator when inserting into fuel tube.**
- **Do not store O-rings in an area where ozone, oxygen, humidity, etc. are relatively high. Do not expose them to direct sunlight.**
- **After properly connecting fuel injector to fuel tube, check connection for fuel leakage.**

6. Assemble injectors with fuel tube.
7. Install fuel tube assembly.

Description

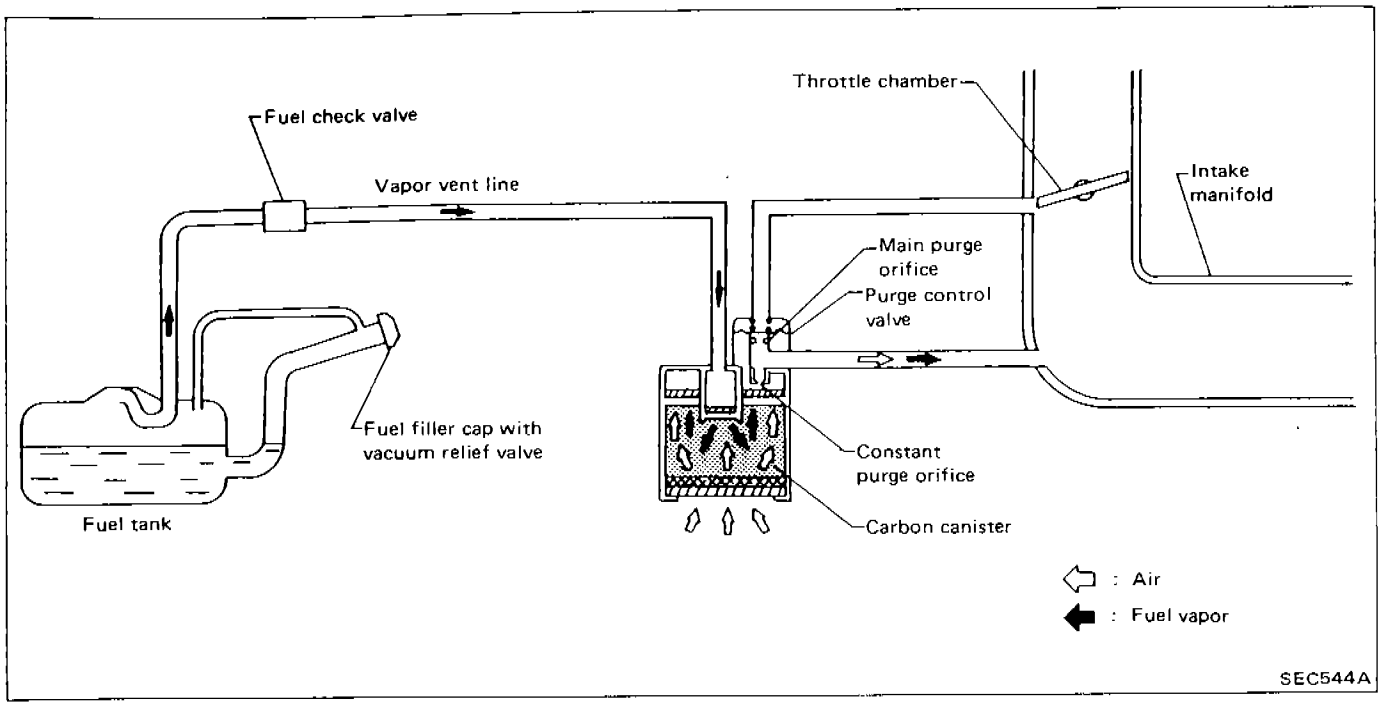


The evaporative emission control system is used to reduce hydrocarbons emitted to the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the carbon canister.

The fuel vapor from the sealed fuel tank is led into the canister which contains activated carbon and the vapor is stored there when the engine is not running.

The canister retains the fuel vapor until the canister is purged by the air drawn through the bottom of the canister to the intake manifold when the engine is running. When the engine runs at idle, the purge control valve is closed.

Only a small amount of stored vapor flows into the intake manifold through the constant purge orifice. As the engine speed increases, and the throttle vacuum rises higher, the purge control valve opens and the vapor is sucked into the intake manifold through both the main purge orifice and the constant purge orifice.

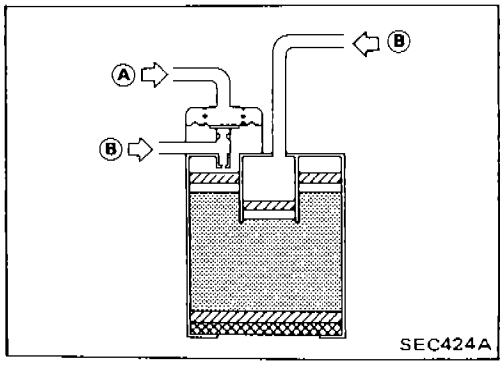



Inspection

CARBON CANISTER

Check carbon canister as follows:

Ⓐ : Blow air and ensure that there is no leakage.
Ⓑ : Blow air and ensure that there is leakage.

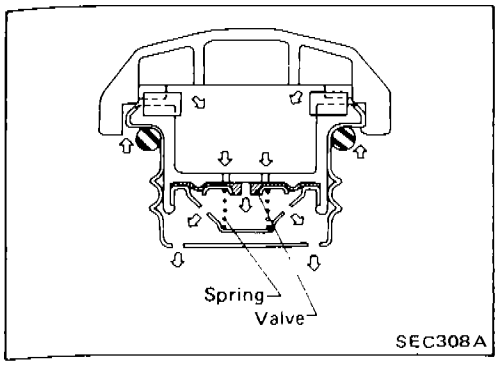

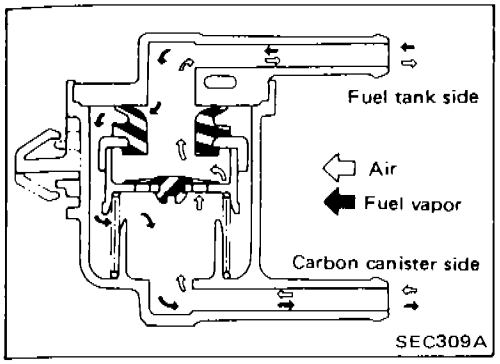

Inspection (Cont'd)


FUEL TANK VACUUM RELIEF VALVE

1. Wipe clean valve housing.
2. Inhale air through the cap. A slight resistance accompanied by valve clicks indicates that valve is in good mechanical condition. Note also that, by further inhaling air, the resistance should disappear with valve clicks.
3. If valve is clogged or if no resistance is felt, replace cap as an assembly.


FUEL CHECK VALVE

1. Blow air through connector on fuel tank side.
   A considerable resistance should be felt and a portion of air flow should be directed toward the canister.
2. Blow air through connector on canister side.
   Air flow should be smoothly directed toward fuel tank.
3. If fuel check valve is suspected of not properly functioning in steps 1 and 2 above, replace it.

Description

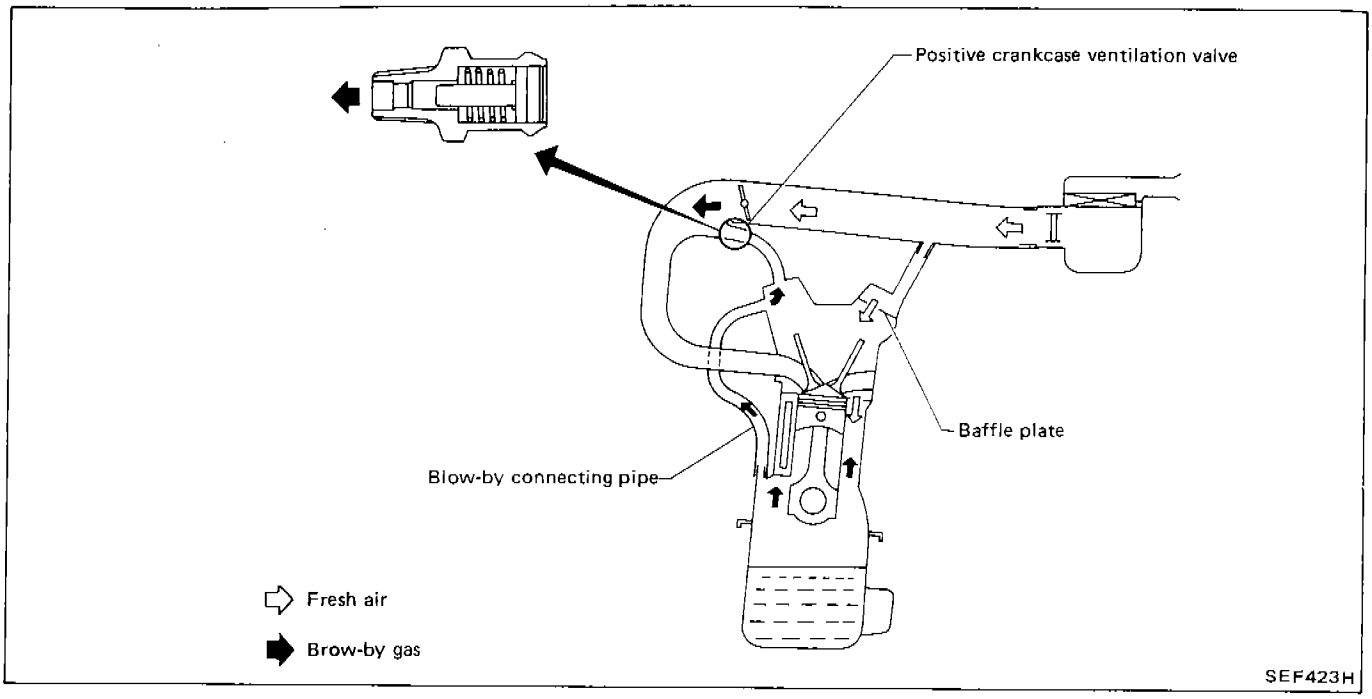


This system returns blow-by gas to the intake manifold.
The positive crankcase ventilation (P.C.V.) valve is provided to conduct crankcase blow-by gas to the intake manifold.
During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the P.C.V. valve.
Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air.
The ventilating air is then drawn from the air cleaner, through the hose connecting air inlet to rocker cover, into the crankcase.
Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve, and its flow goes through the hose connection in the reverse direction.
On vehicles with an excessively high blow-by some of the flow will go through the hose connection to the air inlet under all conditions.

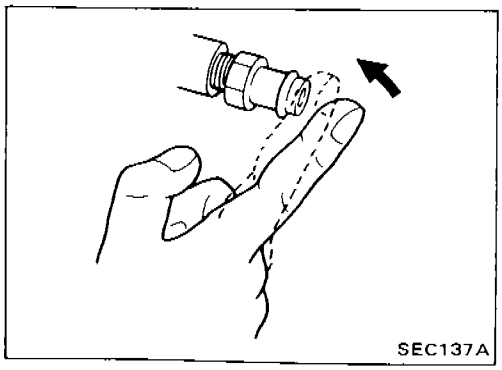

Inspection

P.C.V. (Positive Crankcase Ventilation) VALVE

With engine running at idle, remove ventilation hose from P.C.V. valve; if valve is working properly, a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet.

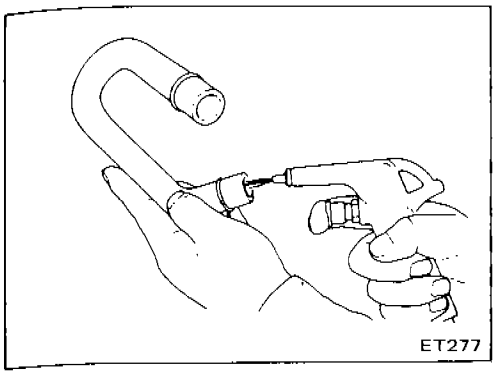
ET277

Inspection (Cont'd)

VENTILATION HOSE

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

General Specifications

PRESSURE REGULATOR Regulated pressure kPa (bar, kg/cm^2, psi)	250.1 (2.501, 2.55, 36.3)

Inspection and Adjustment

AIR FLOW METER Output voltage	V	1.0 - 3.0
ENGINE TEMPERATURE SENSOR Thermistor resistance at 20°C (68°F)	kΩ	Approx. 2.5
at 80°C (176°F)		Approx. 0.3
THROTTLE VALVE SWITCH Engine speed when idle switch is changed from "OFF" to "ON"	rpm	Idle speed + 250±150
FUEL PRESSURE At idle	kPa (bar, kg/cm^2, psi)	196 (1.96, 2.0, 28)
FUEL INJECTOR Coil resistance	Ω	2 - 3
IDLE SPEED M/T model A/T model in "N" position	rpm	850±50
IDLE SPEED (A/C ON) M/T model A/T model in "N" position		950±50 900±50
IGNITION TIMING (B.T.D.C.) M/T A/T		15°±2°
IDLE CO	%	Idle mixture is preset at factory.
AIR REGULATOR	Ω	Approx. 70
IGNITION COIL Primary resistance [at 20°C (68°F)]	Ω	0.6 - 0.8
Secondary resistance [at 20°C (68°F)]	kΩ	6 - 8

ENGINE CONTROL, FUEL & EXHAUST SYSTEMS


SECTION FE

CONTENTS

ENGINE CONTROL SYSTEM FE-2
FUEL SYSTEM FE-3
EXHAUST SYSTEM FE-4

Accelerator Control System

- When removing accelerator wire, make a mark to indicate lock nut's initial position.
- Check that throttle valve fully opens when accelerator pedal is fully depressed and that it returns to idle position when pedal is released.
- Adjust accelerator wire according to the following procedure.
  Tighten "adjusting nut" until "throttle drum" starts to move.
  From that position turn back "adjusting nut" 1.5 to 2 turns, and fasten it with a lock nut.
- Check accelerator control parts for improper contact with any adjacent parts.
- When connecting accelerator wire, be careful not to twist or scratch its inner wire.

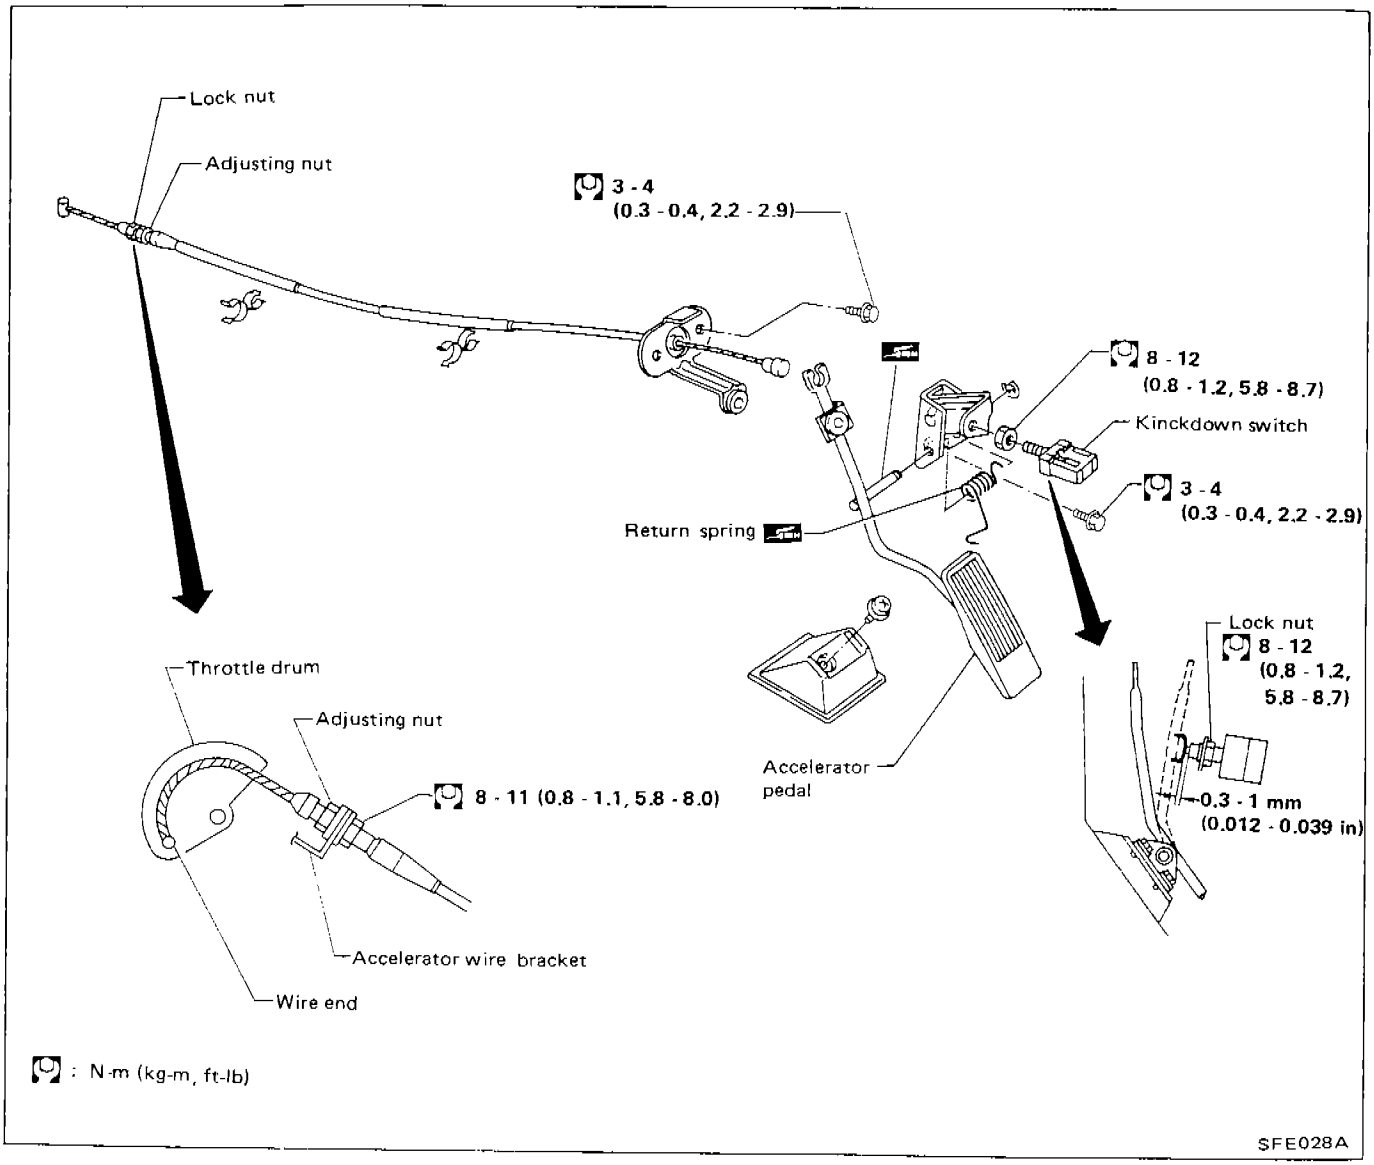


WARNING:
When replacing fuel line parts, be sure to observe the following:

- Put a "CAUTION: INFLAMMABLE" sign in workshop.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from work area.
- Be sure to disconnect battery ground cable before conducting operations.
- Put drained fuel in an explosion-proof container and put lid on securely.


CAUTION:

- For electric fuel pump model, before disconnecting fuel hose, release fuel pressure from fuel line. Refer to "Changing Fuel Filter" in MA section.
- Do not disconnect any fuel line unless absolutely necessary.
- Plug hose and pipe openings to prevent entry of dust or dirt.
- Always replace O-ring and clamps with new ones.
- Do not kink or twist hose and tube when they are installed.
- Do not tighten hose clamps excessively to avoid damaging hoses.
- When installing fuel check valve, be careful of its designated direction. (Refer to section EF & EC.)
- Run engine and check for leaks at connections.

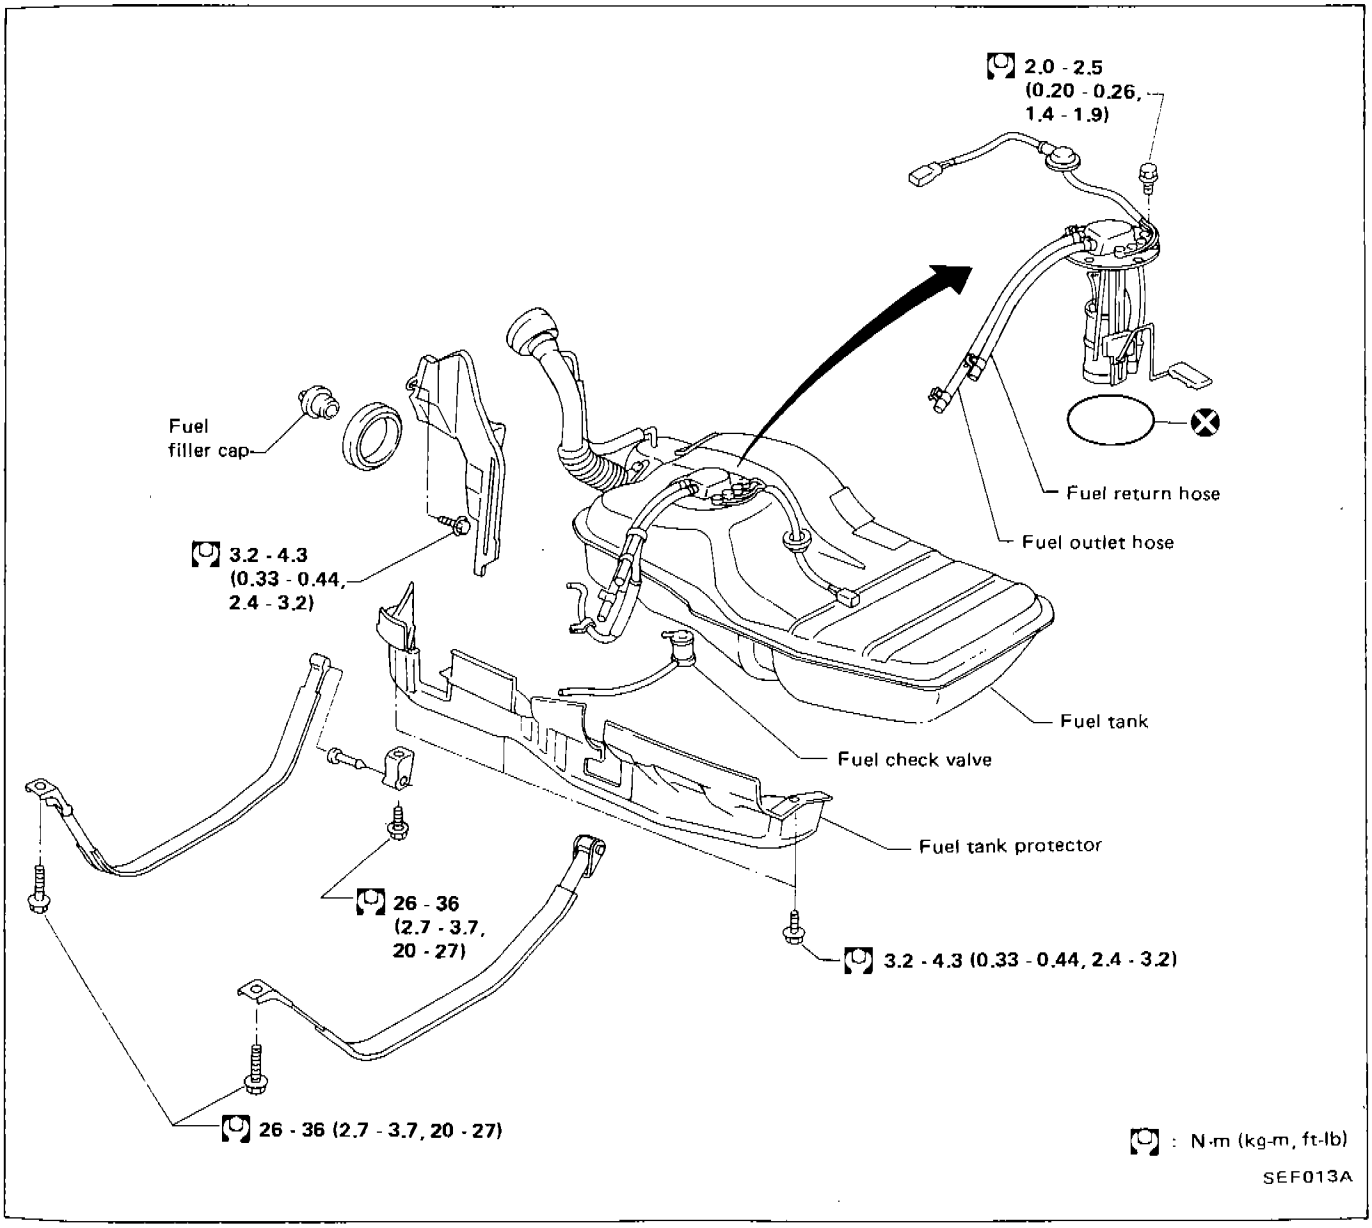

CAUTION:

- Always replace exhaust gaskets with new ones when disassembling.
- Check all tube connections for exhaust gas leaks, and entire system for unusual noises, with engine running.
- After installation, check that mounting brackets and mounting insulator are free from undue stress. If any of above parts are not installed properly, excessive noise or vibration may be transmitted to vehicle body.

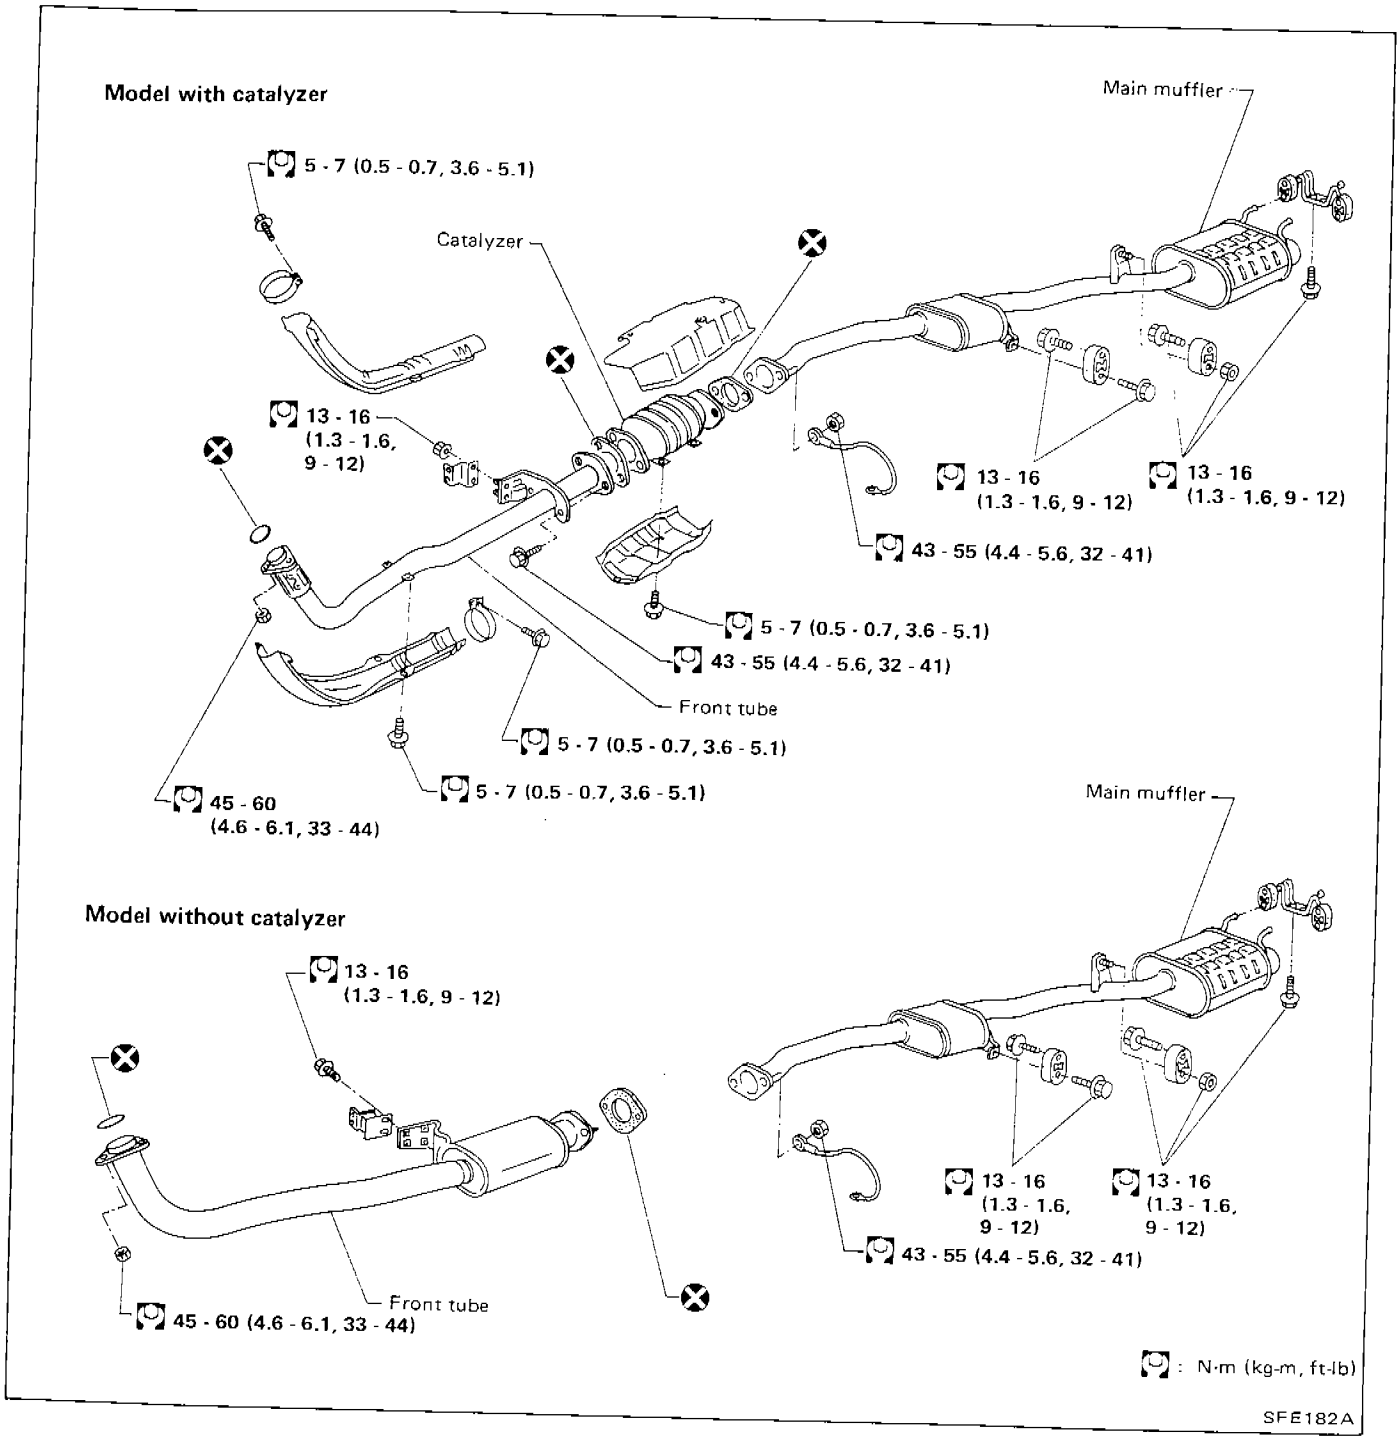


CLUTCH

SECTION CL

CONTENTS

PRECAUTIONS AND PREPARATION ..... CL- 2
CLUTCH SYSTEM ..... CL- 4
INSPECTION AND ADJUSTMENT ..... CL- 5
HYDRAULIC CLUTCH CONTROL ..... CL- 6
CLUTCH RELEASE MECHANISM ..... CL- 8
CLUTCH DISC AND CLUTCH COVER CL-10
SERVICE DATA AND SPECIFICATIONS (S.D.S.) CL-12

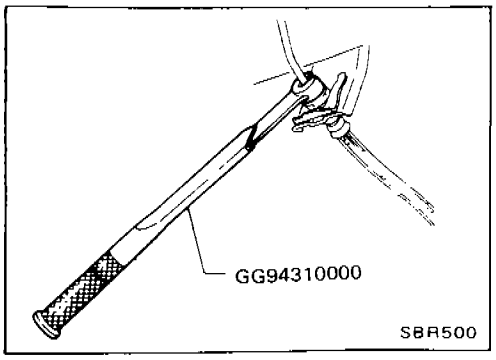

Precautions






- **Recommended fluid is brake fluid "DOT 3".**
- **Never reuse drained brake fluid.**
- **Be careful not to splash brake fluid on painted areas.**
- **When removing and installing clutch piping, use Tool.**
- **Use new brake fluid to clean or wash all parts of master cylinder, operating cylinder and clutch damper.**
- **Never use mineral oils such as gasoline or kerosene. It will ruin the rubber parts of the hydraulic system.**

WARNING:
After cleaning the clutch disc, wipe it with a dust collector. Do not use compressed air.

Preparation



SPECIAL SERVICE TOOLS


*: Special tool or commercial equivalent

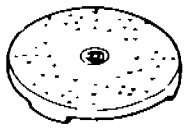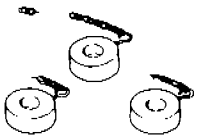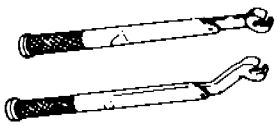Tool number Tool name	Description	
ST20050010 Base plate		Inspecting diaphragm spring of clutch cover
ST20050100 Distance piece		Inspecting diaphragm spring of clutch cover
GG94310000* Flare nut torque wrench		Removing and installing each clutch piping
ST20600000* Clutch aligning bar		Installing clutch cover and clutch disc
ST20050240* Diaphragm spring adjusting wrench		Adjusting unevenness of diaphragm spring of clutch cover


Preparation (Cont'd)

COMMERCIAL SERVICE TOOLS

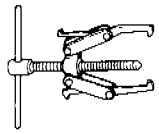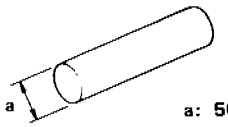Tool name	Description	
Bearing puller		Removing release bearing
Bearing drift	 a: 50 mm (1.97 in) dia.	Installing release bearing

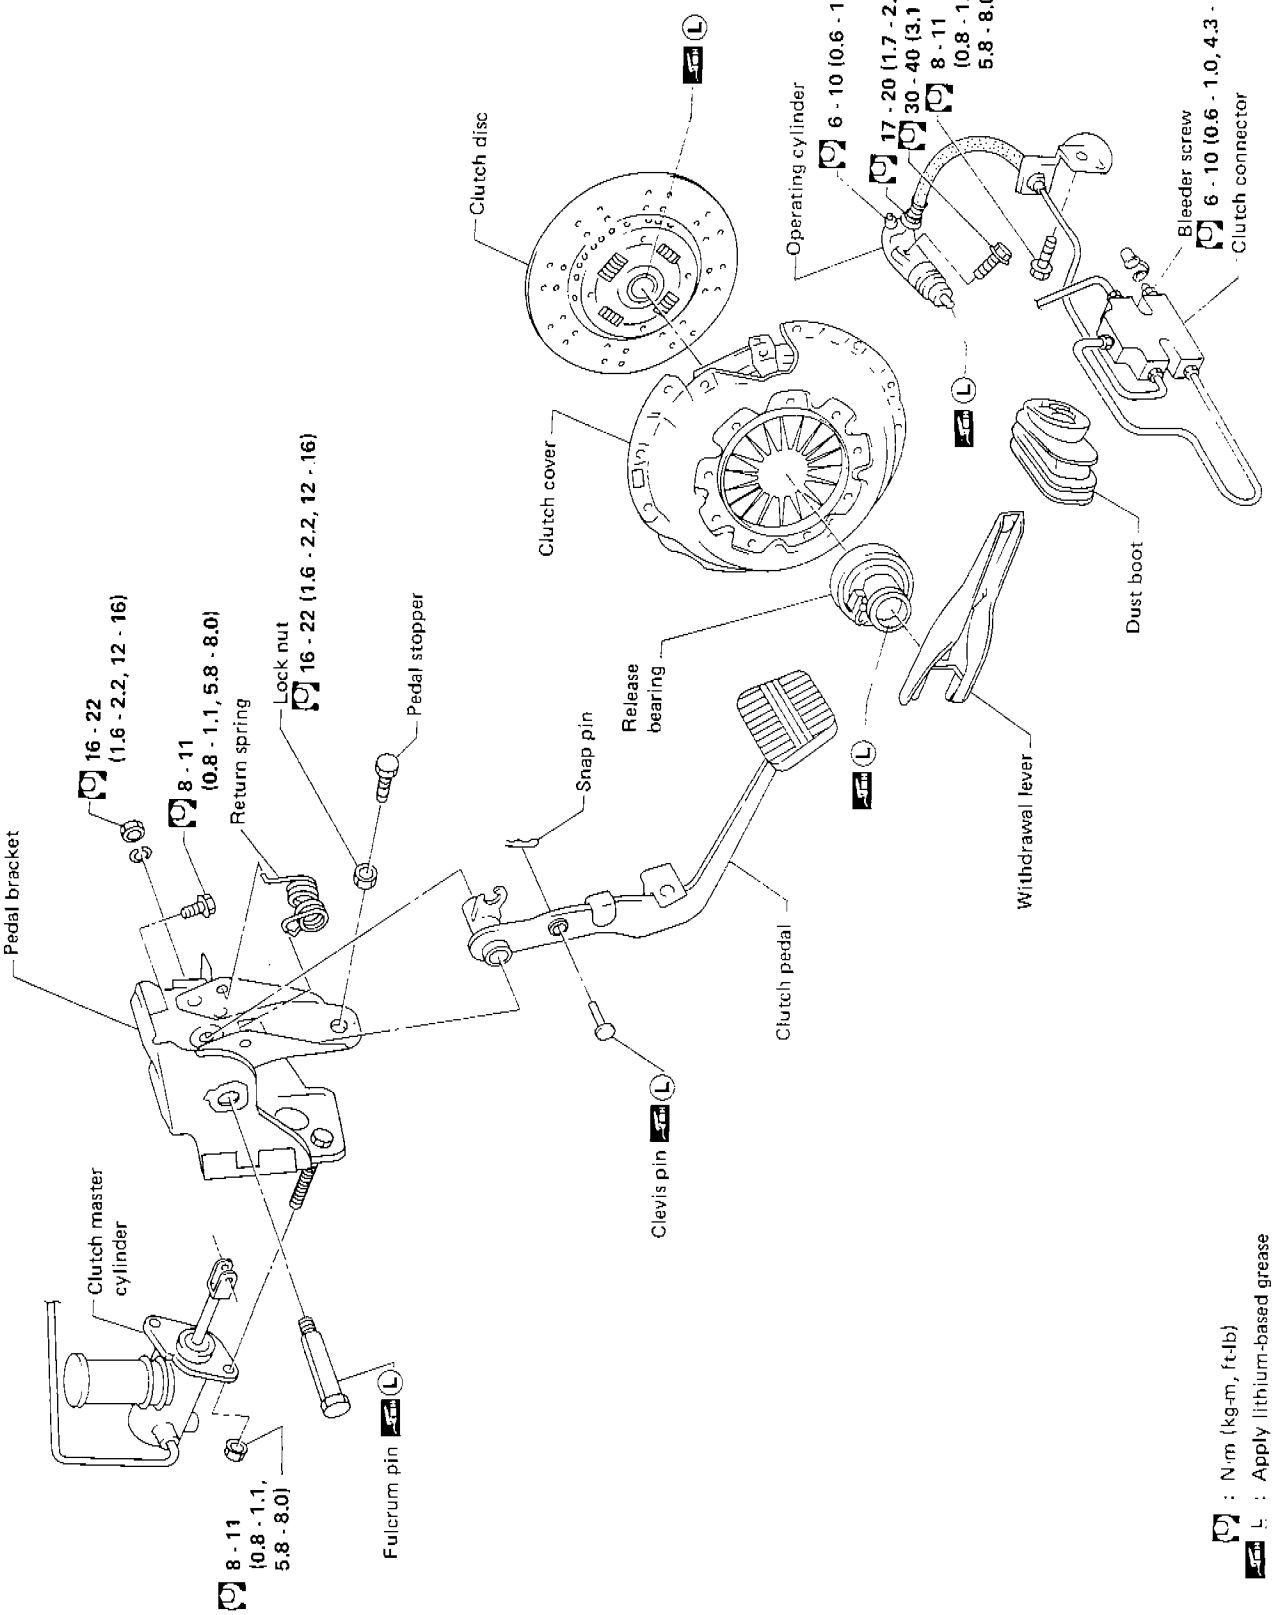
Clutch disc
Clutch cover
Operating cylinder
6 - 10 (0.6 - 1.0, 4.3 - 7.2)
17 - 20 (1.7 - 2.0, 12 - 14)
30 - 40 (3.1 - 4.1, 22 - 30)
8 - 11
(0.8 - 1.1,
5.8 - 8.0)
Bleeder screw
6 - 10 (0.6 - 1.0, 4.3 - 7.2)
Clutch connector
Dust boot
Withdrawal lever
Release bearing
Snap pin
Clutch pedal
Clevis pin
Pedal bracket
16 - 22
(1.6 - 2.2, 12 - 16)
8 - 11
(0.8 - 1.1, 5.8 - 8.0)
Return spring
Lock nut
16 - 22 (1.6 - 2.2, 12 - 16)
Pedal stopper
Clutch master cylinder
8 - 11
(0.8 - 1.1,
5.8 - 8.0)
Fulcrum pin
: N·m (kg-m, ft-lb)
: Apply lithium-based grease including molybdenum disulphide.

SCL356

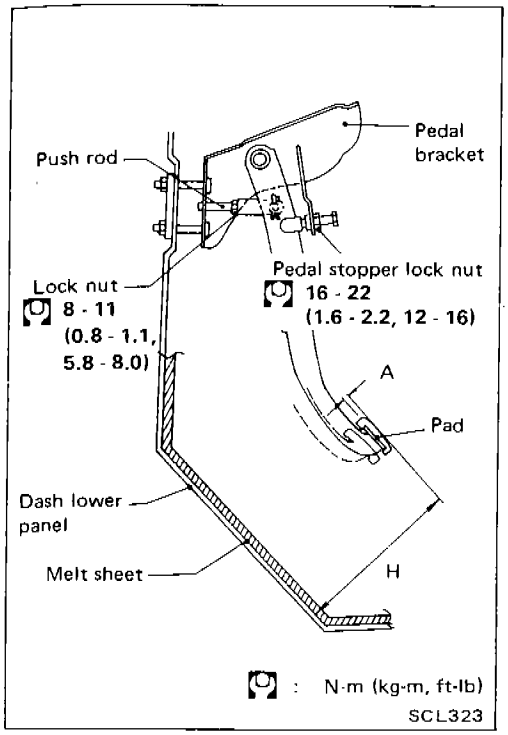



Adjusting Clutch Pedal

1. Adjust pedal height with pedal stopper.
   Pedal height "H":
   L.H. 186 - 196 mm (7.32 - 7.72 in)
   R.H. 182 - 192 mm (7.17 - 7.56 in)
2. Adjust pedal free play with master cylinder push rod. Then tighten lock nut.
   Pedal free play "A":
   1.0 - 3.0 mm (0.039 - 0.118 in)

Pedal free play means the following total measured at position of pedal pad:

- **Play due to clevis pin and clevis pin hole in clutch pedal.**
- **Play due to piston and push rod.**

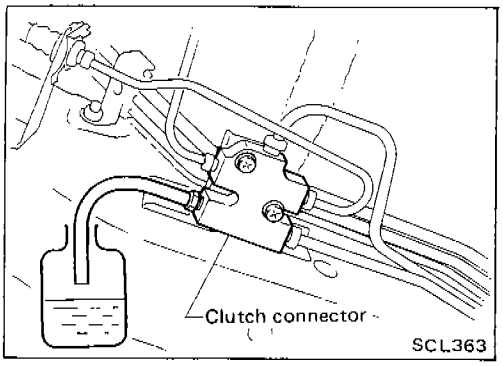

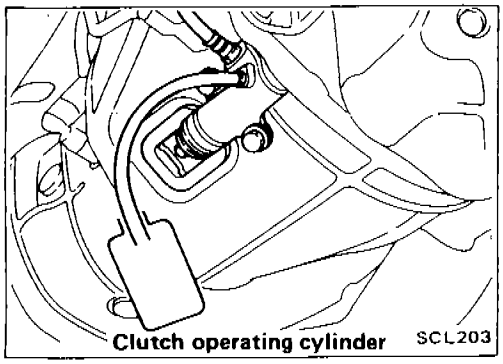


Bleeding Procedure

Bleed air according to the following procedure.
Clutch connector → Clutch operating cylinder

- Carefully monitor fluid level at master cylinder during bleeding operation.


1. Top up reservoir with recommended brake fluid.
2. Connect a transparent vinyl tube to air bleeder valve.
3. Fully depress clutch pedal several times.
4. With clutch pedal depressed, open bleeder valve to release air.
5. Close bleeder valve.
6. Repeat steps 3 through 5 above until brake fluid flows from air bleeder valve without air bubbles.

Clutch Master Cylinder

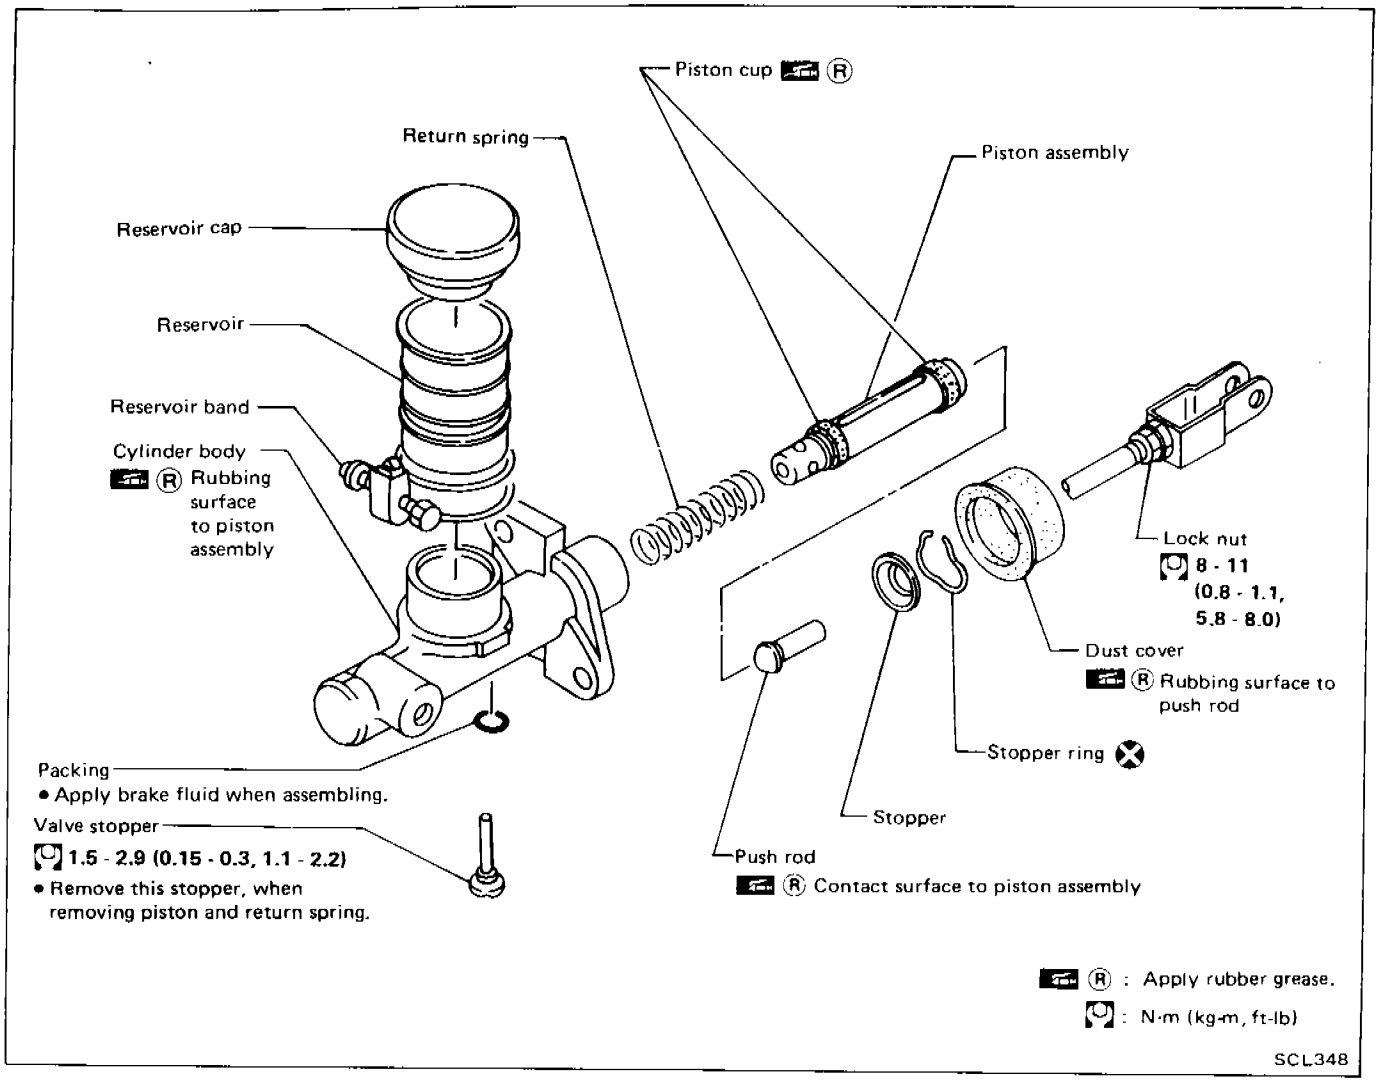

DISASSEMBLY AND ASSEMBLY

- Push piston into cylinder body with screwdriver when removing and installing valve stopper.

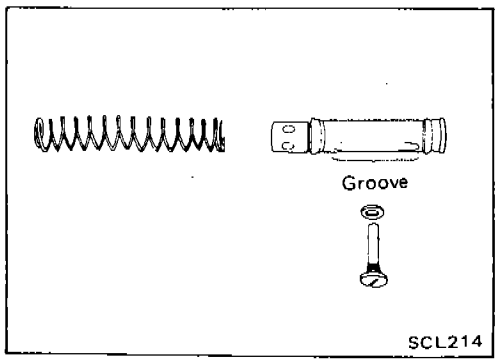


- Align groove of piston assembly and valve stopper when installing valve stopper.
- Check direction of piston cups.

Clutch Master Cylinder (Cont'd)

INSPECTION


- Check cylinder and piston rubbing surface for uneven wear, rust or damage. Replace if necessary.
- Check piston with piston cup for wear or damage. Replace if necessary.
- Check return spring for wear or damage. Replace if necessary.
- Check reservoir for deformation or damage. Replace if necessary.
- Check dust cover for cracks, deformation or damage. Replace if necessary.


Operating Cylinder

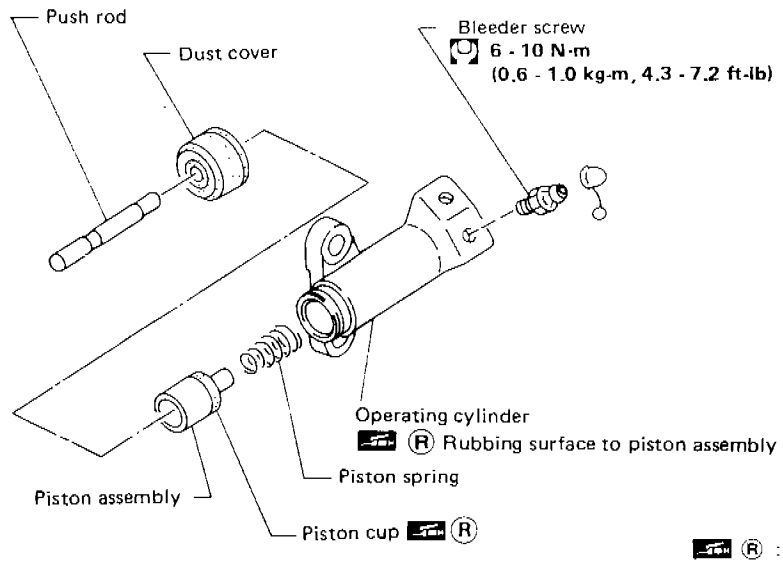

INSPECTION


- Check rubbing surface of cylinder for wear, rust or damage. Replace if necessary.
- Check piston with piston cup for wear or damage. Replace if necessary.
- Check piston spring for wear or damage. Replace if necessary.
- Check dust cover for cracks, deformation or damage. Replace if necessary.

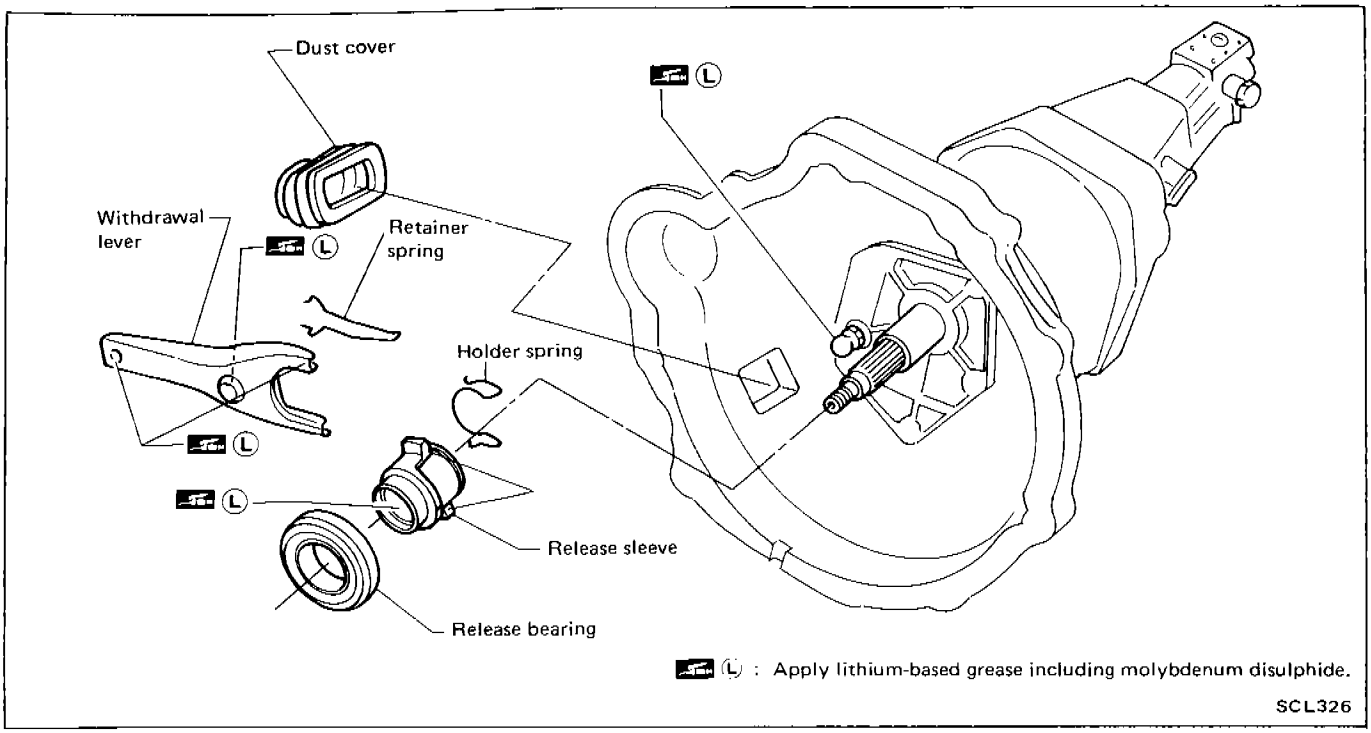

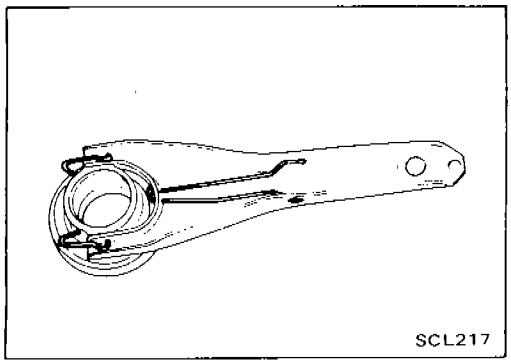


REMOVAL AND INSTALLATION

- Install retainer spring and holder spring.

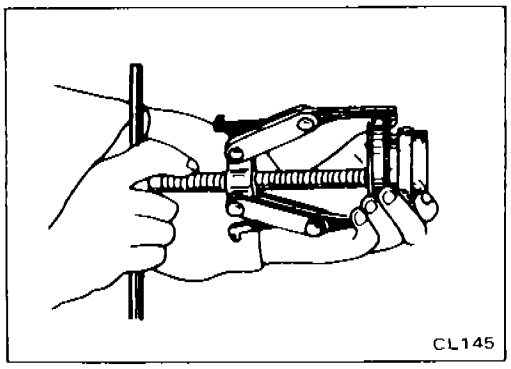


- Remove release bearing.

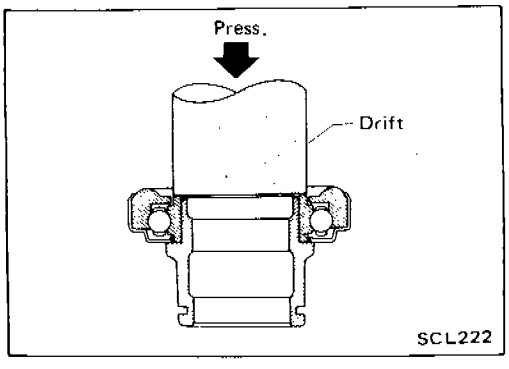

- Install release bearing with suitable drift.

INSPECTION


- Check release bearing to see that it rolls freely and is free from noise, cracks, pitting or wear. Replace if necessary.
- Check release sleeve and withdrawal lever rubbing surface for wear, rust or damage. Replace if necessary.

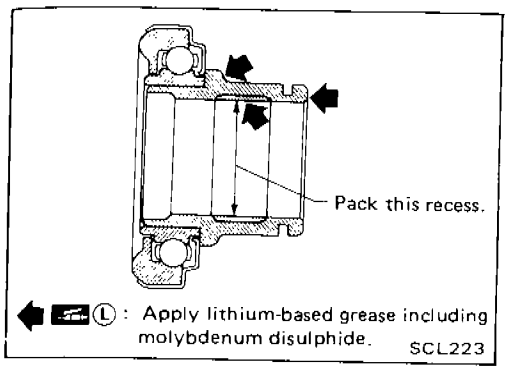



LUBRICATION

- Apply recommended grease to contact surface and rubbing surface.

Too much lubricant might damage clutch disc facing.

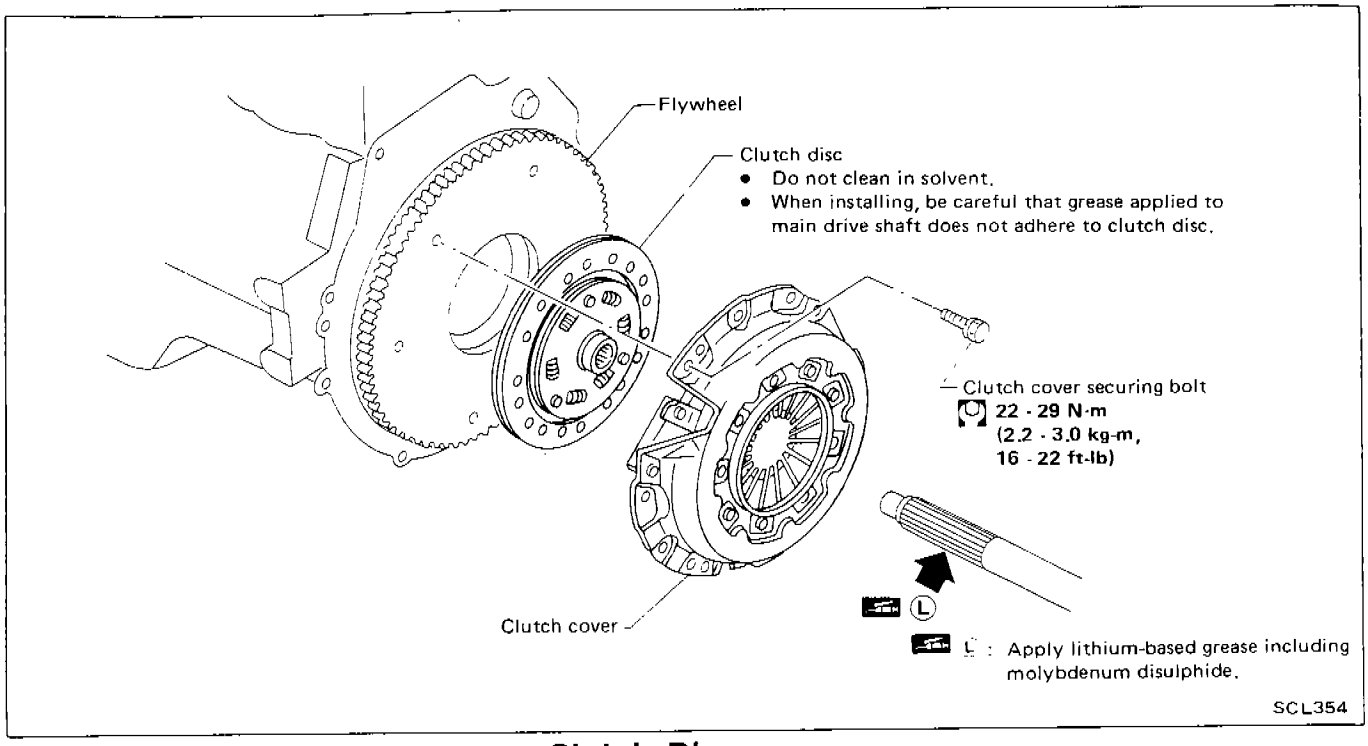

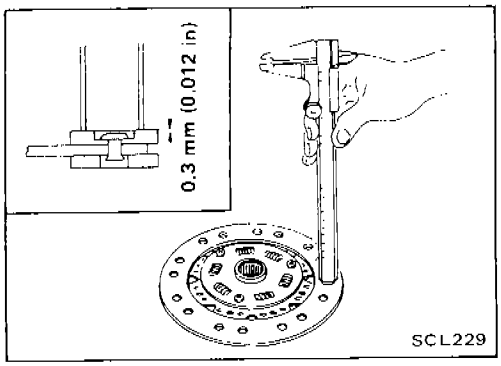

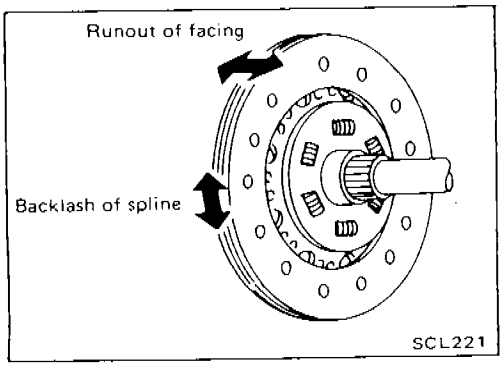

Clutch Disc

INSPECTION


- Check clutch disc for wear of facing.
  Wear limit of facing surface to rivet head:
  0.3 mm (0.012 in)

- Check clutch disc for backlash of spline and runout of facing.
  Maximum backlash of spline (at outer edge of disc):
  0.9 mm (0.035 in)
  Runout limit:
  1.0 mm (0.039 in)
  Distance of runout check point (from hub center)
  107.5 mm (4.23 in)
- Check clutch disc for burns, discoloration or oil or grease leakage. Replace if necessary.

INSTALLATION

- Apply recommended grease to contact surface of spring portion.


Too much lubricant might damage clutch disc facing.

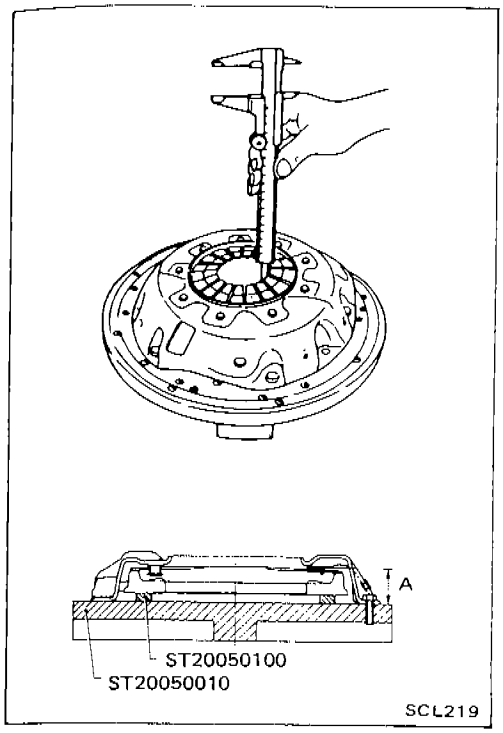


Clutch Cover and Flywheel

INSPECTION AND ADJUSTMENT

- Set Tool and check height and unevenness of diaphragm spring.
  Diaphragm spring height "A":
  33.0 - 35.0 mm (1.299 - 1.378 in)
- Check thrust rings for wear or damage by shaking cover assembly and listening for chattering noise, or lightly hammering on rivets for a slightly cracked noise. Replace clutch cover assembly if necessary.
- Check pressure plate and clutch disc contact surface for slight burns or discoloration. Repair pressure plate with emery paper.
- Check pressure plate and clutch disc contact surface for deformation or damage. Replace if necessary.

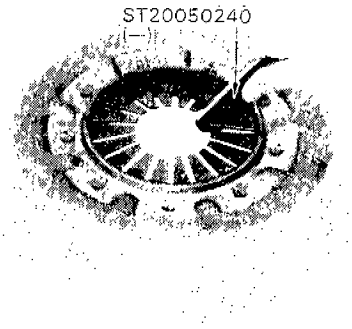


- Adjust unevenness of diaphragm spring with Tool.
  Uneven limit:
  0.7 mm (0.028 in)

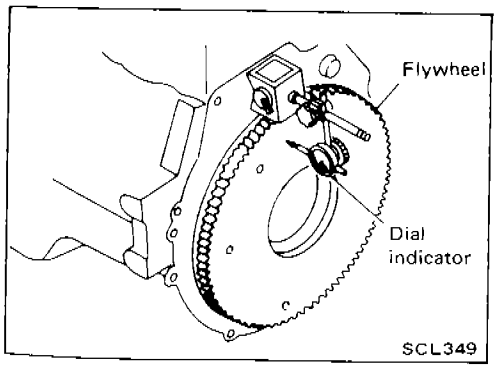

FLYWHEEL INSPECTION

- Check contact surface of flywheel for slight burns or discoloration. Repair flywheel with emery paper.
- Check flywheel runout.
  Runout (Total indicator reading):
  0.15 mm (0.0059 in) or less

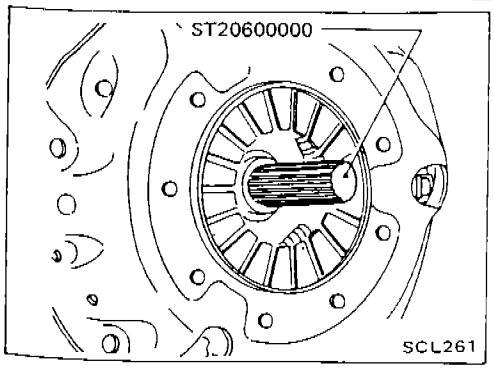

INSTALLATION

- Insert Tool into clutch disc hub when installing clutch cover and disc.

General Specifications

CLUTCH CONTROL SYSTEM

Type of clutch control	Hydraulic

CLUTCH MASTER CYLINDER

Inner diameter	mm (in)	15.87 (5/8)

CLUTCH OPERATING CYLINDER

Inner diameter	mm (in)	19.05 (3/4)

CLUTCH DISC

Model	225LTD
Facing size (Outer dia. x inner dia. x thickness) mm (in)	225 x 150 x 3.5 (8.86 x 5.91 x 0.138)
Thickness of disc assembly With load mm (in)	7.6 - 8.0 (0.299 - 0.315) with 5,394 N (550 kg, 1,213 lb)

CLUTCH COVER

Model	C225S
Full load N (kg, lb)	5,394 (550, 1,213)

Inspection and Adjustment

CLUTCH PEDAL

Unit: mm (in)

Model	L.H.	R.H.
Pedal height*	186 - 196 (7.32 - 7.72)	182 - 192 (7.17 - 7.56)
Pedal free play (Backlash at clevis)	1.0 - 3.0 (0.039 - 0.118)	

*Measured from surface of melt sheet to pedal pad

CLUTCH DISC

Unit: mm (in)

Model	225LTD
Wear limit of facing surface to rivet head	0.3 (0.012)
Runout limit of facing	1.0 (0.039)
Distance of runout check point (from the hub center)	107.5 (4.23)
Maximum backlash of spline (at outer edge of disc)	0.9 (0.035)

CLUTCH COVER

Unit: mm (in)

Model	C225S
Diaphragm spring height	33.0 - 35.0 (1.299 - 1.378)
Uneven limit of diaphragm spring toe height	0.7 (0.028)

MANUAL TRANSMISSION










SECTION MT

CONTENTS





PREPARATION ..... MT- 2
ON-VEHICLE SERVICE ..... MT- 4
REMOVAL AND INSTALLATION ..... MT- 5
MAJOR OVERHAUL ..... MT- 6
DISASSEMBLY MT-10
INSPECTION MT-15
ASSEMBLY MT-17
SERVICE DATA AND SPECIFICATIONS (S.D.S.) MT-27

SPECIAL SERVICE TOOLS


*: Special tool or commercial equivalent

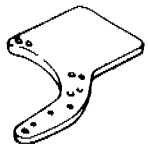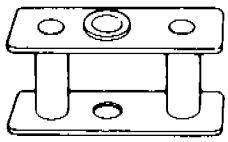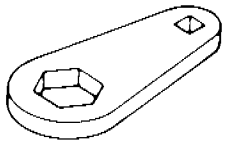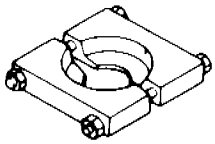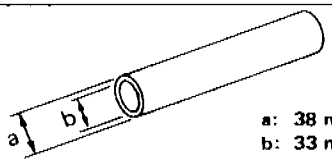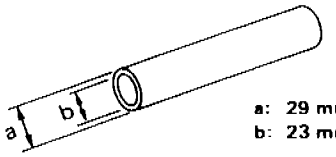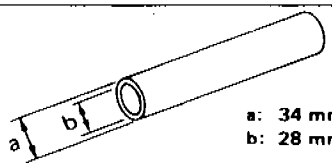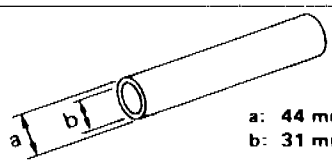
Tool number Tool name	Description	
ST23810001 Adapter setting plate		Fixing adapter plate with gear assembly
KV31100401 Transmission press stand		Pressing counter gear and mainshaft
ST22520000 Wrench		Tightening mainshaft lock nut
ST23540000* Pin punch		Removing and installing fork rod retaining pin
ST30031000* Puller		Removing and installing 1st gear bushing Removing main drive gear bearing Measuring wear of baulk rings
ST23860000* Drift	 a: 38 mm (1.50 in) dia. b: 33 mm (1.30 in) dia.	Installing counter drive gear
ST22360002* Drift	 a: 29 mm (1.14 in) dia. b: 23 mm (0.91 in) dia.	Installing counter gear front and rear end bearings
ST22350000* Drift	 a: 34 mm (1.34 in) dia. b: 28 mm (1.10 in) dia.	Installing O.D. gear bushing
ST23800000* Drift	 a: 44 mm (1.73 in) dia. b: 31 mm (1.22 in) dia.	Installing front cover oil seal

*: Special tool or commercial equivalent

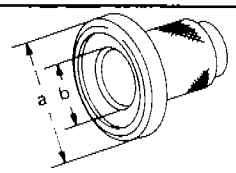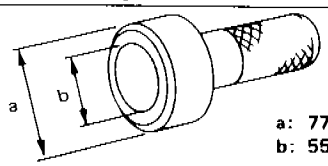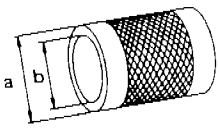Tool number Tool name	Description	
ST33400001* Drift	 a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.	Installing rear oil seal
ST33290001* Puller		Removing rear oil seal
ST30720000* Drift	 a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia.	Installing mainshaft ball bearing
ST30613000* Drift	 a: 71.5 mm (2.815 in) dia. b: 47.5 mm (1.870 in) dia.	Installing main drive gear bearing
ST33200000* Drift	 a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia.	Installing counter rear bearing Installing 3rd & 4th synchronizer assembly


COMMERCIAL SERVICE TOOL

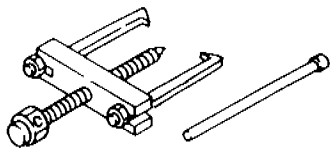Tool name	Description	
Puller		Removing counter bearings, counter drive and O.D. gears

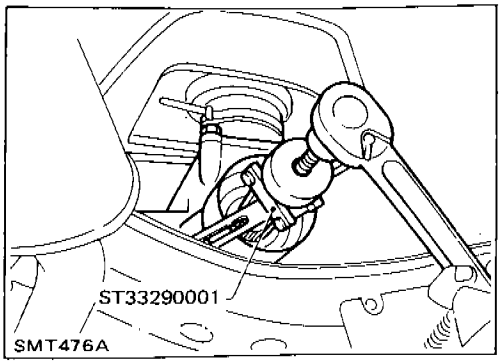


Replacing Rear Oil Seal

REMOVAL

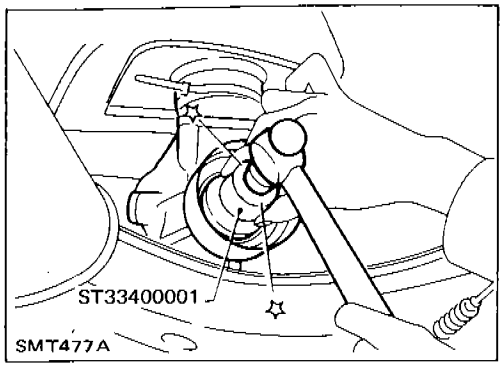

INSTALLATION

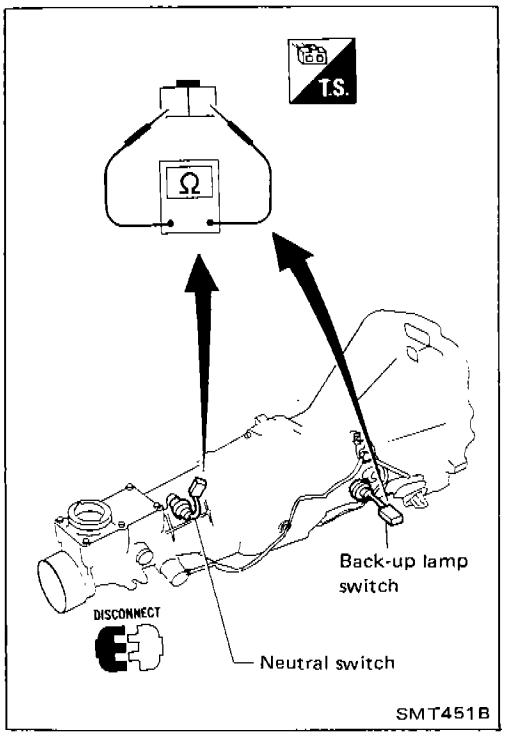

Check of Position Switch

BACK-UP LAMP SWITCH


- Check continuity.

Gear position	Continuity
Reverse	Yes
Except reverse	No

NEUTRAL SWITCH


- Check continuity.

Gear position	Continuity
Neutral	Yes
Except neutral	No

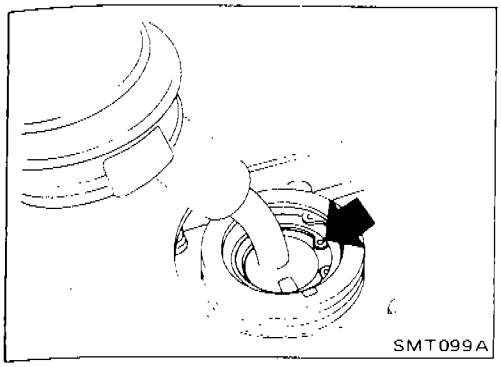

SMT099A

Removal

- Remove shift lever.

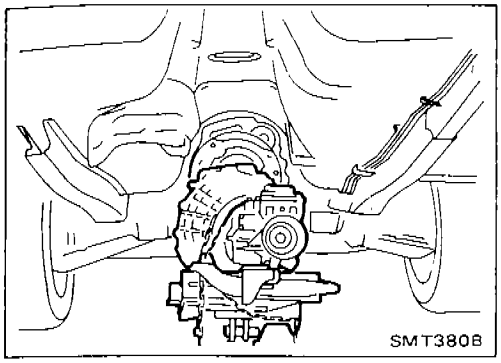
SMT380B

- Remove propeller shaft. — Refer to section PD.
- **Insert plug into rear oil seal after removing propeller shaft.**
- **Be careful not to damage spline, sleeve yoke and rear oil seal, when removing propeller shaft.**
- Support engine by placing a jack under oil pan.
- **Do not place jack under oil pan drain plug.**
- Remove transmission from engine.
- **Support manual transmission, while removing it.**

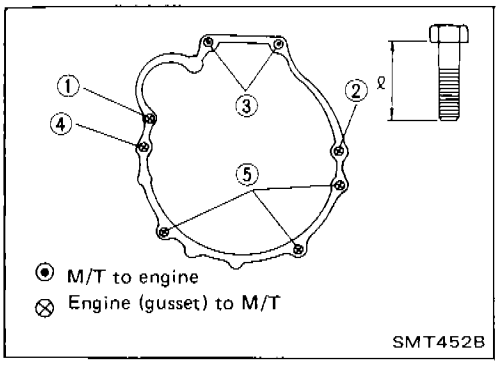


SMT452B

Installation

- Tighten all transmission bolts.

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	ℓ mm (in)
1	39 - 49 (4.0 - 5.0, 29 - 36)	80 (3.15)
2	39 - 49 (4.0 - 5.0, 29 - 36)	75 (2.95)
3	39 - 49 (4.0 - 5.0, 29 - 36)	65 (2.56)
4	29 - 39 (3.0 - 4.0, 22 - 29)	40 (1.57)
5	29 - 39 (3.0 - 4.0, 22 - 29)	25 (0.98)
Gusset to engine	29 - 39 (3.0 - 4.0, 22 - 29)	20 (0.79)


Case Components

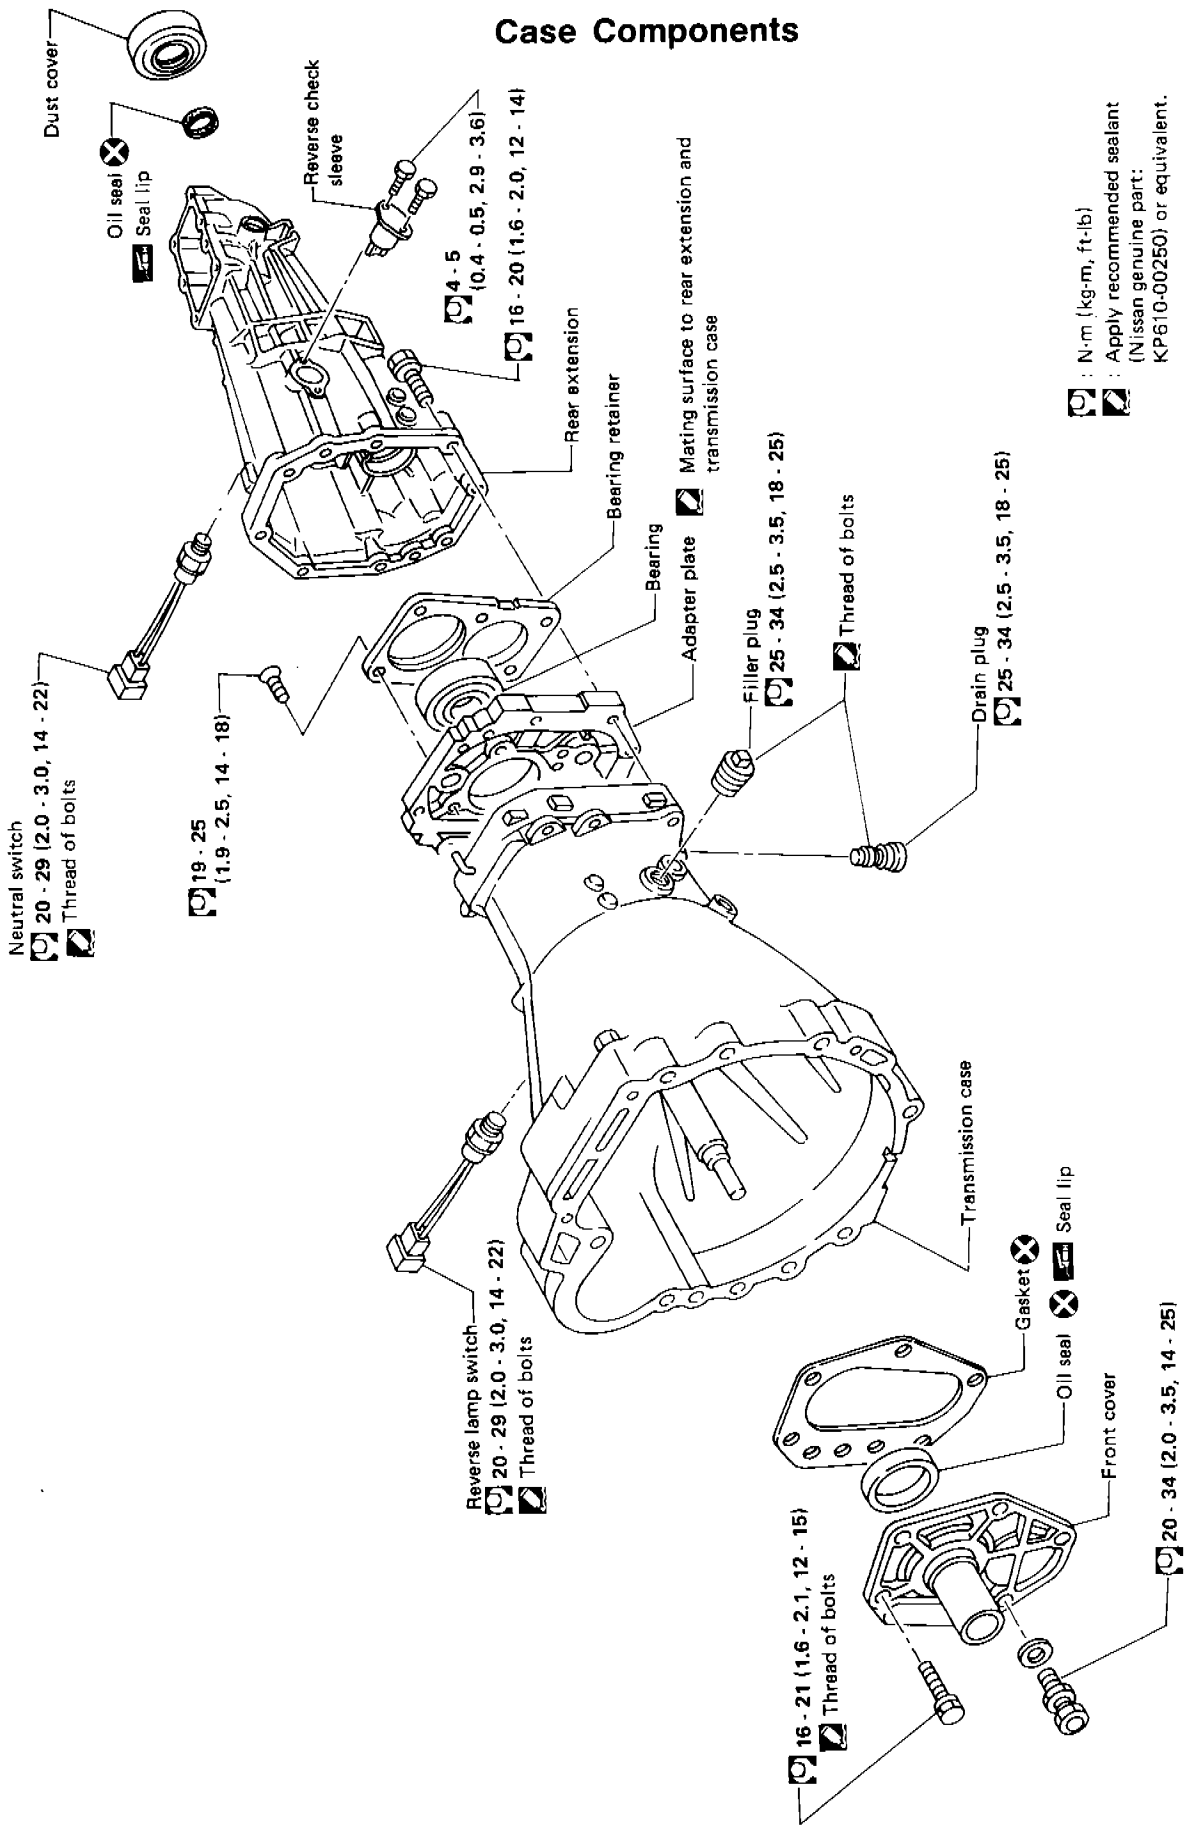

SMT746A

Gear Components

FOR EUROPE

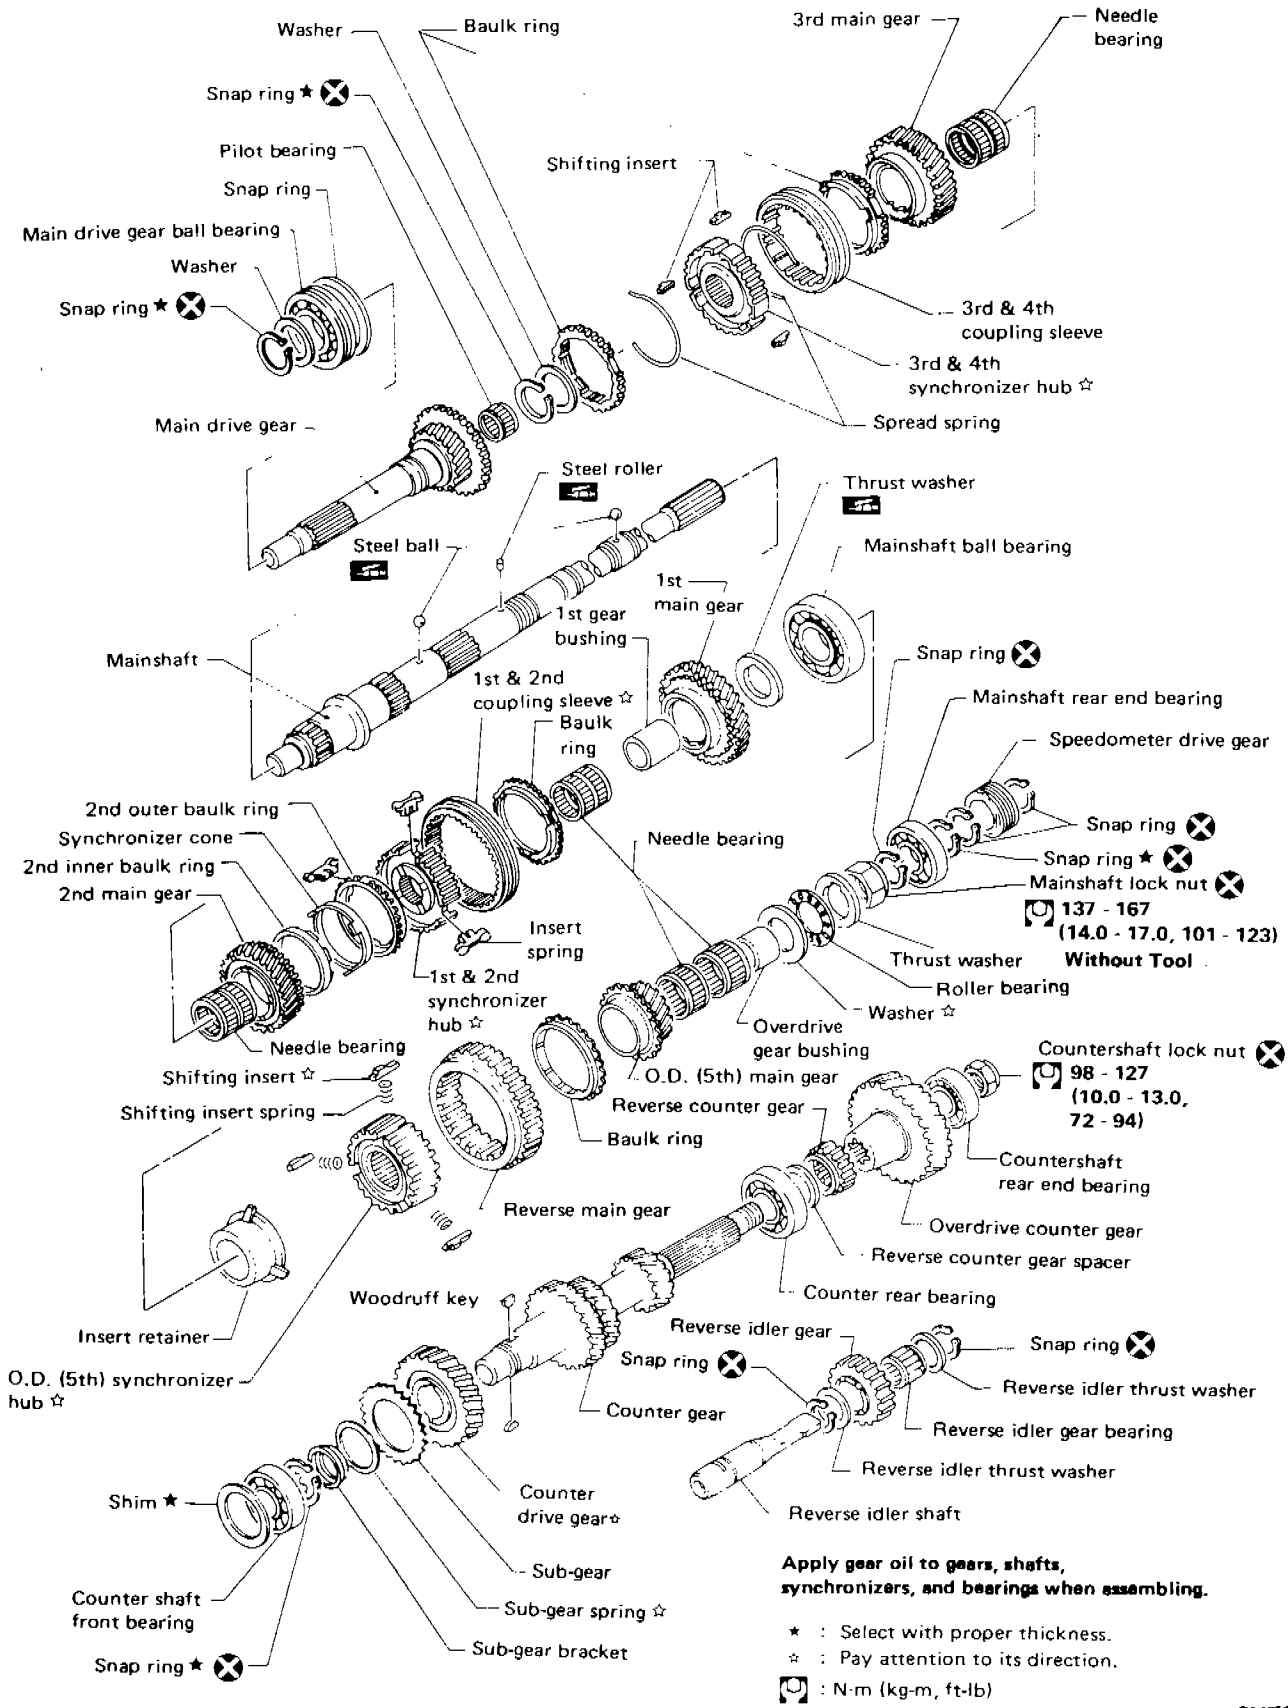


Apply gear oil to gears, shafts, synchronizers, and bearings when assembling.

★ : Select with proper thickness.
☆ : Pay attention to its direction.
⊗ : N·m (kg-m, ft-lb)

SMT037B

Gear Components (Cont'd)

EXCEPT FOR EUROPE

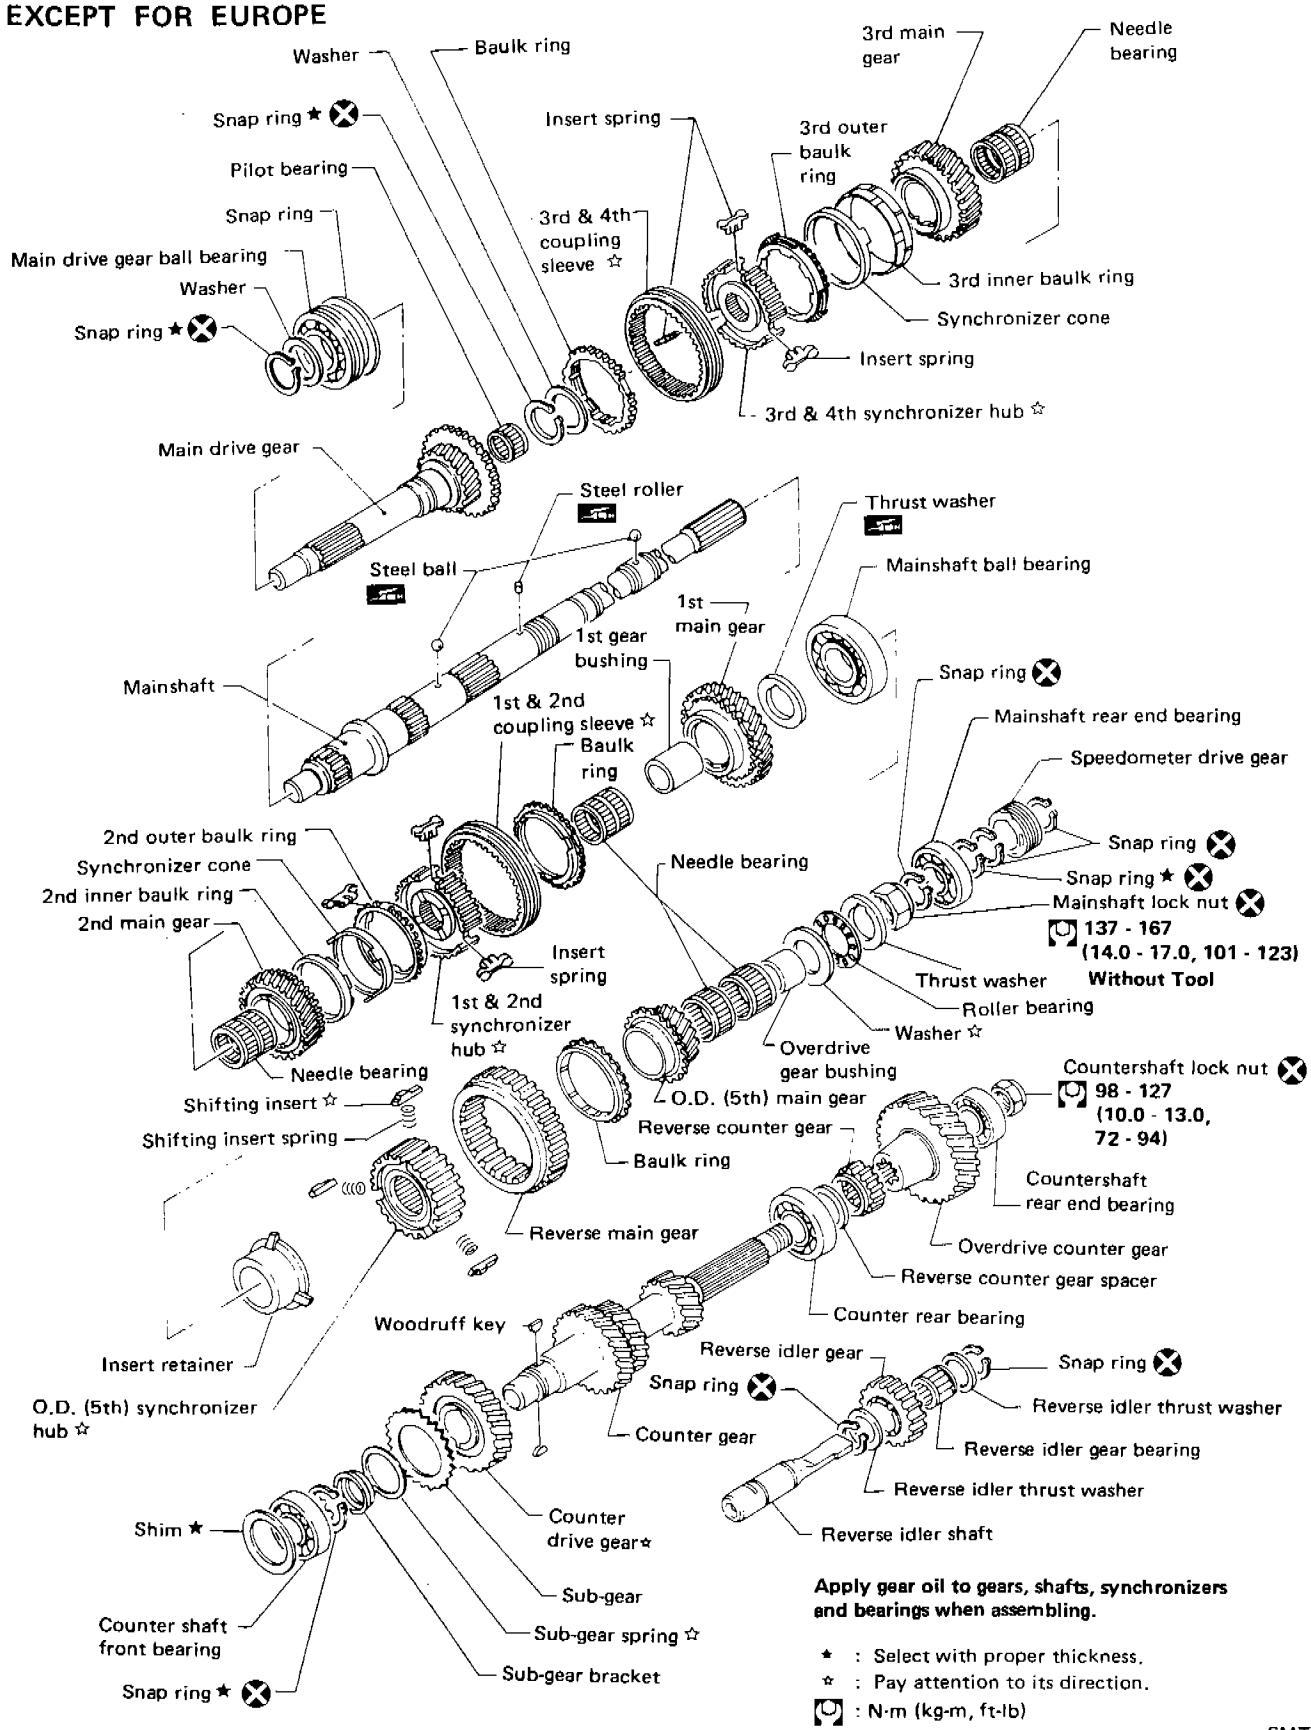


Apply gear oil to gears, shafts, synchronizers and bearings when assembling.


★ : Select with proper thickness.
☆ : Pay attention to its direction.
⊗ : N·m (kg-m, ft-lb)

SMT410B

Shift Control Components

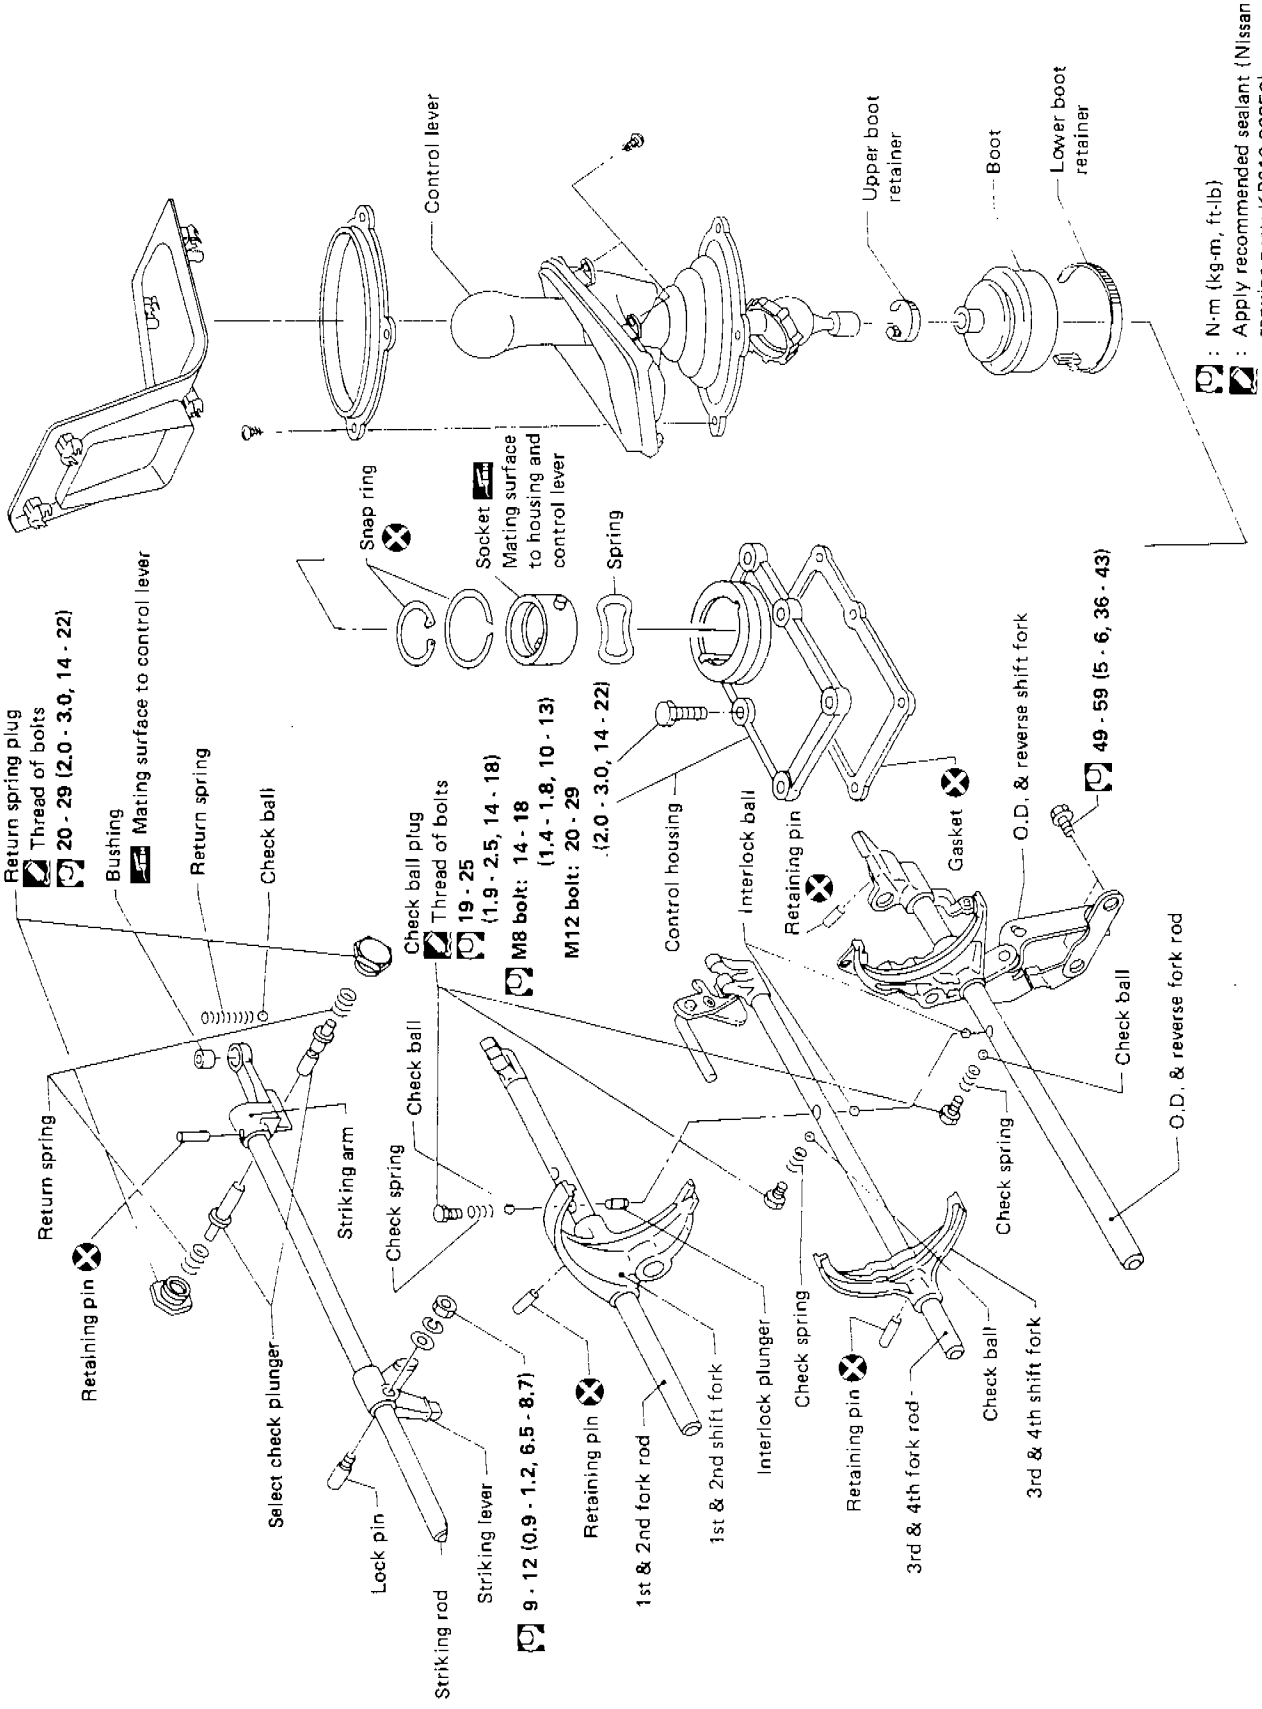


SMT382B

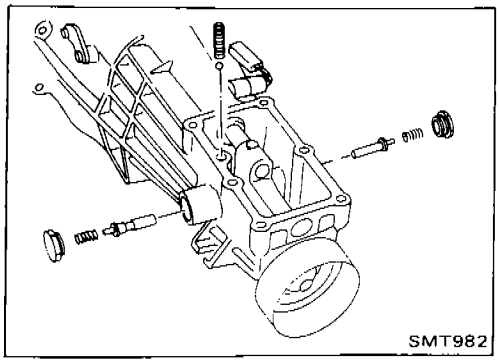
SMT982

Case Components


1. Remove rear extension.

a. Remove control housing, check ball, return spring plug, select check plunger and return springs.

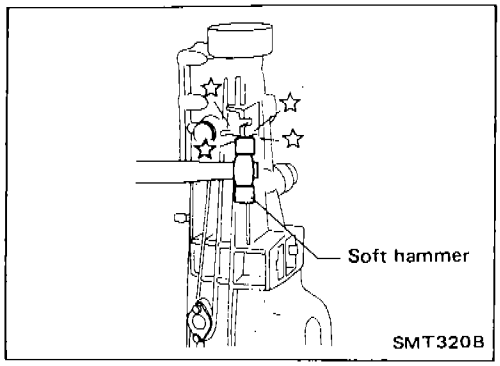


SMT320B


b. Remove rear extension by lightly tapping it.

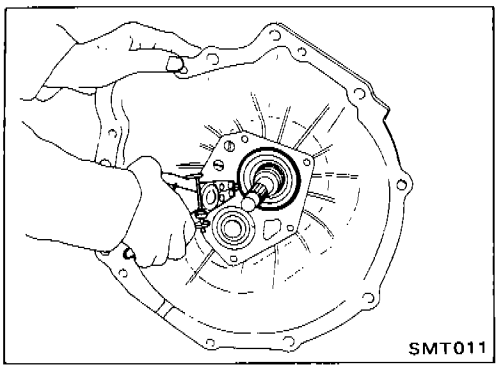
SMT011


2. Remove front cover, gasket, shim of countershaft front bearing, and snap ring of main drive gear ball bearing.

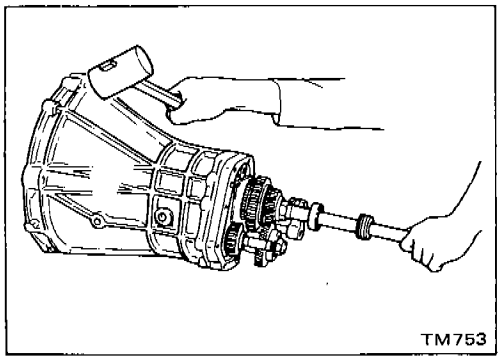
TM753

3. Remove transmission case by tapping lightly.

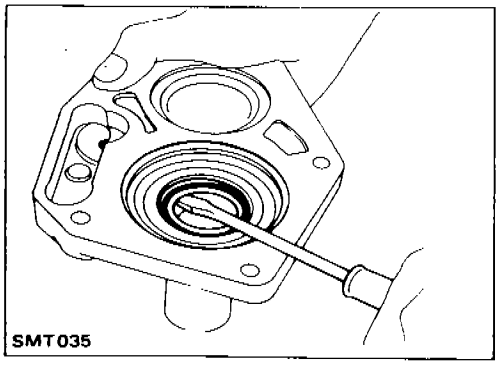

SMT035

4. Remove front cover oil seal.

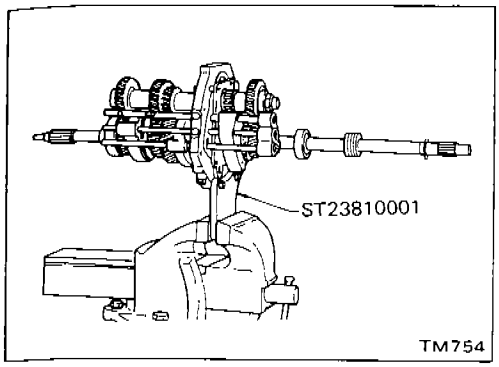


Shift Control Components


1. Set up Tool on adapter plate.
2. Remove check ball plugs, check springs, and check balls.

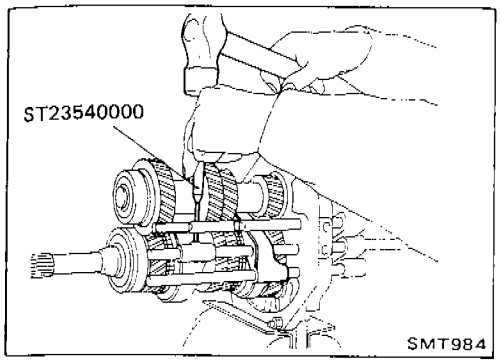


3. Drive out retaining pins. Then drive out fork rods and remove interlock balls.

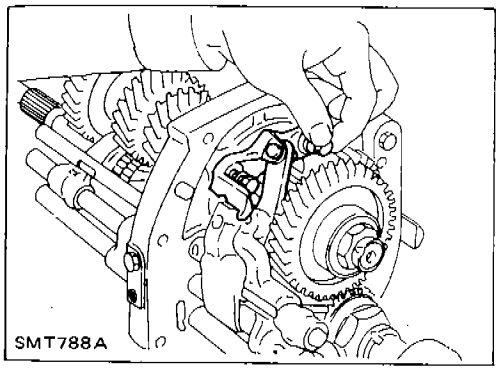

4. Remove lever bracket securing bolt.

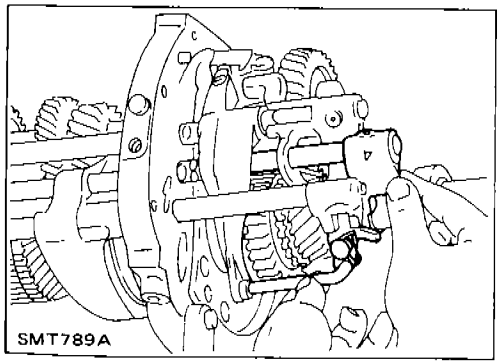


5. Draw out 3rd-4th fork rod.

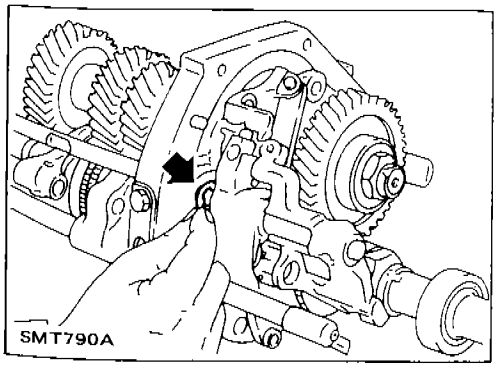


6. Remove E-ring from O.D. and reverse fork rod.

Shift Control Components (Cont'd)

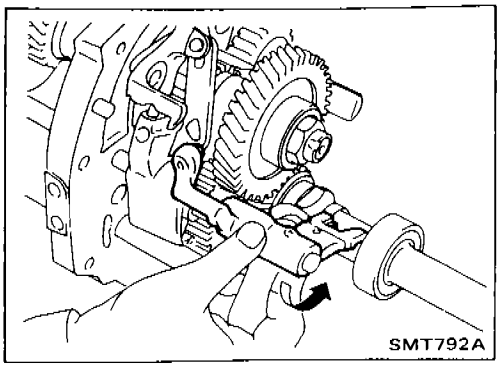
SMT792A

7. Draw out O.D. and reverse fork shaft by rotating O.D. and reverse bracket counterclockwise.

Gear Components

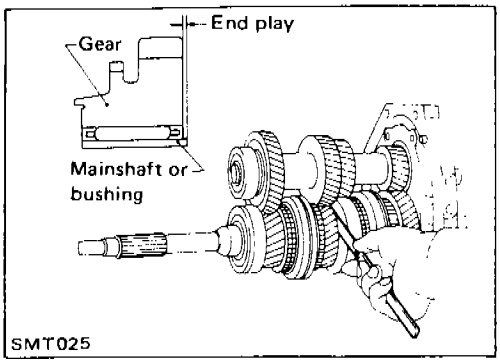


SMT025

1. Before removing gears and shafts, measure each gear end play.


   Gear end play: Refer to S.D.S.

   If not within specification, disassemble and check contact surface of gear to hub, washer, bushing, needle bearing and shaft.

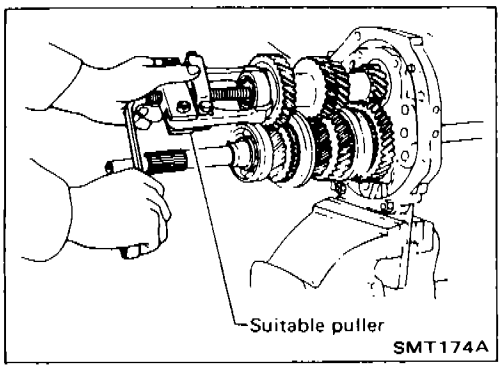

SMT174A


2. Mesh 2nd and reverse gear, then draw out counter front bearing with suitable puller.
3. Remove snap ring and then remove sub-gear bracket, sub-gear spring and sub-gear.

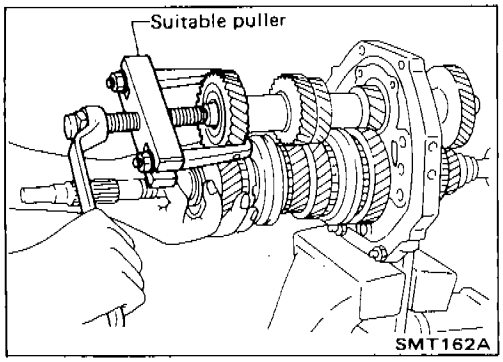

SMT162A

4. Draw out counter drive gear with main drive gear assembly with suitable puller.

- **When drawing out main drive gear assembly, be careful not to drop pilot bearing and baulk ring.**

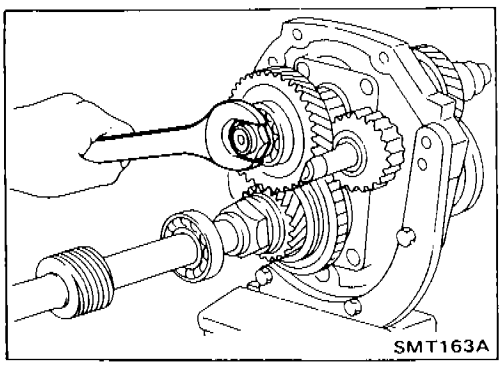

SMT163A

5. Remove rear side components on mainshaft and counter gear.


a. Release staking on countershaft nut and mainshaft nut and loosen these nuts.

   Mainshaft nut: Left-hand thread


Gear Components (Cont'd)

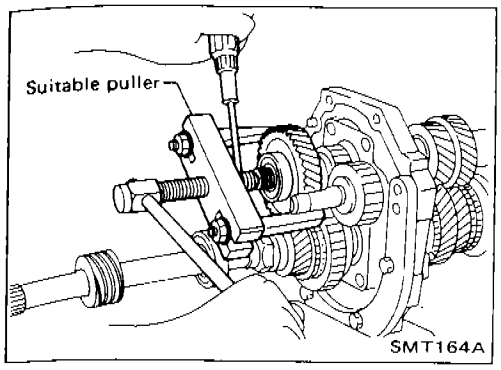

b. Pull out O.D. counter gear with bearing with suitable puller.
c. Draw out reverse counter gear and spacer.
d. Remove snap rings from reverse idler shaft and draw out reverse idler gear, thrust washers and reverse idler gear bearing.
e. Remove speedometer drive gear and steel ball.

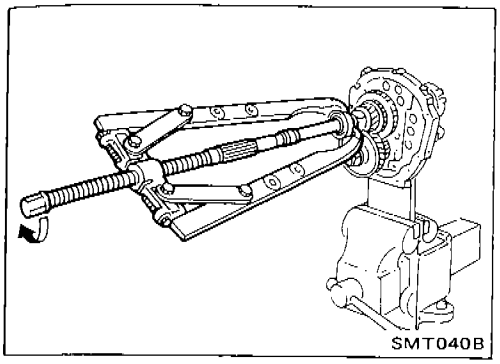


f. Remove snap ring and pull out overdrive mainshaft bearing, then remove snap ring.
g. Remove mainshaft nut.
h. Remove steel roller and washer.
i. Remove roller bearing and washer.
j. Remove O.D. main gear, needle bearing and baulk ring (O.D.).
k. Remove O.D. coupling sleeve, shifting inserts and shifting insert springs.

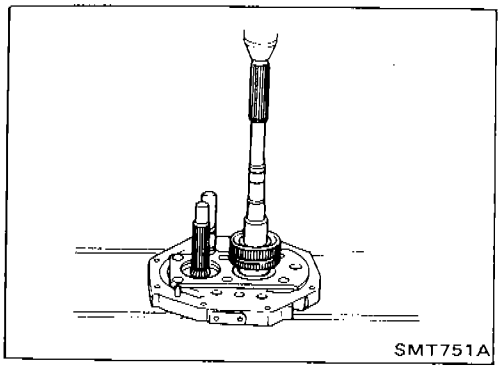


l. Press out mainshaft and counter gear alternately.

- **Make sure to alternate pressing of mainshaft and counter gear so as not to allow the front surface of one to contact the rear surface of the other.**

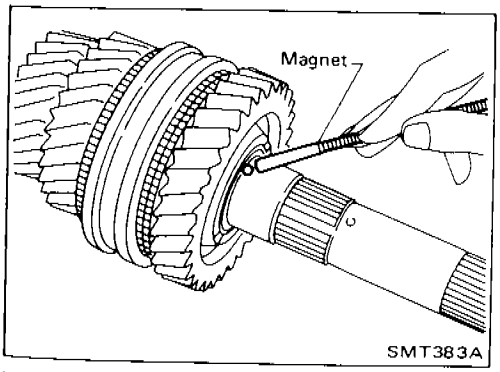


6. Remove front side components on mainshaft.
a. Remove 1st gear washer and steel ball.
b. Remove 1st main gear and 1st gear needle bearing.

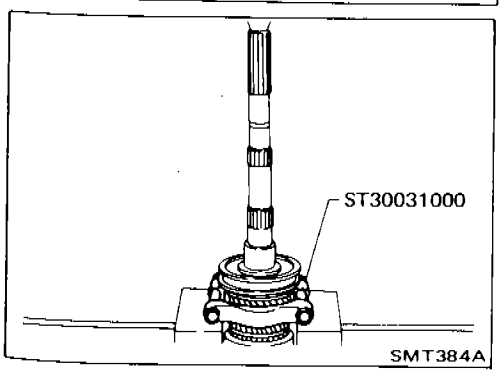


c. Press out 2nd main gear together with 1st gear bushing and 1st & 2nd synchronizer assembly.
d. Remove mainshaft front snap ring.


Gear Components (Cont'd)

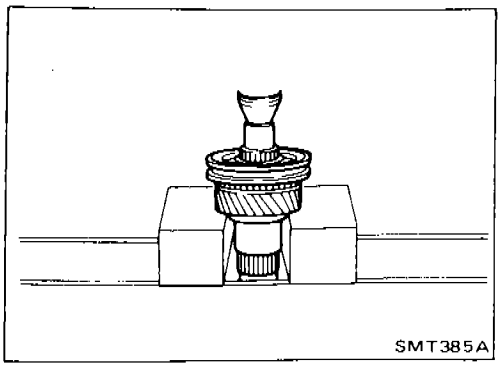

e. Press out 3rd main gear together with 3rd & 4th synchronizer assembly and 3rd gear needle bearing.

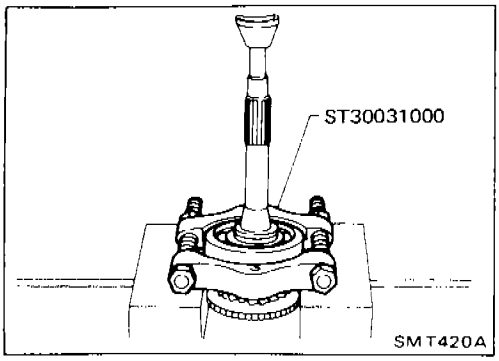


7. Remove main drive gear bearing.
a. Remove main drive gear snap ring and spacer.
b. Press out main drive gear bearing.

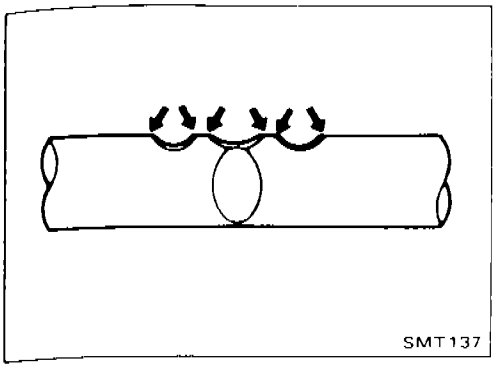
SMT137

Shift Control Components

- Check contact surface and sliding surface for wear, scratches, projections or other damage.

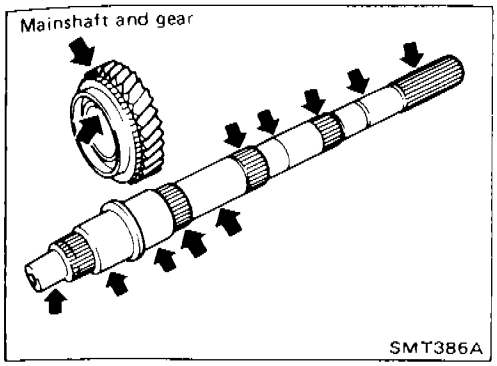


SMT386A


Gear Components

GEAR AND SHAFT

- Check shafts for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

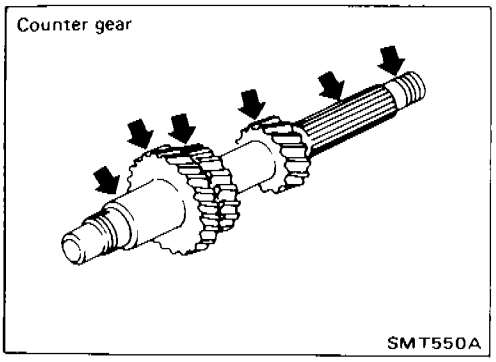

SMT550A

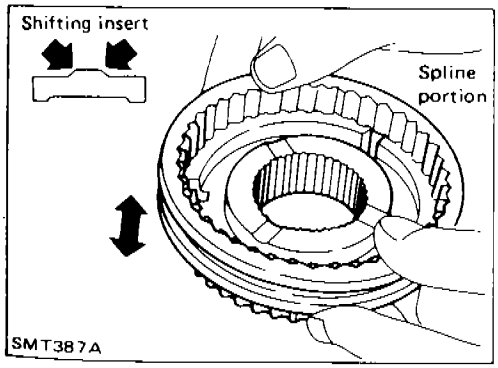


SMT387A

SYNCHRONIZERS

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check shifting inserts for wear or deformation.
- Check insert springs for deformation.

Gear Components (Cont'd)

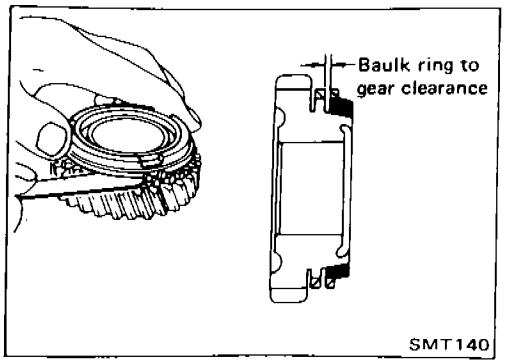


● Measure clearance between baulk ring and gear.


Clearance between baulk ring and gear
[1st, 3rd, main drive and O.D. baulk ring (For Europe), 1st, main drive and O.D. baulk ring (Except for Europe)]:


Unit: mm (in)

Dimension	Standard	Wear limit
1st	1.2 - 1.6 (0.047 - 0.063)	0.8 (0.031)
3rd and main drive	1.2 - 1.6 (0.047 - 0.063)	
O.D.	1.2 - 1.4 (0.047 - 0.055)	

If the clearance is smaller than the wear limit, replace baulk ring.

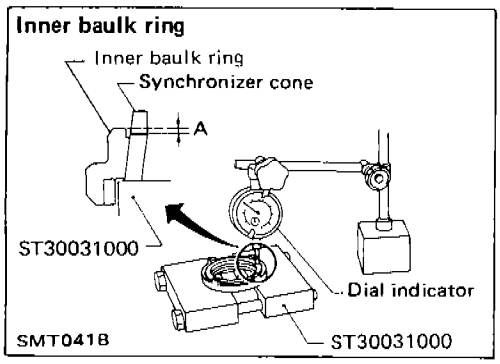

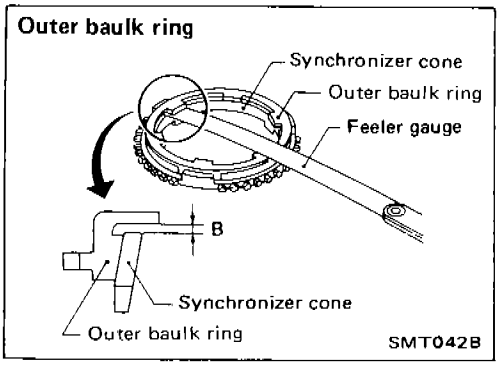

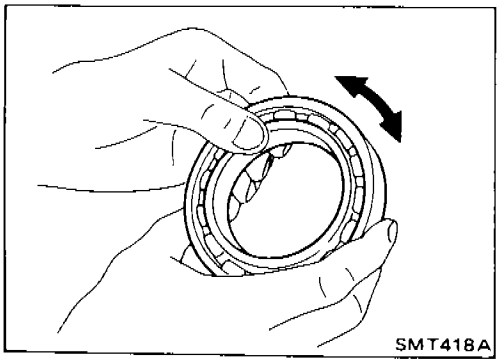

● Measure wear of baulk ring.

[2nd baulk ring (For Europe), 2nd and 3rd baulk ring (Except for Europe)]

a. Place baulk rings in position on synchronizer cone.
b. While holding baulk rings against synchronizer cone as far as it will go, measure dimensions "A" and "B".


Unit: mm (in)

Dimension	Standard	Wear limit
A	0.6 - 1.1 (0.024 - 0.043)	0.2 (0.008)
B	0.7 - 0.9 (0.028 - 0.035)	

c. If dimension "A" or "B" is smaller than the wear limit, replace baulk ring.


BEARINGS

● Make sure bearings roll freely and are free from noise, crack, pitting or wear.

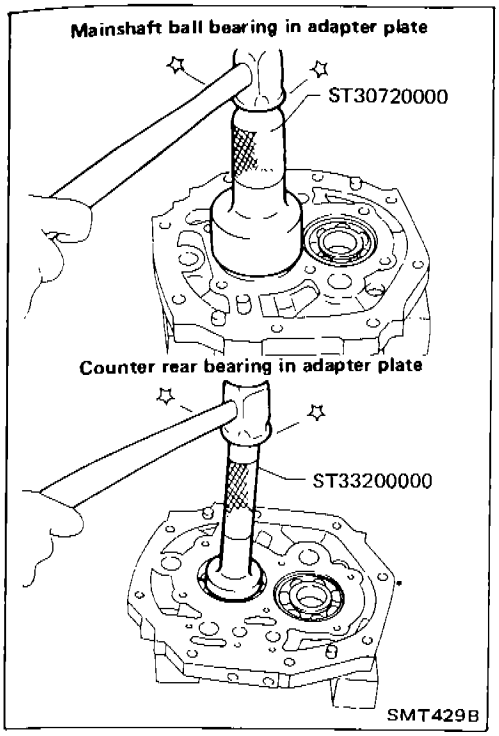


Gear Components

1. Install bearings into case components.

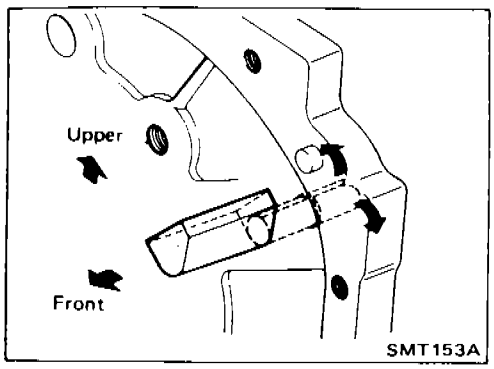


2. Assemble adapter plate parts.
- Install oil gutter on adapter plate and expand on rear side.

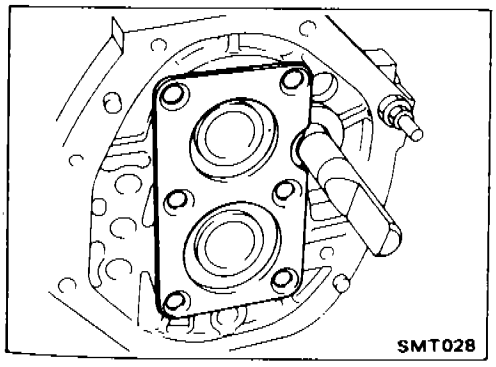


- Install bearing retainer.

a. Insert reverse shaft, then install bearing retainer.

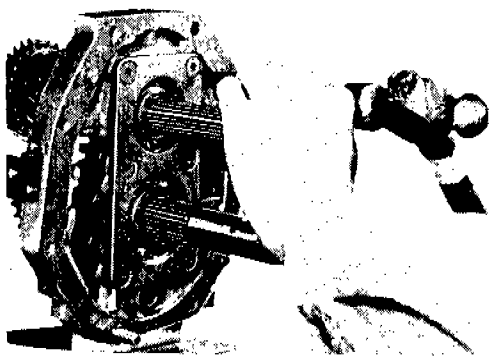


b. Tighten each screw, then stake each at two points.

Gear Components (Cont'd)

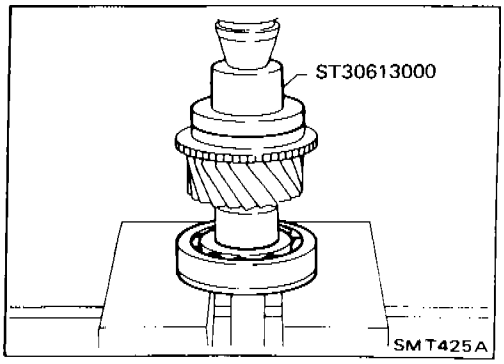


3. Install main drive gear bearing.
a. Press main drive gear bearing.
b. Install main drive gear spacer.

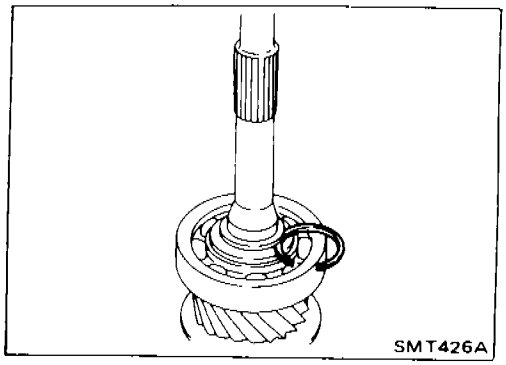


c. Select proper main drive gear snap ring to minimize clearance of groove and install it.

Allowable clearance of groove:
0 - 0.13 mm (0 - 0.0051 in)
Main drive gear snap ring:
Refer to S.D.S.

4. Assemble synchronizers.

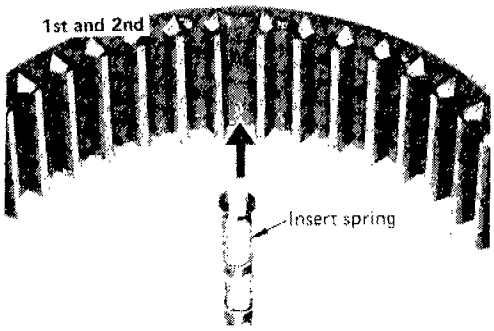



- 1st & 2nd synchronizer

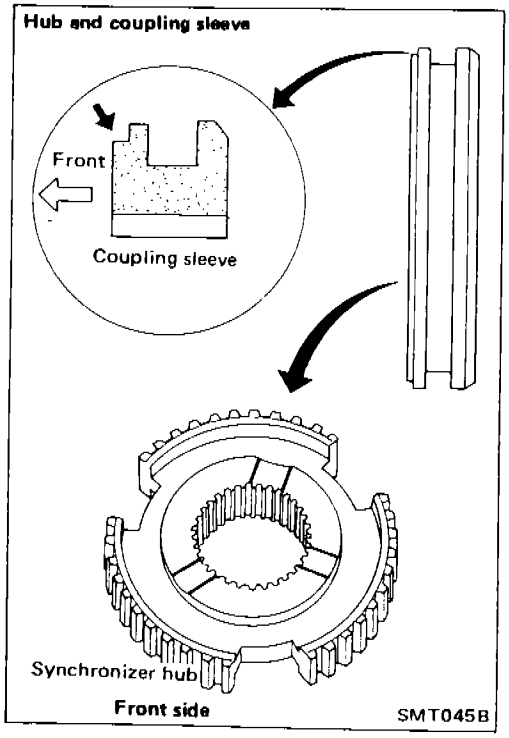


- Check coupling sleeve and synchronizer hub orientation.


Gear Components (Cont'd)

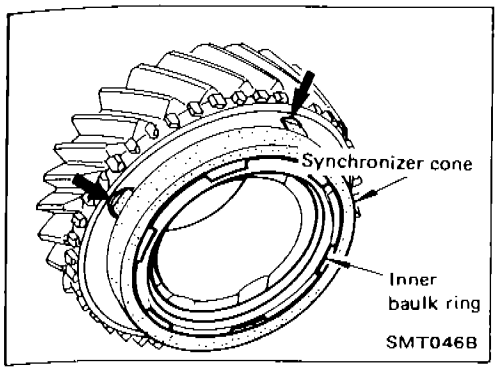

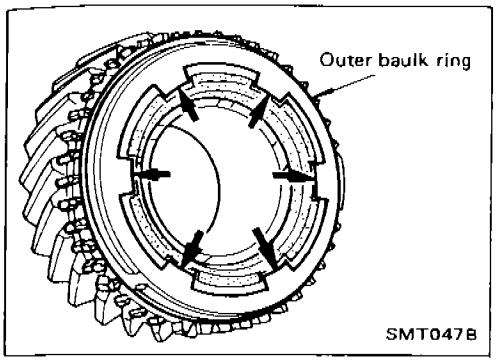


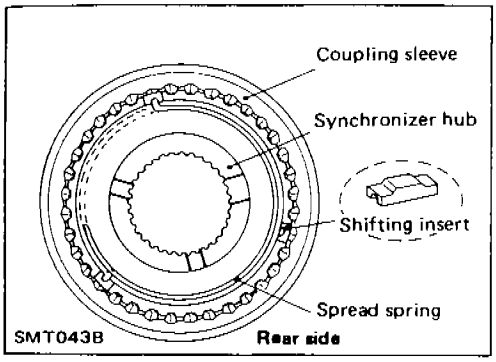

- 3rd & 4th synchronizer

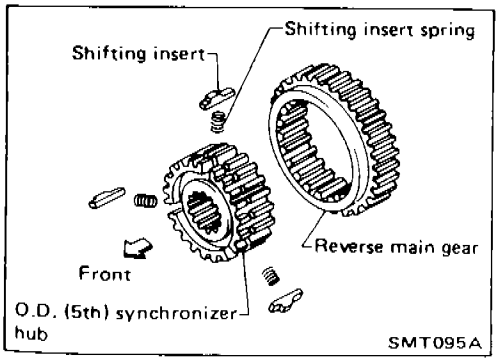


- O.D. synchronizer

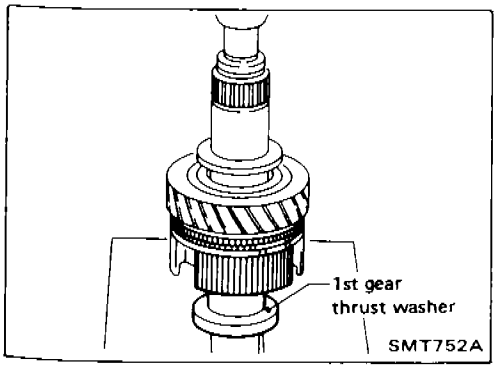


5. Install front side components on main shaft.
a. Assemble 2nd main gear, needle bearing and 1st & 2nd synchronizer assembly, then press 1st gear bushing on mainshaft.
b. Install 1st main gear.

Gear Components (Cont'd)

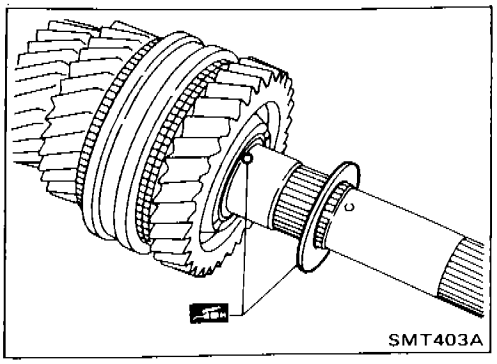


c. Install steel ball and 1st gear washer.

- **Apply multi-purpose grease to steel ball and 1st gear washer before installing.**

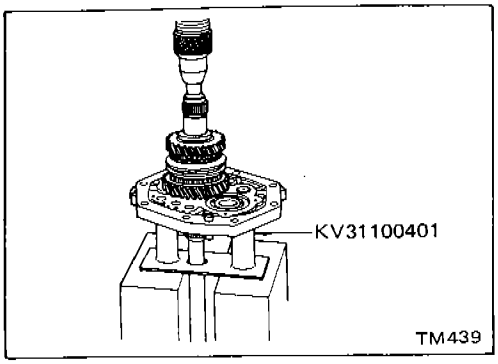


6. Install mainshaft and counter gear on adapter plate and main drive gear on mainshaft.

a. Press mainshaft assembly to adapter plate with Tool.

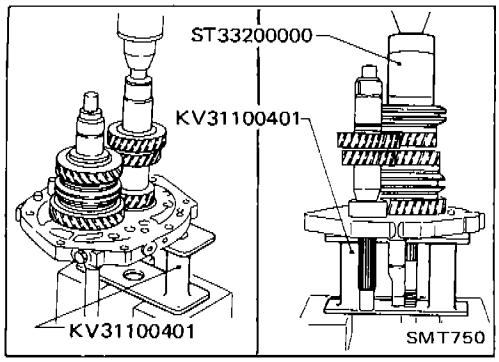


b. Press counter gear into adapter plate with Tool.

c. Install 3rd main gear and then press 3rd & 4th synchronizer assembly.

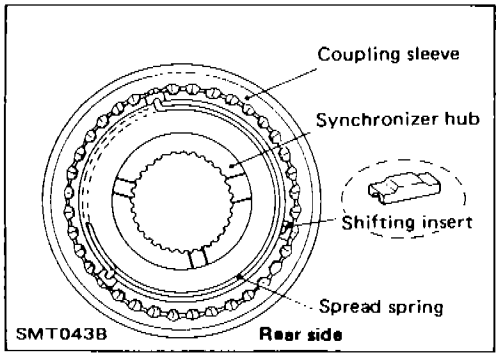

- **Pay attention to direction of 3rd & 4th synchronizer.**

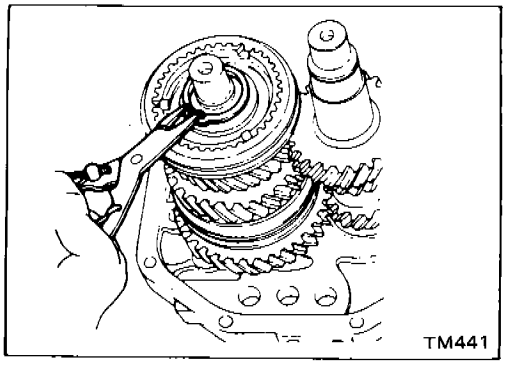


d. Install thrust washer on mainshaft and secure it with mainshaft front snap ring.
Select proper snap ring to minimize clearance of groove in mainshaft.

Allowable clearance of groove:
0 - 0.18 mm (0 - 0.0071 in)
Mainshaft front snap ring:
Refer to S.D.S.


e. Apply gear oil to mainshaft pilot bearing and install it on mainshaft.

Gear Components (Cont'd)

f. Press counter drive gear with main drive gear with Tool.

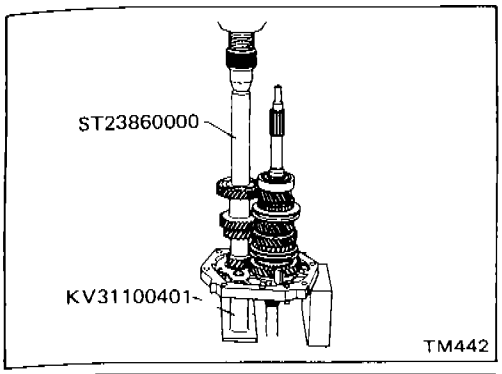

- **Pay attention to direction of counter drive gear.**

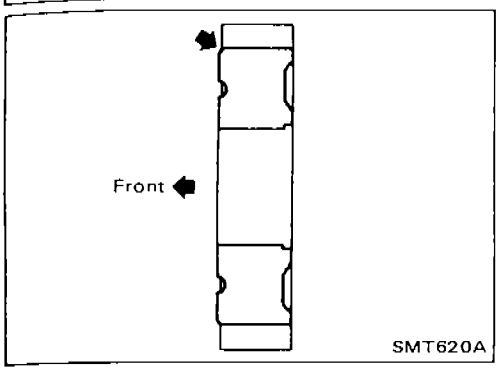


g. Install sub-gear components.

(1) Install sub-gear and sub-gear bracket on counter drive gear and then select proper snap ring to minimize clearance of groove in counter gear.


Allowable clearance of groove:
0 - 0.18 mm (0 - 0.0071 in)
Counter drive gear snap ring: Refer to S.D.S.

(2) Remove snap ring, sub-gear bracket and sub-gear from counter gear.


(3) Reinstall sub-gear, sub-gear spring and sub-gear bracket..

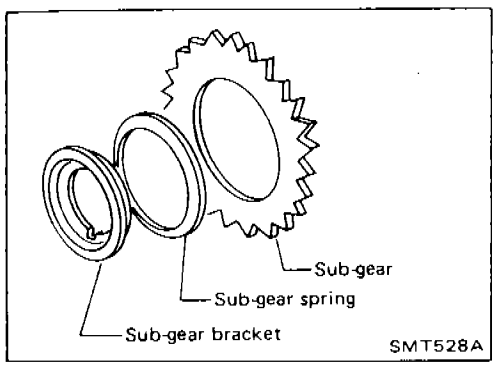


h. Install selected counter drive gear snap ring.

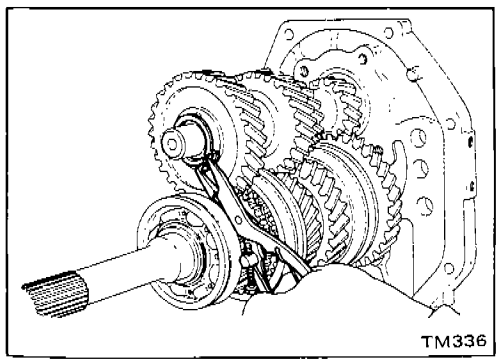


i. Press counter gear front bearing onto counter gear.

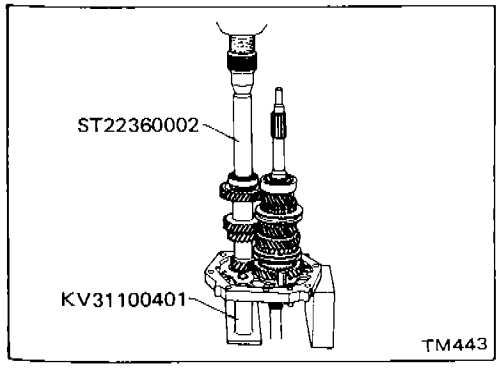


Gear Components (Cont'd)

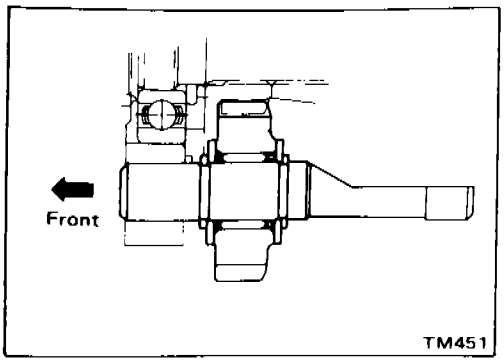

7. Install rear side components on mainshaft and counter gear.
a. Install reverse idler gear to reverse idler shaft with spacers, snap rings and needle bearing.

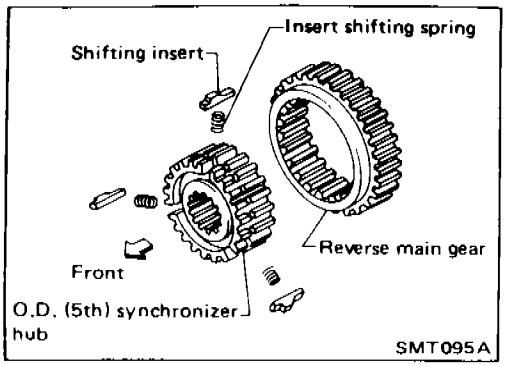


b. Install insert retainer and O.D. synchronizer to mainshaft.
- **Pay attention to direction of hub.**

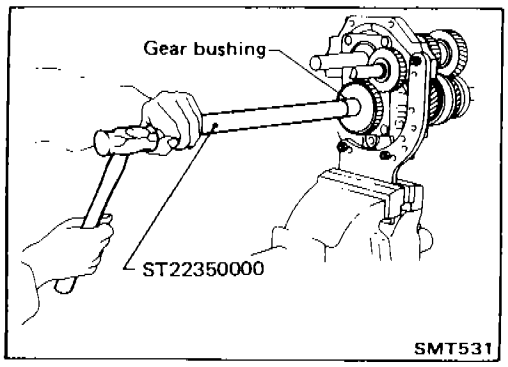


c. Install O.D. gear bushing with Tool.
d. Install O.D. main gear and needle bearing.
e. Install spacer, reverse counter gear and O.D. counter gear.
- **O.D. main gear and O.D. counter gear should be handled as a matched set.**

f. Install washer, roller bearing, steel roller and thrust washer.
g. Tighten mainshaft lock nut temporarily.
- **Always use new lock nut.**

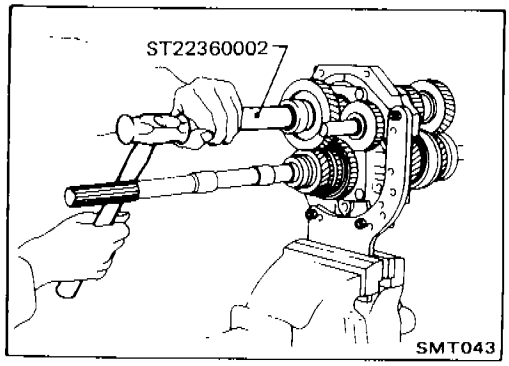


h. Install countershaft rear end bearing with Tool.

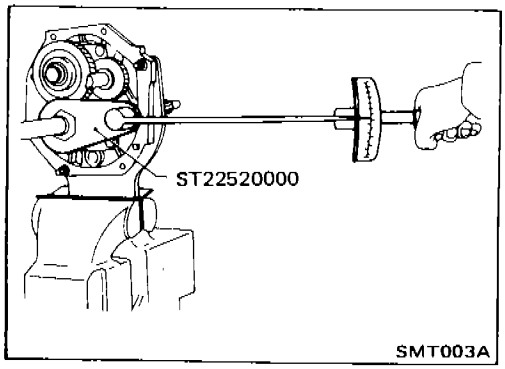


8. Mesh 2nd and reverse gears, then tighten mainshaft lock nut with Tool.

Gear Components (Cont'd)

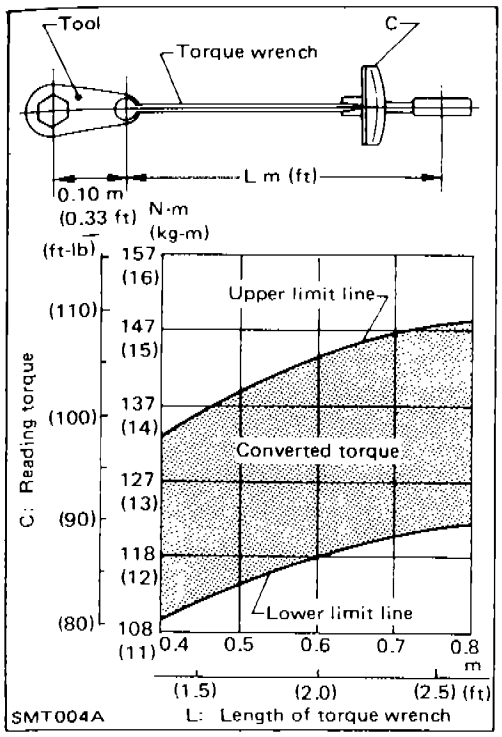


- Use the left chart when deciding the reading torque. (Length of torque wrench vs. setting or reading torque)

9. Tighten countershaft lock nut.
   - **Always use new lock nut.**

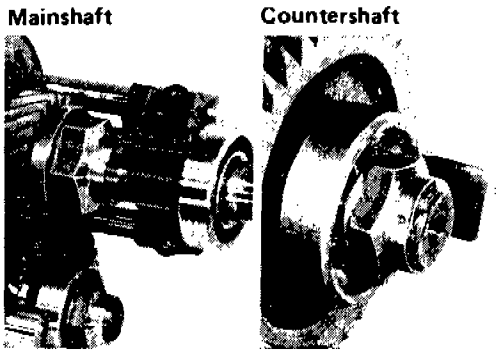


10. Stake mainshaft lock nut and countershaft lock nut with a punch.
11. Measure gear end play. For the description, refer to DISASSEMBLY for Gear Components.

Shift Control Components

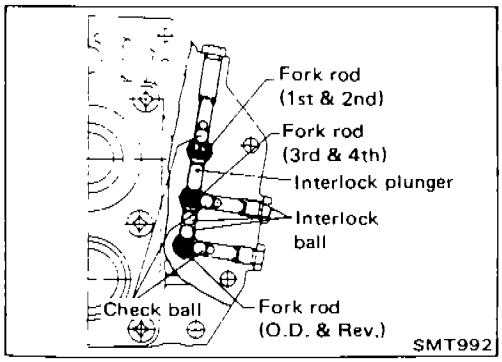


1. Install shift rods, interlock plunger, interlock balls and check balls.

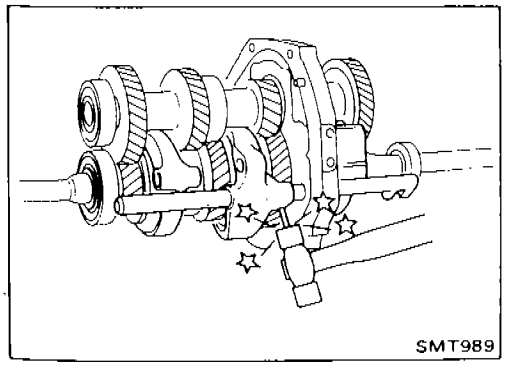


a. 1st-2nd shift fork


Shift Control Components (Cont'd)

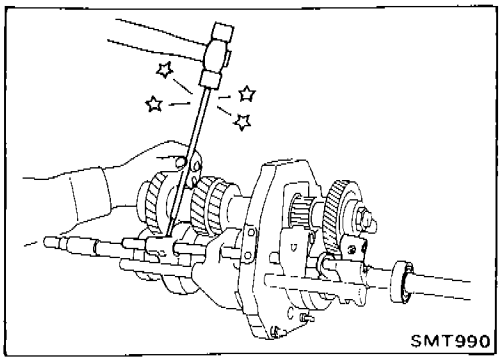


b. 3rd-4th shift fork

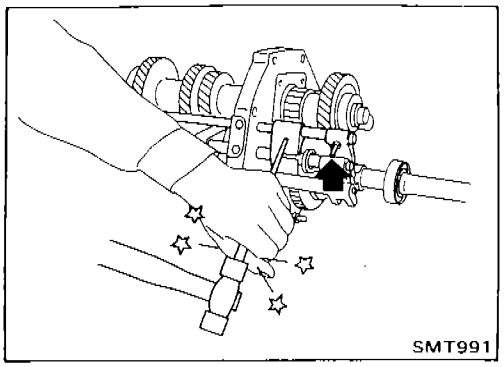


c. O.D.-reverse shift fork or reverse shift fork.

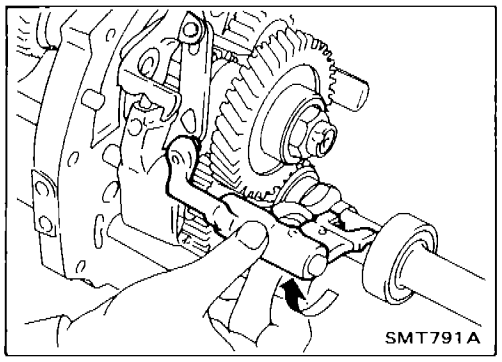


2. Install O.D. and reverse fork shaft by rotating O.D. and reverse bracket clockwise.

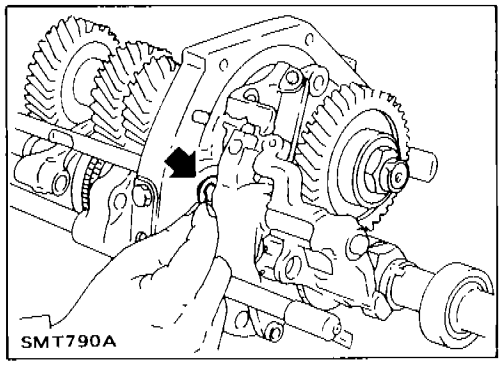

3. Install E-ring on O.D. and reverse fork rod.

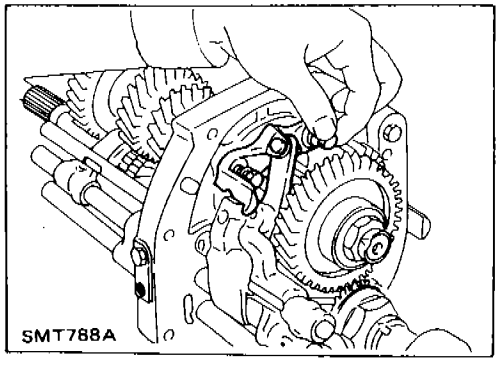


4. Install lever bracket securing bolt.

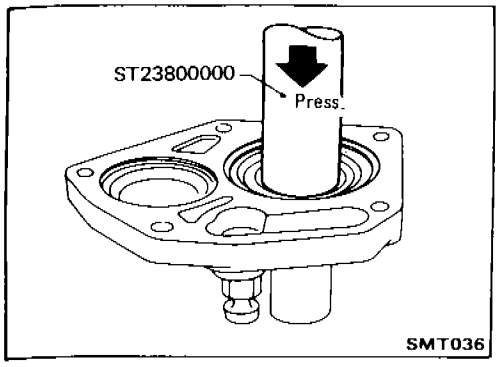


Case Components


1. Install front cover oil seal.
   - **Apply multi-purpose grease to seal lip of oil seal before installing.**

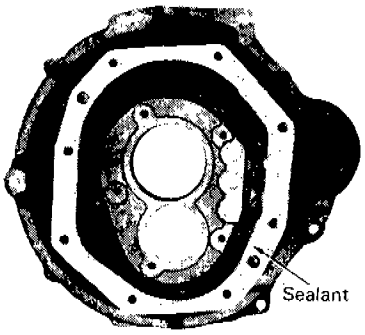


2. Apply sealant to mating surface of transmission case.

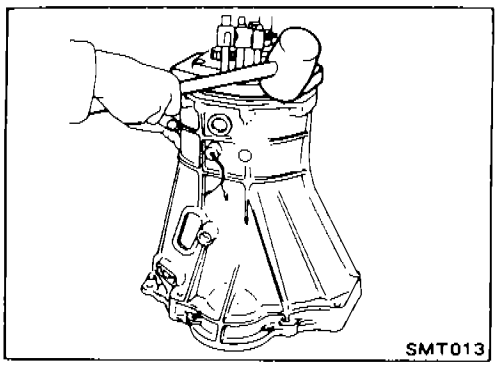

3. Install gear assembly onto transmission case.

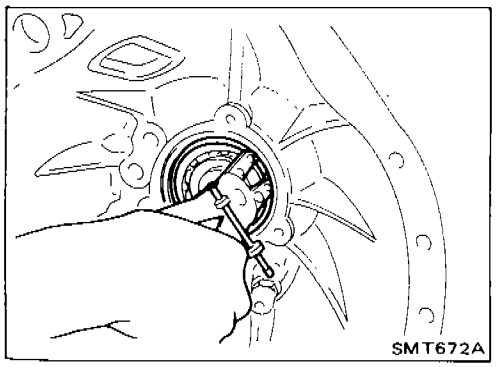


4. Install snap ring of main drive bearing.

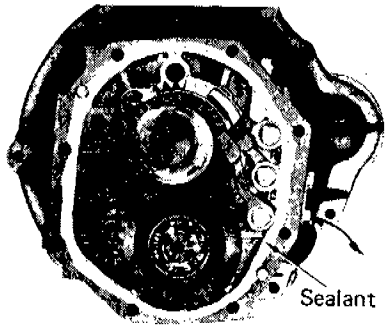


5. Apply sealant to mating surface of adapter plate.
6. Install rear extension.

Case Components (Cont'd)

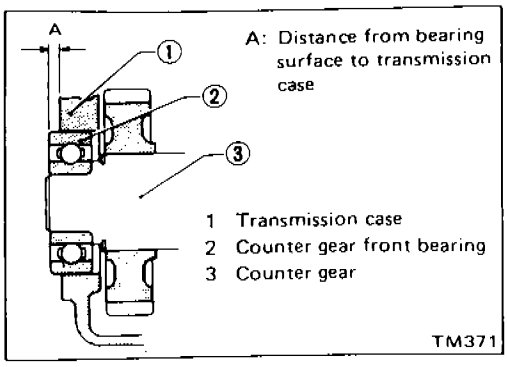


7. Select counter front bearing shim.
   Counter front bearing shim: Refer to S.D.S.
8. Install gasket and front cover.

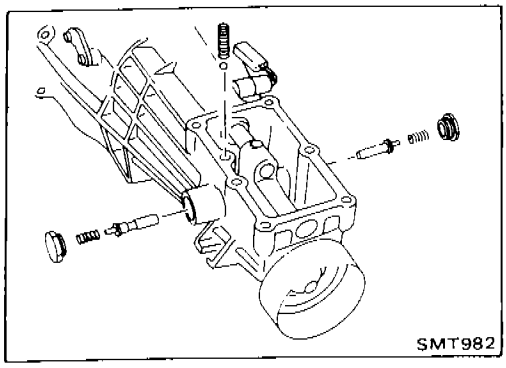

9. Install return spring plugs, check ball, return springs and select check plunger.
10. Install control housing and gasket.

General Specifications

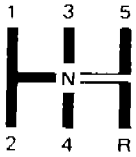Destination		Except Europe	Europe
Transmission model		FS5W71C	
Number of speeds		5	
Shift pattern			
Synchromesh type		Warner	
Gear ratio	1st	3.321	3.592
	2nd	1.902	2.057
	3rd	1.308	1.361
	4th	1.000	1.000
	O.D.	0.838	0.821
	Reverse	3.382	3.657
Number of teeth			
Mainshaft	Drive	22	21
	1st	33	33
	2nd	27	27
	3rd	26	25
	O.D.	21	22
	Reverse	36	36
Countershaft	Drive	31	32
	1st	14	14
	2nd	20	20
	3rd	28	28
	O.D.	37	39
	Reverse	15	15
Reverse idler gear		21	
Oil capacity	ℓ (Imp pt)	2.4 (4-1/4)	
Remarks	Sub-gear	○	
	Mainshaft braking mechanism	○	
	Double baulk ring type synchronizer	2nd and 3rd synchronizer	2nd synchronizer

Inspection and Adjustment

GEAR END PLAY

Gear	End play mm (in)
1st gear	0.31 - 0.41 (0.0122 - 0.0161)
2nd gear	0.11 - 0.21 (0.0043 - 0.0083)
3rd gear	0.11 - 0.21 (0.0043 - 0.0083)
O.D. gear	0.24 - 0.41 (0.0094 - 0.0161)

CLEARANCE BETWEEN BAULK RING AND GEAR


For Europe

1st, 3rd, main drive and O.D. baulk ring

Unit: mm (in)

	Standard	Wear limit
1st	1.2 - 1.6 (0.047 - 0.063)	0.8 (0.031)
3rd and main drive	1.2 - 1.6 (0.047 - 0.063)	
O.D.	1.2 - 1.4 (0.047 - 0.055)	

2nd baulk ring Unit: mm (in)

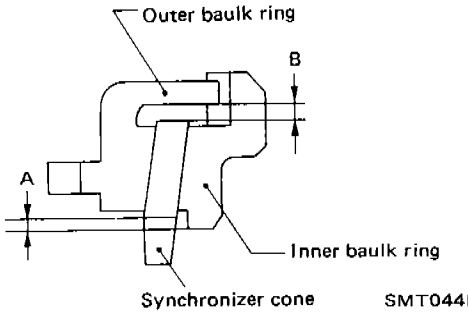

SMT044B

Dimension	Standard	Wear limit
A	0.6 - 1.1 (0.024 - 0.043)	0.2 (0.008)
B	0.7 - 0.9 (0.028 - 0.035)	


Except for Europe

1st, main drive and O.D. baulk ring

Unit: mm (in)

	Standard	Wear limit
1st	1.2 - 1.6 (0.047 - 0.063)	0.8 (0.031)
O.D.	1.2 - 1.4 (0.047 - 0.055)	

2nd and 3rd baulk ring Unit: mm (in)

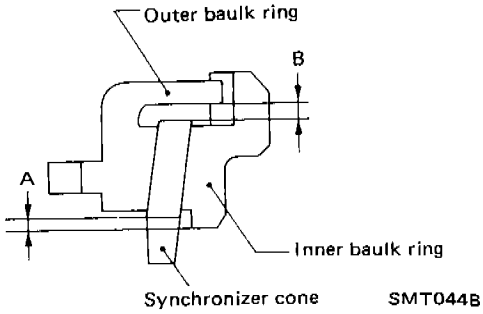

SMT044B

Dimension	Standard	Wear limit
A	0.6 - 1.1 (0.024 - 0.043)	0.2 (0.008)
B	0.7 - 0.9 (0.028 - 0.035)	

AVAILABLE SNAP RINGS

Main drive gear bearing

Allowable clearance: 0 - 0.13 mm (0 - 0.0051 in)

Thickness mm (in)	Part number
1.73 (0.0681)	32204-78005
1.80 (0.0709)	32204-78000
1.87 (0.0736)	32204-78001
1.94 (0.0764)	32204-78002
2.01 (0.0791)	32204-78003
2.08 (0.0819)	32204-78004

Mainshaft front

Allowable clearance: 0 - 0.18 mm (0 - 0.0071 in)

Thickness mm (in)	Part number
2.4 (0.094)	32263-V5200
2.5 (0.098)	32263-V5201
2.6 (0.102)	32263-V5202

Mainshaft rear end bearing

Allowable clearance: 0 - 0.14 mm (0 - 0.0055 in)

Thickness mm (in)	Part number
1.1 (0.043)	32228-20100
1.2 (0.047)	32228-20101
1.3 (0.051)	32228-20102
1.4 (0.055)	32228-20103

Inspection and Adjustment (Cont'd)

Counter drive gear


Allowable clearance	0 - 0.18 mm (0 - 0.0071 in)

Thickness mm (in)	Part number
1.4 (0.055)	32215-E9000
1.5 (0.059)	32215-E9001
1.6 (0.063)	32215-E9002

AVAILABLE SHIMS

Counter front bearing

Unit: mm (in)

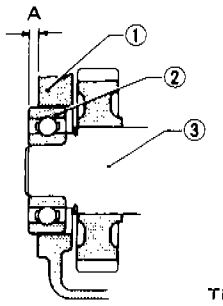

TM371

A: Distance from bearing surface to transmission case

1 Transmission case
2 Counter gear front bearing
3 Counter gear

"A"	Thickness of shim	Part number
4.52 - 4.71 (0.1780 - 0.1854)	Not necessary	
4.42 - 4.51 (0.1740 - 0.1776)	0.1 (0.004)	32218-V5000
4.32 - 4.41 (0.1701 - 0.1736)	0.2 (0.008)	32218-V5001
4.22 - 4.31 (0.1661 - 0.1697)	0.3 (0.012)	32218-V5002
4.12 - 4.21 (0.1622 - 0.1657)	0.4 (0.016)	32218-V5003
4.02 - 4.11 (0.1583 - 0.1618)	0.5 (0.020)	32218-V5004
3.92 - 4.01 (0.1543 - 0.1579)	0.6 (0.024)	32218-V5005

AUTOMATIC TRANSMISSION

SECTION AT

CONTENTS

PREPARATION ..... AT- 2
PRECAUTIONS ..... AT- 3
A/T CONTROL DIAGRAM ..... AT- 4
ON-VEHICLE SERVICE ..... AT- 7
TROUBLE DIAGNOSES ..... AT- 11
REMOVAL AND INSTALLATION ..... AT- 75
MAJOR OVERHAUL ..... AT- 76
DISASSEMBLY ..... AT- 80
REPAIR FOR COMPONENT PARTS ..... AT- 91
ASSEMBLY AT-136
SERVICE DATA AND SPECIFICATIONS (S.D.S.) AT-156

AT







When you read wiring diagrams:

- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES".

SPECIAL SERVICE TOOLS


*: Special tool or commercial equivalent

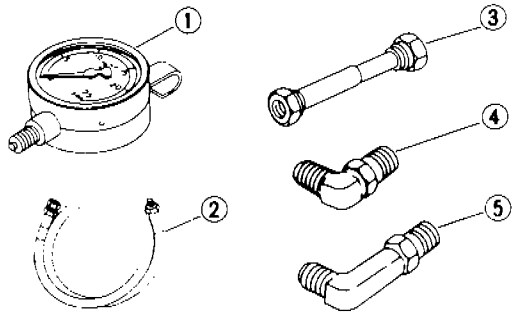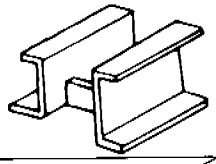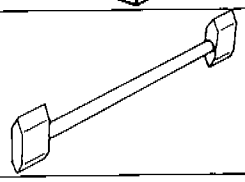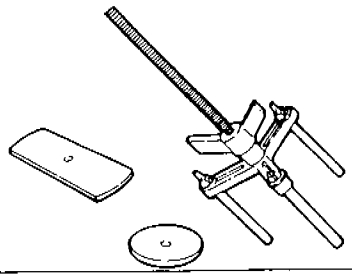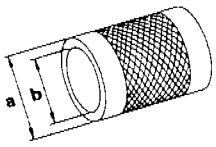Tool number Tool name	Description	
ST2505S001 Oil pressure gauge set ① ST25051001 Oil pressure gauge ② ST25052000 Hose ③ ST25053000 Joint pipe ④ ST25054000 Adapter ⑤ ST25055000 Adapter		Measuring line pressure
ST07870000 Transmission case stand		Disassembling and assembling A/T
KV31102100 Torque converter one-way clutch check tool		Checking one-way clutch in torque converter
ST25850000 Sliding hammer		Removing oil pump assembly
KV31102400 Clutch spring compressor		Removing and installing clutch return springs
ST33200000* Drift	 a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia.	Installing oil pump housing oil seal Installing rear oil seal

Service Notice

- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transmission.
- When disassembling parts, place them in order in a parts rack so that they can be put back into the unit in their proper positions.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transmission is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place removed parts in order on a parts rack so they can be put back in the valve body in the same positions and sequences. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along their bores in the valve body under their own weight.
- Before assembly, apply a coat of recommended A.T.F. to all parts. Petroleum jelly may be applied to O-rings and seals and used to hold small bearings and washers in place during reassembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- After overhaul, refill the transmission with new A.T.F.


Hydraulic Control Circuits

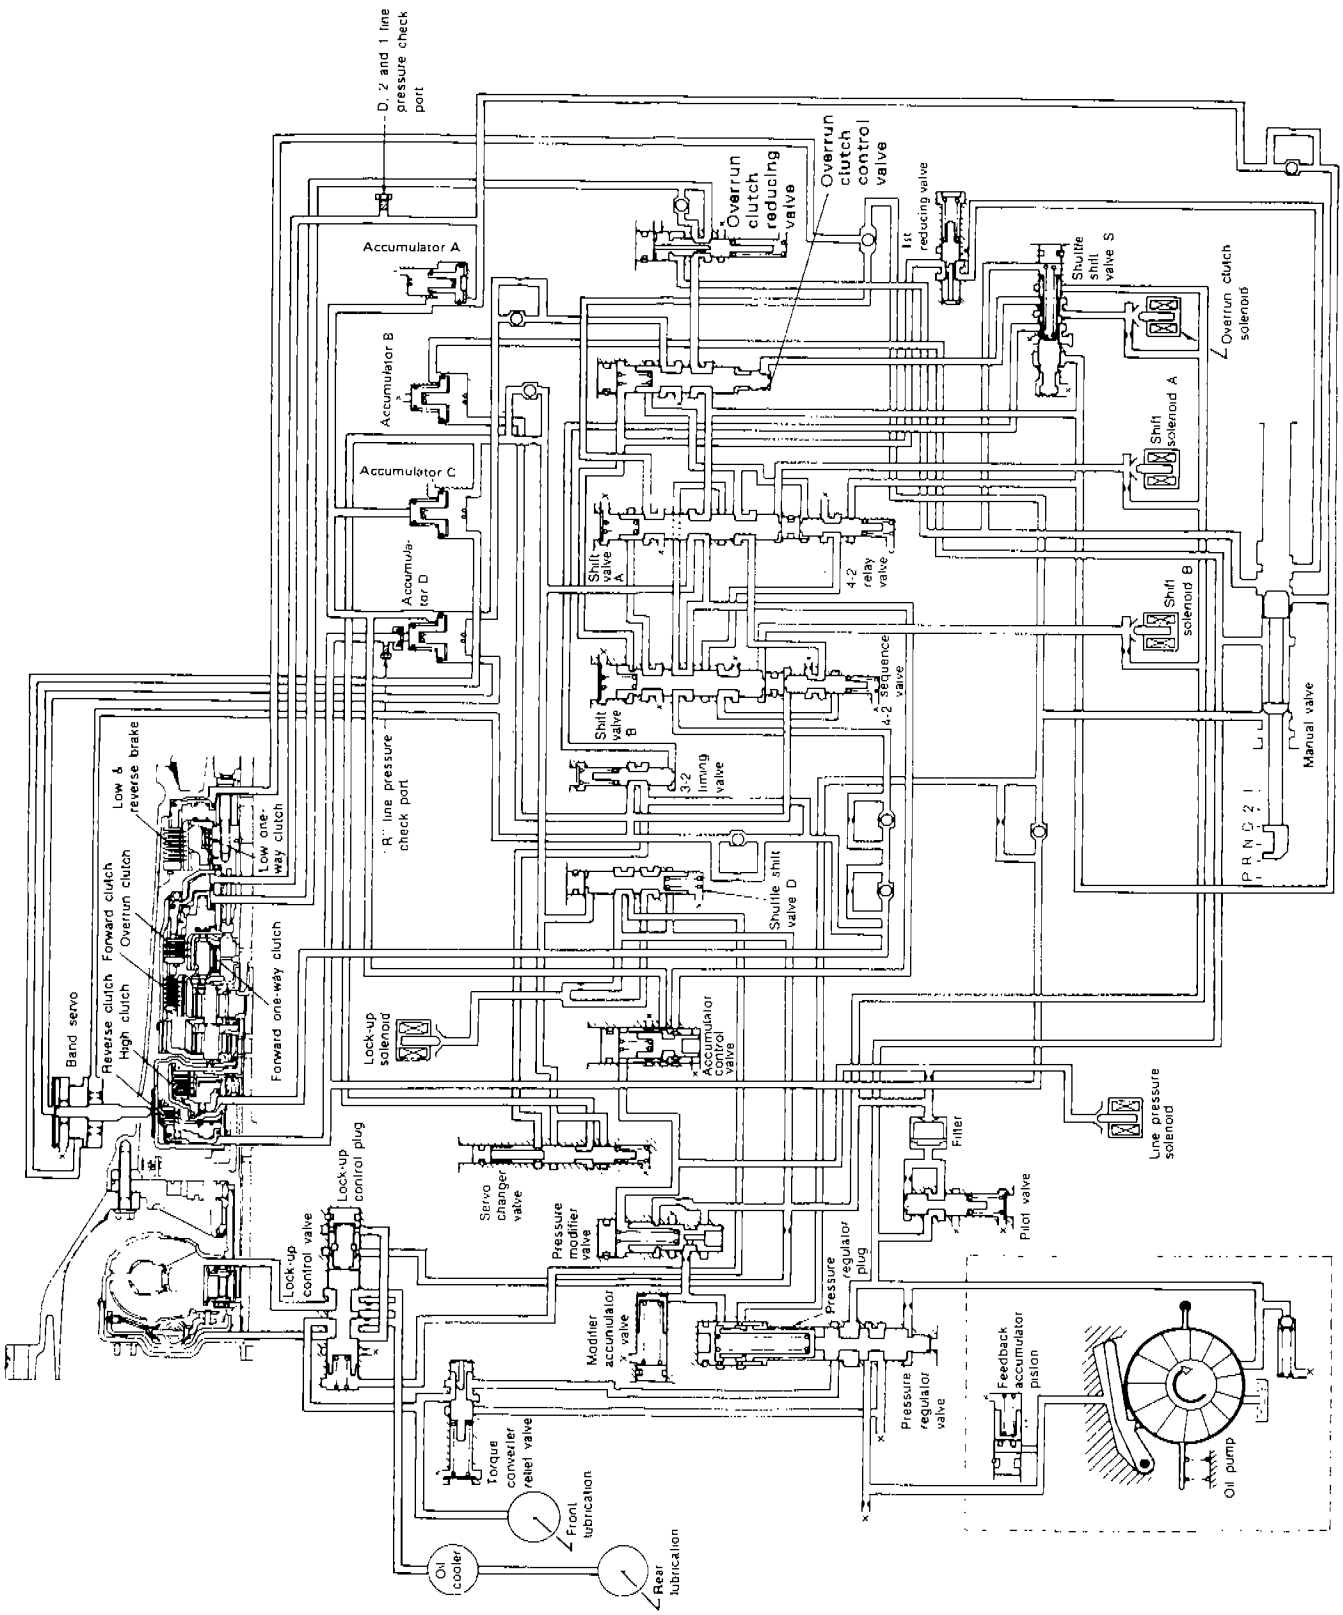

SAT123B

A/T CONTROL DIAGRAM

Electrical Control Chart

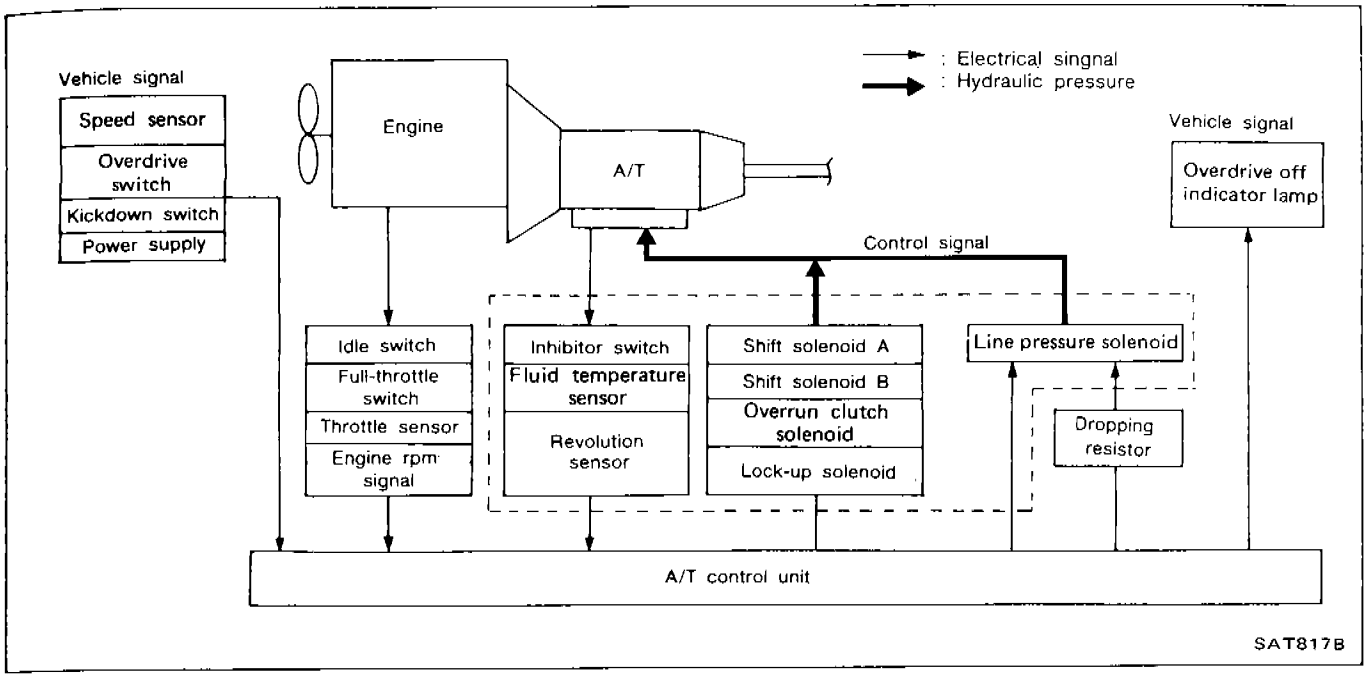


Mechnical Operation

Shift position		Reverse clutch	High clutch	Forward clutch	Overrun clutch	Band servo			Forward one-way clutch	Low one-way clutch	Low & reverse brake	Lock-up	Remarks
						2nd apply	3rd release	4th apply					
P													PARK
R		○									○		REVERSE
N													NEUTRAL
D *4	1st			○	⊗				●	●			Automatic shift 1 ↔ 2 ↔ 3 ↔ 4
	2nd			○	*1 ◎	○			●				
	3rd		○	○	◎	*2 ⊗	⊗		●				
	4th		○	⊗		*3 ⊗	⊗	○				○	
2	1st			○	⊗				●	●			Automatic shift 1 ↔ 2
	2nd			○	◎	○			●				
1	1st			○	○				●		○		Locks (held stationary) in 1st speed 1 ← 2
	2nd			○	○	○			●				


*1. Operates when overdrive switch is set in "OFF" position.
*2. Oil pressure is applied to both 2nd "apply" side and 3rd "release" side of band servo piston. However, because oil pressure area on the "release" side is greater than that on the "apply" side, brake band does not contract.
*3. Oil pressure is applied to 4th "apply" side in condition *2 above, and brake band contracts.
*4. A/T will not shift to 4th when overdrive switch is set in "OFF" position.

○ : Operates.
◎ : Operates when throttle opening is less than 1/16. Engine brake activates.
● : Operates during "progressive" acceleration.
⊗ : Operates but does not affect power transmission.
⊗ : Operates when throttle opening is less than 1/16 but does not affect engine brake.

Cross-Sectional View

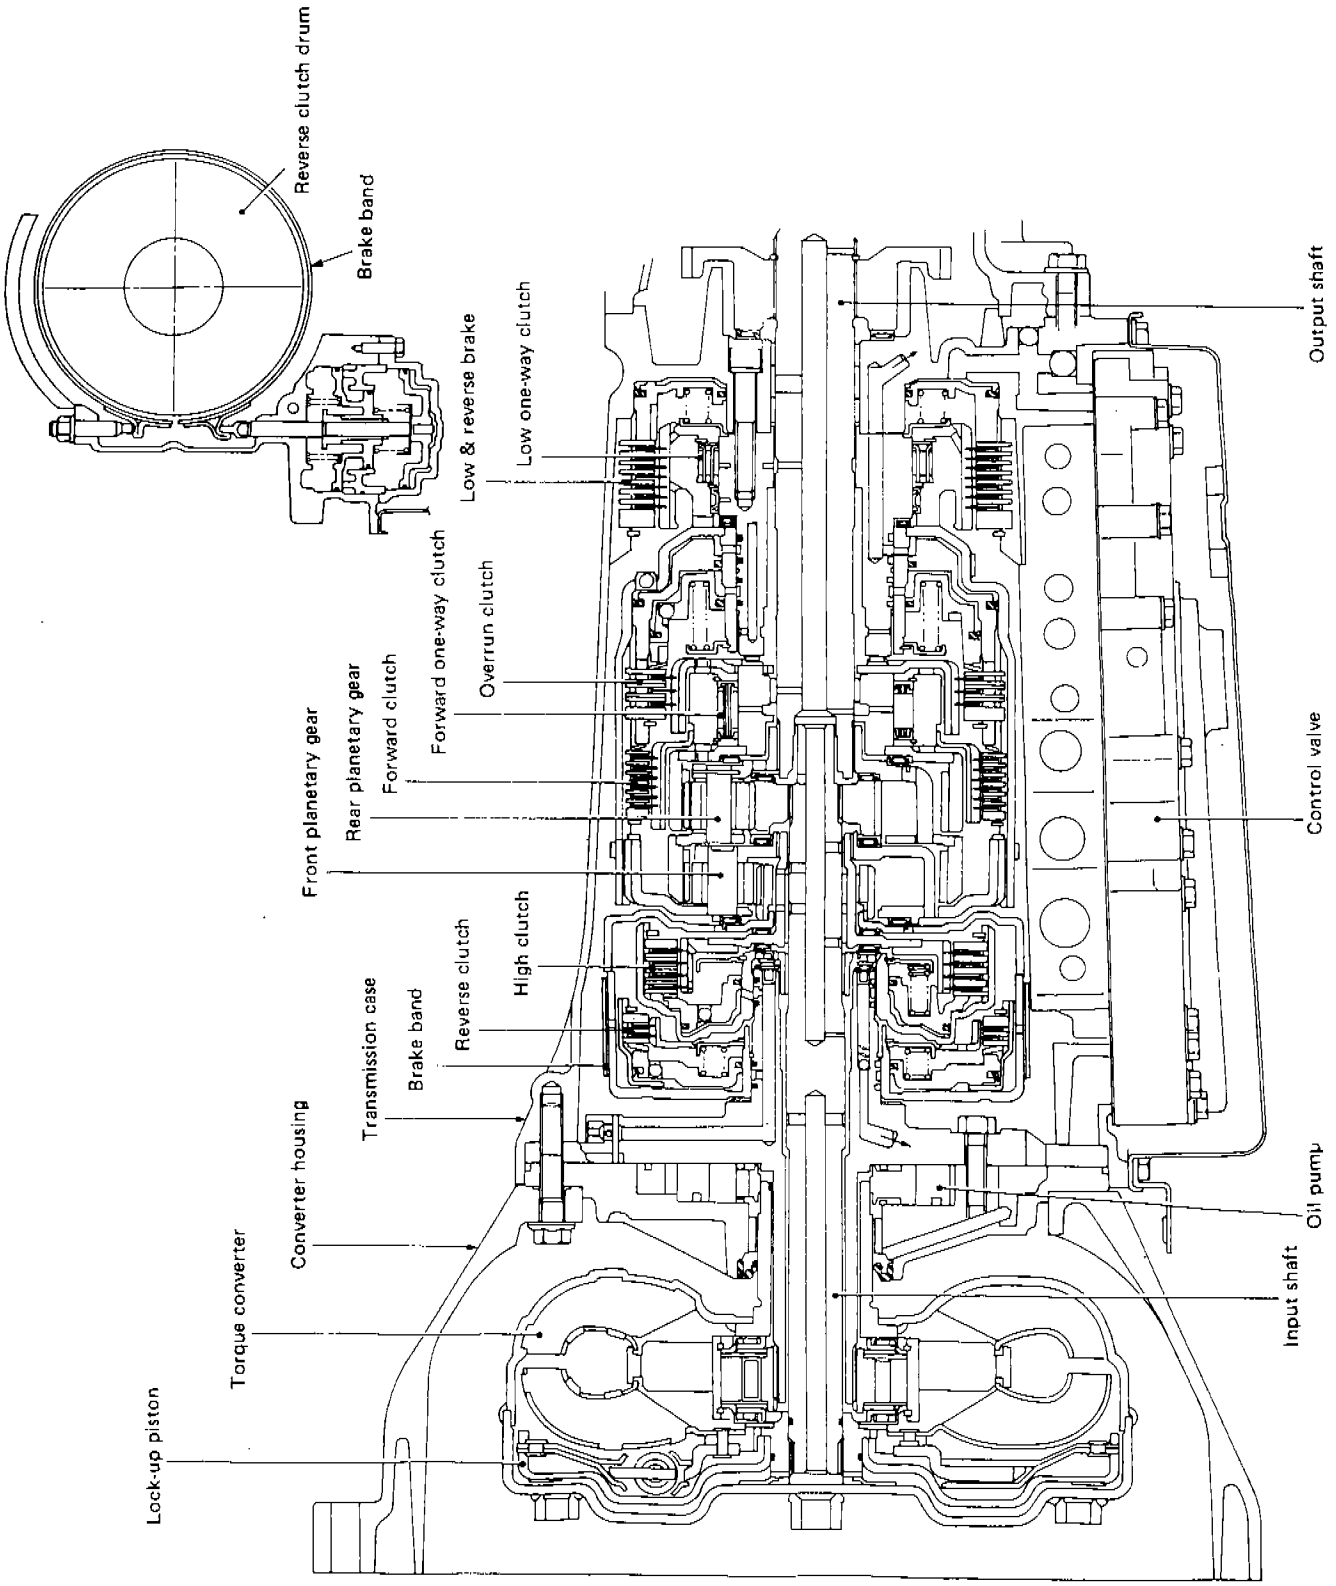


SAT125B

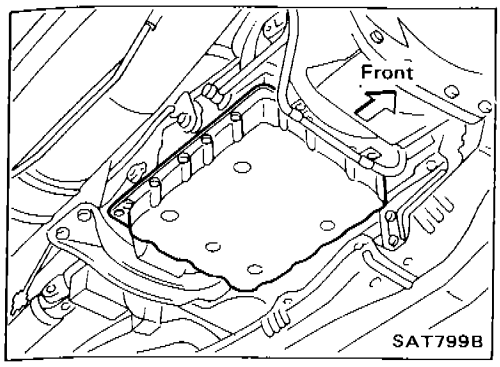

Control Valve Assembly and Accumulators Inspection

1. Remove oil pan and gasket and drain A.T.F.

2. Remove oil strainer.

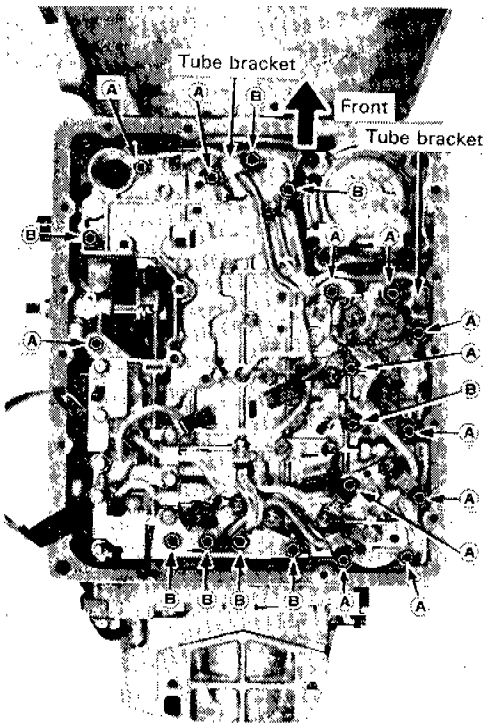


3. Remove control valve assembly by removing fixing bolts and disconnecting harness connector.

Bolt length and location


Bolt symbol	ℓ mm (in)
Ⓐ	33 (1.30)
Ⓑ	45 (1.77)

4. Remove solenoids and valves from valve body if necessary.
5. Remove terminal cord assembly if necessary.

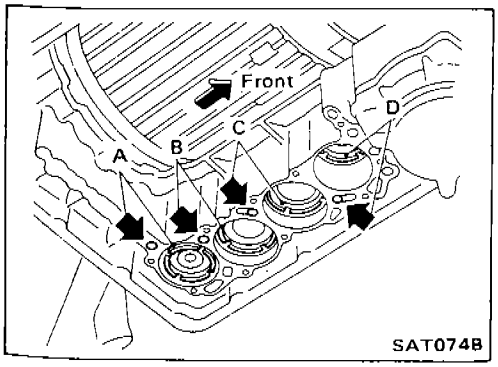


6. Remove accumulator A, B, C and D by applying compressed air if necessary.
- **Hold each piston with rag.**

7. Reinstall any part removed.
- **Always use new sealing parts.**

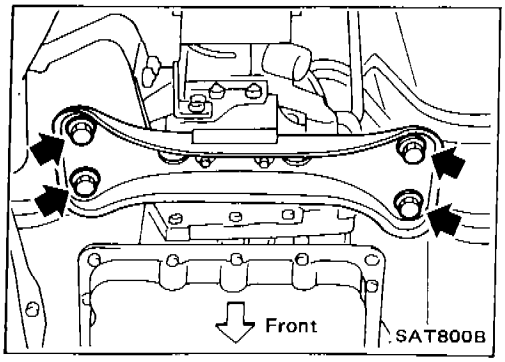


Revolution Sensor Replacement

1. Remove rear engine mounting member from body panel while supporting A/T with jack.
2. Lower A/T assembly as much as possible.

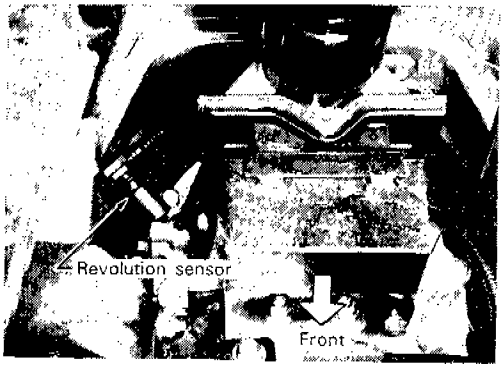


3. Remove revolution sensor from A/T assembly.
4. Reinstall any part removed.

- **Always use new sealing parts.**

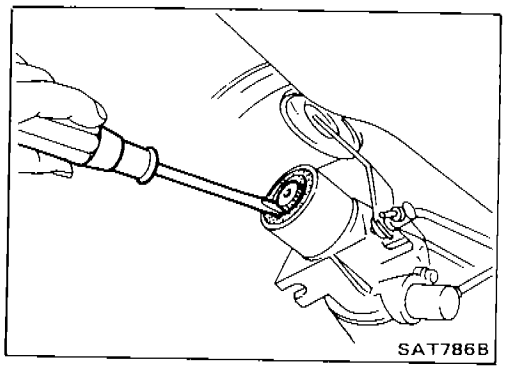

Rear Oil Seal Replacement


1. Remove propeller shaft from vehicle. — Refer to section PD.
2. Remove rear oil seal.

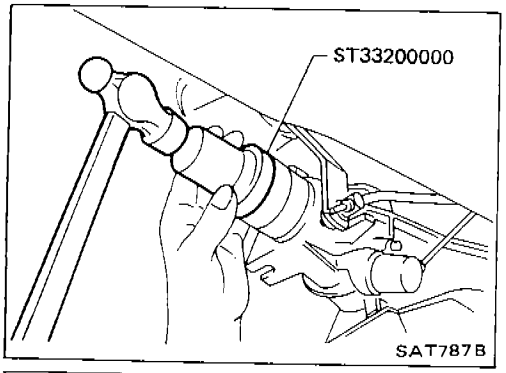

3. Install rear oil seal.

- **Apply A.T.F. before installing.**


4. Reinstall any part removed.

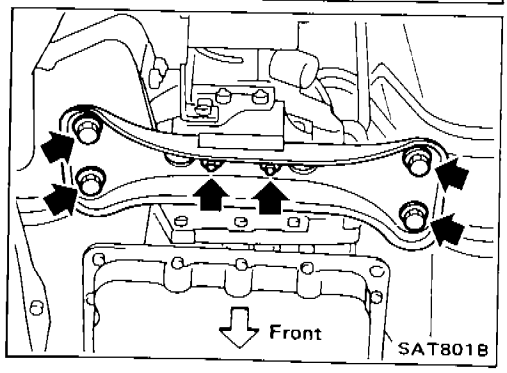

Parking Components Inspection

1. Remove propeller shaft from vehicle. — Refer to section PD.
2. Remove rear engine mounting member from A/T assembly.


Parking Components Inspection (Cont'd)

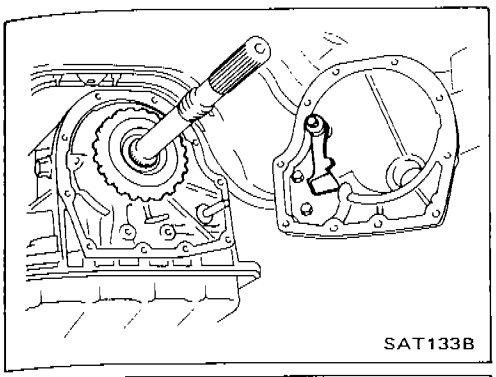
SAT133B


3. Remove rear extension from transmission case.
4. Replace parking components if necessary.
5. Reinstall any part removed.

● **Always use new sealing parts.**

Inhibitor Switch Adjustment

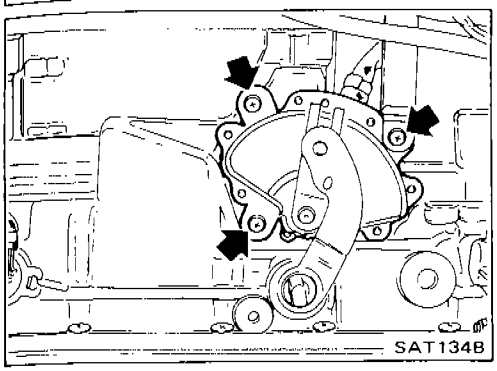
SAT134B

1. Remove manual control linkage from manual shaft of A/T assembly.
2. Set manual shaft of A/T assembly in "N" position.
3. Loosen inhibitor switch fixing bolts.

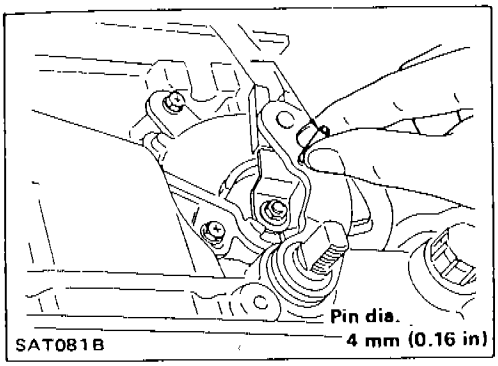


SAT081B

4. Insert pin into adjustment holes in both inhibitor switch and manual shaft of A/T assembly as near vertical as possible.
5. Reinstall any part removed.
6. Check continuity of inhibitor switch. — Refer to "Electrical Components Inspection".

Manual Control Linkage Adjustment


Move selector lever from "P" range to "1" range. You should be able to feel the detents in each range.
If the detents cannot be felt or the pointer indicating the range is improperly aligned, the linkage needs adjustment.

1. Place selector lever in "P" range.
2. Loosen lock nuts.

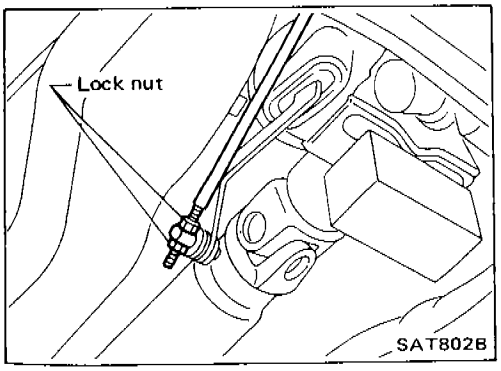

SAT802B

3. Tighten lock nut Ⓧ until it touches trunnion pulling selector lever toward "R" range side without pushing button.
4. Back off lock nut Ⓧ 1 turn and tighten lock nut Ⓨ to the specified torque.
   Lock nut:
   : 11 - 15 N·m (1.1 - 1.5 kg-m, 8 - 11 ft-lb)
5. Move selector lever from "P" range to "1" range. Make sure that selector lever can move smoothly.

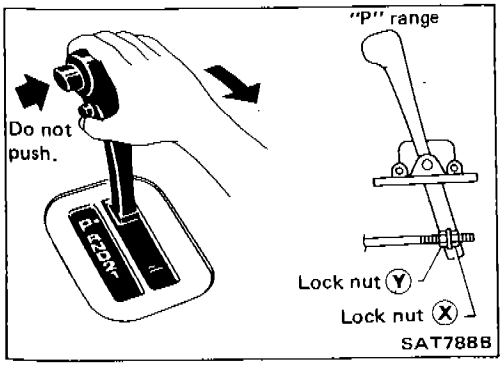

SAT788B

NOTE

Contents


How to Perform Trouble Diagnoses for Quick and Accurate Repair AT-13
Preliminary Check AT-14
A/T Electrical Parts Location AT-25
Circuit Diagram for Quick Pinpoint Check AT-27
Wiring Diagram AT-28
Self-diagnosis AT-30
SELF-DIAGNOSTIC PROCEDURE AT-30
JUDGEMENT OF SELF-DIAGNOSIS CODE AT-32
REVOLUTION SENSOR CIRCUIT CHECK AT-36
SPEED SENSOR CIRCUIT CHECK AT-36
THROTTLE SENSOR CIRCUIT CHECK AT-37
SHIFT SOLENOID A CIRCUIT CHECK AT-38
SHIFT SOLENOID B CIRCUIT CHECK AT-39
OVERRUN CLUTCH CIRCUIT CHECK AT-40
LOCK-UP SOLENOID CIRCUIT CHECK AT-41
FLUID TEMPERATURE SENSOR CIRCUIT AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS AT-42
ENGINE REVOLUTION SIGNAL CIRCUIT CHECK AT-43
LINE PRESSURE SOLENOID CIRCUIT CHECK AT-44
INHIBITOR, OVERDRIVE, KICKDOWN AND IDLE SWITCH CIRCUIT CHECKS AT-45
Diagnostic Procedure 1
(SYMPTOM: O.D. OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".) AT-47
Diagnostic Procedure 2
(SYMPTOM: Engine cannot be started with selector lever in "P" or "N" range or engine can be started with selector lever in "D", "2", "1" or "R" range.) AT-48
Diagnostic Procedure 3
(SYMPTOM: Vehicle moves when it is pushed forward or backward with selector lever in "P" range.) AT-48
Diagnostic Procedure 4
(SYMPTOM: Vehicle moves forward when setting "N" range.) AT-49
Diagnostic Procedure 5
(SYMPTOM: There is large shock when changing from "N" to "R" range.) AT-50
Diagnostic Procedure 6
(SYMPTOM: vehicle does not creep backward when selecting "R" range.) AT-51
Diagnostic Procedure 7
(SYMPTOM: Vehicle does not creep forward when selecting "D" , "2" and "1" range.) AT-52
Diagnostic Procedure 8
(SYMPTOM: Vehicle cannot be started from D_1 on Cruise test—Part 1.) AT-53
Diagnostic Procedure 9
(SYMPTOM: A/T does not shift from D_1 to D_2 at specified speed. A/T does not shift from D_4 to D_2 when depressing accelerator pedal fully at the specified speed.) AT-54
Diagnostic Procedure 10
(SYMPTOM: A/T does not shift from D_2 to D_3 at the specified speed.) AT-55
Diagnostic Procedure 11
(SYMPTOM: A/T does not shift from D_3 to D_4 at the specified speed.) AT-56
Diagnostic Procedure 12
(SYMPTOM: A/T does not perform lock-up at the specified speed.) AT-57
Diagnostic Procedure 13
(SYMPTOM: A/T does not hold lock-up condition for more than 30 seconds.) AT-58
Diagnostic Procedure 14
(SYMPTOM: Lock-up is not released when accelerator pedal is released.) AT-58


Contents (Cont'd)


Diagnostic Procedure 15
(SYMPTOM: Engine speed does not return to idle smoothly when A/T is shifted from D_4 to D_3 with accelerator pedal released.
Vehicle does not decelerate by engine brake when changing overdrive switch to "OFF" position with accelerator pedal released.
Vehicle does not decelerate by engine brake when changing selector lever from "D" to "2" range with accelerator pedal released.) AT-59
Diagnostic Procedure 16
(SYMPTOM: Vehicle does not start from D_1 on Cruise test — Part 2.) AT-60
Diagnostic Procedure 17
(SYMPTOM: Vehicle does not shift from D_4 on D_3 when changing overdrive switch to "OFF" position.) AT-60
Diagnostic Procedure 18
(SYMPTOM: A/T does not shift from D_3 on D_2 when changing selector lever from "D" to "2" range.) AT-61
Diagnostic Procedure 19
(SYMPTOM: Vehicle does not shift from 2_2 on 1_1 when changing selector lever from "2" to "1" range.) AT-61
Diagnostic Procedure 20
(SYMPTOM: Vehicle does not decelerate by enigne brake when shifting from 2_2 (1_2) to 1_1.) AT-61
Electrical Components Inspection AT-62
Final Check AT-68
Symptom Chart AT-72


How to Perform Trouble Diagnoses for Quick and Accurate Repair

WORK FLOW

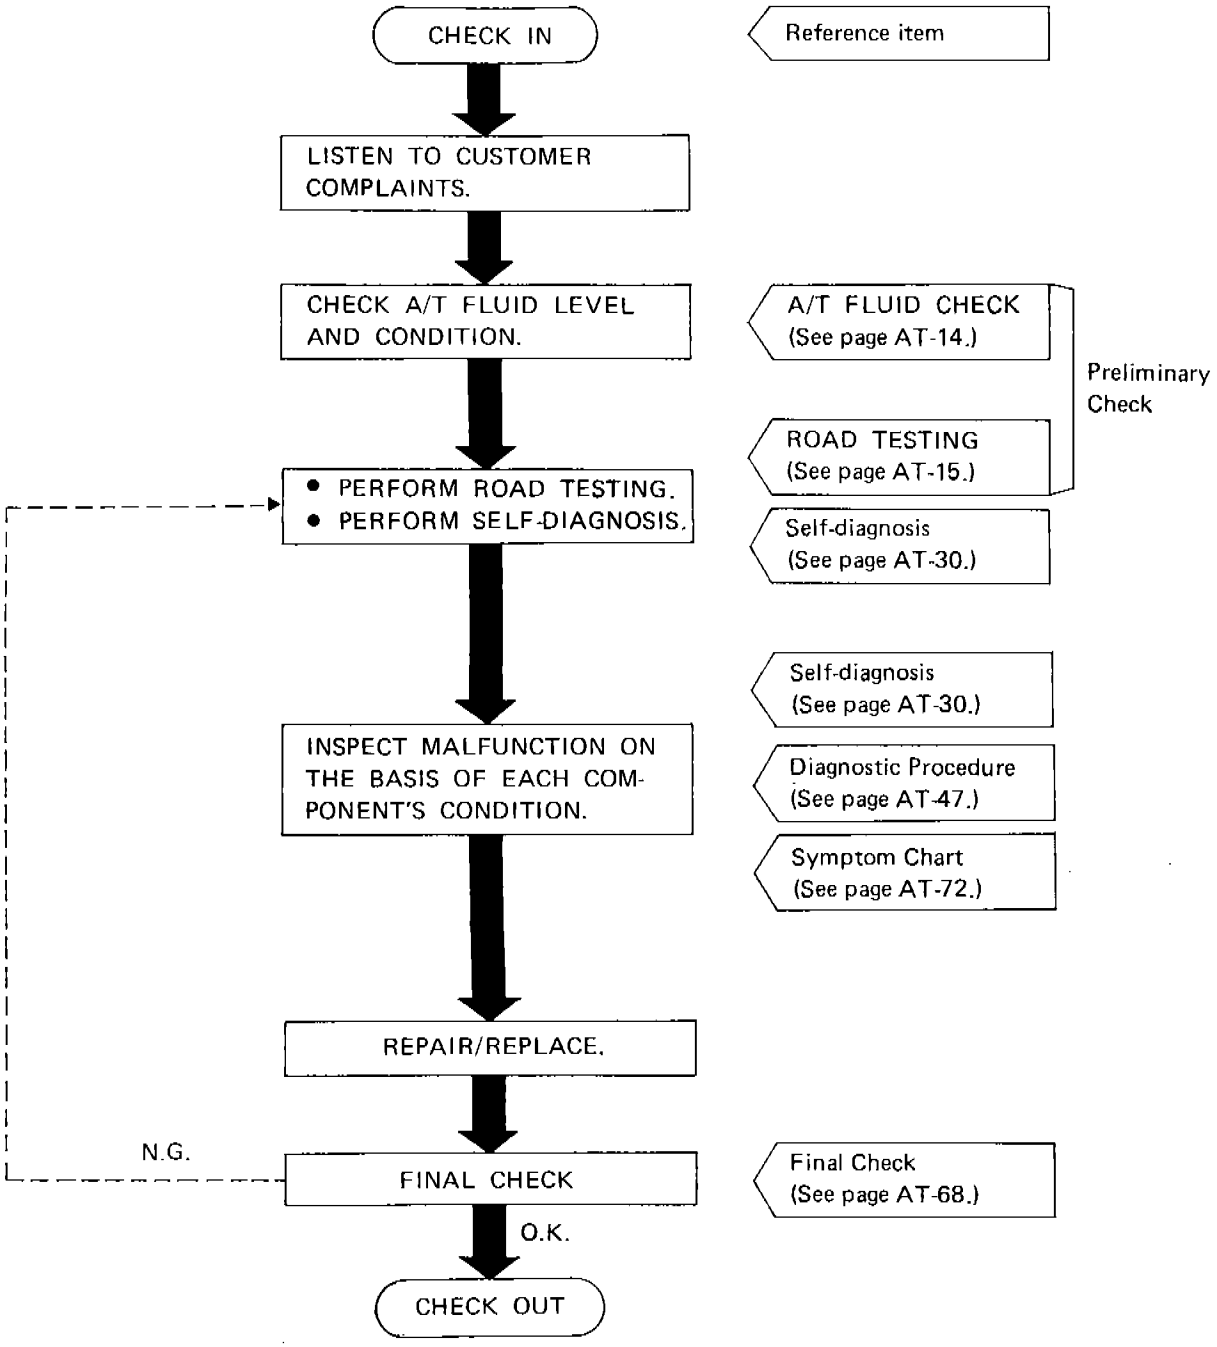

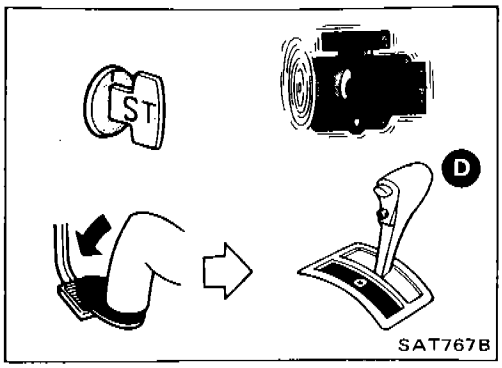

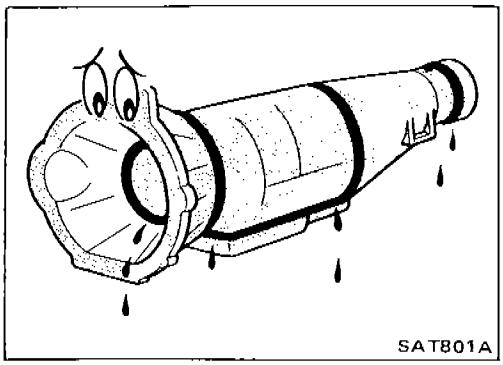

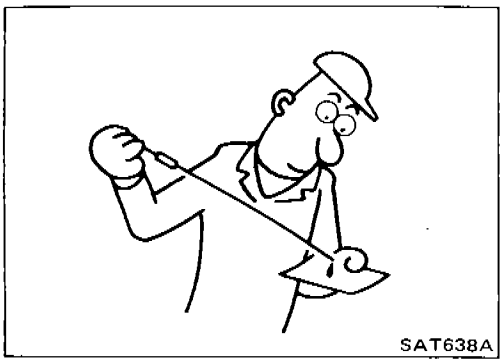

Preliminary Check

A/T FLUID CHECK

Fluid leakage check

1. Clean area suspected of leaking, — for example, mating surface of converter housing and transmission case.
2. Start engine, apply foot brake, place selector lever in "D" range and wait a few minutes.
3. Stop engine.
4. Check for fresh leakage.

Fluid condition check

Fluid color	Suspected problem
Dark or black with burned odor	Wear of frictional material
Milky pink	Water contamination — Road water entering through filler tube or breather
Varnished fluid, light to dark brown and tacky	Oxidation — Over or under filling — Overheating

Fluid level check
Refer to section MA.


Preliminary Check (Cont'd)


ROAD TESTING

Description

- The purpose of this road test is to determine overall performance of automatic transmission and analyze causes of problems.
- The road test consists of the following three parts:

1. Check before engine is started
2. Check at idle
3. Cruise test

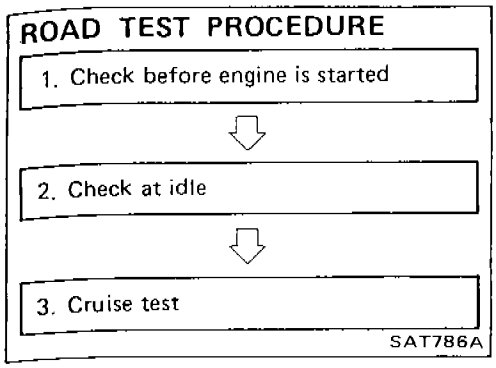

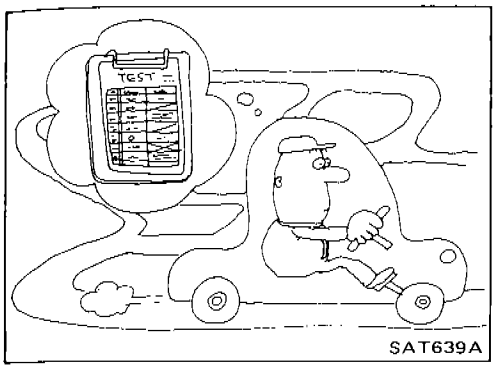


- Before road test, familiarize yourself with all test procedures and items to check.
- Conduct tests on all items. Troubleshoot items which check out No Good after road test. Refer to "Self-diagnosis" and "Diagnostic Procedure".


Preliminary Check (Cont'd)

1. Check before engine is started


1

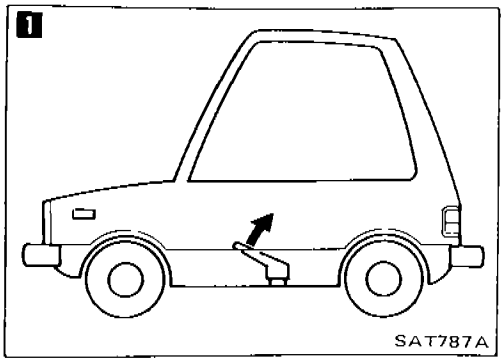

2

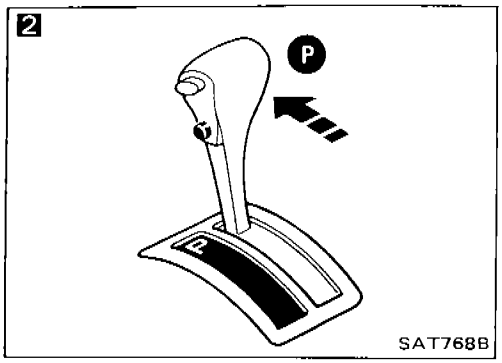

3 4

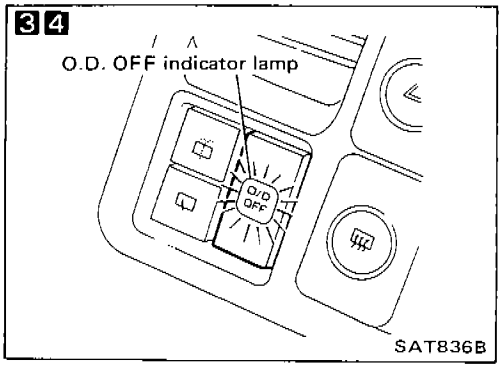

1

Park vehicle on flat surface.



2

Move selector lever to "P" range.



3

Does O.D. OFF indicator lamp come on for about 2 seconds?

No → Go to Diagnostic Procedure 1.

Yes

4

Does O.D. OFF indicator lamp flicker for about 8 seconds?

Yes → Perform self-diagnosis.
— Refer to SELF-DIAGNOSIS PROCEDURE.

No




Perform self-diagnosis.
— Refer to SELF-DIAGNOSIS PROCEDURE and note N.G. items.

Go to "ROAD TESTING — 2. Check at idle".


Preliminary Check (Cont'd)

2. Check at idle

1

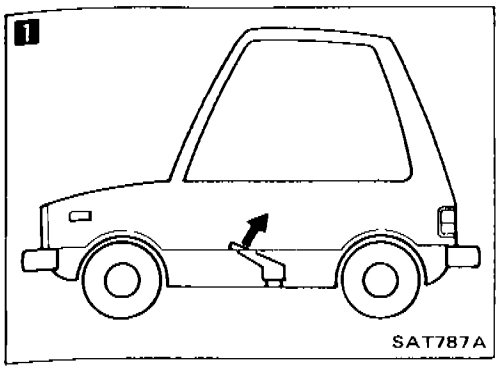

SAT787A

Park vehicle on flat surface.

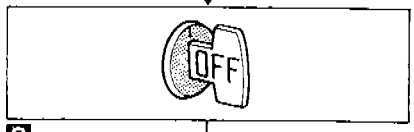


2

Move selector lever to "P" or "N" range.

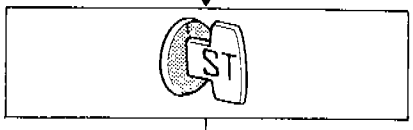


Is engine started? — No → Go to Diagnostic Procedure 2.

Yes

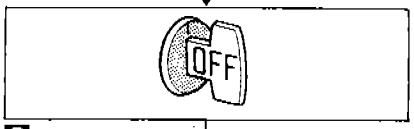


3

Move selector lever to "D", "1", "2" or "R" range.

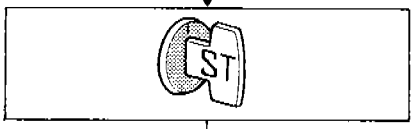


Is engine started? — Yes → Go to Diagnostic Procedure 2.

No

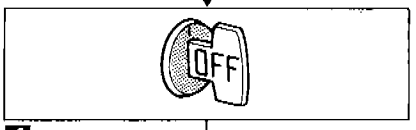

4

Move selector lever to "P" range.

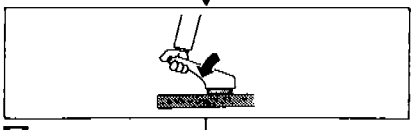

5


Push vehicle forward or backward.

Does vehicle move when it is pushed forward or backward? — Yes → Go to Diagnostic Procedure 3.


No

Ⓐ


SAT787A

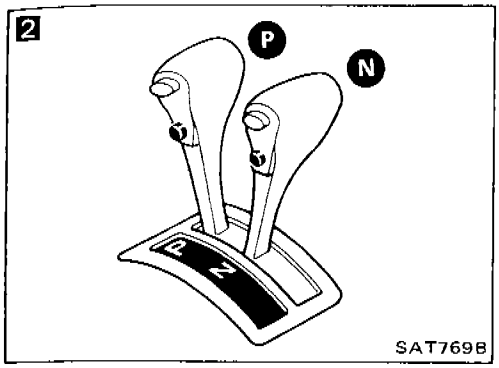


SAT769B

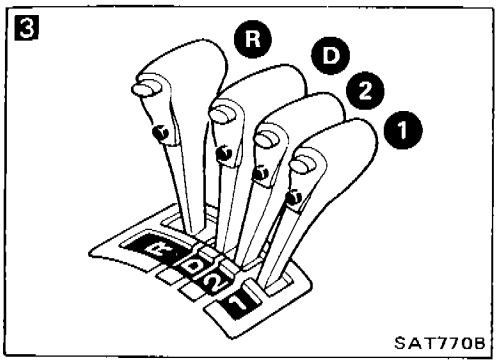

SAT770B

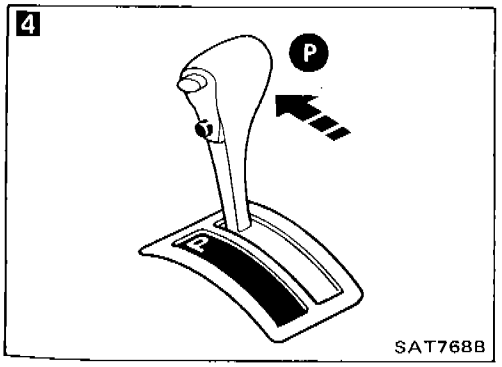


SAT768B

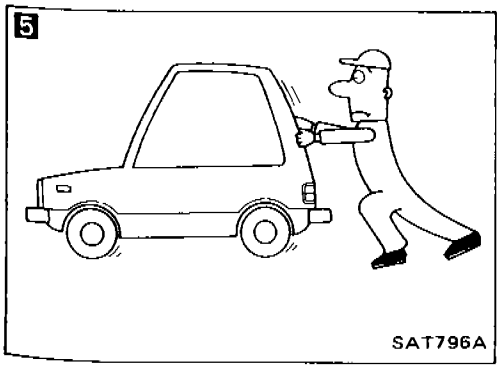

SAT796A

Preliminary Check (Cont'd)


6

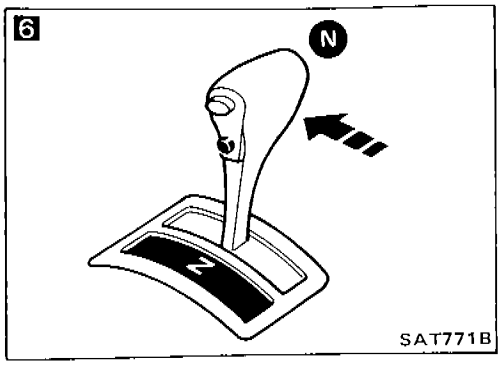


7

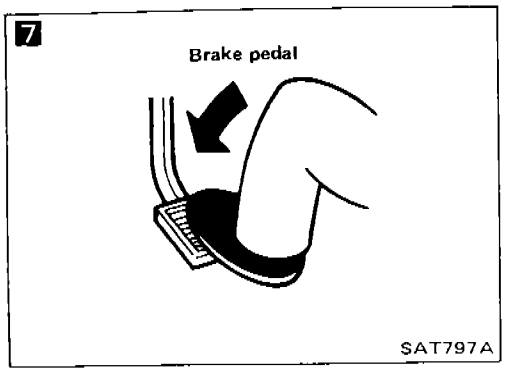


8

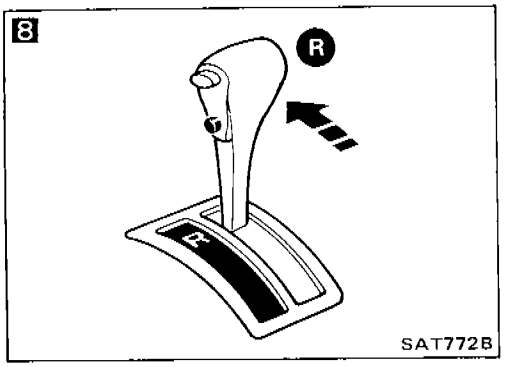


9

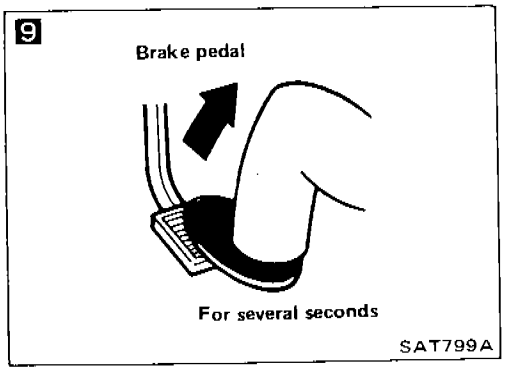



10

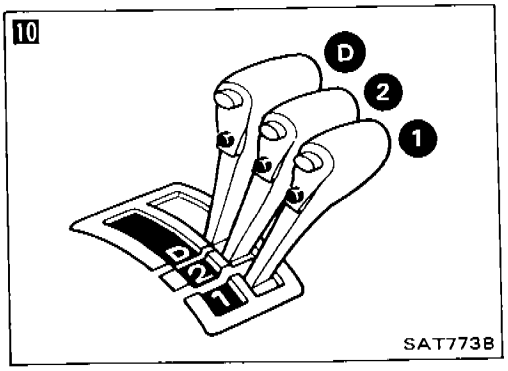

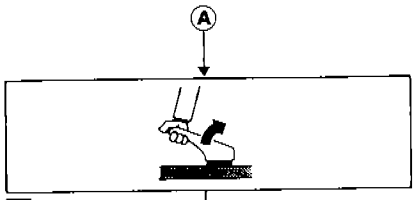

6 Move selector lever to "N" range.

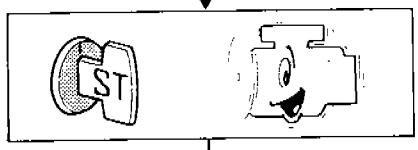

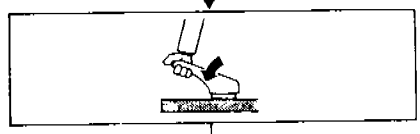

Does vehicle move forward or backward? — Yes → Go to Diagnostic Procedure 4.

No

7 Apply foot brake.

8 Move selector lever to "R" range.

Is there large shock when changing from "N" to "R" range? — Yes → Go to Diagnostic Procedure 5.

No

9 Release foot brake for several seconds.

Does vehicle creep backward when foot brake is released? — No → Go to Diagnostic Procedure 6.

Yes

10 Move selector lever to "D", "1" and "2" range and check if vehicle creeps forward.

Does vehicle creep forward in all three ranges? — Yes → Go to Cruise test.


No

Go to Diagnostic Procedure 7.


Preliminary Check (Cont'd)


3. Cruise test


- Check all items listed in Parts 1 through 3.
- Throttle position can be controlled by voltage across terminals ⑪ and ⑮ of A/T control unit.

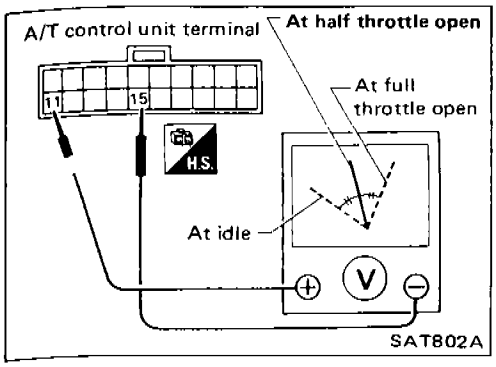


Cruise test — Part 1

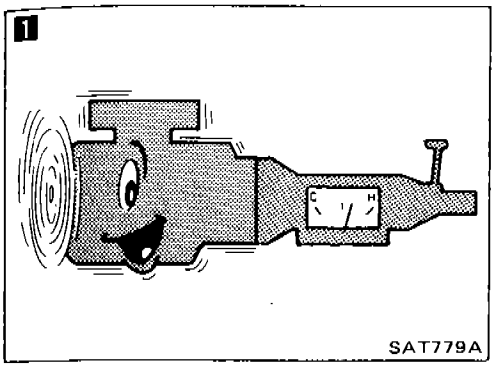

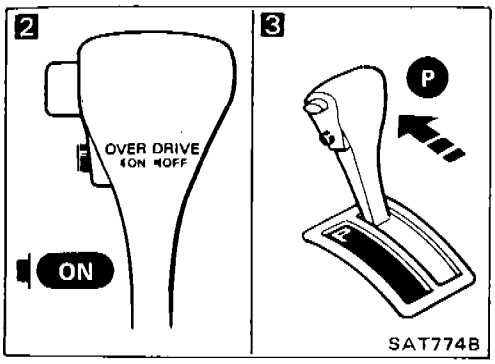

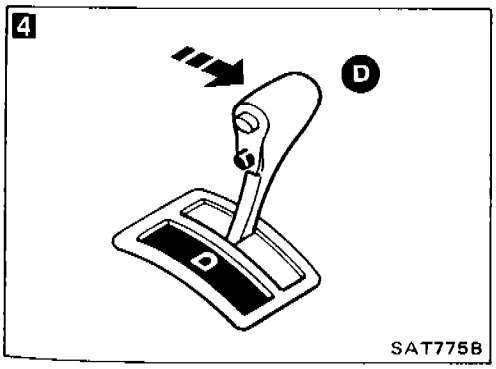

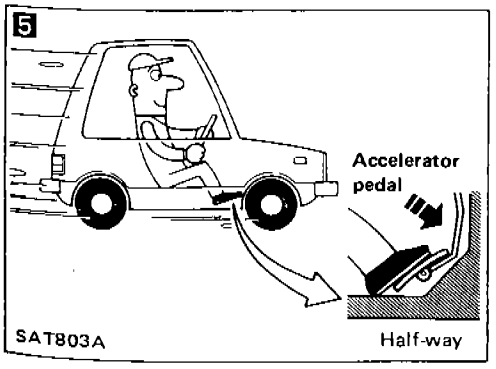

1

Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.
A.T.F. operating temperature: 50 - 80°C (122 - 176°F)

↓

Park vehicle on flat surface.

↓

2


Set overdrive switch in "ON" position.

↓

3

Move selector lever to "P" range.

↓

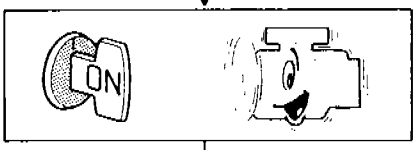

↓

4

Move selector lever to "D" range.

↓

5

Accelerate vehicle by constantly depressing accelerator pedal halfway.

↓


Does vehicle start from D_1? — No → Go to Diagnostic Procedure 8.


Yes


↓


Ⓐ

Preliminary Check (Cont'd)

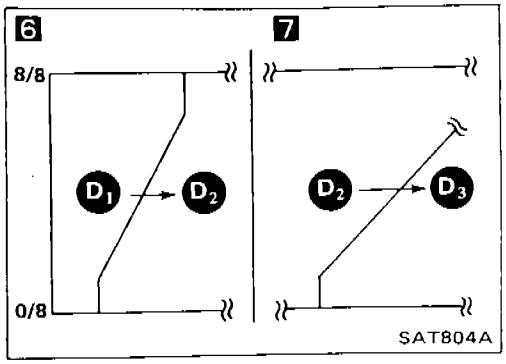

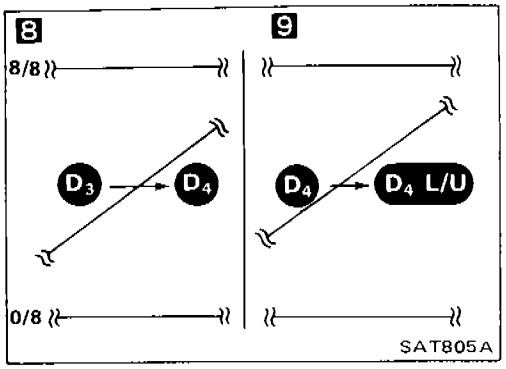

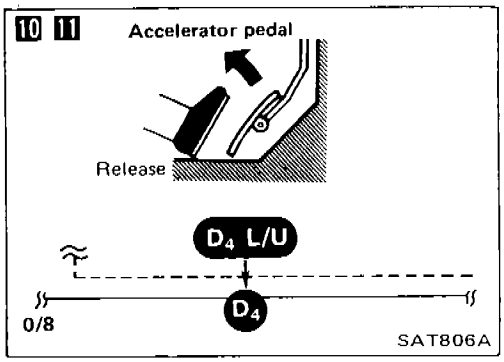

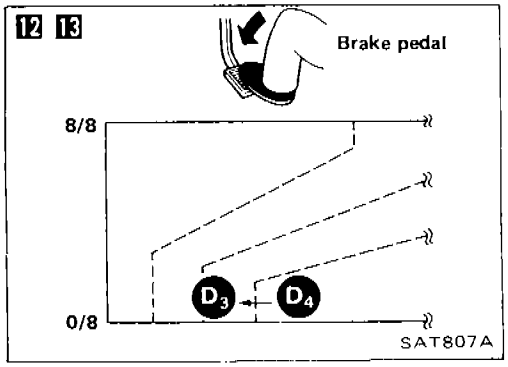

Ⓐ

6 Does A/T shift from D_1 to D_2 at the specified speed?
Specified speed when shifting from D_1 to D_2:
Refer to Shift schedule.
- No → Go to Diagnostic Procedure 9.
- Yes ↓

7 Does A/T shift from D_2 to D_3 at the specified speed?
Specified speed when shifting from D_2 to D_3:
Refer to Shift schedule.
- No → Go to Diagnostic Procedure 10.
- Yes ↓

8 Does A/T shift from D_3 to D_4 at the specified speed?
Specified speed when shifting from D_3 to D_4:
Refer to Shift schedule.
- No → Go to Diagnostic Procedure 11.
- Yes ↓

9 Does A/T perform lock-up at the specified speed?
Specified speed when lock-up occurs:
Refer to Shift schedule.
- No → Go to Diagnostic Procedure 12.
- Yes ↓

Does A/T hold lock-up condition for more than 30 seconds?
- No → Go to Diagnostic Procedure 13.
- Yes ↓

10 Release accelerator pedal. ↓

11 Is lock-up released when accelerator pedal is released?
- No → Go to Diagnostic Procedure 14.
- Yes ↓

12 Decelerate vehicle by applying foot brake lightly. ↓


13 Does engine speed return to idle smoothly when A/T is shifted from D_4 to D_3?
- No → Go to Diagnostic Procedure 15.
- Yes ↓


Stop vehicle. ↓


Go to "Cruise test – Part 2".


Preliminary Check (Cont'd)


Cruise test – Part 2

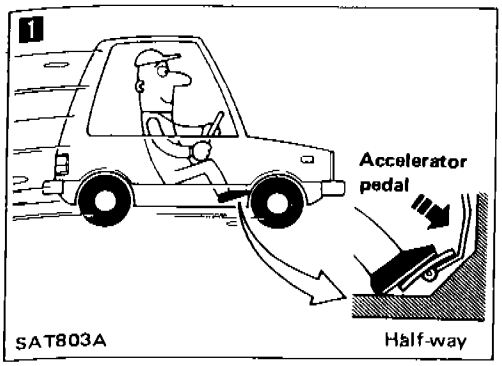


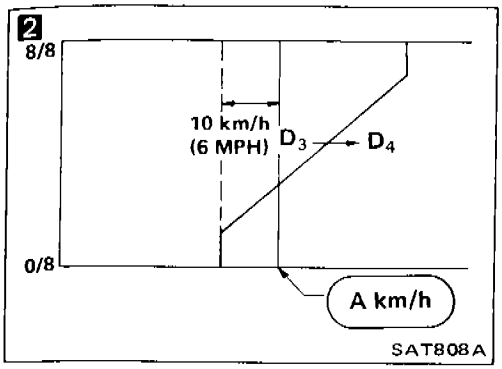

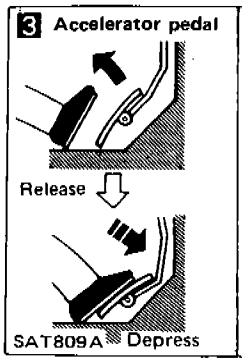

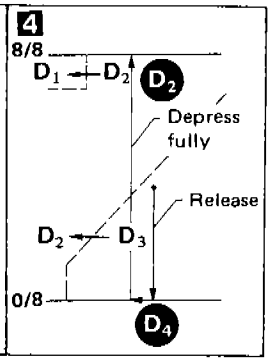

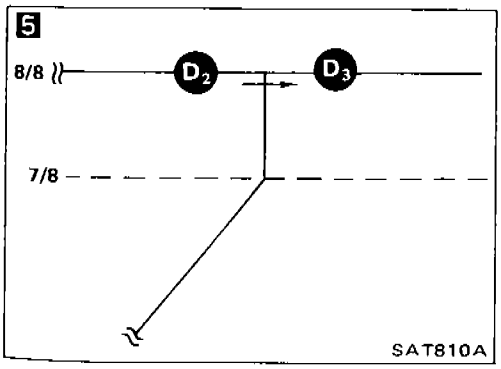

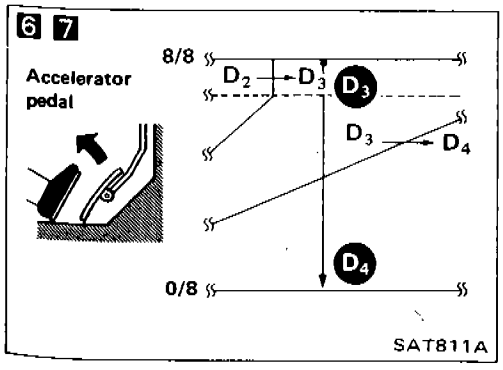

Confirm overdrive switch is in "ON" position.

↓

Confirm selector lever is in "D" range.

↓

1 Accelerate vehicle by half throttle again.

↓

Does vehicle start from D_1? — No → Go to Diagnostic Procedure 16.

Yes ↓

2 Accelerate vehicle to A km/h as shown in illustration.

↓

3 Release accelerator pedal and then quickly depress it fully.

↓

4 Does A/T shift from D_4 to D_2 as soon as accelerator pedal is depressed fully? — No → Go to Diagnostic Procedure 9.

Yes ↓

5 Does A/T shift from D_2 to D_3 at the specified speed? — No → Go to Diagnostic Procedure 10.

Specified speed when shifting from D_2 to D_3:
Refer to Shift schedule.

Yes ↓

6 Release accelerator pedal after shifting from D_2 to D_3.

↓

7 Does A/T shift from D_3 to D_4 and does vehicle decelerate by engine brake? — No → Go to Diagnostic Procedure 11.

Yes ↓


Stop vehicle.


↓


Go to "Cruise test – Part 3".


Preliminary Check (Cont'd)


Cruise test – Part 3

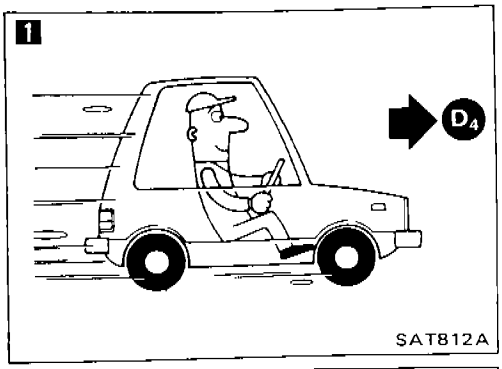

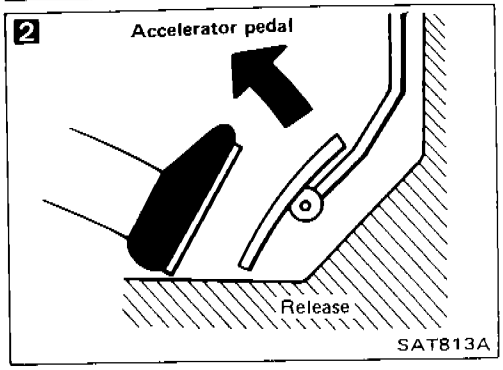

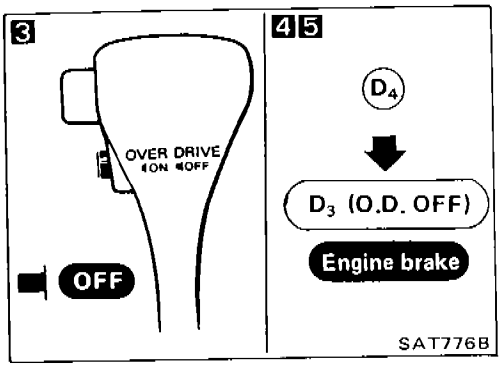

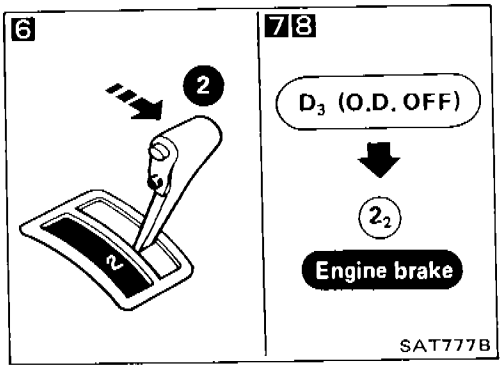

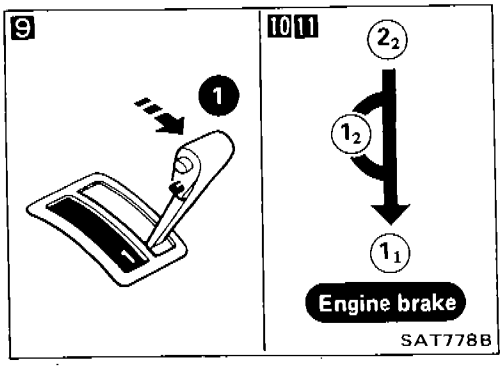

Confirm overdrive switch is in "ON" position.

↓

Confirm selector lever is in "D" range.

↓

1 Accelerator vehicle using half-throttle to D_4.

↓

2 Release accelerator pedal.

↓

3 Set overdrive switch in "OFF" position while driving in D_4 range.

↓

4 Does A/T shift from D_4 to D_3? — No → Go to Diagnostic Procedure 17.

↓ Yes

5 Does vehicle decelerate by engine brake? — No → Go to Diagnostic Procedure 15.

↓ Yes

6 Move selector lever from "D" to "2" range while driving in D_3.

↓

7 Does A/T shift from D_3 to 2_2? — No → Go to Diagnostic Procedure 18.

↓ Yes

8 Does vehicle decelerate by engine brake? — No → Go to Diagnostic Procedure 15.

↓ Yes

9 Move selector lever from "2" to "1" range while driving in 2_2.

↓

10 Does A/T shift from 2_2 to 1_1 range? — No → Go to Diagnostic Procedure 19.

↓ Yes

11 Does vehicle decelerate by engine brake? — No → Go to Diagnostic Procedure 20.

↓ Yes

Stop vehicle.

↓

Perform self-diagnosis. – Refer to SELF-DIAGNOSIS PROCEDURE.

Preliminary Check (Cont'd)

Vehicle speed when shifting gears

Europe

Throttle position	Vehicle speed km/h (MPH)						
	$D_1 \rightarrow D_2$	$D_2 \rightarrow D_3$	$D_3 \rightarrow D_4$	$D_4 \rightarrow D_3$	$D_3 \rightarrow D_2$	$D_2 \rightarrow D_1$	$1_2 \rightarrow 1_1$
Full throttle	58 - 62 (36 - 39)	109 - 115 (68 - 71)	176 - 186 (109 - 116)	170 - 180 (106 - 112)	104 - 110 (65 - 68)	44 - 48 (27 - 30)	53 - 57 (33 - 35)
Half throttle	41 - 45 (25 - 28)	78 - 84 (48 - 52)	125 - 135 (78 - 84)	74 - 84 (46 - 52)	29 - 35 (18 - 22)	10 - 14 (6 - 9)	53 - 57 (33 - 35)

Except Europe

Throttle position	Vehicle speed km/h (MPH)						
	$D_1 \rightarrow D_2$	$D_2 \rightarrow D_3$	$D_3 \rightarrow D_4$	$D_4 \rightarrow D_3$	$D_3 \rightarrow D_2$	$D_2 \rightarrow D_1$	$1_2 \rightarrow 1_1$
Full throttle	54 - 58 (34 - 36)	101 - 107 (63 - 66)	164 - 174 (102 - 108)	158 - 168 (98 - 104)	95 - 101 (59 - 63)	44 - 48 (27 - 30)	53 - 57 (33 - 35)
Half throttle	41 - 45 (25 - 28)	73 - 79 (45 - 49)	119 - 129 (74 - 80)	78 - 88 (48 - 55)	34 - 40 (21 - 25)	10 - 14 (6 - 9)	53 - 57 (33 - 35)

Vehicle speed when performing and releasing lock-up

Europe

Throttle position	D_4	
	Vehicle speed km/h (MPH)	
	Lock-up "ON"	Lock-up "OFF"
Full throttle	176 - 186 (109 - 116)	170 - 180 (106 - 112)
Half throttle	126 - 134 (78 - 83)	110 - 118 (68 - 73)


Except Europe

Throttle position	D_4	
	Vehicle speed km/h (MPH)	
	Lock-up "ON"	Lock-up "OFF"
Full throttle	164 - 174 (102 - 108)	158 - 168 (98 - 104)
Half throttle	120 - 128 (75 - 80)	102 - 110 (63 - 68)


Preliminary Check (Cont'd)

Shift schedule


Europe

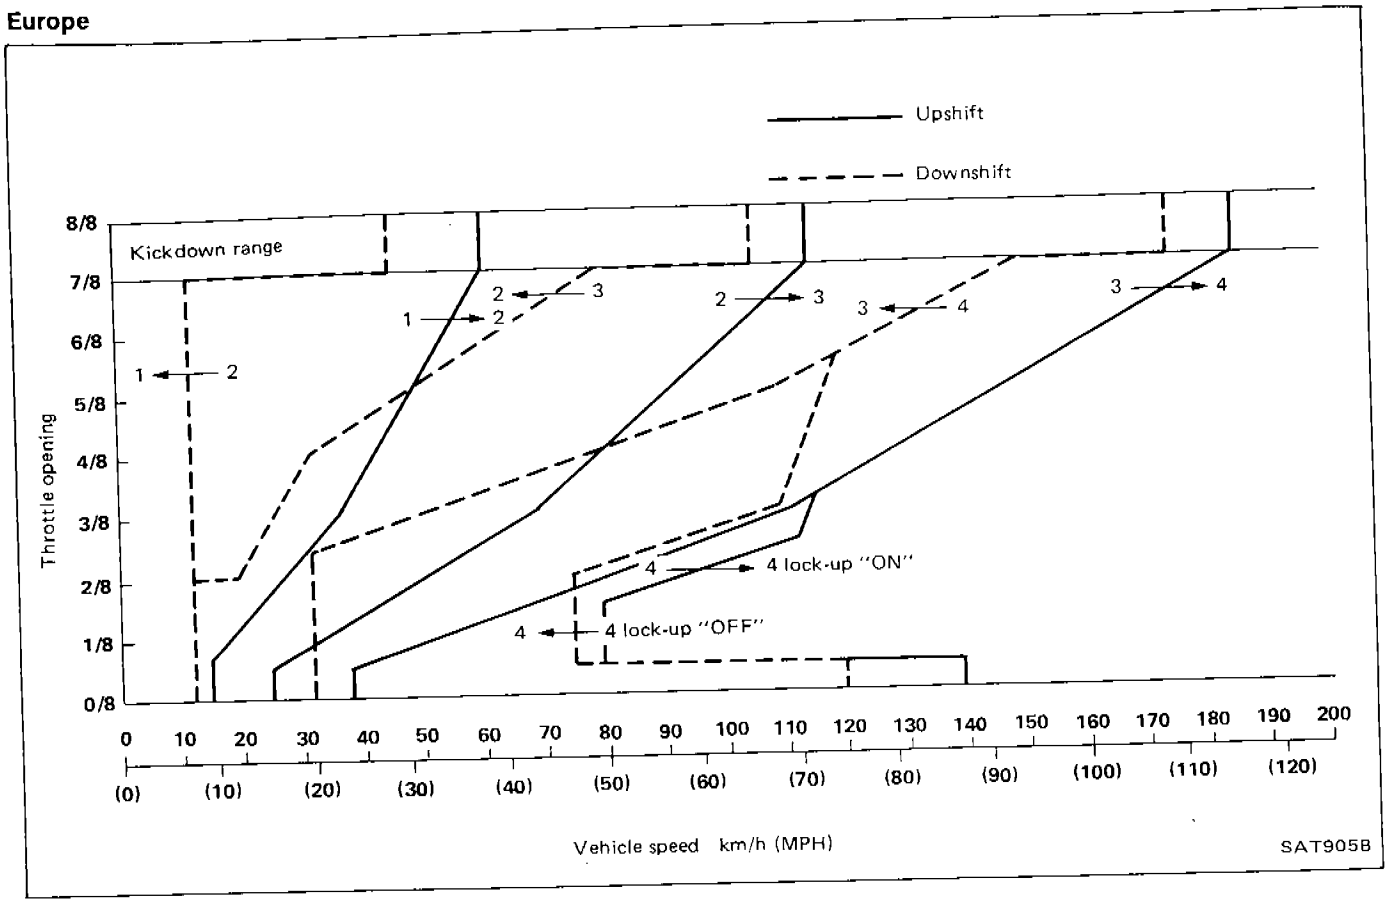

Except Europe

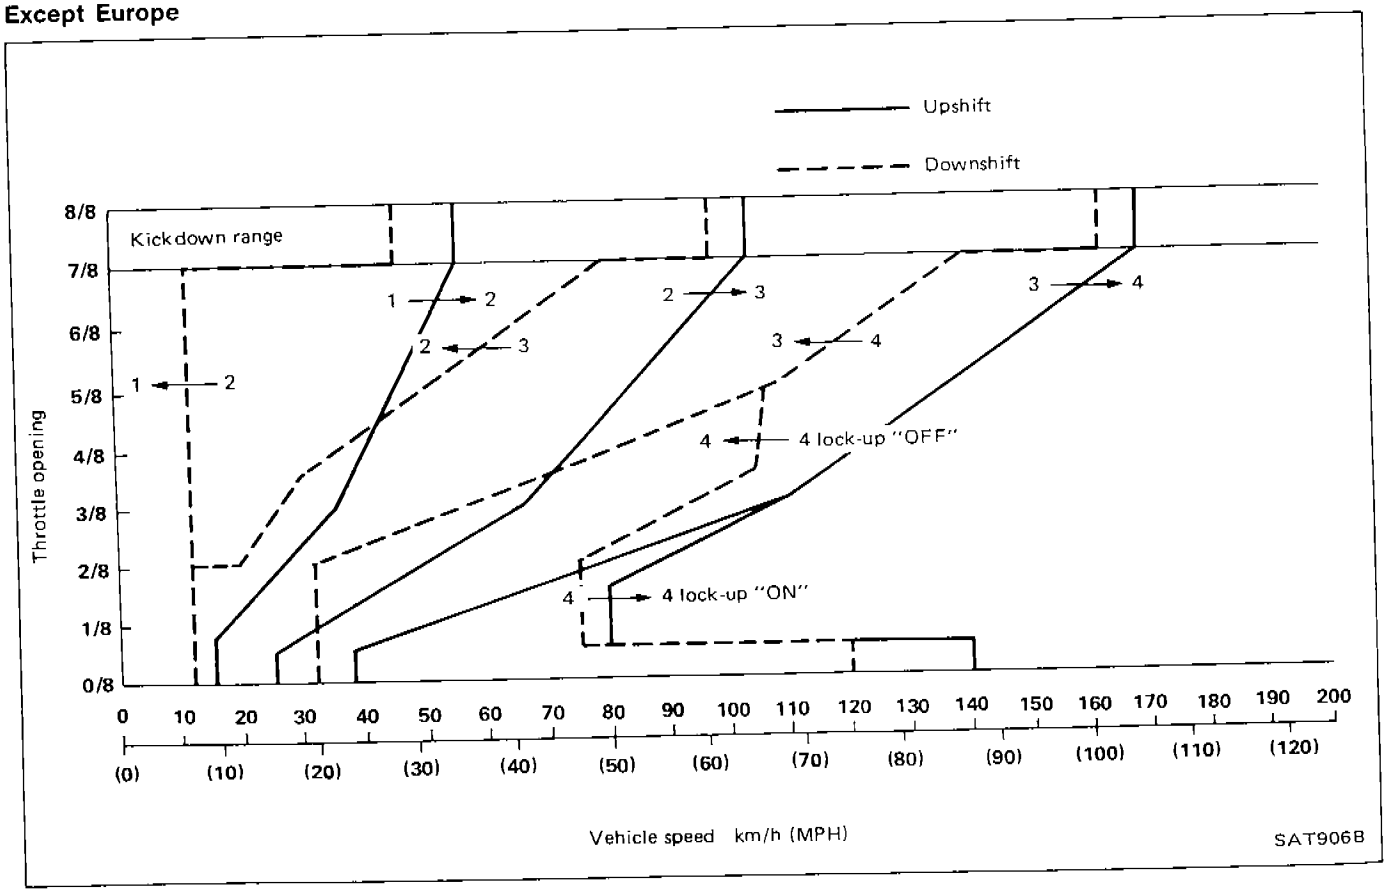


A/T Electrical Parts Location

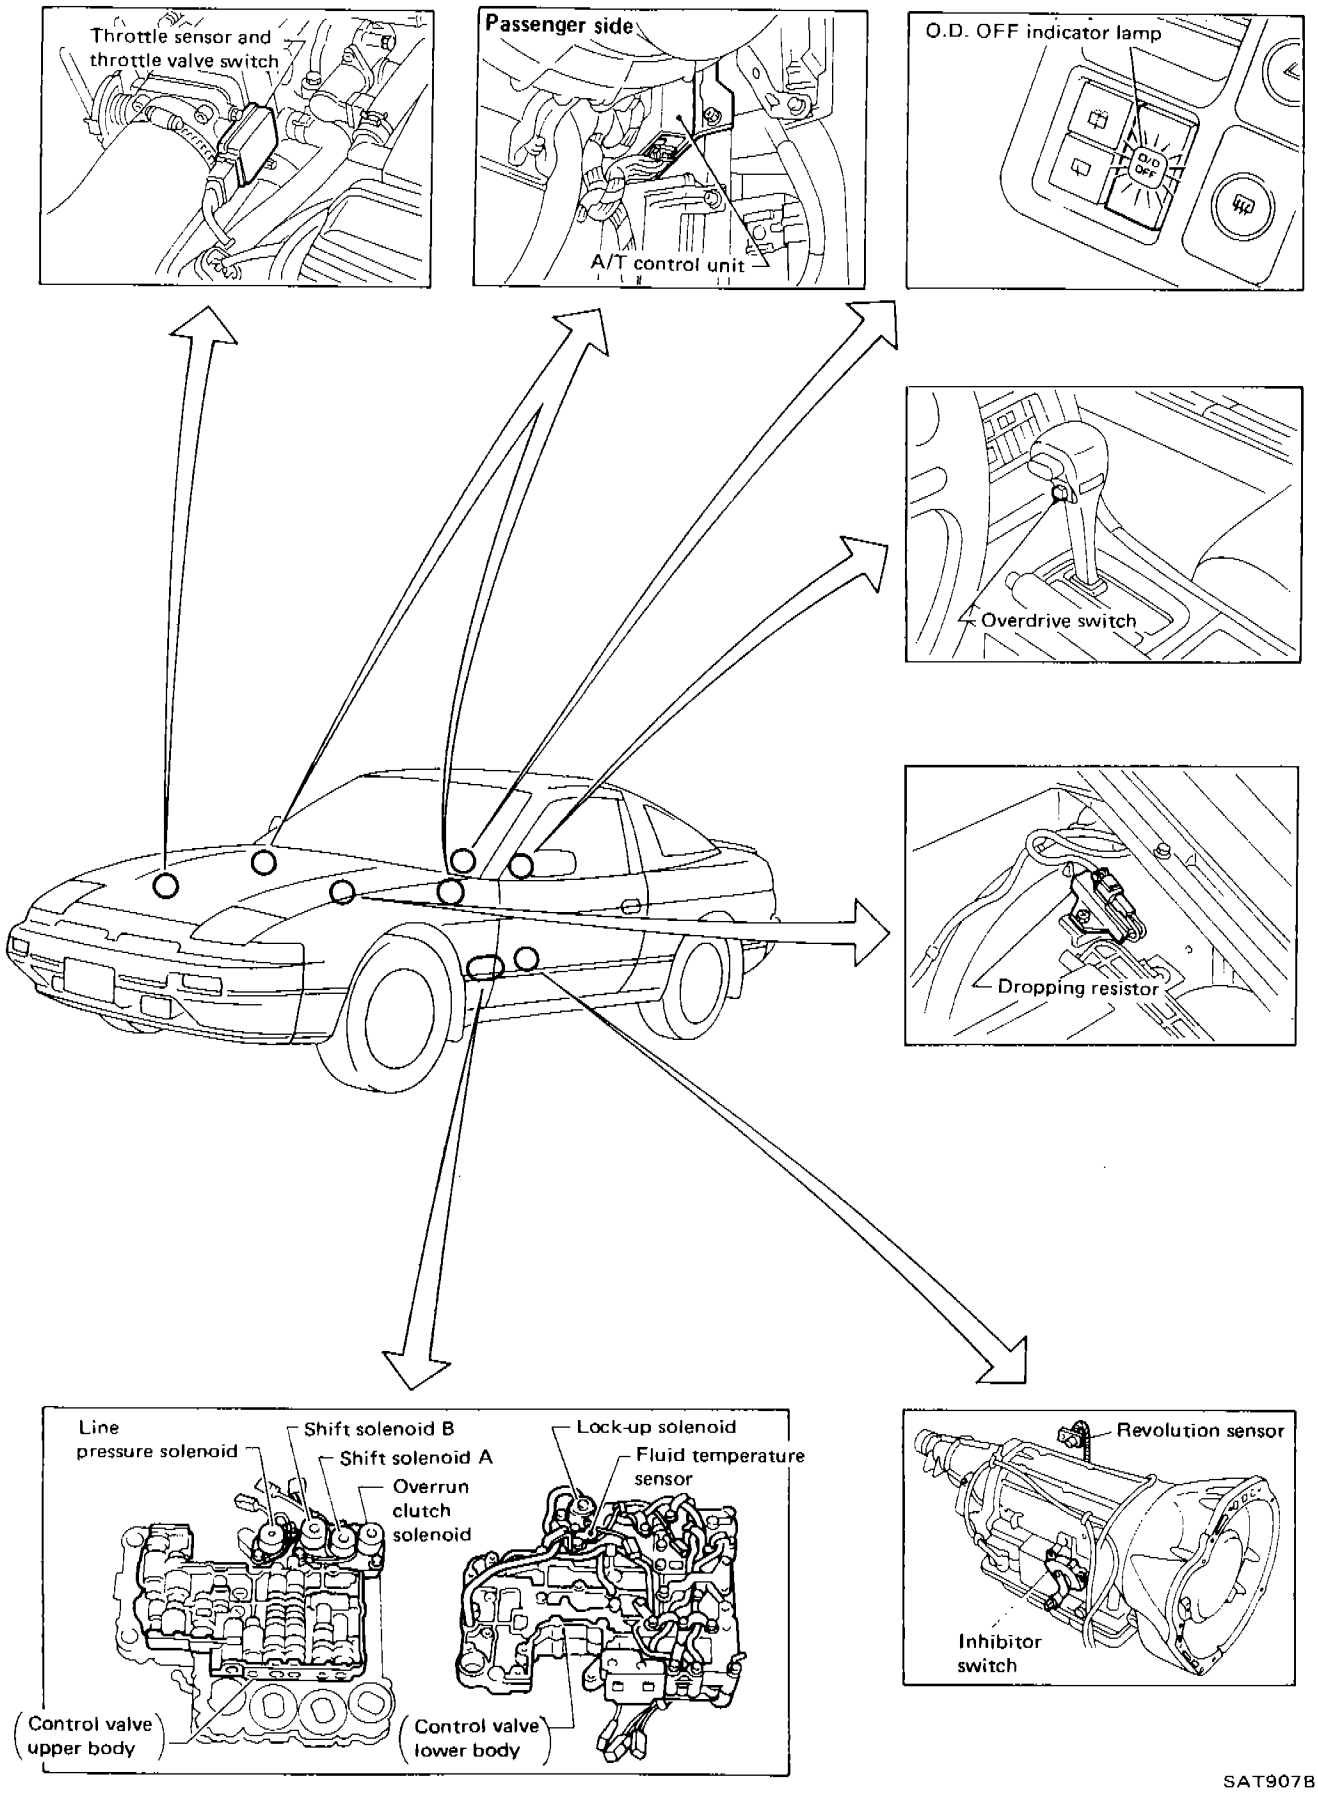


SAT907B

A/T Electrical Parts Location (Cont'd)

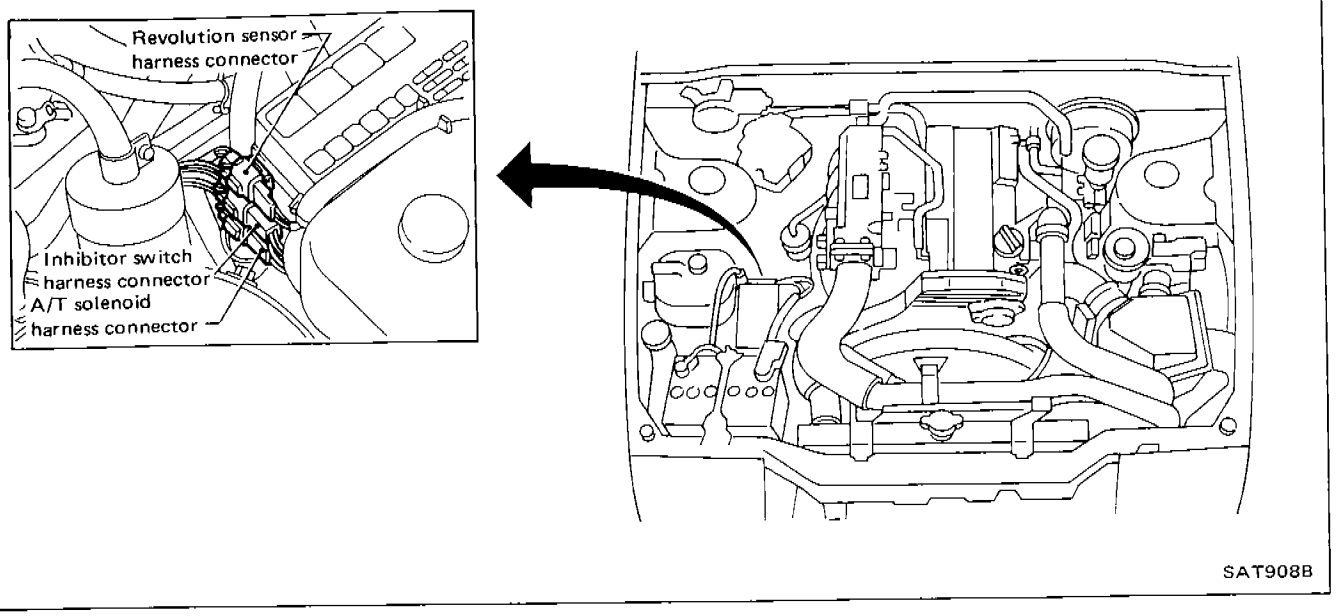


Circuit Diagram for Quick Pinpoint Check

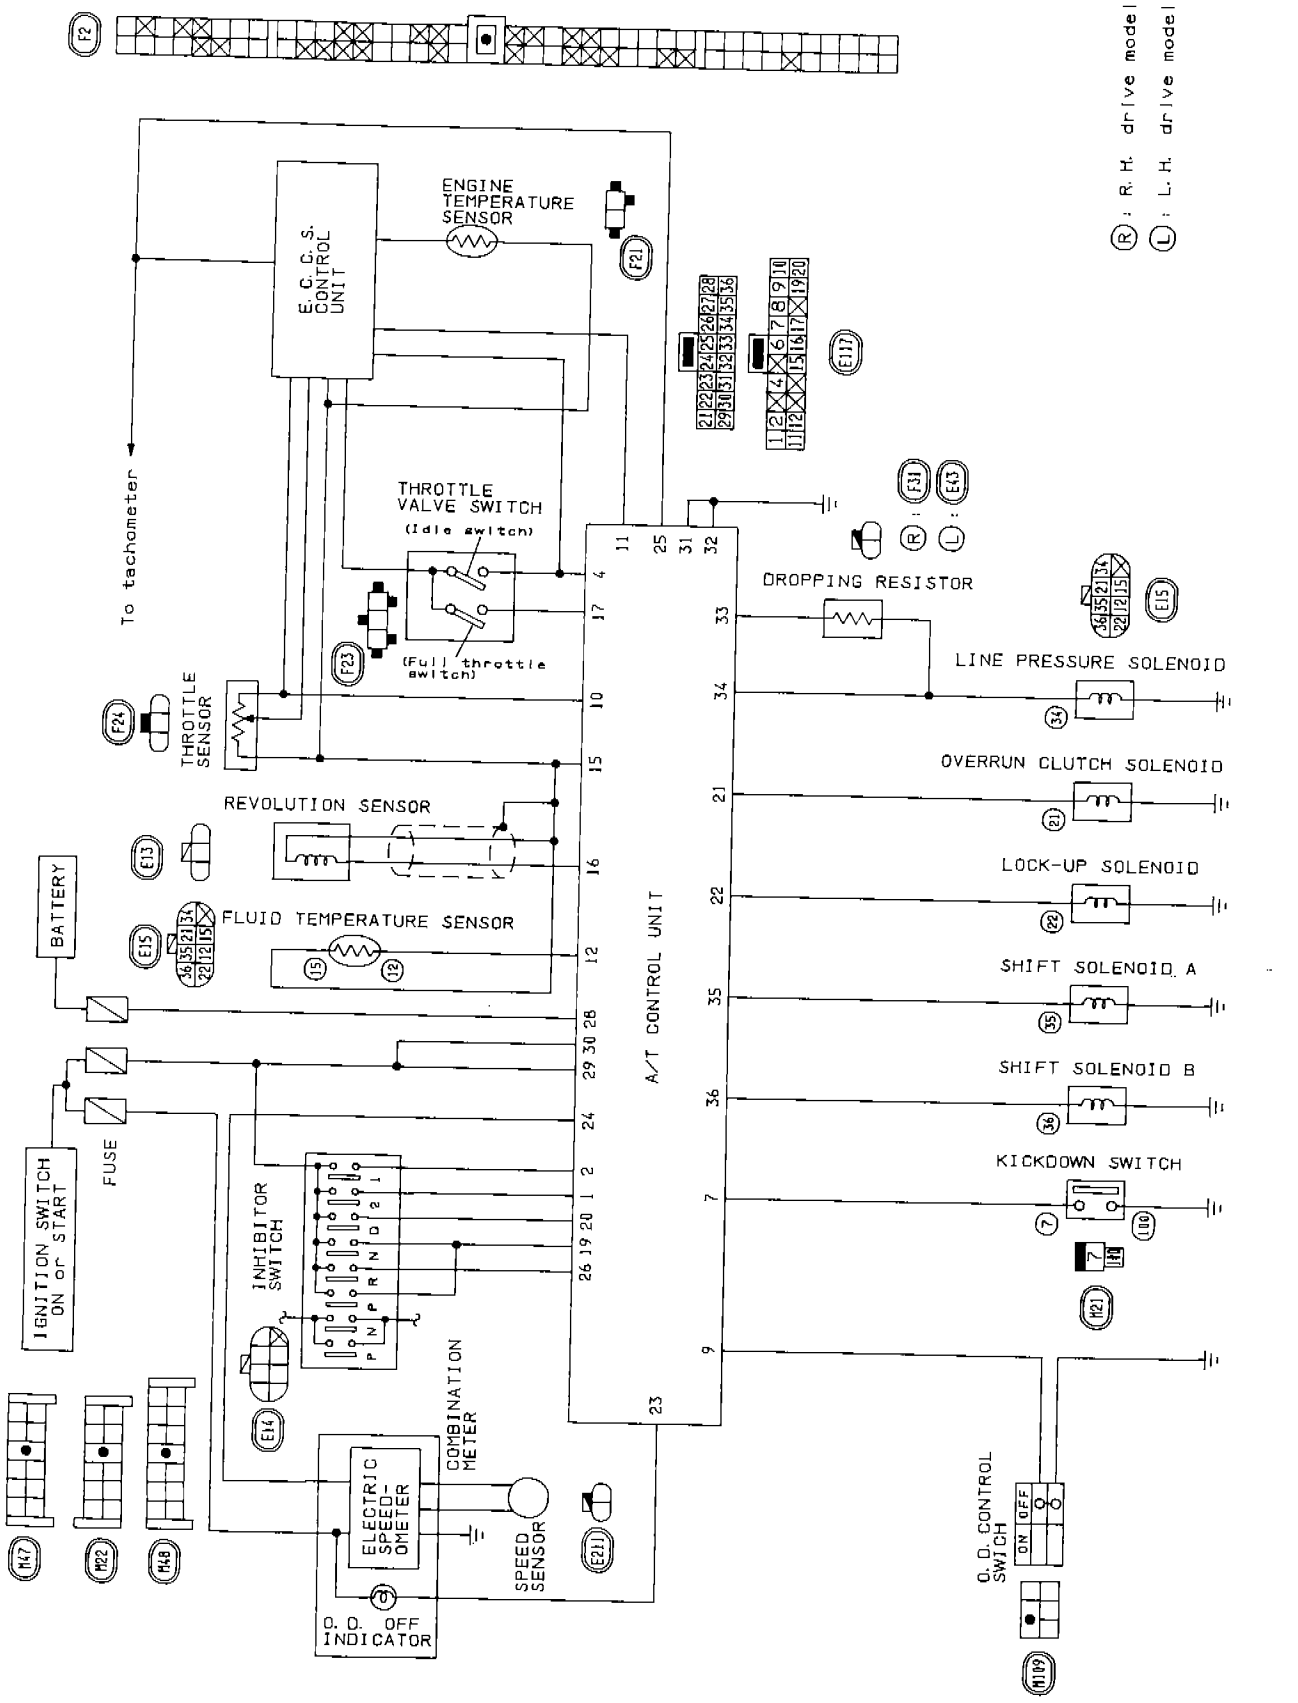


SAT903B


Wiring Diagram

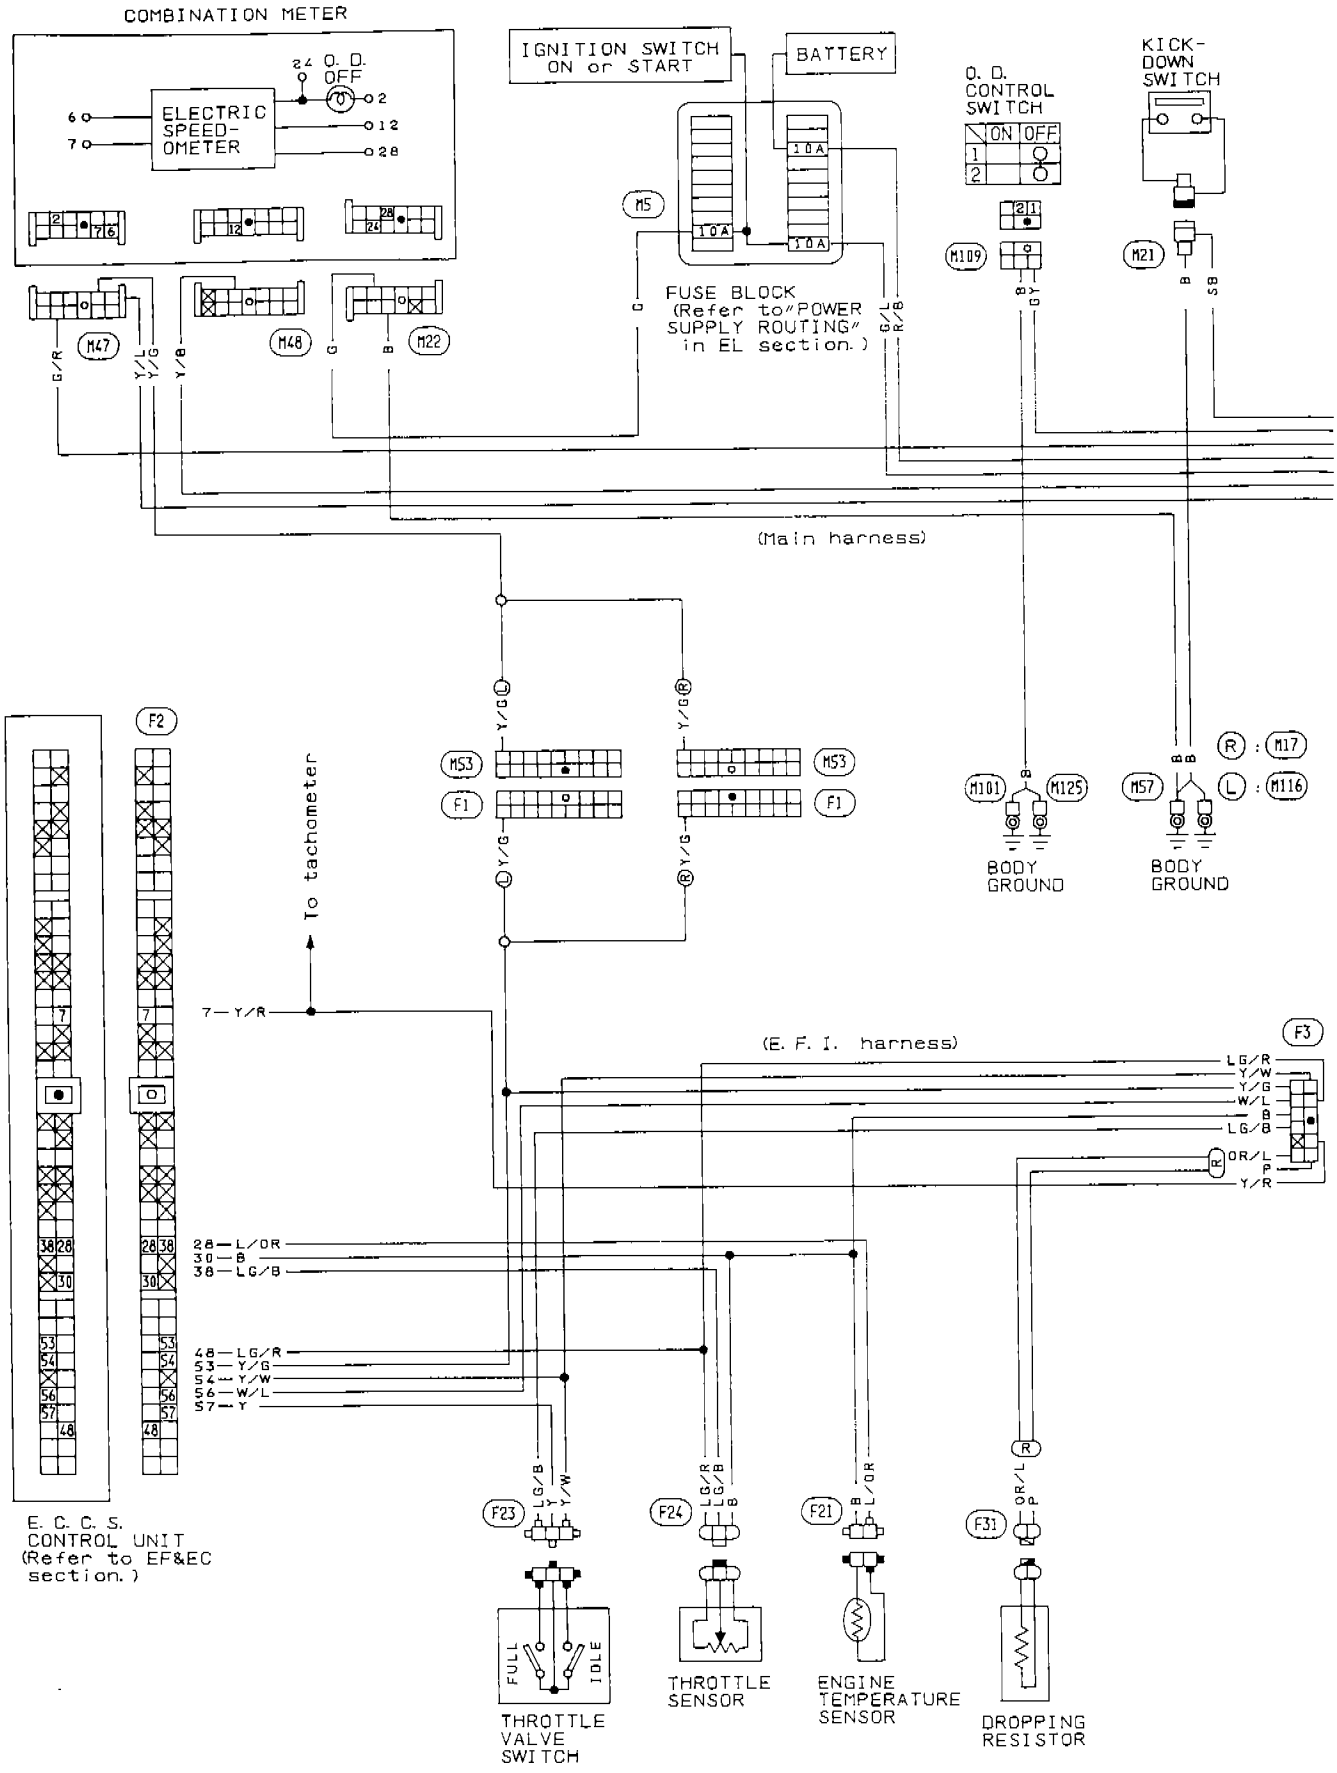



Wiring Diagram (Cont'd)

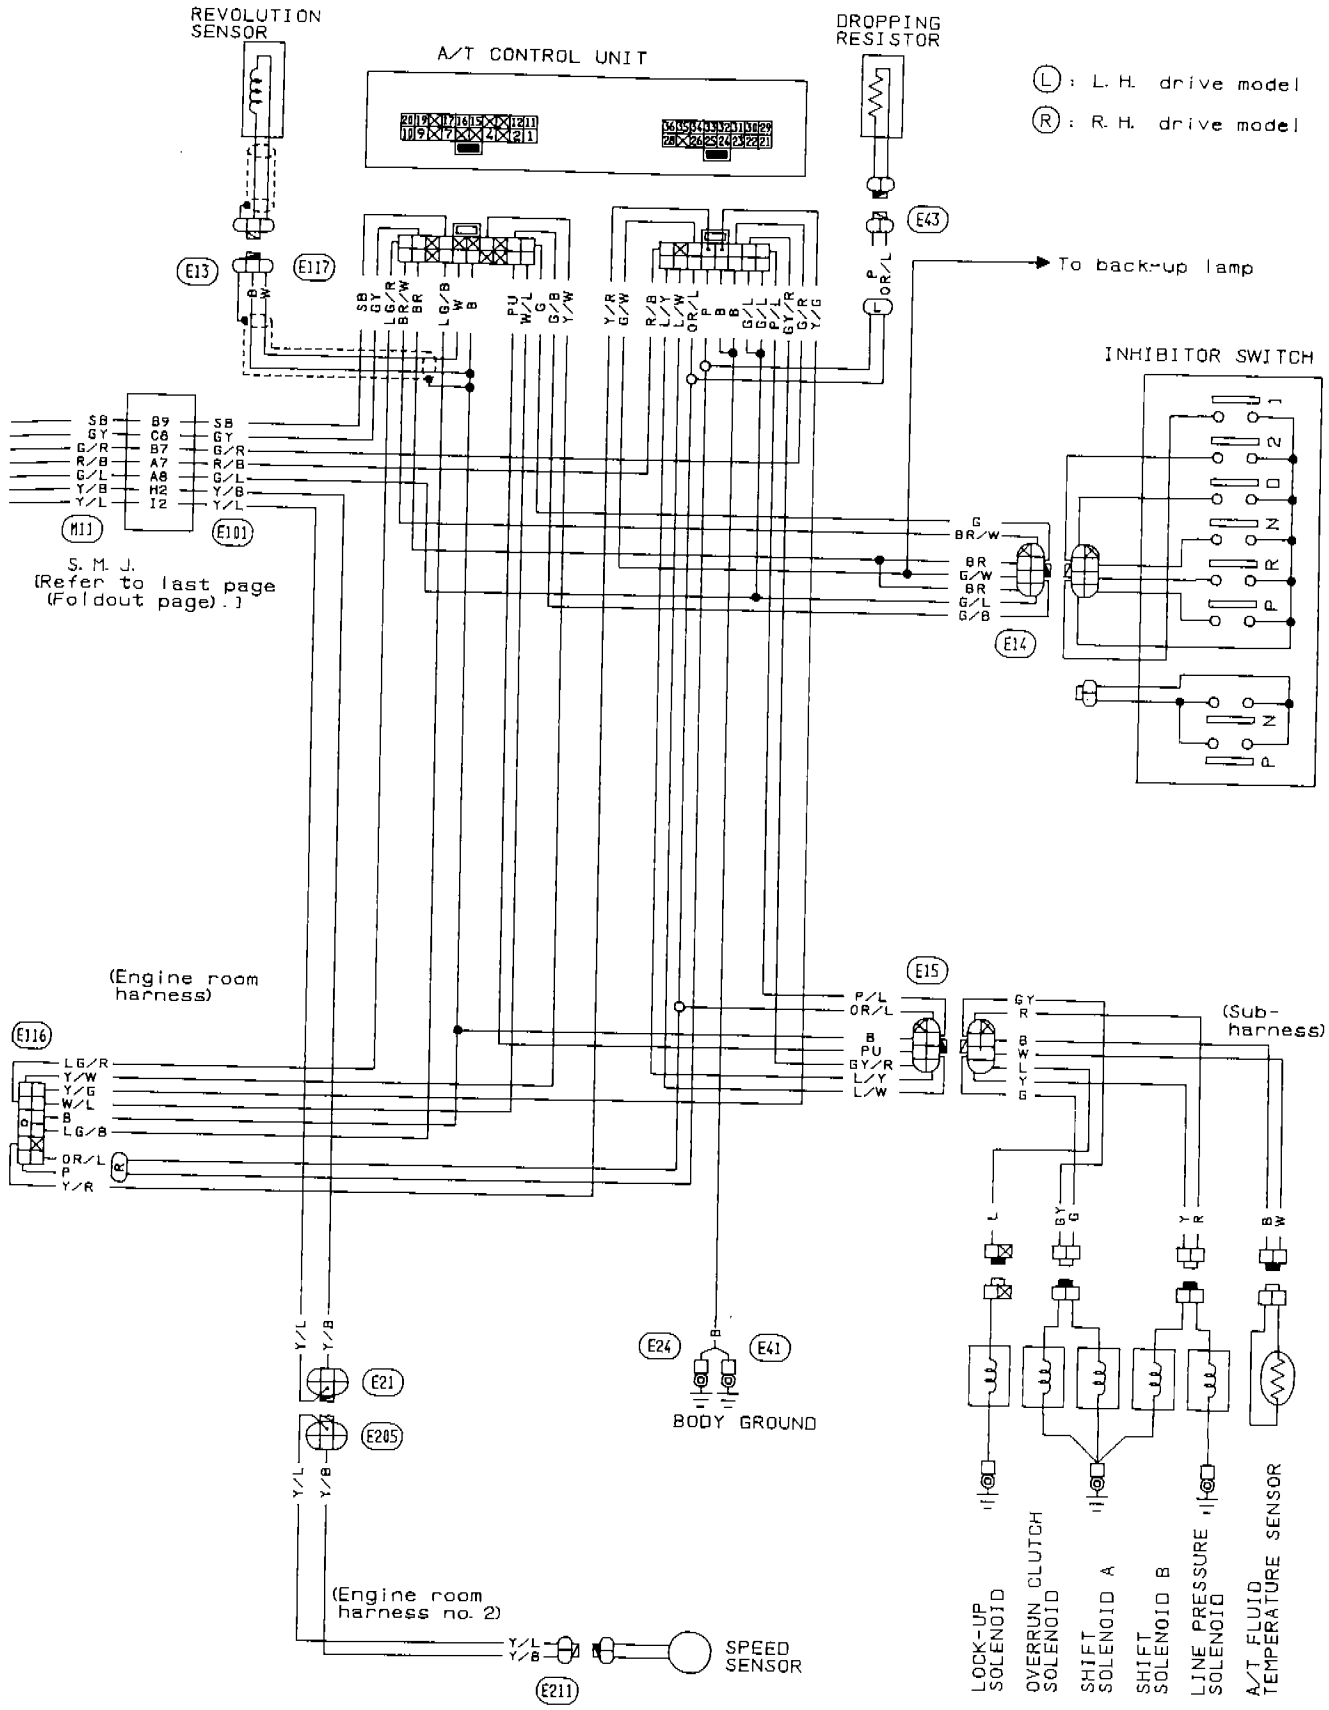



SAT904B

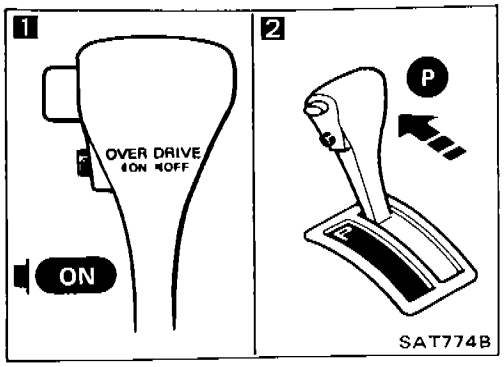

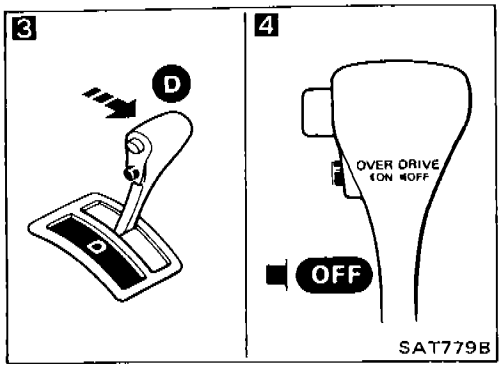

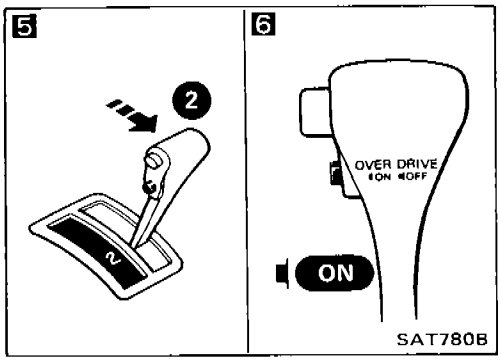

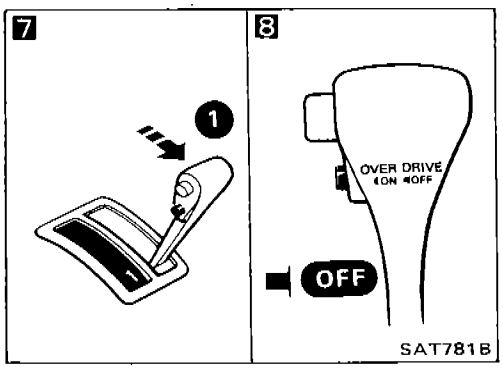

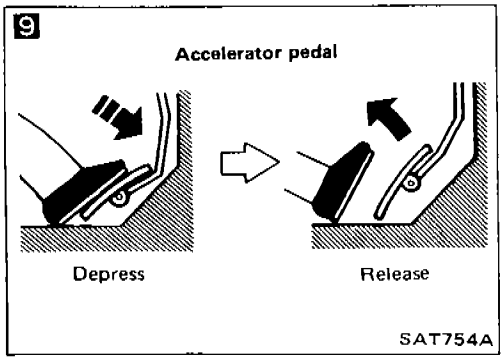

Self-diagnosis

SELF-DIAGNOSTIC PROCEDURE


DIAGNOSIS START

Start engine and warm it up to normal engine operating temperature.



1 Set overdrive switch in "ON" position.

2 Move selector lever to "P" range.



Does O.D. OFF indicator lamp come on for about 2 seconds?


Yes

No → Go to Diagnostic Procedure 1.



3 Move selector lever to "D" range.

4 Set overdrive switch in "OFF" position.



Wait for more than 2 seconds after ignition switch "ON".

5 Move selector lever to "2" range.

6 Set overdrive switch in "ON" position.


7 Move selector lever to "1" range.

8 Set overdrive switch in "OFF" position.

9 Depress accelerator pedal fully and release it.

Ⓐ

Self-diagnosis (Cont'd)

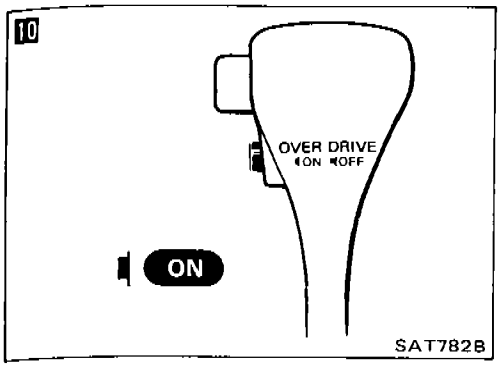

Ⓐ

10








Set overdrive switch in "ON" position.

Check O.D. OFF indicator lamp.
Refer to JUDGEMENT OF SELF-DIAGNOSIS CODE on next page.

DIAGNOSIS END







Self-diagnosis (Cont'd)

JUDGEMENT OF SELF-DIAGNOSIS CODE

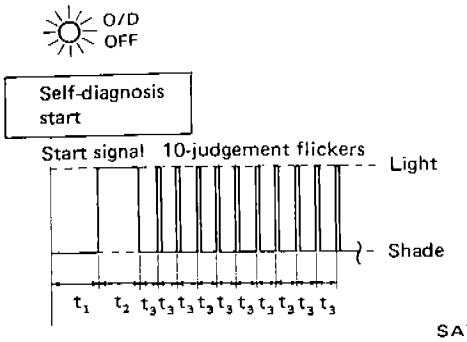
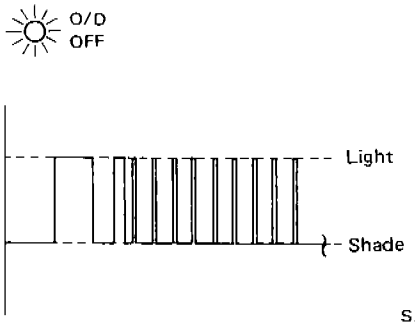
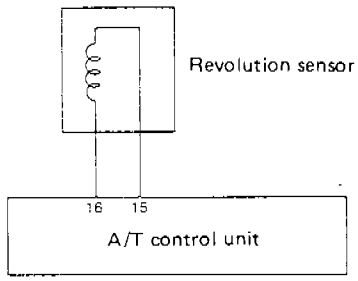
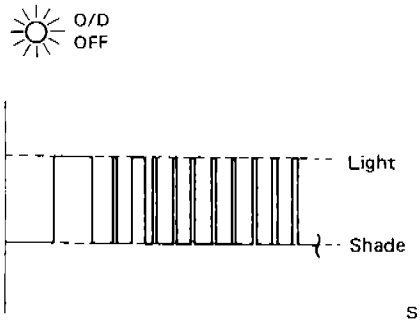
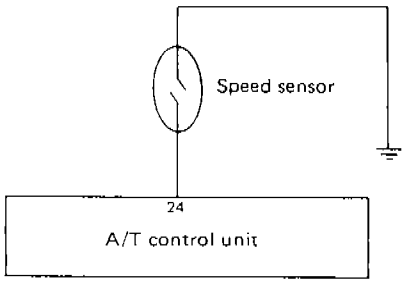
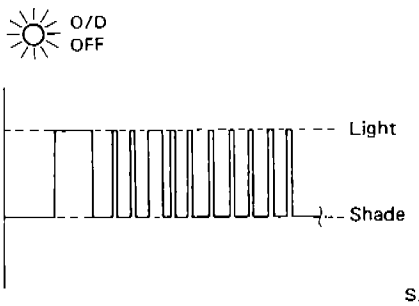
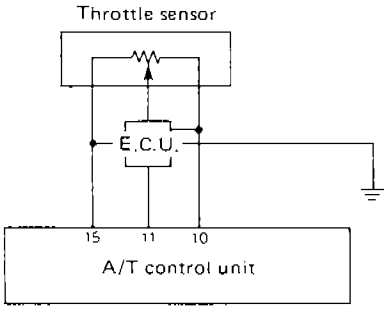
O.D. OFF indicator lamp:	Damaged circuit
All judgement flickers are same.  SAT723B	All circuits that can be confirmed by self-diagnosis are O.K.
1st judgement flicker is longer than others.  SAT724B	Revolution sensor circuit is short-circuited or disconnected.  ➡ Go to REVOLUTION SENSOR CIRCUIT CHECK. SAT140B
2nd judgement flicker is longer than others.  SAT725B	Speed sensor circuit is short-circuited or disconnected.  ➡ Go to SPEED SENSOR CIRCUIT CHECK. SAT760A
3rd judgement flicker is longer than others.  SAT726B	Throttle sensor circuit is short-circuited or disconnected.  ➡ Go to THROTTLE SENSOR CIRCUIT CHECK. SAT761A

t_1 = 2.5 seconds t_2 = 2.0 seconds t_3 = 1.0 second

Self-diagnosis (Cont'd)

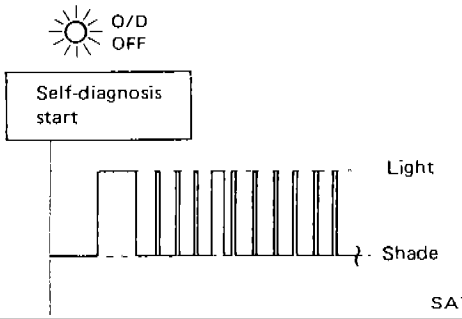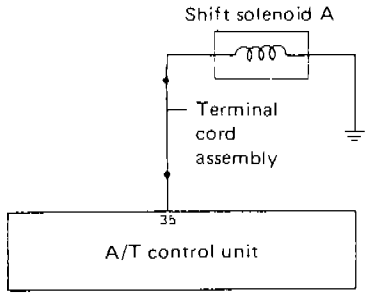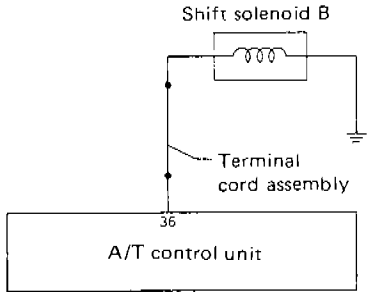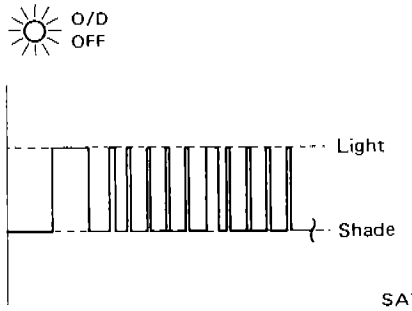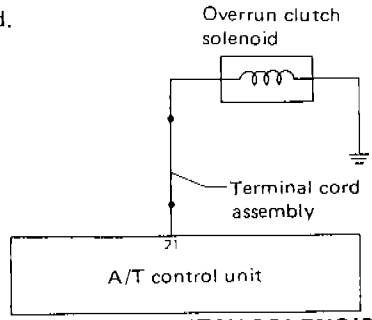
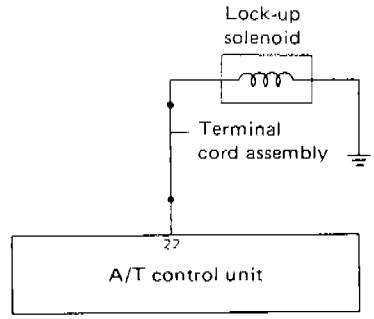
O.D. OFF indicator lamp:	Damaged circuit
4th judgement flicker is longer than others.  SAT727B	Shift solenoid A circuit is short-circuited or disconnected.  ➡ Go to SHIFT SOLENOID A CIRCUIT CHECK. SAT766A
5th judgement flicker is longer than others.  SAT728B	Shift solenoid B circuit is short-circuited or disconnected.  ➡ Go to SHIFT SOLENOID B CIRCUIT CHECK. SAT767A
6th judgement flicker is longer than others.  SAT729B	Overrun clutch solenoid circuit is short-circuited or disconnected.  ➡ Go to OVERRUN CLUTCH SOLENOID CIRCUIT CHECK. SAT768A
7th judgement flicker is longer than others.  SAT730B	Lock-up solenoid circuit is short-circuited or disconnected.  ➡ Go to LOCK-UP SOLENOID CIRCUIT CHECK. SAT769A

Self-diagnosis (Cont'd)

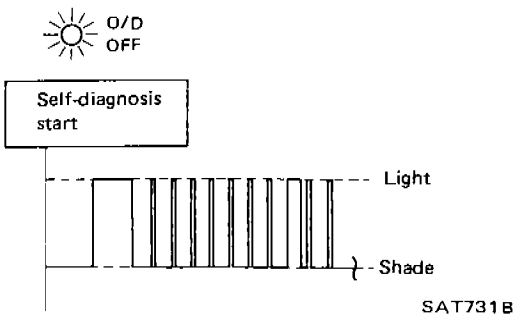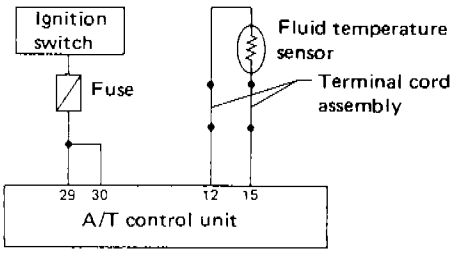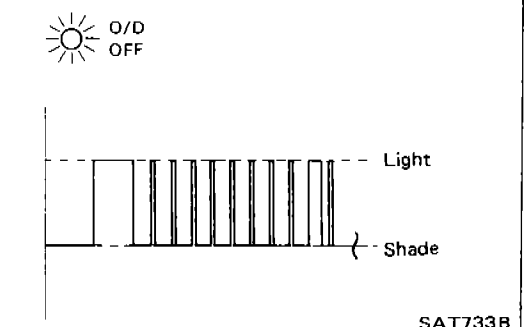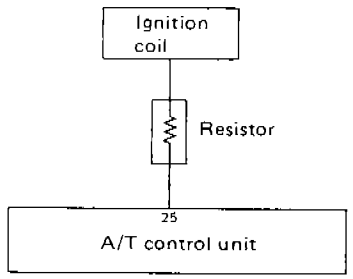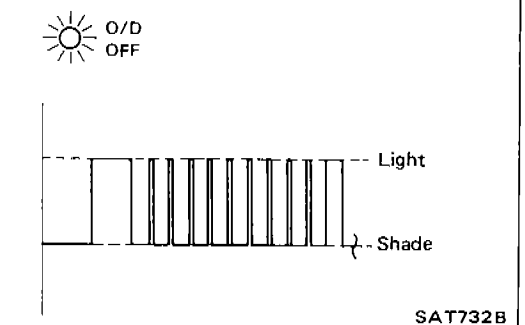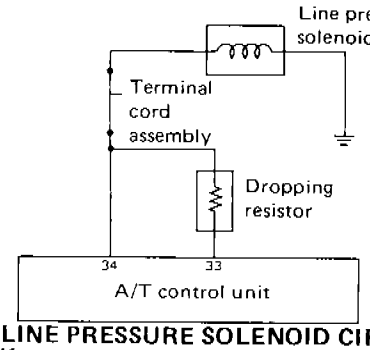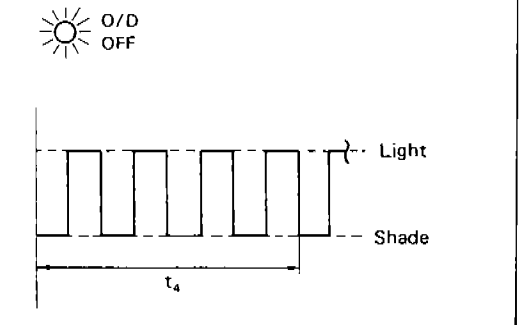O.D. OFF indicator lamp:	Damaged circuit
8th judgement flicker is longer than others. 	Fluid temperature sensor is disconnected or A/T control unit power source circuit is damaged.  ➡ **Go to FLUID TEMPERATURE SENSOR CIRCUIT AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECK.** SAT143B
9th judgement flicker is longer than others. 	Engine revolution signal circuit is short-circuited or disconnected.  ➡ **Go to ENGINE REVOLUTION SIGNAL CIRCUIT CHECK.** SAT624B
10th judgement flicker is longer than others. 	Line pressure solenoid circuit is short-circuited or disconnected.  ➡ **Go to LINE PRESSURE SOLENOID CIRCUIT CHECK.** SAT776A
Flickers as shown below: 	Battery power is low. Battery has been disconnected for a long time. Battery is connected conversely. (When reconnecting A/T control unit connectors. — This is not a problem.)


t_4 = 1.0 second

Self-diagnosis (Cont'd)

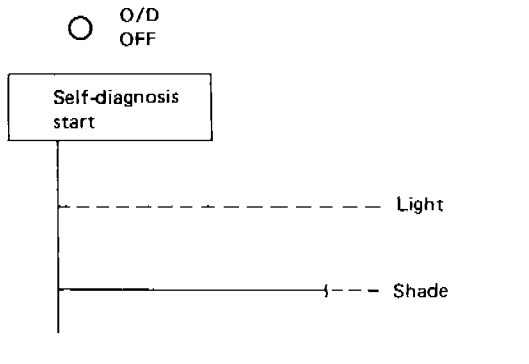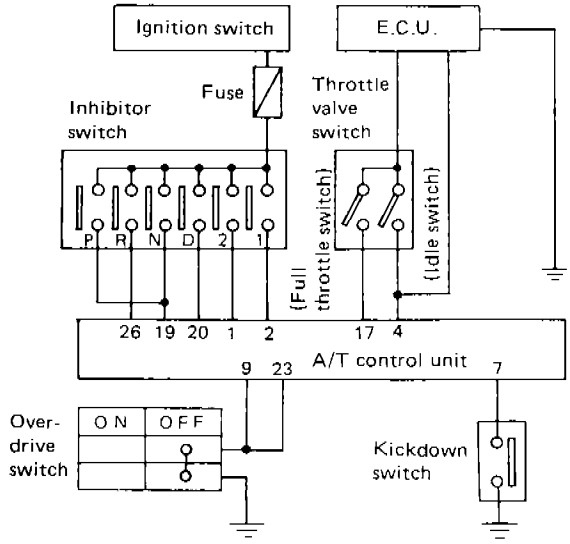O.D. OFF indicator lamp:	Damaged circuit
Does not come on.  SAT157C	Inhibitor switch, overdrive switch, kickdown switch or idle switch circuit is disconnected or A/T control unit is damaged.  ➡ **Go to INHIBITOR, OVERDRIVE, KICKDOWN AND IDLE SWITCH CIRCUIT CHECKS.** SAT007C

Self-diagnosis (Cont'd)

REVOLUTION SENSOR CIRCUIT CHECK

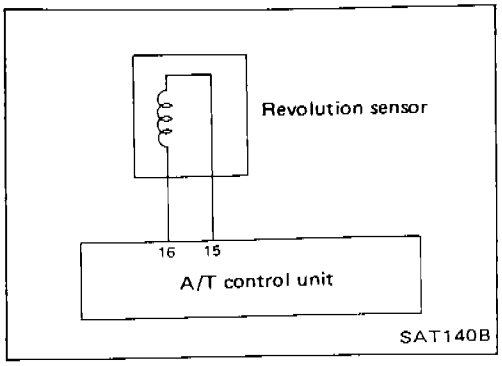


CHECK REVOLUTION SENSOR. — Refer to "Electrical Components Inspection". → N.G. → Repair or replace revolution sensor.

O.K. ↓

A

CHECK INPUT SIGNAL. → N.G. → Check the following items.
- Harness continuity between A/T control unit and revolution sensor (Main harness)
- Harness continuity between revolution sensor and E.C.U. (Main harness)
- Ground circuit for E.C.U. — Refer to section EF & EC.

1. 

2. Check voltage between A/T control unit terminal ⑯ and ground while driving. (Measure with A.C. range.)
   Voltage:
   At 0 km/h (0 MPH): 0V
   At 30 km/h (19 MPH): 1V or more
   (Voltage rises gradually in response to vehicle speed)


O.K. ↓


Perform self-diagnosis again after driving for a while. → N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

INSPECTION END

A

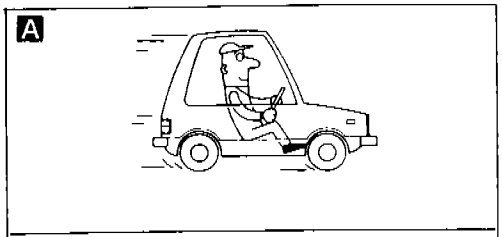


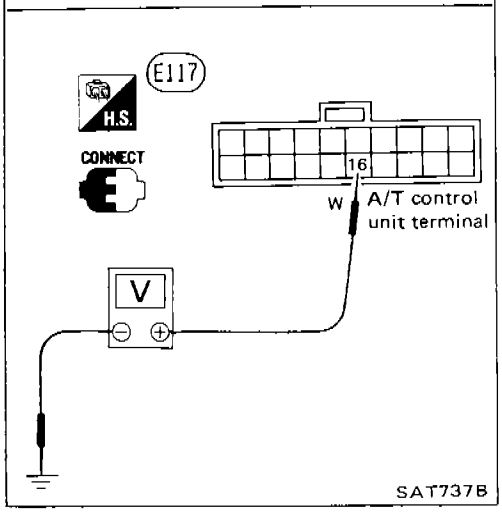

SPEED SENSOR CIRCUIT CHECK

A

CHECK INPUT SIGNAL. → N.G. → Check the following items.
- Speed sensor and ground circuit for speed sensor — Refer to section EL.
- Harness continuity between A/T control unit and speed sensor (Main harness)

1. 

2. Check voltage between A/T control unit terminal ㉔ and ground while driving at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.
   Voltage: Varies from 0V to 5V


O.K. ↓

Perform self-diagnosis again after driving for a while. → N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓


INSPECTION END

A

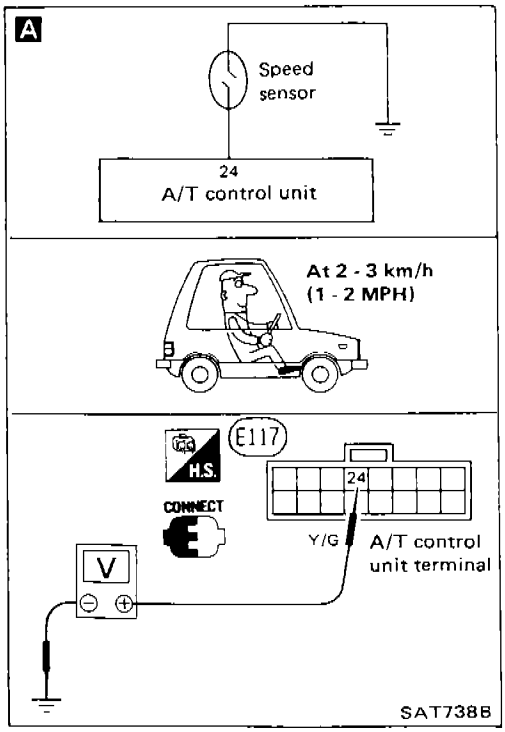

Self-diagnosis (Cont'd)

THROTTLE SENSOR CIRCUIT CHECK

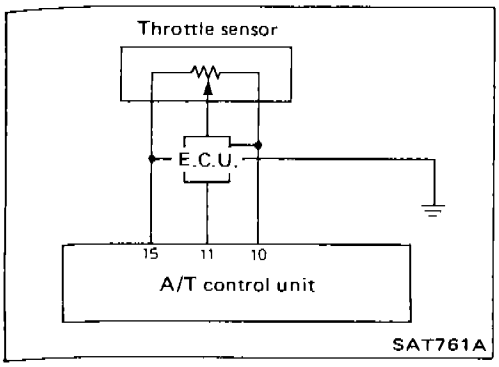


Perform self-diagnosis (Mode III) for engine control.

N.G. → Check throttle sensor circuit for engine control. — Refer to section EF & EC.

O.K. ↓

A

CHECK INPUT SIGNAL.

1. 

2. Check voltage between A/T control unit terminals ⑪ and ⑮ while accelerator pedal is depressed slowly.

Voltage:

Fully-closed throttle:
0.2 - 0.6V

Fully-open throttle:
2.9 - 3.9V

(Voltage rises gradually in response to throttle valve opening.)

N.G. → Check harness continuity between E.C.U. and A/T control unit regarding throttle sensor circuit. (Main harness)


O.K. ↓

Perform self-diagnosis again after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓


INSPECTION END

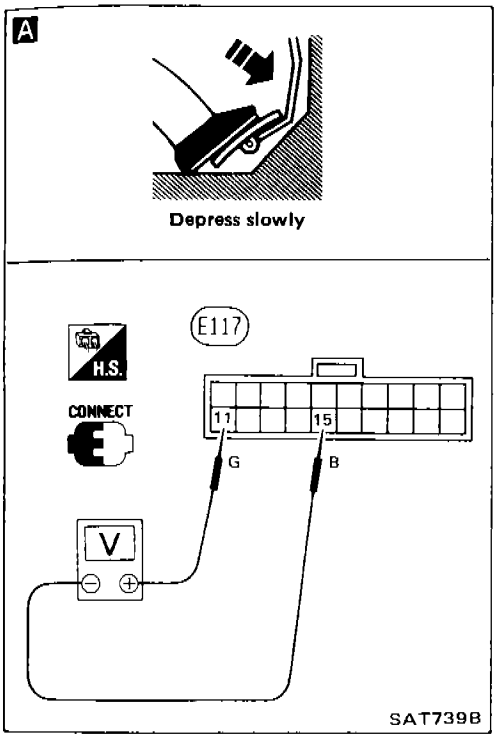


Self-diagnosis (Cont'd)

SHIFT SOLENOID A CIRCUIT CHECK

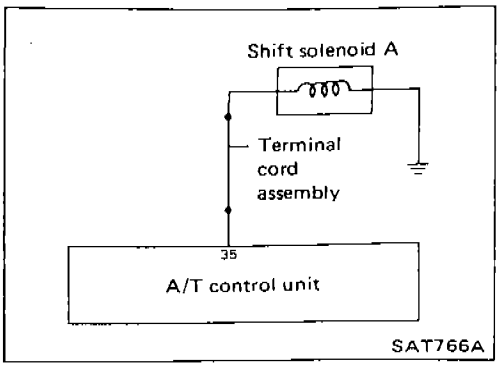


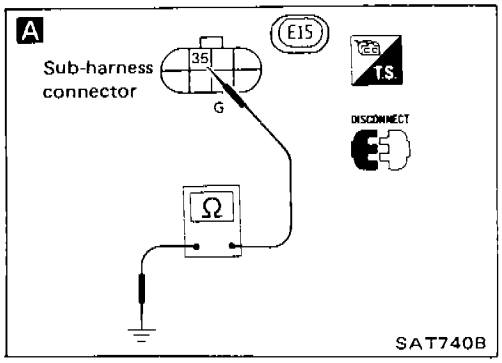

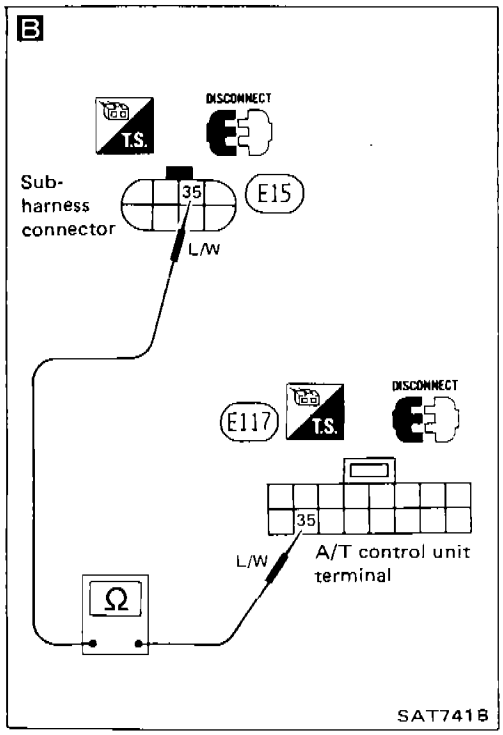

A

CHECK GROUND CIRCUIT.

1. 


2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal (35) and ground.
   Resistance: 20 - 30Ω

N.G. →
1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
- Shift solenoid A — Refer to "Electrical Components Inspection".
- Harness continuity of terminal cord assembly

O.K. ↓

B

CHECK POWER SOURCE CIRCUIT.

1. 

2. Disconnect A/T control unit 16-pin connector.
3. Check resistance between terminal (35) and A/T control unit terminal (35).
   Resistance:
   Approximately 0Ω
4. Reinstall any part removed.

N.G. → Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

O.K. ↓

Perform self-diagnosis after driving for a while.


N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓


INSPECTION END

Self-diagnosis (Cont'd)

SHIFT SOLENOID B CIRCUIT CHECK

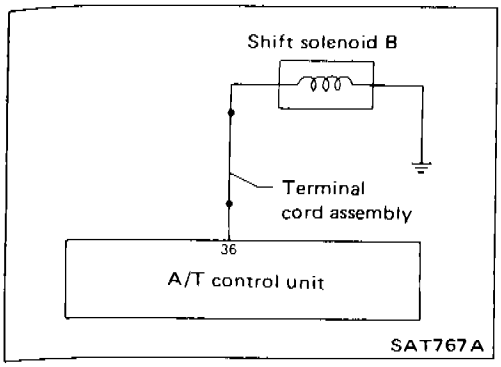


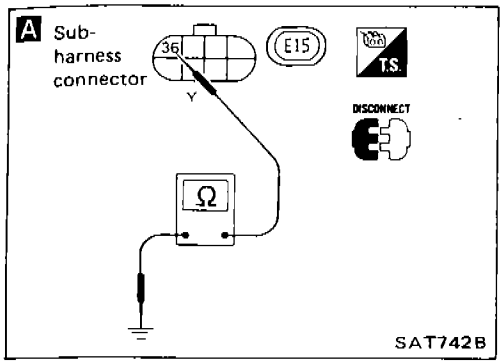

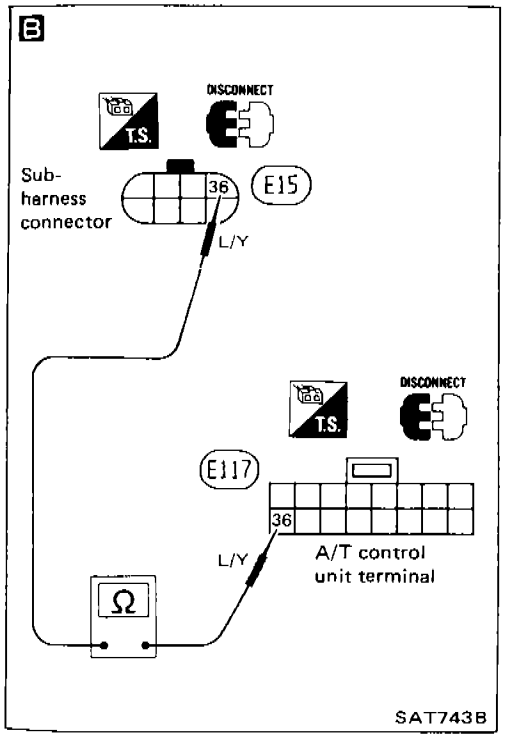

A

CHECK GROUND CIRCUIT.

1. 


2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal (36) and ground.
   Resistance: 20 - 30Ω

N.G. →
1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
- Shift solenoid B — Refer to "Electrical Components Inspection".
- Harness continuity of terminal cord assembly

O.K. ↓

B

CHECK POWER SOURCE CIRCUIT.

1. 

2. Disconnect A/T control unit 16-pin connector.
3. Check resistance between terminal (36) and A/T control unit terminal (36).
   Resistance:
   Approximately 0Ω
4. Reinstall any part removed.

N.G. → Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

O.K. ↓

Perform self-diagnosis after driving for a while.


N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓


INSPECTION END

Self-diagnosis (Cont'd)

OVERRUN CLUTCH SOLENOID CIRCUIT CHECK

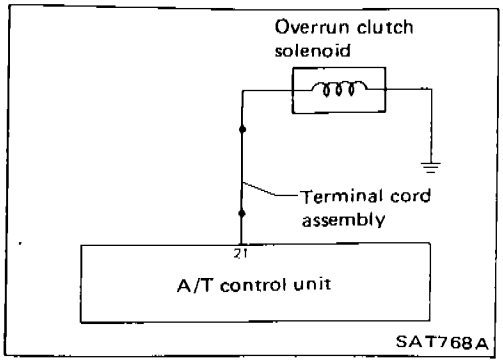


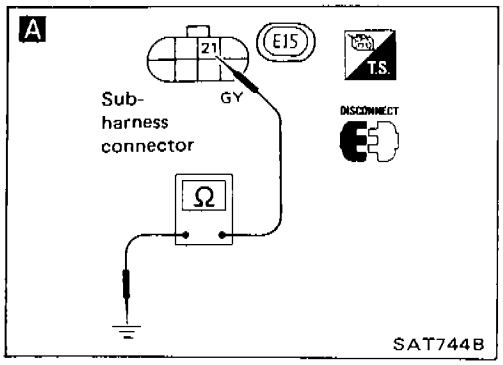

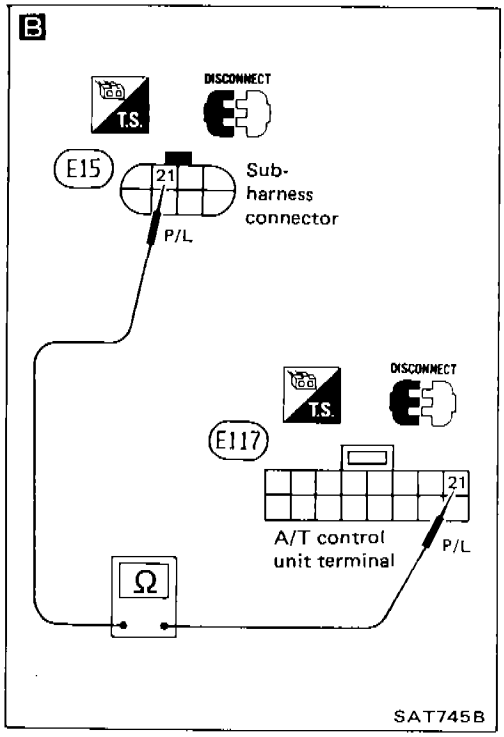

A

CHECK GROUND CIRCUIT.

1. 


2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal (21) and ground.
   Resistance: 20 - 30Ω

N.G. →
1. Remove control valve assembly. – Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
- Overrun clutch solenoid. – Refer to "Electrical Components Inspection".
- Harness continuity of terminal cord assembly

O.K. ↓

B

CHECK POWER SOURCE CIRCUIT.

1. 

2. Disconnect A/T control unit 16-pin connector.
3. Check resistance between terminal (21) and A/T control unit terminal (21).
   Resistance:
   Approximately 0Ω
4. Reinstall any part removed.

N.G. →
Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

O.K. ↓

Perform self-diagnosis after driving for a while.


N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓


INSPECTION END

Self-diagnosis (Cont'd)


LOCK-UP SOLENOID CIRCUIT CHECK

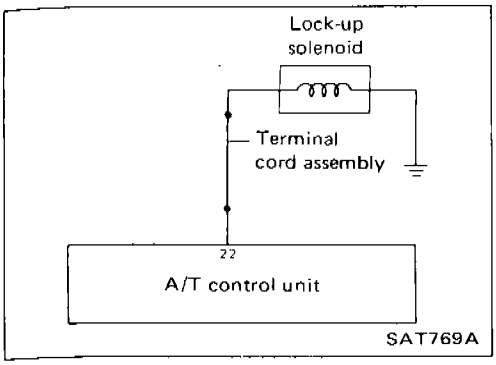

SAT769A

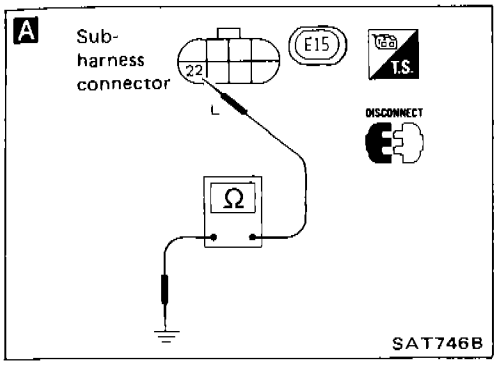


SAT746B

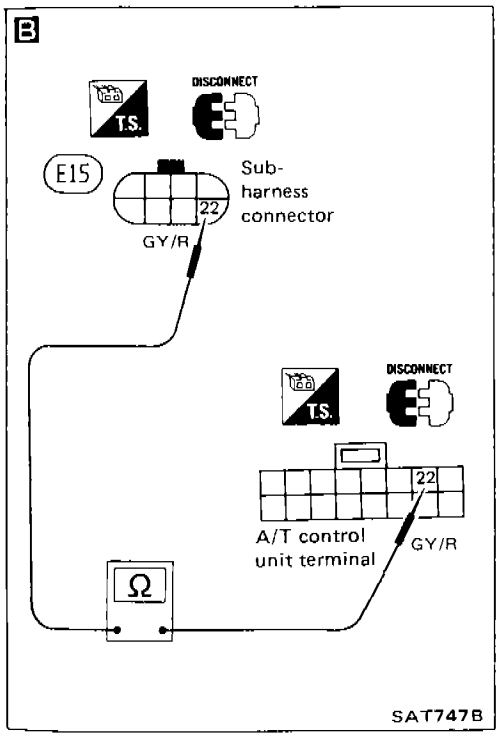

SAT747B

A

CHECK GROUND CIRCUIT.

1. 


2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal (22) and ground.
   Resistance: 2.5 - 5Ω

N.G. →
1. Remove oil pan. – Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
   - Lock-up solenoid – Refer to "Electrical Components Inspection".
   - Harness continuity of terminal cord assembly

O.K. ↓

B

CHECK POWER SOURCE CIRCUIT.

1. 

2. Disconnect A/T control unit 16-pin connector.
3. Check resistance between terminal (22) and A/T control unit terminal (22).
   Resistance:
   Approximately 0Ω
4. Reinstall any part removed.

N.G. →
Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

O.K. ↓

Perform self-diagnosis after driving for a while.


N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓


INSPECTION END

Self-diagnosis (Cont'd)

FLUID TEMPERATURE SENSOR CIRCUIT AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS

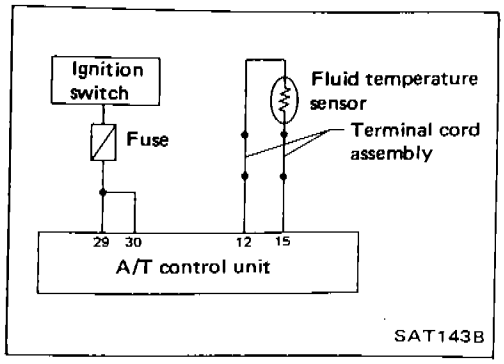


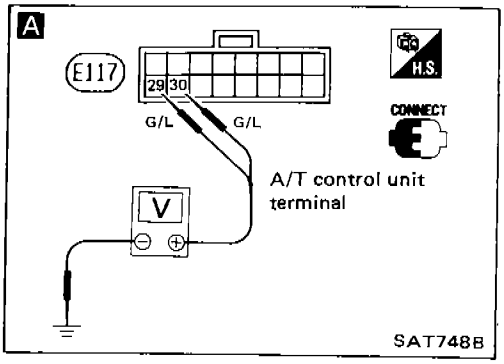

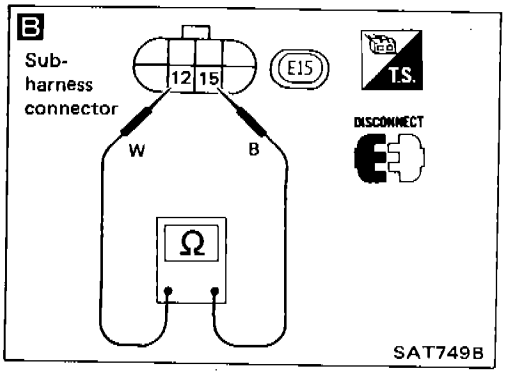

A

CHECK A/T CONTROL UNIT POWER SOURCE.

1. 


2. Check voltage between A/T control unit terminals (29), (30) and ground.
   Battery voltage should exist.

N.G. →
Check the following items.
- Harness continuity between ignition switch and A/T control unit (Main harness)
- Ignition switch and fuse
  – Refer to section EL.

O.K. ↓

B

CHECK FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY

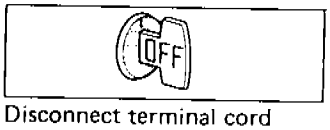1. 


2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminals (12) and (15) when A/T is cold.
   Resistance:
   Cold [20°C (68°F)]
   Approximately 2.5 kΩ
4. Reinstall any part removed.

N.G. →
1. Remove oil pan.
2. Check the following items.
- Fluid temperature sensor
  – Refer to "Electrical Components Inspection".
- Harness continuity of terminal cord assembly

O.K. ↓

Ⓐ

Self-diagnosis (Cont'd)

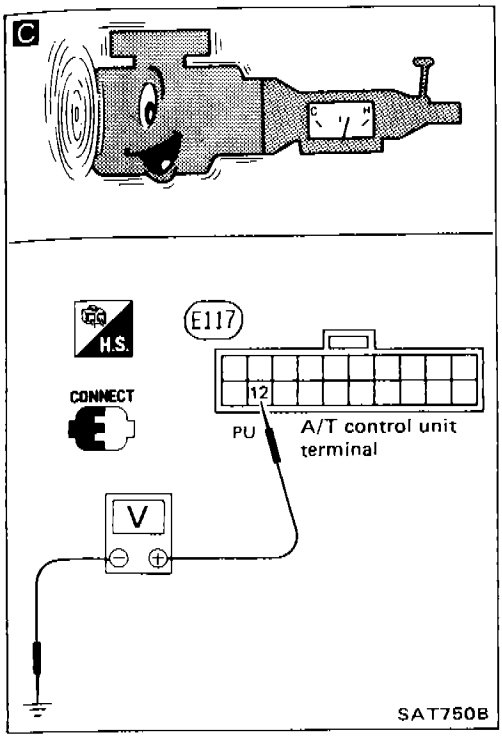

Ⓐ

C

CHECK INPUT SIGNAL OF FLUID TEMPERATURE SENSOR.

1. 

2. Check voltage between A/T control unit terminal ⑫ and ground while warming up A/T.
   Voltage:
   Cold [20°C (68°F)] → Hot [80°C (176°F)]:
   1.56V → 0.45V

N.G. → Check the following items.
- Harness continuity between A/T control unit and terminal cord assembly (Main harness)


O.K. ↓


Perform self-diagnosis after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

INSPECTION END

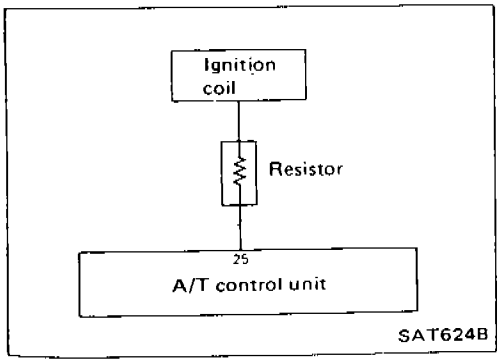

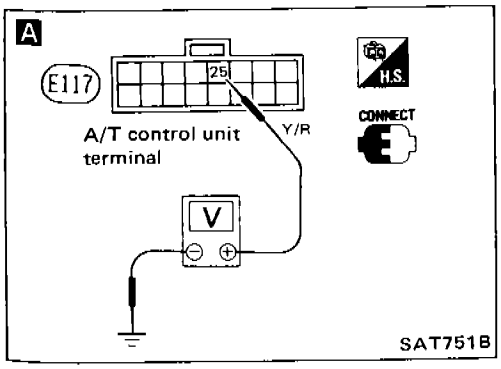

ENGINE REVOLUTION SIGNAL CIRCUIT CHECK


Perform self-diagnosis (Mode III) for engine control. Check ignition signal circuit condition.

N.G. → Check ignition signal circuit for engine control. — Refer to section EF & EC.

O.K. ↓

A

CHECK INPUT SIGNAL.

1. 

2. Check voltage between A/T control unit terminal ㉕ and ground.
   Voltage: 9.5 - 12V

N.G. → Check the following items.
- Harness continuity between A/T control unit and ignition coil.
- Resistor
- Ignition coil — Refer to section EF & EC.

O.K. ↓

Perform self-diagnosis again after driving for a while.


N.G. → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓


INSPECTION END

Self-diagnosis (Cont'd)

LINE PRESSURE SOLENOID CIRCUIT CHECK

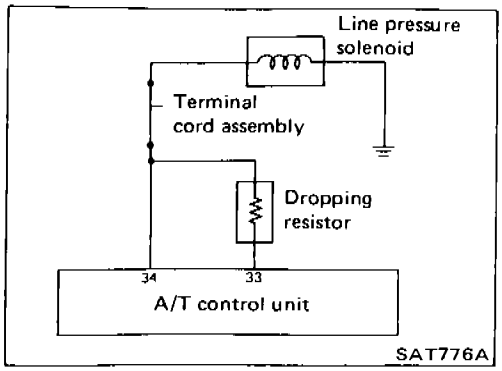


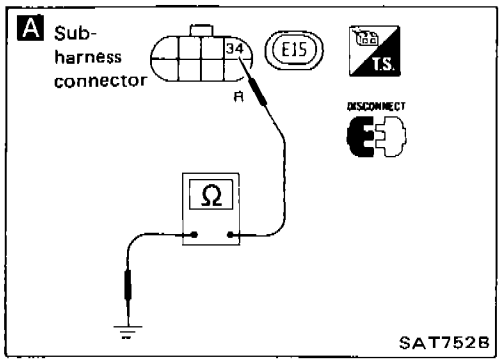

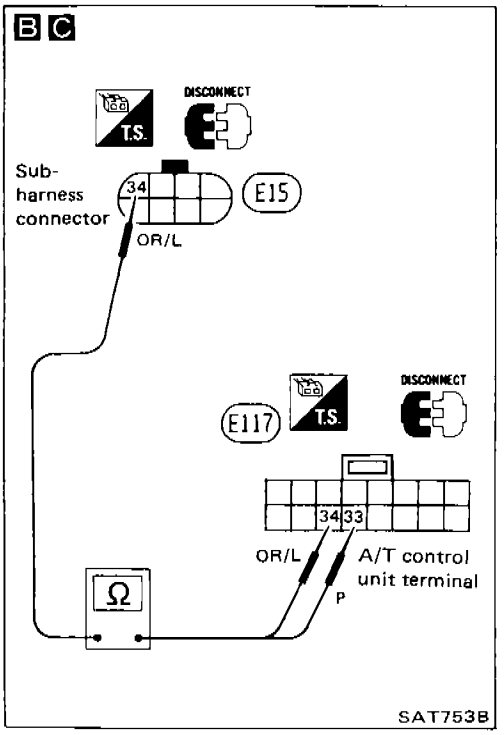

A

CHECK GROUND CIRCUIT.

1. 


2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ㉞ and ground.
   Resistance: 2.5 - 5Ω

N.G. →
1. Remove control valve assembly. – Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
   - Line pressure solenoid – Refer to "Electrical Components Inspection".
   - Harness continuity of terminal cord assembly

O.K. ↓

B

CHECK POWER SOURCE CIRCUIT.

1. 


2. Disconnect A/T control unit 16-pin connector.
3. Check resistance between terminal ㉞ and A/T control unit terminal ㉝.
   Resistance: 11.2 - 12.8Ω

N.G. →
Check the following items.
- Dropping resistor – Refer to "Electrical Components Inspection".
- Harness continuity between A/T control unit ㉝ and terminal cord assembly (Main harness)

O.K. ↓

C

CHECK POWER SOURCE CIRCUIT

1. 

2. Check resistance between terminal ㉞ and A/T control unit terminal ㉞.
   Resistance:
   Approximately 0Ω
3. Reinstall any part removed.

N.G. →
Repair or replace harness between A/T control unit ㉞ and terminal cord assembly.

O.K. ↓

Perform self-diagnosis after driving for a while.


N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓


INSPECTION END

Self-diagnosis (Cont'd)

INHIBITOR, OVERDRIVE, KICKDOWN AND IDLE SWITCH CIRCUIT CHECKS

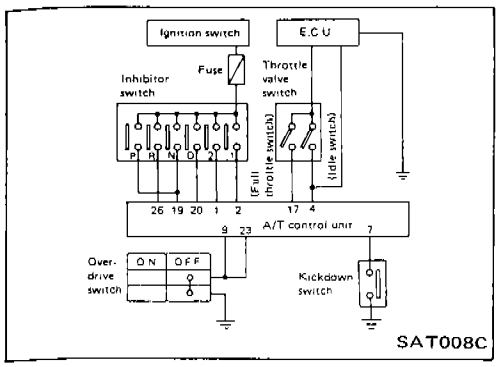


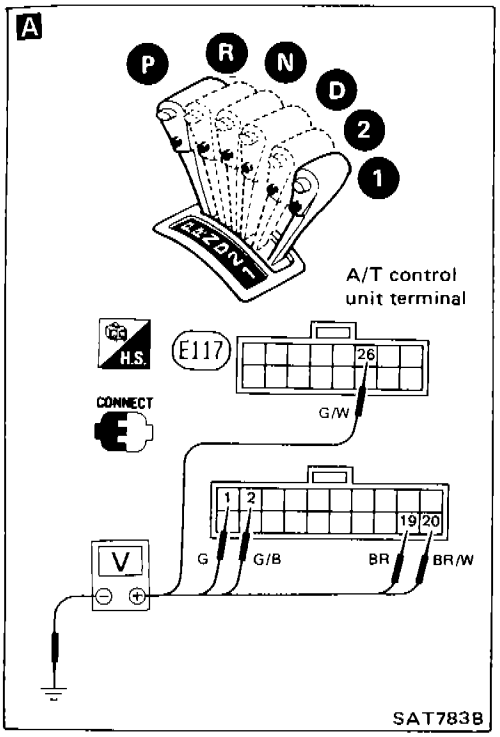

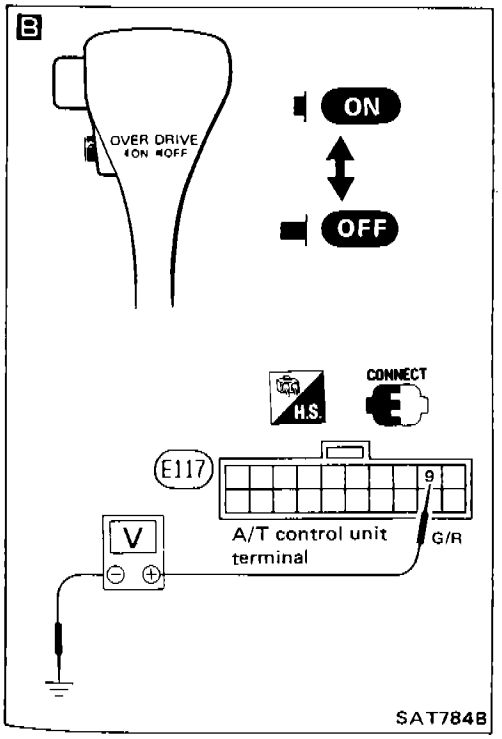

A

CHECK INHIBITOR SWITCH CIRCUIT.

1. 

2. Check voltage between A/T control unit terminals ①, ②, ⑲, ⑳, ㉖ and ground while moving selector lever through each range.

Voltage:

B: Battery voltage

0: 0V

Lever position \ Terminal No.	⑲	㉖	⑳	①	②
P, N	B	0	0	0	0
R	0	B	0	0	0
D	0	0	B	0	0
2	0	0	0	B	0
1	0	0	0	0	B

N.G. →


Check the following items.

- Inhibitor switch — Refer to "Electrical Components Inspection".
- Harness continuity between ignition switch and inhibitor switch (Main harness)
- Harness continuity between inhibitor switch and A/T control unit (Main harness)

O.K. ↓

B

CHECK OVERDRIVE SWITCH CIRCUIT.

1. 

2. Check voltage between A/T control unit terminal ⑨ and ground when overdrive switch is in "ON" position and in "OFF" position.

Switch position	Voltage
ON	Battery voltage
OFF	1V or less

N.G. →


Check the following items.

- Overdrive switch — Refer to "Electrical Components Inspection".
- Harness continuity between A/T control unit and overdrive switch (Main harness)
- Harness continuity of ground circuit for overdrive switch (Main harness)

O.K. ↓

Ⓐ


Self-diagnosis (Cont'd)

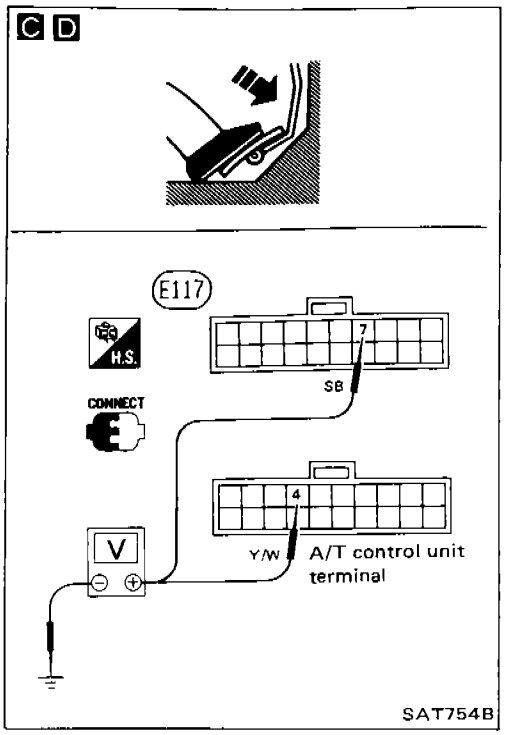

Ⓐ

C

CHECK KICKDOWN SWITCH CIRCUIT.

1. 

2. Check voltage between A/T control unit terminal ⑦ and ground while depressing accelerator pedal slowly. (after warming up engine)
   Voltage:
   When releasing accelerator pedal: 3 - 8V
   When depressing accelerator pedal fully: 1V or less

N.G. → Check the following items.
- Kickdown switch
- Harness continuity between A/T control unit and kickdown switch (Main harness)
- Harness continuity of ground circuit for kickdown switch

O.K. ↓

D

CHECK IDLE SWITCH CIRCUIT.
- Check voltage between A/T control unit terminal ④ and ground in the same way as kickdown switch circuit.
  Voltage:
  When releasing accelerator pedal: 8 - 15V
  When depressing accelerator pedal fully: 1V or less

N.G. → Perform self-diagnosis (Mode IV) for engine control. Check idle switch circuit.
- O.K. → Check harness continuity between A/T control unit and idle switch. (Main harness)
- N.G. → Check idle switch circuit for engine control. — Refer to section EF & EC.

O.K. ↓

Perform self-diagnosis again after driving for a while.


N.G. → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓


INSPECTION END


Diagnostic Procedure 1

SYMPTOM: O.D. OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

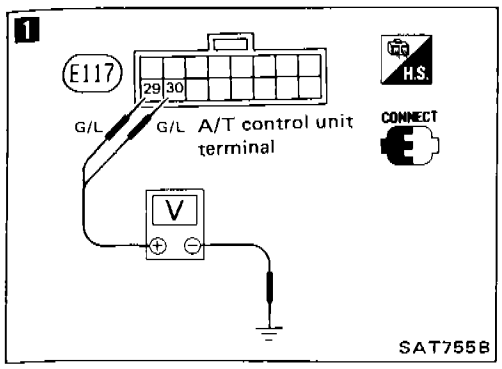


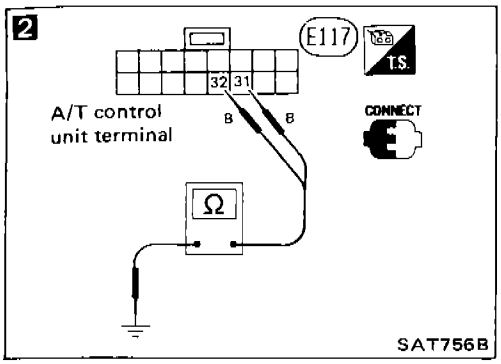

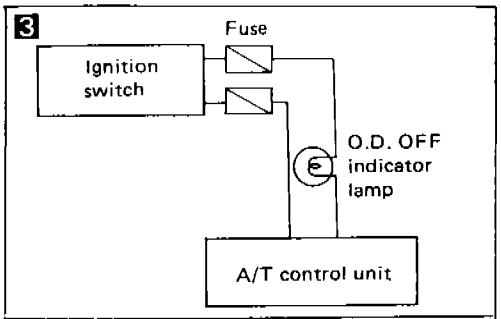

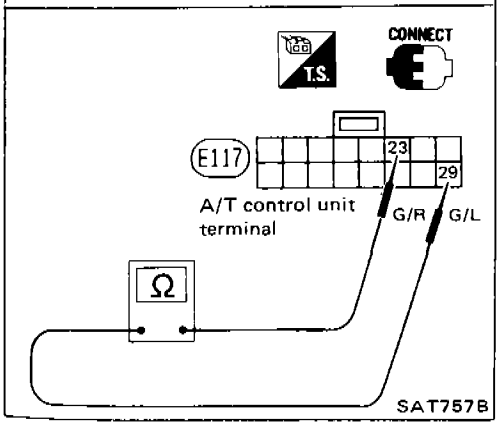

1 **CHECK A/T CONTROL UNIT POWER SOURCE.**


1. 

2. Check voltage between A/T control unit terminals (29), (30) and ground.
   Battery voltage should exist.

N.G. → Check the following items.
- Harness continuity between ignition switch and A/T control unit (Main harness)
- Ignition switch and fuse
  — Refer to section EL.

O.K. ↓

2 **CHECK A/T CONTROL UNIT GROUND CIRCUIT.**


1. 

2. Disconnect A/T control unit 16-pin connector.
3. Check resistance between A/T control unit terminals (31), (32) and ground.
   Resistance:
   Approximately 0Ω

N.G. → Check harness continuity between A/T control unit and ground.

O.K. ↓

3 **CHECK LAMP CIRCUIT.**

1. 

2. Disconnect A/T control unit 16-pin connector.
3. Check resistance between A/T control unit terminals (23) and (29).
   Resistance: 50 - 100Ω
4. Reinstall any part removed.

N.G. → Check the following items.
- O.D. OFF indicator lamp
  — Refer to section EL.
- Harness continuity between ignition switch and O.D. OFF indicator lamp (Main harness)
- Harness continuity between power shift indicator lamp and A/T control unit


O.K. ↓


Check again.

N.G. → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

INSPECTION END

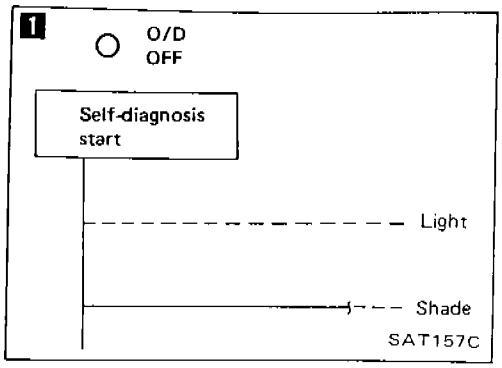

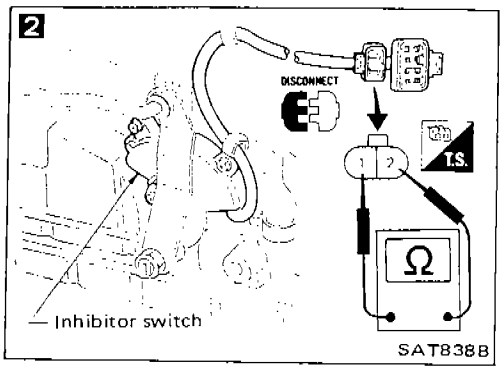

Diagnostic Procedure 2

SYMPTOM: Engine cannot be started with selector lever in "P" or "N" range or engine can be started with selector lever in "D", "2", "1" or "R" range.

1

Does self-diagnosis show damage to inhibitor switch circuit? — Yes → Check inhibitor switch circuit. — Refer to "Self-diagnosis".

No ↓

2


Check continuity of inhibitor switch 2-pin connector. — Refer to "Electrical Components Inspection". — N.G. → Repair or replace inhibitor switch.

O.K. ↓

Check starting system. — Refer to section EL. — N.G. → Repair or replace damaged parts.

O.K. ↓

INSPECTION END

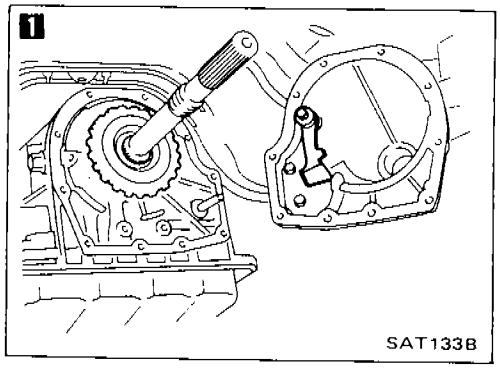

Diagnostic Procedure 3

SYMPTOM: Vehicle moves when it is pushed forward or backward with selector lever in "P" range.


1

Check parking components. — Refer to "ON-VEHICLE SERVICE". — N.G. → Repair or replace damaged parts.


O.K. ↓

INSPECTION END

1 ○ O/D OFF

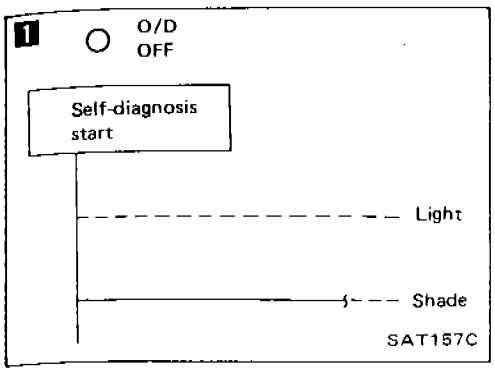


2

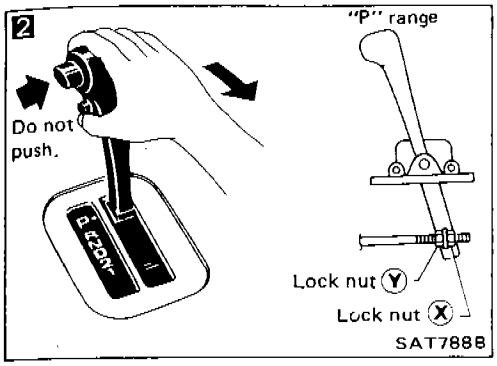

3



4

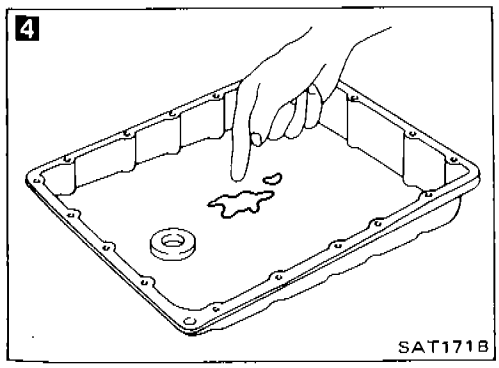

Diagnostic Procedure 4

SYMPTOM: Vehicle moves forward or backward when selecting "N" range.

1 Does self-diagnosis show damage to inhibitor switch after cruise test?
- Yes → Check inhibitor switch circuit. – Refer to "Self-diagnosis".
- No ↓


2 Check manual control linkage. – Refer to "ON-VEHICLE SERVICE".
- N.G. → Adjust manual control linkage. – Refer to "ON-VEHICLE SERVICE".
- O.K. ↓


3 Check A/T fluid level again.
- N.G. → Refill A.T.F.
- O.K. ↓


4 1. Remove oil pan.
2. Check A/T fluid condition.
- N.G. → 1. Disassemble A/T. 2. Check the following items.
  - Forward clutch assembly
  - Overrun clutch assembly
  - Reverse clutch assembly
  - Accumulator piston D
- O.K. ↓


Check again.
- N.G. → 1. Perform A/T control unit input/output signal inspection. 2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.
- O.K. ↓

INSPECTION END

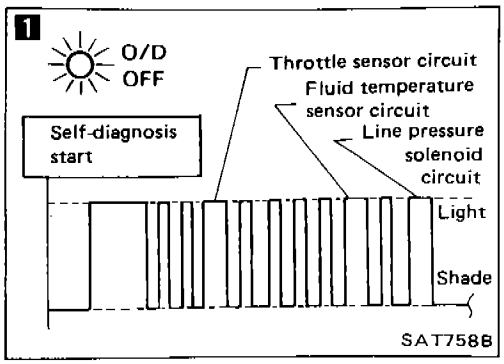

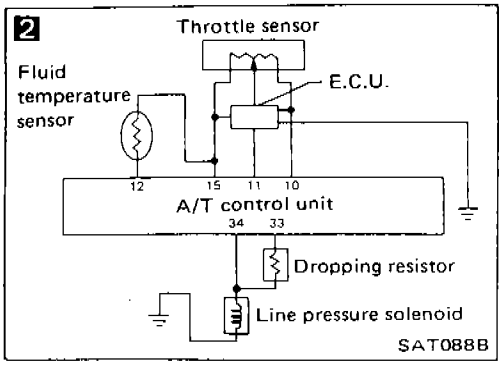

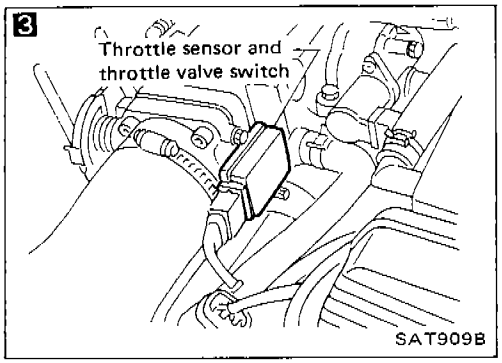

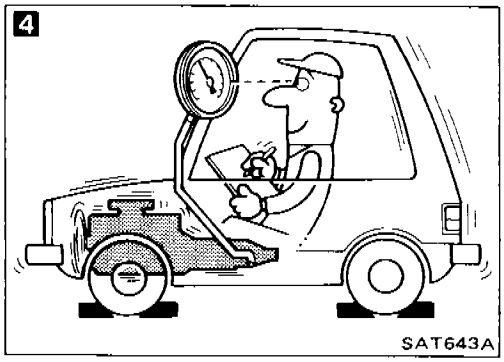

Diagnostic Procedure 5

SYMPTOM: There is large shock when changing from "N" to "R" range.

1 Does self-diagnosis show damage to throttle sensor, line pressure solenoid or fluid temperature sensor circuit?

Yes → **2** Check damaged circuit. – Refer to "Self-diagnosis".

No ↓

3 Check throttle sensor. – Refer to section EF & EC.

N.G. → Repair or replace throttle sensor.

O.K. ↓

4 Check line pressure at idle with selector lever in "D" range. – Refer to "PRESSURE TESTING".

N.G. →
1. Remove control valve assembly. – Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
- Valves to control line pressure (Pressure regulator valve, modifier valve, pilot valve and pilot filter)
- Line pressure solenoid

O.K. ↓

Check again.

N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓


INSPECTION END

1




SAT638A

2

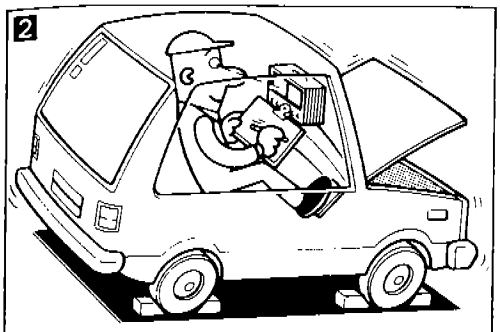


SAT642A

3

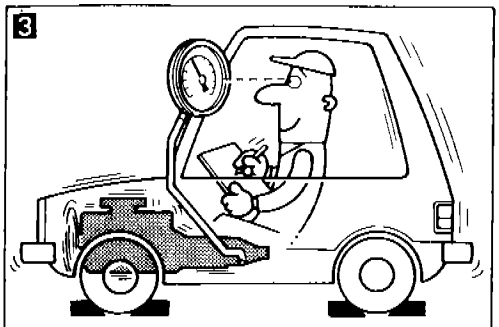

SAT643A

4

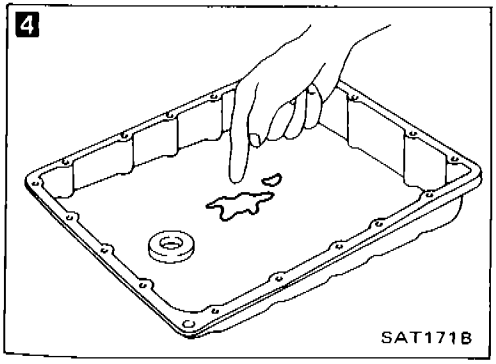

SAT171B

Diagnostic Procedure 6

SYMPTOM: Vehicle does not creep backward when selecting "R" range.

1

Check A/T fluid level again.

N.G. → Refill A.T.F.

O.K.

N.G. in both "1" and "R" range →

2

Check stall revolution with selector lever in "1" and "R" range.

O.K.

O.K. in "1" range
N.G. in "R" range. →

3

Check line pressure at idle with selector lever in "R" range.
– Refer to "PRESSURE TESTING".

N.G. →

O.K.

4

1. Remove oil pan.
2. Check fluid condition.

N.G. →

O.K.

Check again.

N.G. →

O.K.

INSPECTION END


1. Remove control valve assembly. – Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
- Valves to control line pressure (Pressure regulator valve, pilot valve and pilot filter)
- Line pressure solenoid
3. Disassemble A/T.
4. Check the following items.
- Oil pump assembly
- Torque converter
- Reverse clutch assembly
- High clutch assembly
- Low & reverse brake assembly
- Low one-way clutch


1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


Diagnostic Procedure 7

SYMPTOM: Vehicle does not creep forward when selecting "D", "2" or "1" range.



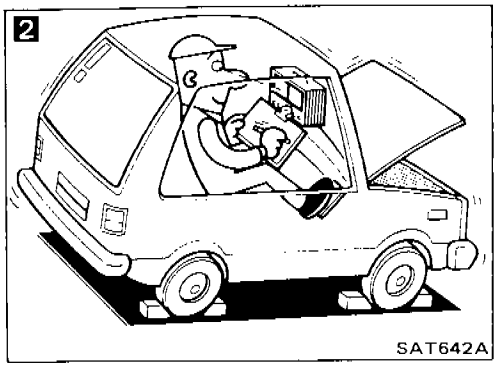

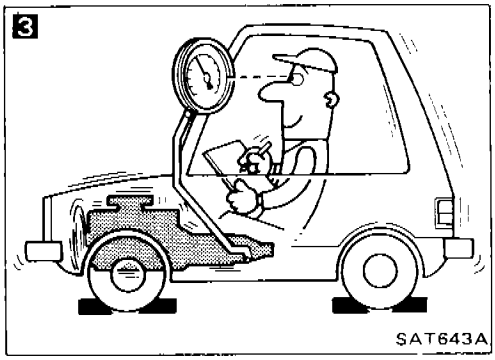

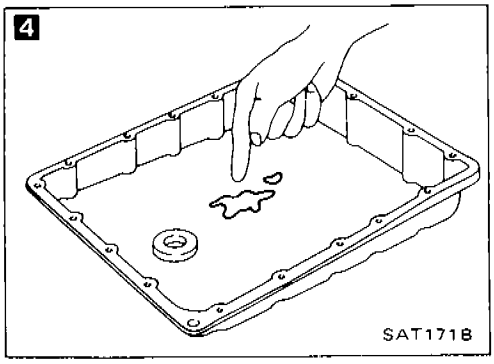

1 Check A/T fluid level again. — N.G. → Refill A.T.F.

O.K. ↓

2 Check stall revolution with selector lever in "D" range. — Refer to "STALL TESTING". — N.G. →

O.K. ↓

3 Check line pressure at idle with selector lever in "D" range. — Refer to "PRESSURE TESTING". — N.G. →

O.K. ↓

4 1. Remove oil pan. 2. Check A/T fluid condition. — N.G. →

O.K. ↓

Check again. — N.G. →

O.K. ↓

INSPECTION END


N.G. →

1. Remove control valve assembly. – Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
- Valves to control line pressure (Pressure regulator valve, modifier valve, pilot valve and pilot filter)
- Line pressure solenoid
3. Disassemble A/T
4. Check the following items.
- Oil pump assembly
- Forward clutch assembly
- Forward one-way clutch
- Low one-way clutch
- Low & reverse brake assembly
- Torque converter


N.G. →

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


1

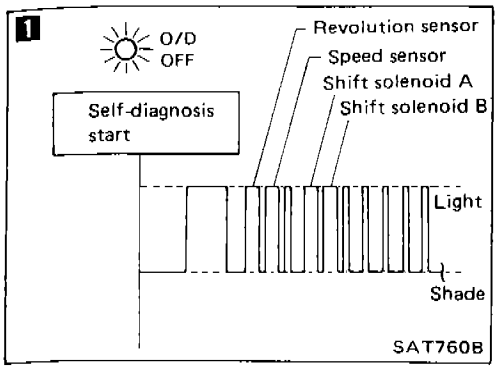


2

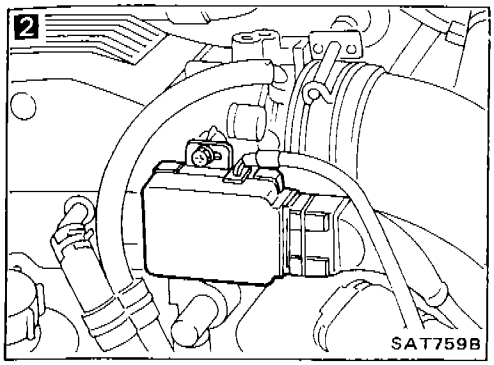

3

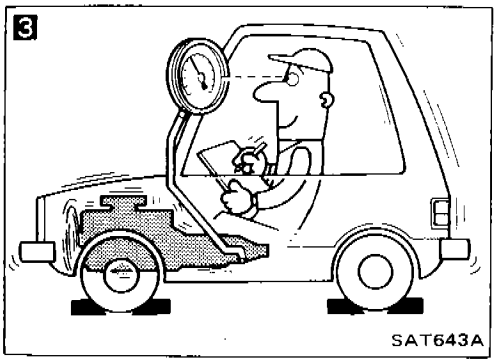

4

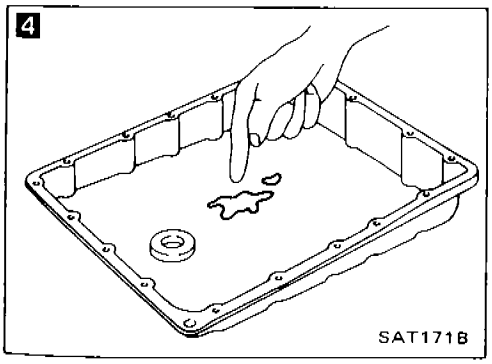

Diagnostic Procedure 8

SYMPTOM: Vehicle cannot be started from D_1 on Cruise test — Part 1.

Is Diagnostic Procedure 7 O.K.? — No → Go to Diagnostic Procedure 7.

Yes ↓

1 Does self-diagnosis show damage to revolution sensor, speed sensor, shift solenoid A or B after cruise test? — Yes → Check damaged circuit. — Refer to "Self-diagnosis".

No ↓

2 Check throttle sensor. — Refer to section EF & EC. — N.G. → Repair or replace throttle sensor.

O.K. ↓

3 Check line pressure at stall point with selector lever in "D" range. — Refer to "PRESSURE TESTING". — N.G. →

1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
   - Shift valve A
   - Shift valve B
   - Shift solenoid A
   - Shift solenoid B
   - Pilot valve
   - Pilot filter

O.K. ↓

4
1. Remove oil pan.
2. Check A/T fluid condition.

O.K. → (1. 2. above)

N.G. →

1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
   - Shift valve A
   - Shift valve B
   - Shift solenoid A
   - Shift solenoid B
   - Pilot valve
   - Pilot filter
3. Disassemble A/T.
4. Check the following items.
   - Forward clutch assembly
   - Forward one-way clutch
   - Low one-way clutch
   - High clutch assembly
   - Torque converter
   - Oil pump assembly


Check again. — N.G. →

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓

INSPECTION END


1 O/D OFF

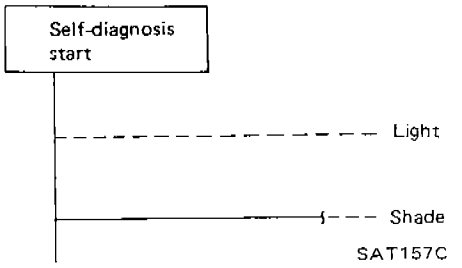


2

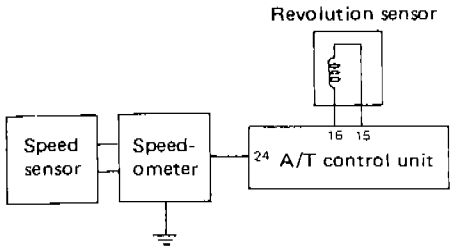


3

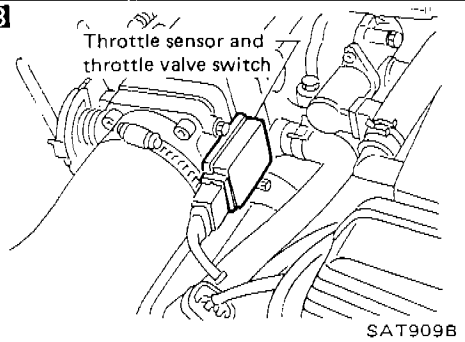

4

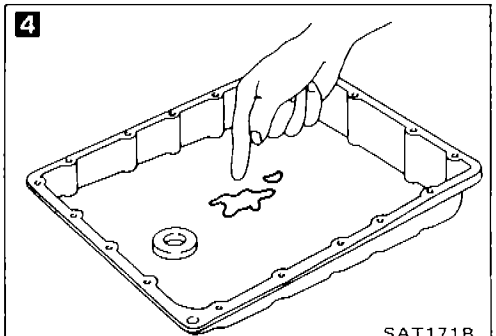

5

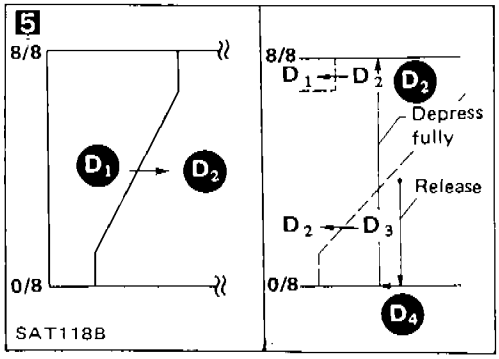

Diagnostic Procedure 9

SYMPTOM: A/T does not shift from D_1 to D_2 at the specified speed.
A/T does not shift from D_4 to D_2 when depressing accelerator pedal fully at the specified speed.

Are Diagnostic Procedures 7 and 8 O.K.? — No → Go to Diagnostic Procedure 7 or 8.

Yes ↓

1 Does self-diagnosis show damage to inhibitor switch after cruise test? — Yes → Check inhibitor switch circuit. — Refer to "Self-diagnosis".

No ↓

2 Check revolution sensor and speed sensor circuit. — Refer to "Self-diagnosis". — N.G. → Repair or replace revolution sensor and speed sensor circuits.

O.K. ↓

3 Check throttle sensor. — Refer to section EF & EC. — N.G. → Repair or replace throttle sensor.

O.K. ↓

4 1. Remove oil pan.
2. Check A/T fluid condition. — N.G. →
1. Remove control valve. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
- Shift valve A
- Shift solenoid A
- Pilot valve
- Pilot filter

O.K. ↓ (O.K. ↑)

3. Disassemble A/T.
4. Check the following items.
- Servo piston assembly
- Brake band
- Oil pump assembly

5 Check again. — N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

INSPECTION END

Diagnostic Procedure 10

SYMPTOM: A/T does not shift from D_2 to D_3 at the specified speed.

Are Diagnostic Procedures 7 and 8 O.K.? — No → Go to Diagnostic Procedure 7 or 8.

Yes ↓

1 Does self-diagnosis show damage to inhibitor switch after cruise test? — Yes → Check inhibitor switch circuit. — Refer to "Self-diagnosis".

No ↓

2 Check throttle sensor. — Refer to section EF & EC. — N.G. → Repair or replace throttle sensor.

O.K. ↓

3 1. Remove oil pan.
2. Check A/T fluid condition. — N.G. →
   1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
   2. Check the following items.
   - Shift valve B
   - Shift solenoid B
   - Pilot valve
   - Pilot filter

   O.K. ↑ O.K. ↑
   3. Disassemble A/T.
   4. Check the following items.
   - Servo piston assembly
   - High clutch assembly
   - Oil pump assembly


O.K. ↓

4 Check again. — N.G. → 1. Perform A/T control unit input/output signal inspection. 2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K. ↓

INSPECTION END


1

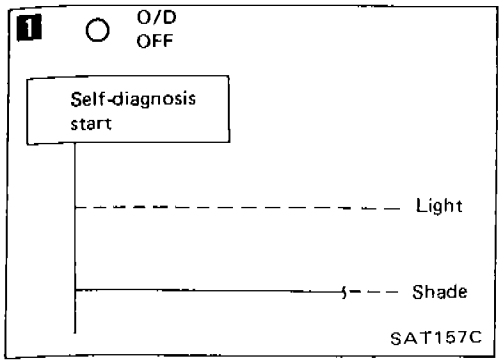


2

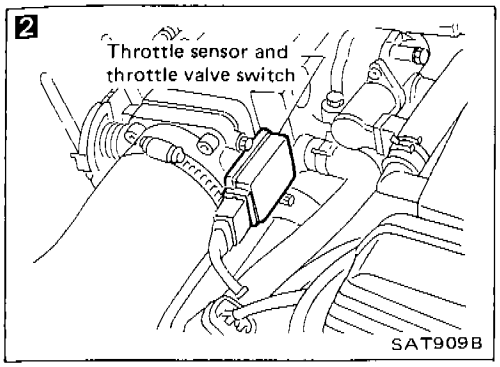


3

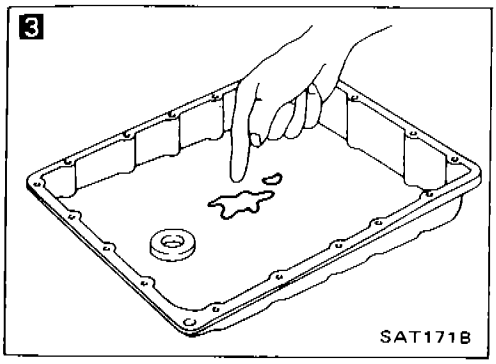


4

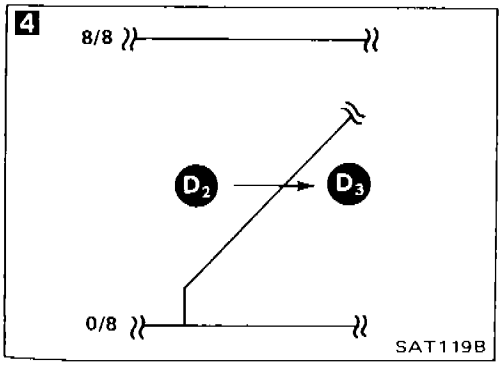


1

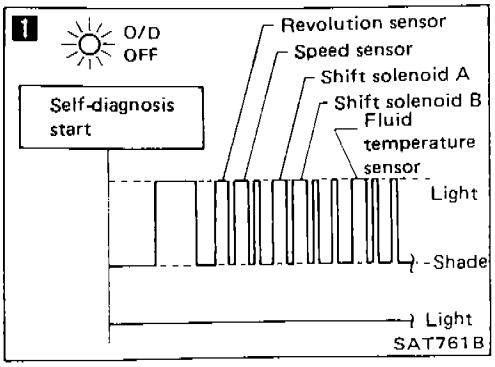


2

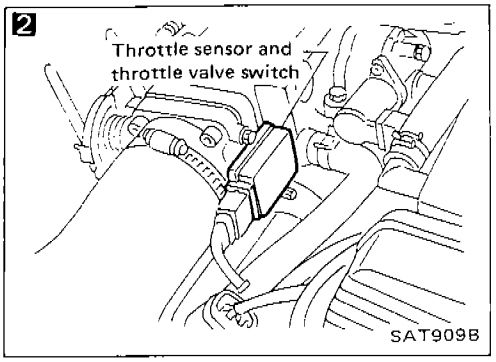

3

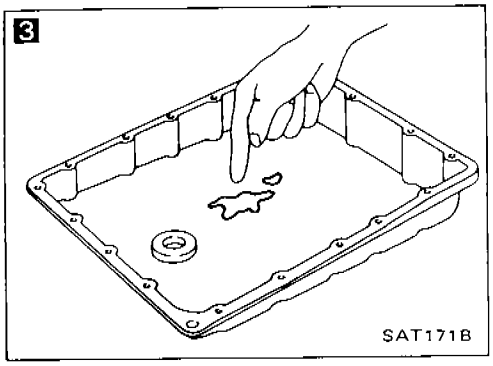

4

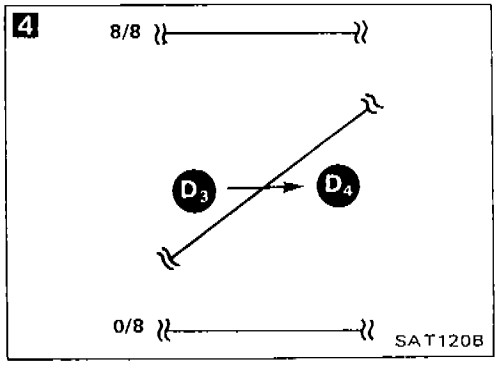

Diagnostic Procedure 11

SYMPTOM: A/T does not shift from D_3 to D_4 at the specified speed.

Are Diagnostic Procedures 7 and 8 O.K.? — No → Go to Diagnostic Procedure 7 or 8.

Yes ↓

1 Does self-diagnosis show damage to inhibitor switch, overdrive switch, shift solenoid A, B, revolution sensor, speed sensor or fluid temperature sensor circuit after cruise test? — Yes → Check damaged circuit. — Refer to "Self-diagnosis".

No ↓

2 Check throttle sensor. — Refer to section EF & EC. — N.G. → Repair or replace throttle sensor.

O.K. ↓

3 1. Remove oil pan.
2. Check A/T fluid condition.

N.G. →
1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
   - Shift valve B
   - Overrun clutch control valve
   - Shift solenoid B
   - Pilot valve
   - Pilot filter


O.K. ↓ (O.K. ←)


3. Disassemble A/T.
4. Check the following items.
   - Servo piston assembly
   - Brake band
   - Torque converter
   - Oil pump assembly


4 Check again. — N.G. → 1. Perform A/T control unit input/output signal inspection. 2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

INSPECTION END

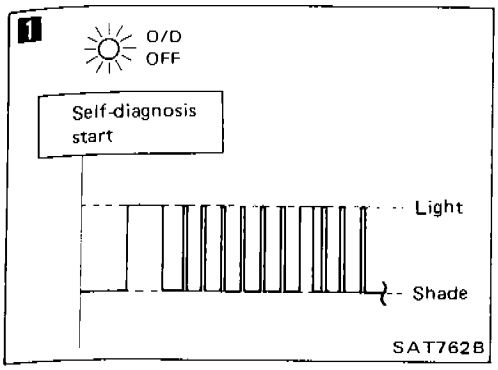

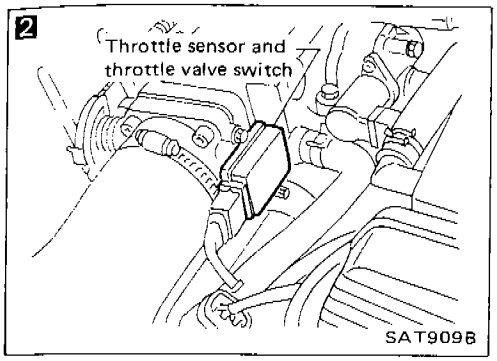

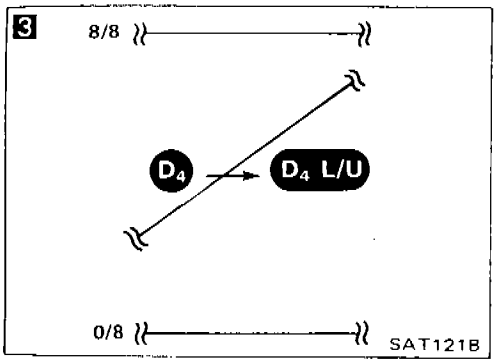

Diagnostic Procedure 12

SYMPTOM: A/T does not perform lock-up at the specified speed.

1

Does self-diagnosis show damage to lock-up solenoid circuit after cruise test?

Yes → Check lock-up solenoid circuit. — Refer to "Self-diagnosis".

No ↓

2

Check throttle sensor. — Refer to section EF & EC.

N.G. → Repair or replace throttle sensor.

O.K. ↓

1. Remove control valve. — Refer to "ON-VEHICLE SERVICE".
2. Check following items.
   - Lock-up control valve
   - Shuttle shift valve D
   - Torque converter relief valve
   - Lock-up solenoid
   - Pilot valve
   - Pilot filter

N.G. → Repair or replace damaged parts.

O.K. ↓


3


Check again.

N.G. →
1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

INSPECTION END

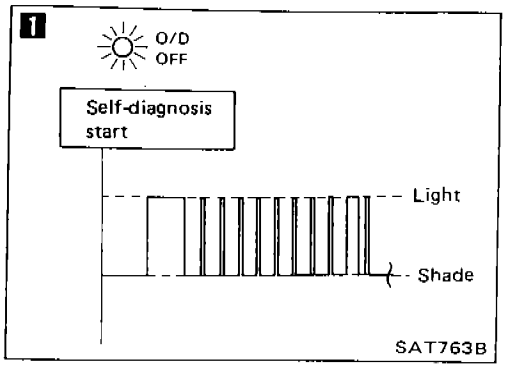

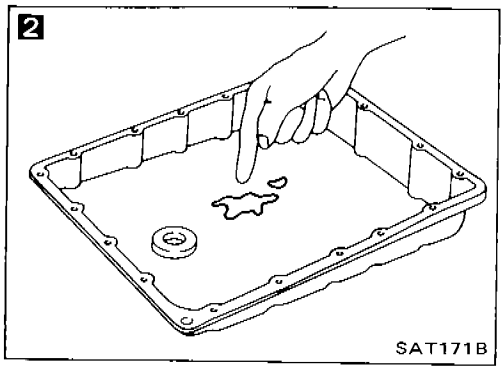

Diagnostic Procedure 13


SYMPTOM: A/T does not hold lock-up condition for more than 30 seconds.


1 Does self-diagnosis show damage to engine revolution signal circuit after cruise test?
- Yes → Check engine revolution signal circuit. — Refer to "Self- diagnosis".
- No ↓

2
1. Remove oil pan.
2. Check A/T fluid condition.
- N.G. → 1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE". 2. Check the following items.
  - Lock-up control valve
  - Pilot valve
  - Pilot filter
  3. Disassemble A/T.
  4. Check torque converter and oil pump assembly.
- O.K. ↓

Check again.
- N.G. → 1. Perform A/T control unit input/output signal inspection. 2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.
- O.K. ↓

INSPECTION END

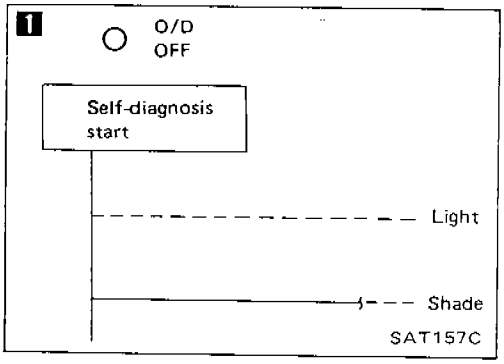

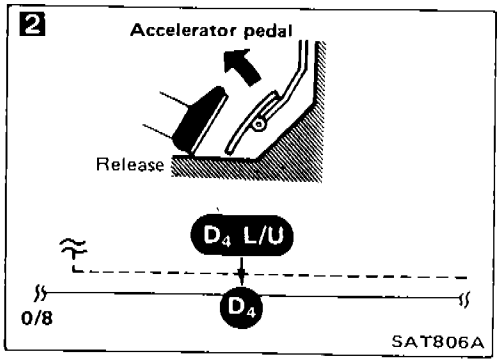

Diagnostic Procedure 14

SYMPTOM: Lock-up is not released when accelerator pedal is released.


1 Does self-diagnosis show damage to idle switch circuit after cruise test?
- Yes → Check idle switch circuit. — Refer to "Self-diagnosis".
- No ↓


2 Check again.
- N.G. → 1. Perform A/T control unit input/output signal inspection. 2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.
- O.K. ↓


INSPECTION END


Diagnostic Procedure 15

SYMPTOM: Engine speed does not return to idle smoothly when A/T is shifted from D_4 to D_3 with accelerator pedal released.
Vehicle does not decelerate by engine brake when changing overdrive switch to "OFF" position with accelerator pedal released.
Vehicle does not decelerate by engine brake when changing selector lever from "D" to "2" range with accelerator pedal released.

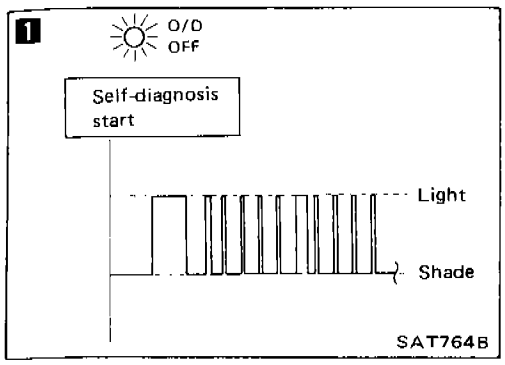

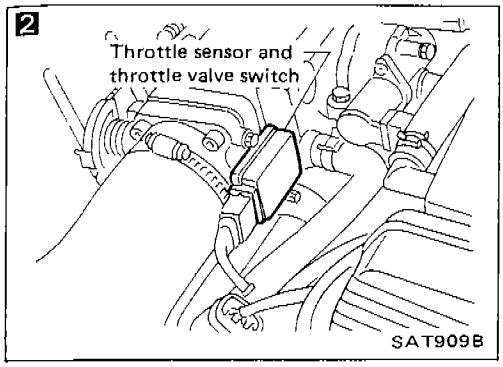

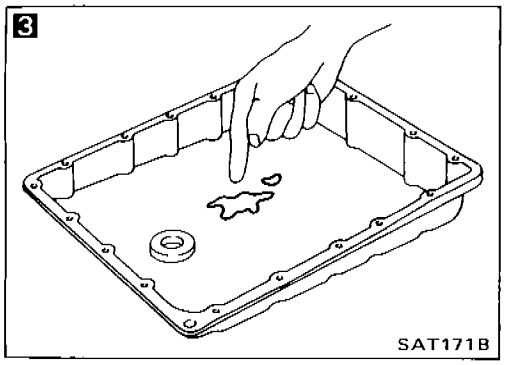

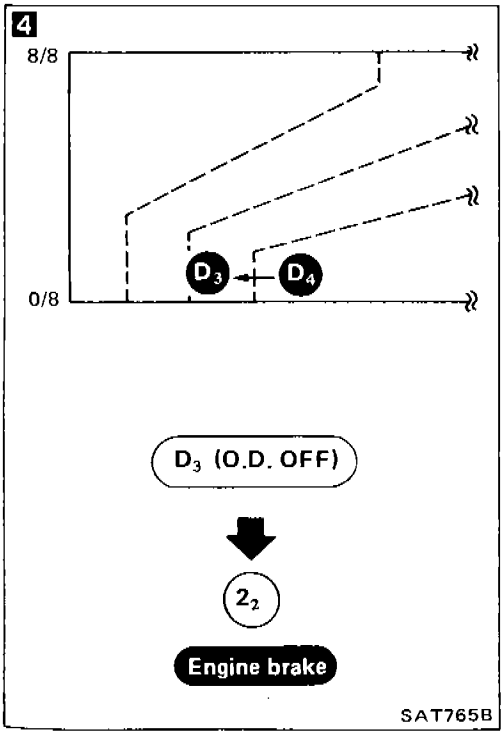

1 Does self-diagnosis show damage to overrun clutch solenoid circuit after cruise test?
- Yes → Check overrun clutch solenoid circuit. – Refer to "Self-diagnosis".
- No →

2 Check throttle sensor. – Refer to section EF & EC.
- N.G. → Repair or replace throttle sensor.
- O.K. →

3
1. Remove oil pan.
2. Check A/T fluid condition.


- N.G. →
  1. Remove control valve assembly. – Refer to "ON-VEHICLE SERVICE".
  2. Check the following items.
     - Overrun clutch control valve
     - Overrun clutch reducing valve
     - Overrun clutch solenoid
- O.K. ↓

O.K. ↓

3. Disassemble A/T.
4. Check the following items.
   - Overrun clutch assembly
   - Oil pump assembly

4 Check again.
- N.G. →
  1. Perform A/T control unit input/output signal inspection.
  2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.
- O.K. ↓

INSPECTION END

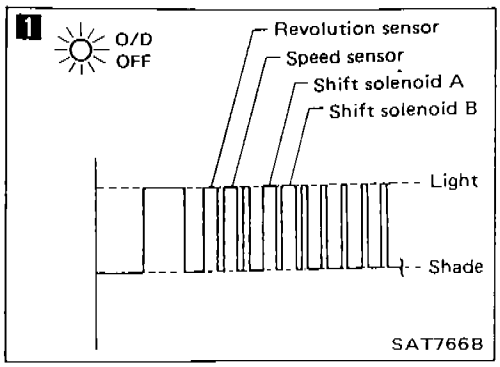

Diagnostic Procedure 16

SYMPTOM: Vehicle does not start from D_1 on Cruise test — Part 2.

1

Does self-diagnosis show damage to revolution sensor, speed sensor, shift solenoid A or B after cruise test?

Yes → Check damaged circuit. — Refer to "Self-diagnosis".


No ↓

Check again.

N.G. → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

Go to Diagnostic Procedure 8.

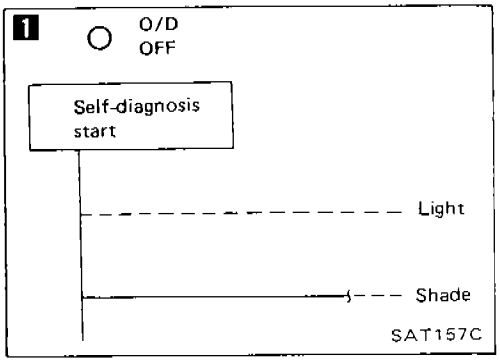

Diagnostic Procedure 17

SYMPTOM: A/T does not shift from D_4 to D_3 when changing overdrive switch to "OFF" position.


1

Does self-diagnosis show damage to overdrive switch circuit after cruise test?

Yes → Check overdrive switch circuit. — Refer to "Self-diagnosis".

No ↓

Go to Diagnostic Procedure 10.

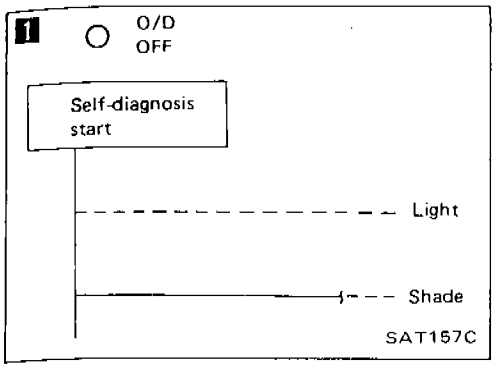

Diagnostic Procedure 18

SYMPTOM: A/T does not shift from D_3 to 2_2 when changing selector lever from "D" to "2" range.


1


Does self-diagnosis show damage to inhibitor switch circuit after cruise test?

Yes → Check inhibitor switch circuit. – Refer to "Self-diagnosis".

No ↓

Go to Diagnostic Procedure 9.

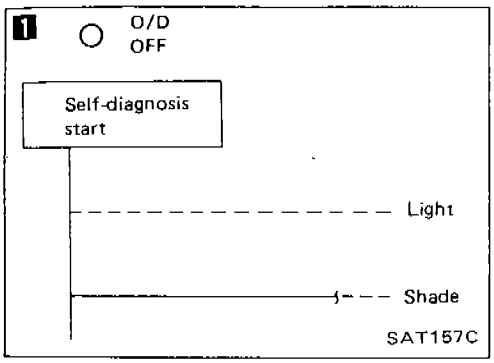

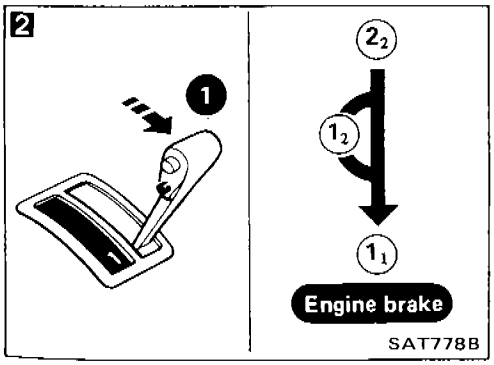

Diagnostic Procedure 19

SYMPTOM: A/T does not shift from 2_2 to 1_1 when changing selector lever from "2" to "1" range.

1

Does self-diagnosis show damage to inhibitor switch after cruise test?

Yes → Check inhibitor switch circuit. – Refer to "Self-diagnosis".

No ↓

2

Check again.

N.G. → 1. Perform A/T control unit input/output signal inspection. 2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

INSPECTION END

Diagnostic Procedure 20


SYMPTOM: Vehicle does not decelerate by engine brake when shifting from 2_2 (1_2) to 1_1.

Is diagnostic procedure 6 O.K.?

No → Go to Diagnostic Procedure 6.

Yes ↓


Go to Diagnostic Procedure 15.

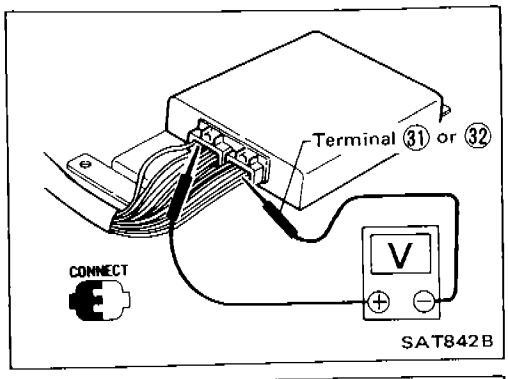

Electrical Components Inspection

INSPECTION OF A/T CONTROL UNIT

- Measure voltage between each terminal and terminal ㉛ or ㉜ by following "A/T CONTROL UNIT INSPECTION TABLE".

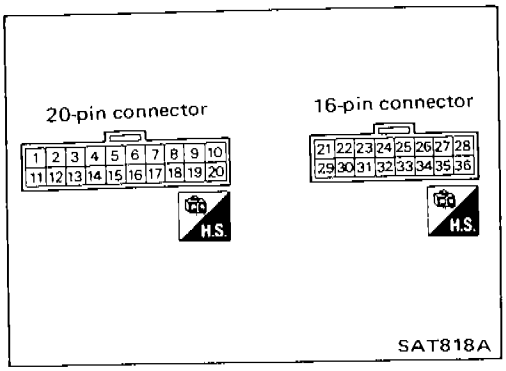


- Pin connector terminal layout.

A/T CONTROL UNIT INSPECTION TABLE




(Data are reference values.)

Terminal No.	Item	Condition		Judgement standard
1	Inhibitor "2" range switch		When setting selector lever to "D" range.	Battery voltage
			When setting selector lever to other ranges.	1V or less
2	Inhibitor "1" range switch		When setting selector lever to "1" range.	Battery voltage
			When setting selector lever to other ranges.	1V or less
3	—		—	—
4	Idle switch (in throttle valve switch)		When releasing accelerator pedal after warming up engine.	8 - 15V
			When depressing accelerator pedal after warming up engine.	1V or less
5	—		—	—
6	—	—	—	—


Electrical Components Inspection (Cont'd)


Terminal No.	Item	Condition		Judgement standard
7	Kickdown switch		When releasing accelerator pedal after warming up engine.	3 - 8V
			When depressing accelerator pedal fully after warming up engine.	1V or less
8	–	–	–	–
9	Overdrive switch		When setting overdrive switch in "ON" position.	Battery voltage
			When setting overdrive switch in "OFF" position.	1V or less
10	Throttle sensor (Power source)		–	4.5 - 5.5V
11	Throttle sensor		When depressing accelerator pedal slowly after warming up engine. Voltage rises gradually in response to throttle opening angle.	Fully-closed throttle: 0.2 - 0.6V Fully-open throttle: 2.9 - 3.9V
12	Fluid temperature sensor		When A.T.F. temperature is 20°C (68°F).	1.56V
			When A.T.F. temperature is 80°C (176°F).	0.45V
13	–		–	–
14	–		–	–
15	Throttle sensor (Ground)		–	–
16	Revolution sensor (Measure in AC range)		When vehicle cruises at 30 km/h (19 MPH).	1V or more Voltage rises gradually in response to vehicle speed.
			When vehicle parks.	0V

Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition		Judgement standard
17	Full throttle switch		When depressing accelerator pedal more than half-way after warming up engine.	8 - 15V
			When releasing accelerator pedal after warming up engine.	1V or less
18	–		–	–
19	Inhibitor "N" and "P" range switch		When setting selector lever to "N" or "P" range.	Battery voltage
			When setting selector lever to other ranges.	1V or less
20	Inhibitor "D" range switch		When setting selector lever to "2" range.	Battery voltage
			When setting selector lever to other ranges.	1V or less
21	Overrun clutch solenoid		When overrun clutch solenoid operates.	Battery voltage
			When overrun clutch solenoid does not operate.	1V or less
22	Lock-up solenoid		When A/T performs lock-up.	8 - 15V
			When A/T does not perform lock-up.	1V or less
23	O.D. OFF indicator lamp		When setting overdrive switch to "ON" position.	Battery voltage
			When setting overdrive switch to "OFF" position.	1V or less
24	Speed sensor		When moving vehicle at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.	Vary from 0 to 5V
25	Engine revolution signal		When engine runs at idle speed.	9.5 - 12V
			When engine runs at 2,500 rpm.	Approximately 10V
26	Inhibitor "R" range switch		When setting selector lever to "R" range.	Battery voltage
			When setting selector lever to other ranges.	1V or less
27	–		–	–

Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition		Judgement standard
28	Power source (Back-up)		When turning ignition switch to "OFF".	Battery voltage
			When turning ignition switch to "ON".	Battery voltage
29 30	Power source		When turning ignition switch to "ON".	Battery voltage
			When turning ignition switch to "OFF".	1V or less
31 32	Ground		—	—
33	Line pressure solenoid (with dropping resistor)		When releasing accelerator pedal after warming up engine.	5 - 14V
			When depressing accelerator pedal fully after warming up engine.	0.5V or less
34	Line pressure solenoid		When releasing accelerator pedal after warming up engine.	1.5 - 2.5V
			When depressing accelerator pedal fully after warming up engine.	0.5V or less
35	Shift solenoid A		When shift solenoid A operates. (When driving in "D_1" or "D_4".)	Battery voltage
			When shift solenoid A does not operate. (When driving in "D_2" or "D_3".)	1V or less
36	Shift solenoid B		When shift solenoid B operates. (When driving in "D_1" or "D_2".)	Battery voltage
			When shift solenoid B does not operate. (When driving in "D_3" or "D_4".)	1V or less

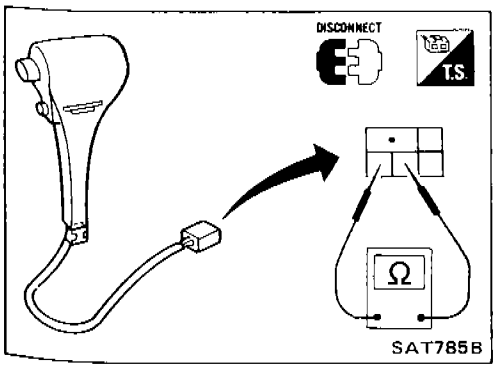


OVERDRIVE SWITCH

- Check continuity between two terminals.

O.D. switch position	Continuity
ON	No
OFF	Yes


Electrical Components Inspection (Cont'd)


INHIBITOR SWITCH

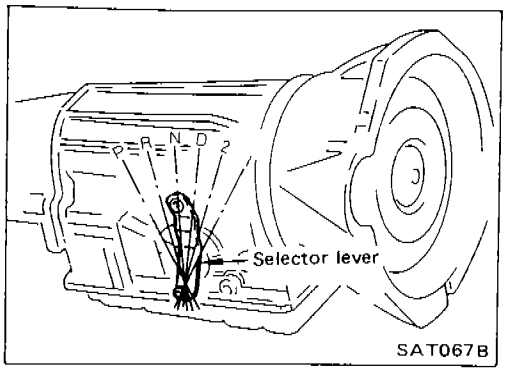


1. Check continuity between terminals ① and ② and between terminals ③ and ④, ⑤, ⑥, ⑦, ⑧, ⑨ while moving selector lever through each range.

Lever position \ Terminal No.	①	②	③	④	⑤	⑥	⑦	⑧	⑨
P	○	○	○	○					
R			○		○				
N	○	○	○			○			
D			○				○		
2			○					○	
1			○						○

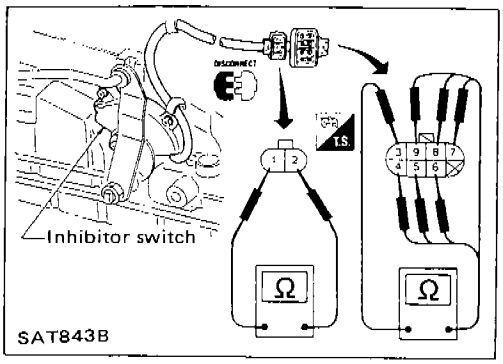


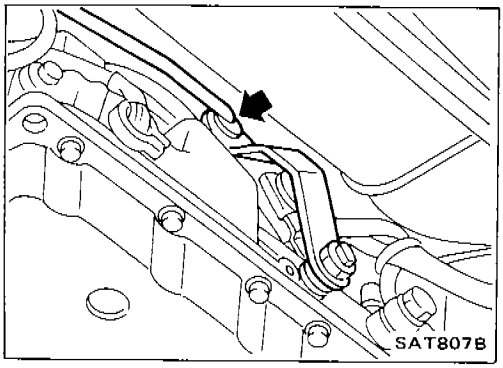

2. If N.G., check again with manual control linkage disconnected from manual shaft of A/T assembly. — Refer to step 1.
3. If O.K. on step 2, adjust manual control linkage. — Refer to "ON-VEHICLE SERVICE".

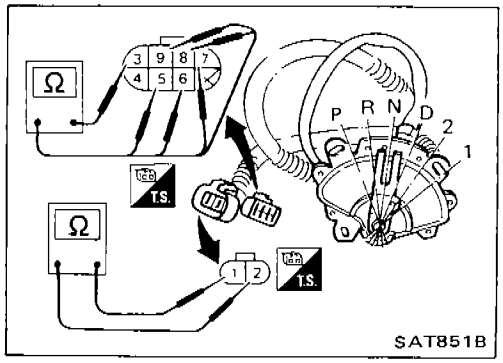

4. If N.G. on step 2, remove inhibitor switch from A/T and check continuity of inhibitor switch terminal. — Refer to step 1.
5. If O.K. on step 4, adjust inhibitor switch. — Refer to "ON-VEHICLE SERVICE".
6. If N.G. on step 4, replace inhibitor switch.

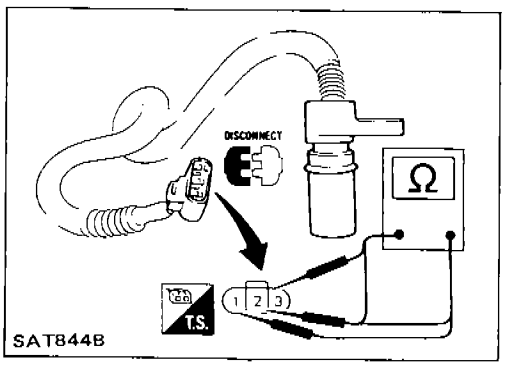


REVOLUTION SENSOR

- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between terminals ①, ② and ③.

Terminal No.		Resistance
①	②	500 - 650Ω
②	③	No continuity
①	③	No continuity

Electrical Components Inspection (Cont'd)


FLUID TEMPERATURE SENSOR

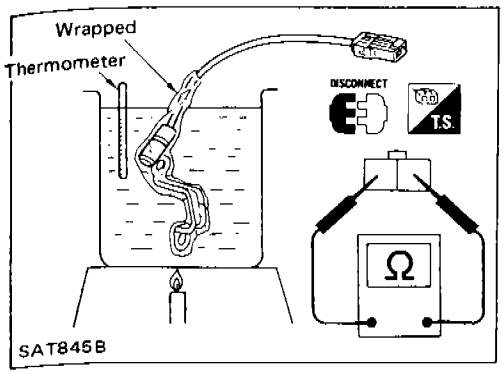

- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between two terminals while changing temperature as shown at left.

Temperature °C (°F)	Resistance
20 (68)	Approximately 2.5 kΩ
80 (176)	Approximately 0.3 kΩ

LOCK-UP SOLENOID AND LINE PRESSURE SOLENOID

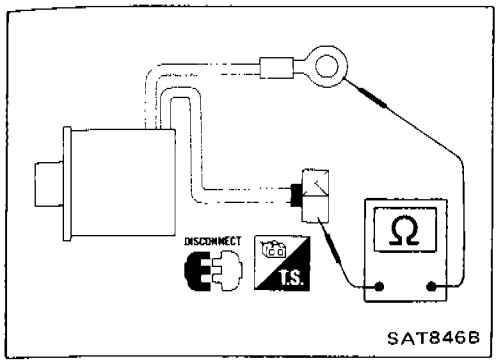


- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between two terminals.

Resistance:

Lock-up solenoid 10 - 16Ω

Line pressure solenoid 2.5 - 5Ω


3-UNIT SOLENOID ASSEMBLY
(Shift solenoid A, B and overrun clutch solenoid)

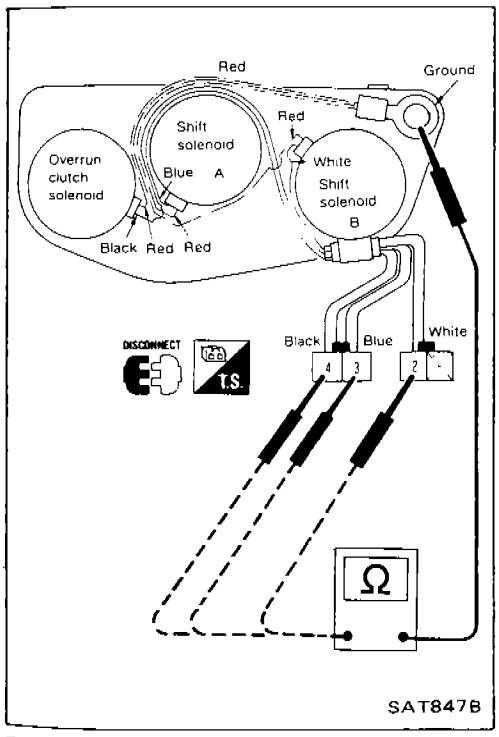

- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between terminals of each solenoid.


Solenoid	Terminal No.		Resistance
Shift solenoid A	③	Ground terminal	20 - 30Ω
Shift solenoid B	②		
Overrun clutch solenoid	④		

DROPPING RESISTOR

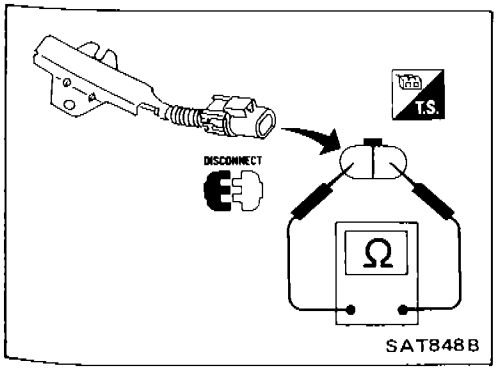

- Check resistance between two terminals.

Resistance: 11.2 - 12.8Ω

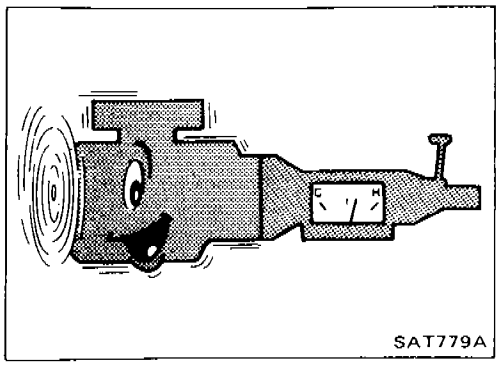
SAT779A


Final Check

STALL TESTING

Stall test procedure


1. Check A/T and engine fluid levels. If necessary, add.
2. Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.

   A.T.F. operating temperature:
   50 - 80°C (122 - 176°F)

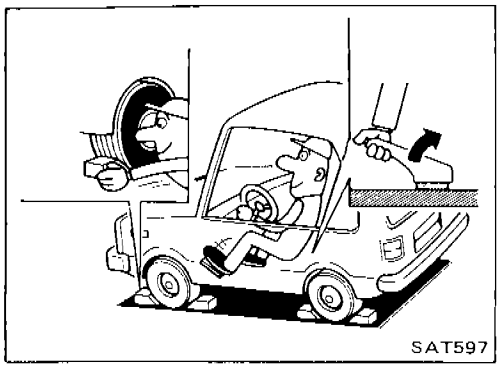
SAT597


3. Set parking brake and block wheels.
4. Install a tachometer where it can be seen by driver during test.

- **It is good practice to put a mark on point of specified engine rpm on indicator.**

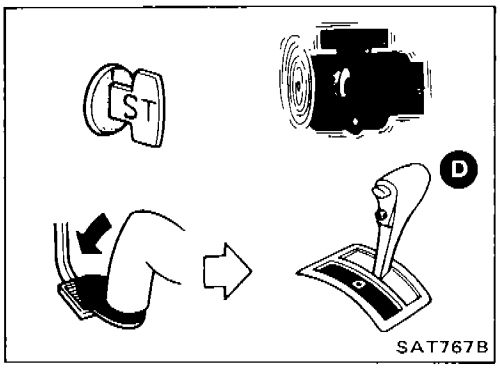

SAT767B

5. Start engine, apply foot brake, and place selector lever in "D" range.

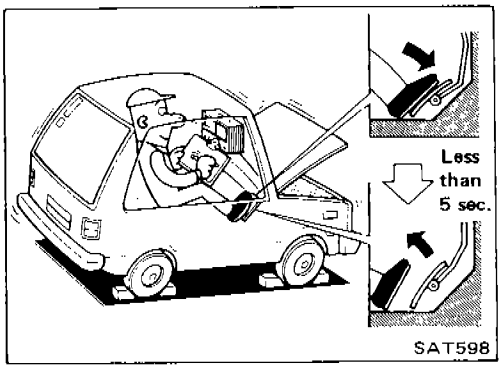


SAT598

6. Accelerate to wide-open throttle gradually while applying foot brake.
7. Quickly note the engine stall revolution and immediately release throttle.

- **During test, never hold throttle wide-open for more than 5 seconds.**

  Stall revolution:
  3,050 - 3,250 rpm

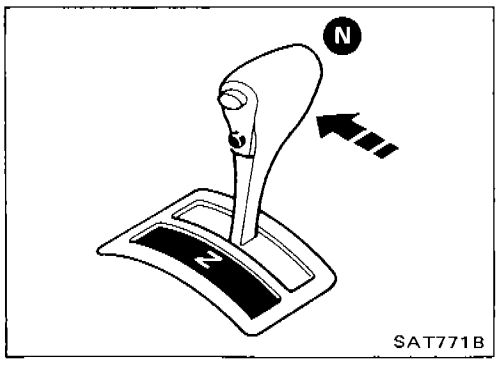

SAT771B

8. Shift selector lever to "N".
9. Cool off A.T.F.

- **Run engine at idle for at least one minute.**

10. Perform stall tests in the same manner as in steps 5 through 9 with selector lever in "2", "1" and "R", respectively.


Final Check (Cont'd)

Judgement of stall test

Selector lever position	Judgement		
D	L	O	H
2	L	O	H
1	L	O	O
R	L	H	H

O : Stall revolution is normal.
H : Stall revolution is higher than specified.
L : Stall revolution is lower than specified.

Damaged components

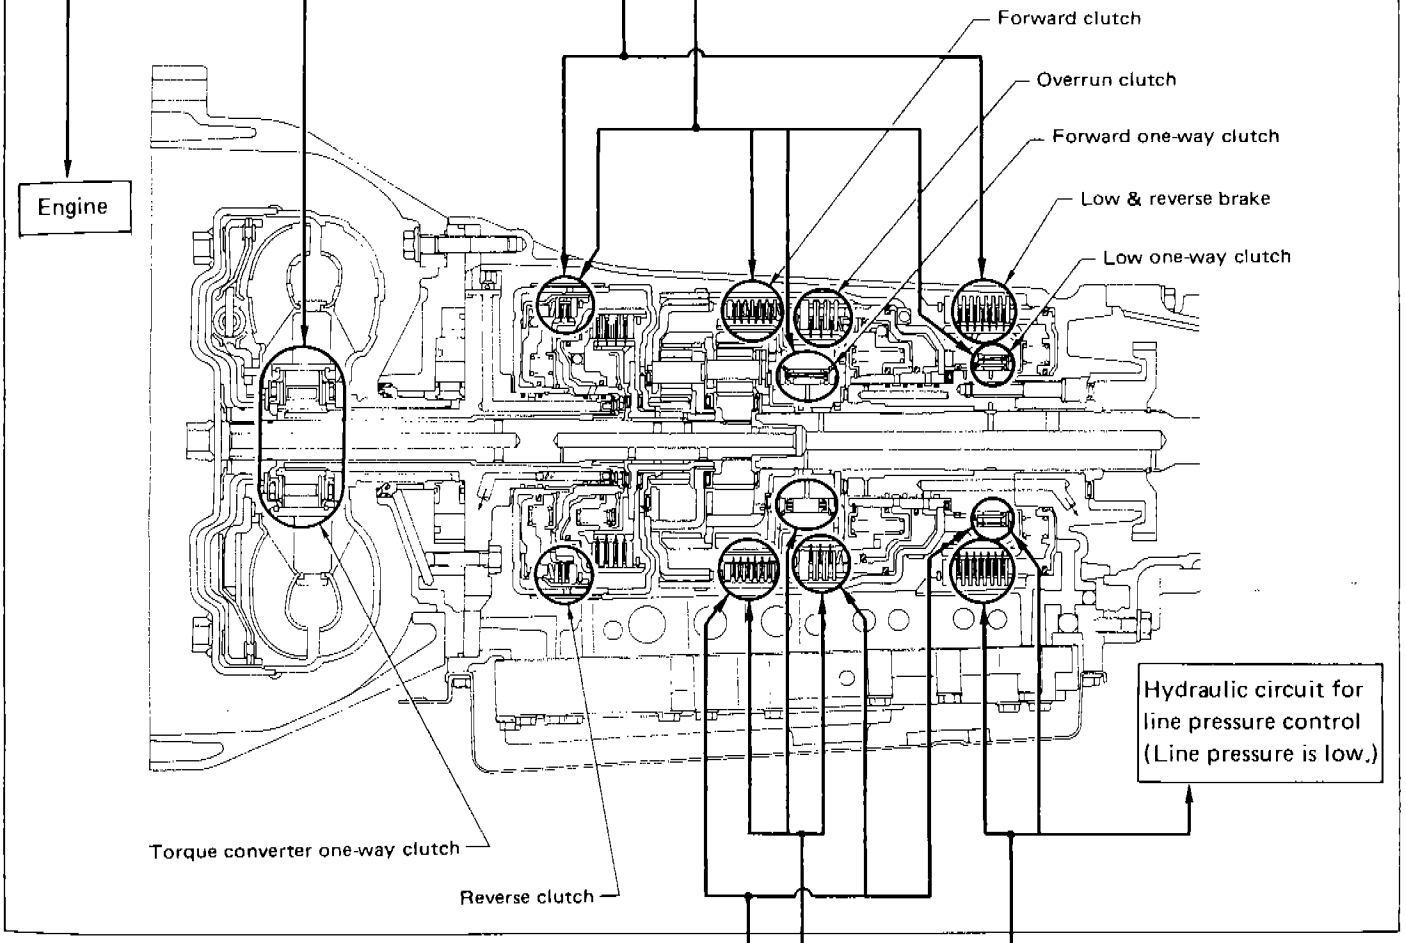

Clutches and brakes except high clutch and brake band are O.K. (Condition of high clutch and brake band cannot be confirmed by stall test.)


Selector lever position	Judgement			
D	H	H	H	O
2	H	H	H	O
1	O	H	H	O
R	O	O	H	O

SAT107B

Final Check (Cont'd)

PRESSURE TESTING


- Location of line pressure test port
- **Line pressure plugs are hexagon headed bolts.**
- **Always replace line pressure plugs as they are self-sealing bolts.**

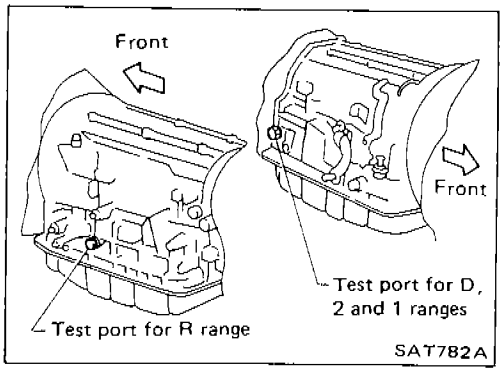

Line pressure test procedure


1. Check A/T and engine fluid levels. If necessary, add.
2. Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.

   A.T.F. operating temperature:
   50 - 80°C (122 - 176°F)

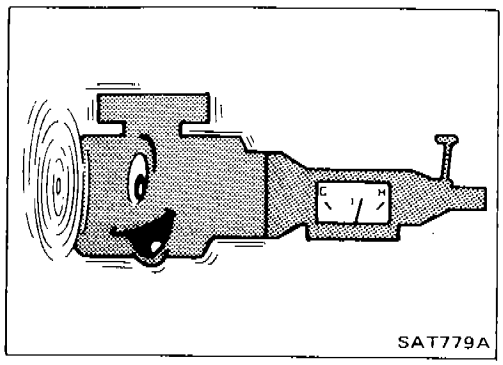


3. Install pressure gauge to line pressure port.


— **D, 2 and 1 ranges** —

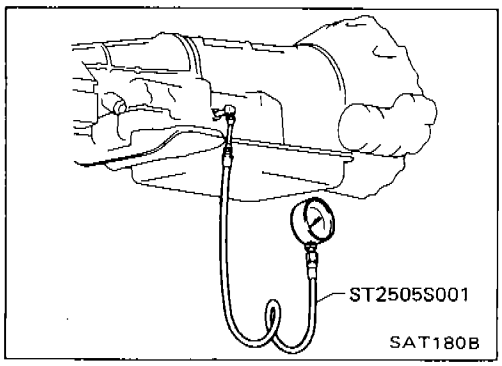


— **R range** —

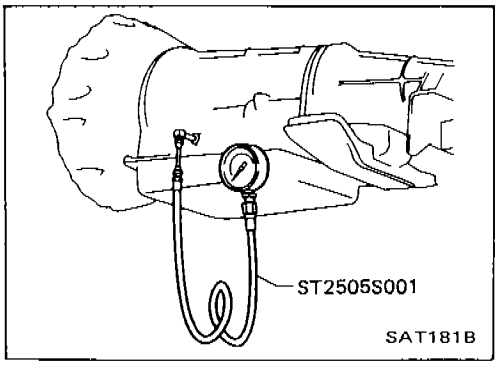

4. Set parking brake and block wheels.
- **Continue to depress brake pedal fully while line pressure test at stall speed is performed.**

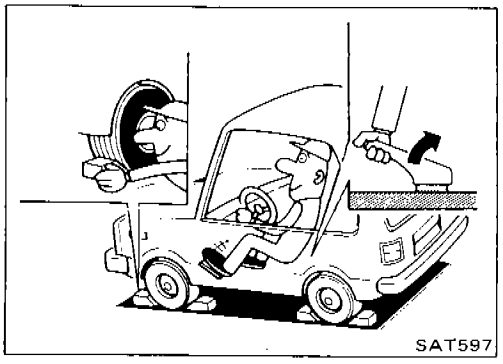

Final Check (Cont'd)

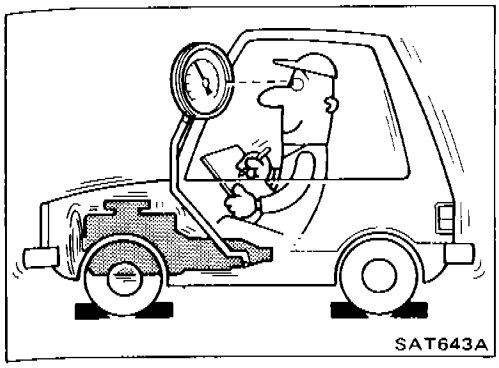

5. Start engine and measure line pressure at idle and stall speed.

- **When measuring line pressure at stall speed, follow the stall test procedure.**

Line pressure:

Engine speed rpm	Line pressure kPa (bar, kg/cm², psi)	
	D, 2 and 1 ranges	R range
Idle	471 - 510 (4.71 - 5.10, 4.8 - 5.2, 68 - 74)	657 - 696 (6.57 - 6.96, 6.7 - 7.1, 95 - 101)
Stall	1,020 - 1,098 (10.20 - 10.98, 10.4 - 11.2, 148 - 159)	1,422 - 1,500 (14.22 - 15.00, 14.5 - 15.3, 206 - 218)

JUDGEMENT OF LINE PRESSURE TEST

	Judgement	Suspected parts
At idle	Line pressure is low in all ranges.	• Oil pump wear • Control piston damage • Pressure regulator valve or plug sticking • Spring for pressure regulator valve damaged • Fluid pressure leakage between oil strainer and pressure regulator valve
	Line pressure is low in particular range.	• Fluid pressure leakage between manual valve and particular clutch. • For example; If line pressure is low in "R" and "1" ranges but is normal in "D" and "2" range, fluid leakage exists at or around low & reverse brake circuit.
	Line pressure is high.	• Mal-adjustment of throttle sensor • Fluid temperature sensor damaged • Line pressure solenoid sticking • Short circuit of line pressure solenoid circuit • Pressure modifier valve sticking • Pressure regulator valve or plug sticking
At stall speed	Line pressure is low.	• Mal-adjustment of throttle sensor • Control piston damaged • Line pressure solenoid sticking • Short circuit of line pressure solenoid circuit • Pressure regulator valve or plug sticking • Pressure modifier valve sticking • Pilot valve sticking

Symptom Chart


Reference page (AT-)		ON vehicle									OFF vehicle					
		9, 14	66	66	70	67, 96	67	67	7, 67	7	7	80, 91	110, 114	116, 127	116, 124	120	134
Reference page (AT-)	Numbers are arranged in order of probability. Perform inspections starting with number one and working up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level Control linkage	Inhibitor switch Throttle sensor (Adjustment)	Revolution sensor and speed sensor Engine revolution signal	Engine idling rpm Line pressure	Control valve assembly Shift solenoid A	Shift solenoid B Line pressure solenoid	Lock-up solenoid Overrun clutch solenoid	Fluid temperature sensor Accumulator N-D	Accumulator 1-2 Accumulator 2-3	Accumulator 3-4 (N-R) Ignition switch and starter	Torque converter Oil pump	Reverse clutch High clutch	Forward clutch Forward one-way clutch	Overrun clutch Low one-way clutch	Low & reverse brake Brake band	Parking components
48	Engine does not start in "N", "P" ranges.	2	3								1						
48	Engine starts in range other than "N" and "P".	1	2														
–	Transmission noise in "P" and "N" ranges.	1	3	4 5	2							(7) (6)					
48	Vehicle moves when changing into "P" range or parking gear does not disengage when shifted out of "P" range.	1															(2)
49	Vehicle runs in "N" range.	1									4		(3)	(2)	(5)		
51	Vehicle will not run in "R" range (but runs in "D", "2" and "1" ranges). Clutch slips. Very poor acceleration.	1			2	4	3						(5) (6)	(7)	(8)	(9)	
–	Vehicle braked when shifting into "R" range.	1 2			3	5	4						(6)	(8)	(9)	(7)	
–	Sharp shock in shifting from "N" to "D" range.		2	5	1 3	7	6		4 8					(9)			
–	Vehicle will not run in "D" and "1" ranges (but runs in "1" and "R" range).	1													(2)		
52	Vehicle will not run in "D", "1", "2" ranges (but runs in "R" range). Clutch slips. Very poor acceleration.	1			2	4	3		5				(6) (7)	(8) (9)	(10)		
–	Clutches or brakes slip somewhat in starting.	1 2	3		4	6	5		7		8	(13) (12)	10	9		(11)	
–	Excessive creep.				1												
51, 52	No creep at all.	1			2	3						(6) (5)		(4)			
–	Failure to change gear from "D_1" to "D_2".	2	1 5			4 3										(6)	
–	Failure to change gear from "D_2" to "D_3".	2	1 5			4	3						(6)			(7)	
–	Failure to change gear from "D_3" to "D_4".	2	1 4			3			5							(6)	
54, 55, 56	Too high a gear change point from "D_1" to "D_2", from "D_2" to "D_3", from "D_3" to "D_4".		1	2		3	4										
–	Gear change directly from "D_1" to "D_3" occurs.	1								2						3	
–	Engine stops when shifting lever into "R", "D", "2" and "1".				1	3		2				4					
–	Too sharp a shock in change from "D_1" to "D_2".		1		2	4			5	3						6	
–	Too sharp a shock in change from "D_2" to "D_3".		1		2	4				3			(5)			6	

Symptom Chart (Cont'd)

Reference page (AT-)		ON vehicle										OFF vehicle					
		9, 14	66	66	70	67, 96	67	67	7, 67	7	7	80, 91	110, 114	116, 127	116, 124	120	134
Reference page (AT-)	Numbers are arranged in order of probability. Perform inspections starting with number one and working up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level Control linkage	Inhibitor switch Throttle sensor (Adjustment)	Revolution sensor and speed sensor Engine revolution signal	Engine idling rpm Line pressure	Control valve assembly Shift solenoid A	Shift solenoid B Line pressure solenoid	Lock-up solenoid Overrun clutch solenoid	Fluid temperature sensor Accumulator N-D	Accumulator 1-2 Accumulator 2-3	Accumulator 3-4 (N-R) Ignition switch and starter	Torque converter Oil pump	Reverse clutch High clutch	Forward clutch Forward one-way clutch	Overrun clutch Low one-way clutch	Low & reverse brake Brake band	Parking components
–	Too sharp a shock in change from "D_3" to "D_4".		1		2	4					3				⑥	⑤	
–	Almost no shock or clutches slipping in change from "D_1" to "D_2".	1	2		3	5				4						⑥	
–	Almost no shock or slipping in change from "D_2" to "D_3".	1	2		3	5				4			⑥			⑦	
–	Almost no shock or slipping in change from "D_3" to "D_4".	1	2		3	5					4		⑥			⑦	
–	Vehicle braked by gear change from "D_1" to "D_2".	1											② ④		⑤	③	
–	Vehicle braked by gear change from "D_2" to "D_3".	1														②	
–	Vehicle braked by gear change from "D_3" to "D_4".	1											④	③	②		
–	Maximum speed not attained. Acceleration poor.	1	2			5 3	4					⑪ ⑩	⑥ ⑦			⑨ ⑧	
–	Failure to change gear from "D_4" to "D_3".	1	2			6 4	5	3							⑧	⑦	
–	Failure to change gear from "D_3" to "D_2" or from "D_4" to "D_2".	1	2			5 3	4						⑥			⑦	
–	Failure to change gear from "D_2" to "D_1" or from "D_3" to "D_1".	1	2			5 3	4						⑦		⑥	⑧	
–	Gear change shock felt during deceleration by releasing accelerator pedal.		1		2	4			3								
–	Too high a change point from "D_4" to "D_3", from "D_3" to "D_2", from "D_2" to "D_1".		1	2													
–	Kickdown does not operate when depressing pedal in "D_4" within kickdown vehicle speed.		1	2		3	4										
–	Kickdown operates or engine overruns when depressing pedal in "D_4" beyond kickdown vehicle speed limit.		2	1		3	4										
–	Races extremely fast or slips in changing from "D_4" to "D_3" when depressing pedal.	1	2		3	5	4						⑥	⑦			
–	Races extremely fast or slips in changing from "D_4" to "D_2" when depressing pedal.	1	2		3	6 5	4							8		⑦	
–	Races extremely fast or slips in changing from "D_3" to "D_2" when depressing pedal.	1	2		3	5	4		8	0			⑨	⑦		⑥	
–	Races extremely fast or slips in changing from "D_4" or "D_3" to "D_1" when depressing pedal.	1	2		3	5	4							⑥ ⑦	⑧		
–	Vehicle will not run in any range.	1 2			3		4					⑨ ⑤	⑥			⑧ ⑦	⑩
–	Transmission noise in "D", "2", "1" and "R" ranges.	1										②					


Symptom Chart (Cont'd)

Reference page (AT-)		ON vehicle									OFF vehicle					
	Reference page (AT-)	9, 14	66	66	70	67, 96	67	67	7, 67	7	7	80, 91	110, 114	116, 127	116, 124	120	134
Reference page (AT-)	Numbers are arranged in order of probability. Perform inspections starting with number one and working up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level Control linkage	Inhibitor switch Throttle sensor (Adjustment)	Revolution sensor and speed sensor Engine revolution signal	Engine idling rpm Line pressure	Control valve assembly Shift solenoid A	Shift solenoid B Line pressure solenoid	Lock-up solenoid Overrun clutch solenoid	Fluid temperature sensor Accumulator N-D	Accumulator 1-2 Accumulator 2-3	Accumulator 3-4 (N-R) Ignition switch and starter	Torque converter Oil pump	Reverse clutch High clutch	Forward clutch Forward one-way clutch	Overrun clutch Low one-way clutch	Low & reverse brake Brake band	Parking components
61	Failure to change from "D_3" to "2_2" when changing lever into "2" range.	7	1 2			6 5	4	3							⑨	⑧	
–	Gear change from "2_2" to "2_3" in "2" range.		1														
61	Engine brake does not operate in "1" range.	2	1 3	4		6 5		7							⑧	⑨	
–	Gear change from "1_1" to "1_2" in "1" range.	2	1														
–	Does not change from "1_2" to "1_1" in "1" range.		1	2		4 3		5							⑥	⑦	
–	Large shock changing from "1_2" to "1_1" in "1" range.					1										②	
–	Transmission overheats.	1	3		2 4	6	5					⑭⑦	⑧⑨	⑪	⑫	⑬⑩	
–	A.T.F. shoots out during operation. White smoke emitted from exhaust pipe during operation.	1											②③	⑤	⑥	⑦④	
–	Offensive smell at fluid charging pipe.	1										②③	④⑤	⑦	⑧	⑨⑥	
–	Torque converter is not locked up.		3 1	2 4	6	8		7	5			⑨					
–	Lock-up piston slip	1	2		3	6	5	4				⑦					
57	Lock-up point is extremely high or low.		1	2		4		3									
–	A/T does not shift to "D_4" when driving with overdrive switch "ON".		2 1	3	8	6 4		5	7						⑩	⑨	
–	Engine is stopped at "R", "D", "2" and "1" ranges.	1				5 4	3	2									

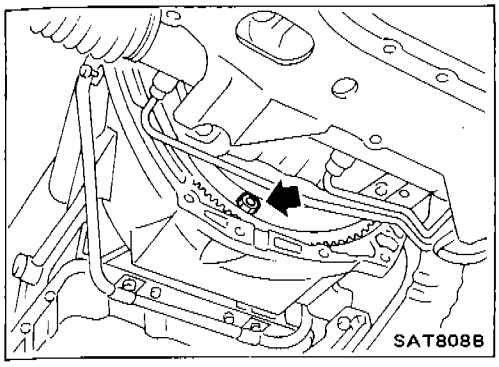
SAT808B


Removal

- Remove fluid charging pipe from A/T assembly.
- Remove bolts securing torque converter to drive plate.
- **Remove those bolts by turning crankshaft.**
- Plug up opening such as oil charging pipe hole, etc.

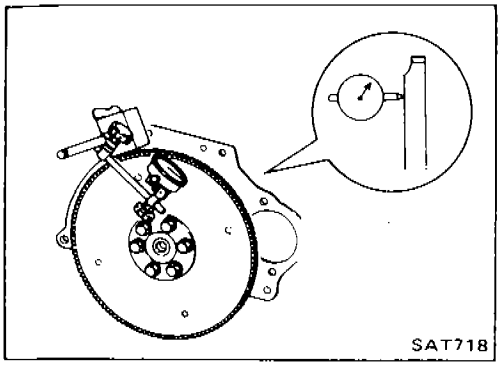
SAT718


Installation

- Drive plate runout
  Maximum allowable runout:
  0.5 mm (0.020 in)
  If this runout is out of allowance, replace drive plate with ring gear.

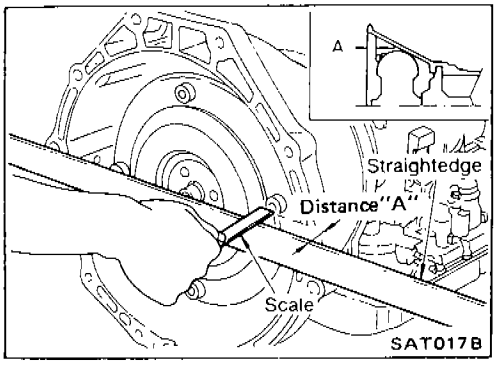

SAT017B

- When connecting torque converter to transmission, measure distance "A" to be certain that they are correctly assembled.
  Distance "A":
  23.5 mm (0.925 in) or more
- Install converter to drive plate.
- Reinstall any part removed.
- **After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.**

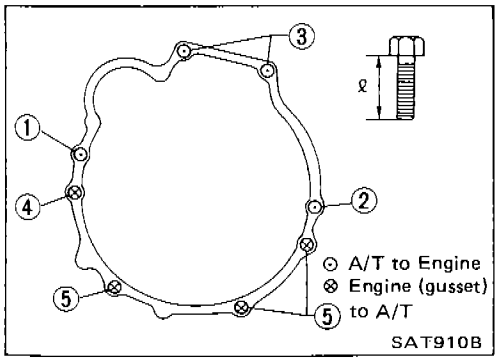

SAT910B


- Tighten bolts securing transmission.

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	Bolt lenght "L" mm (in)
1	39 - 49 (4.0 - 5.0, 29 - 36)	80 (3.15)
2	39 - 49 (4.0 - 5.0, 29 - 36)	75 (2.95)
3	39 - 49 (4.0 - 5.0, 29 - 36)	55 (2.17)
4	29 - 39 (3.0 - 4.0, 22 - 29)	40 (1.57)
5	29 - 39 (3.0 - 4.0, 22 - 29)	25 (0.98)
Gusset to engine	29 - 39 (3.0 - 4.0, 22 - 29)	20 (0.79)


SAT638A


- Reinstall any part removed.
- Check fluid level in transmission.
- Move selector lever through all positions to be sure that transmission operates correctly.
  With parking brake applied, rotate engine at idling. Move selector lever through "N" to "D", to "2", to "1" and to "R". A slight shock should be felt by hand gripping selector each time transmission is shifted.
- Perform road test. — Refer to "ROAD TESTING".

: N·m (kg-m, ft-lb)
: Apply recommended sealant (Nissan genuine part: KP610-00250) or equivalent.
(ATF): Apply A.T.F.
(P): Apply petroleum jelly
★ : Select with proper thickness.
☆ : Adjustment is required.

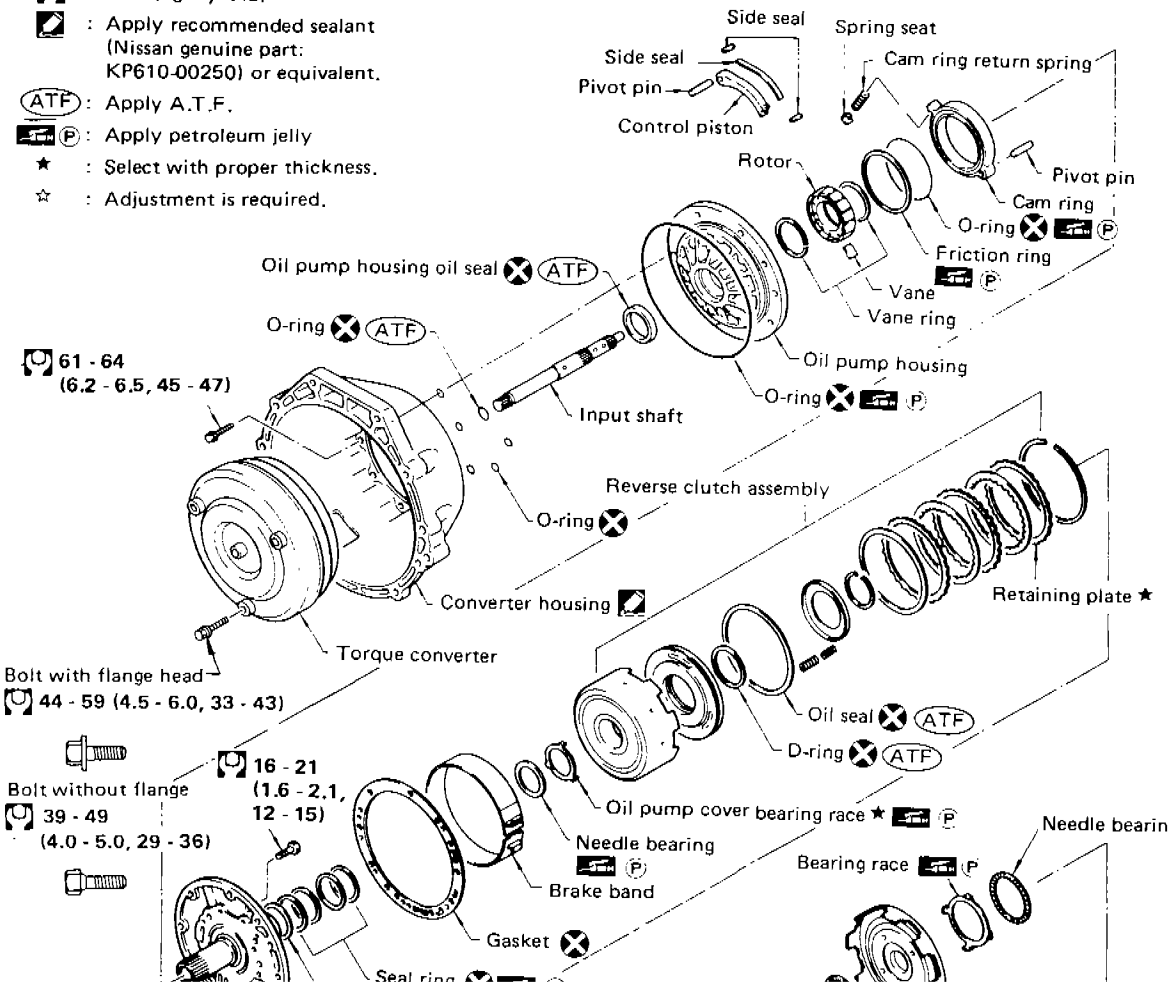


Construction (Cont'd)

M1T71481

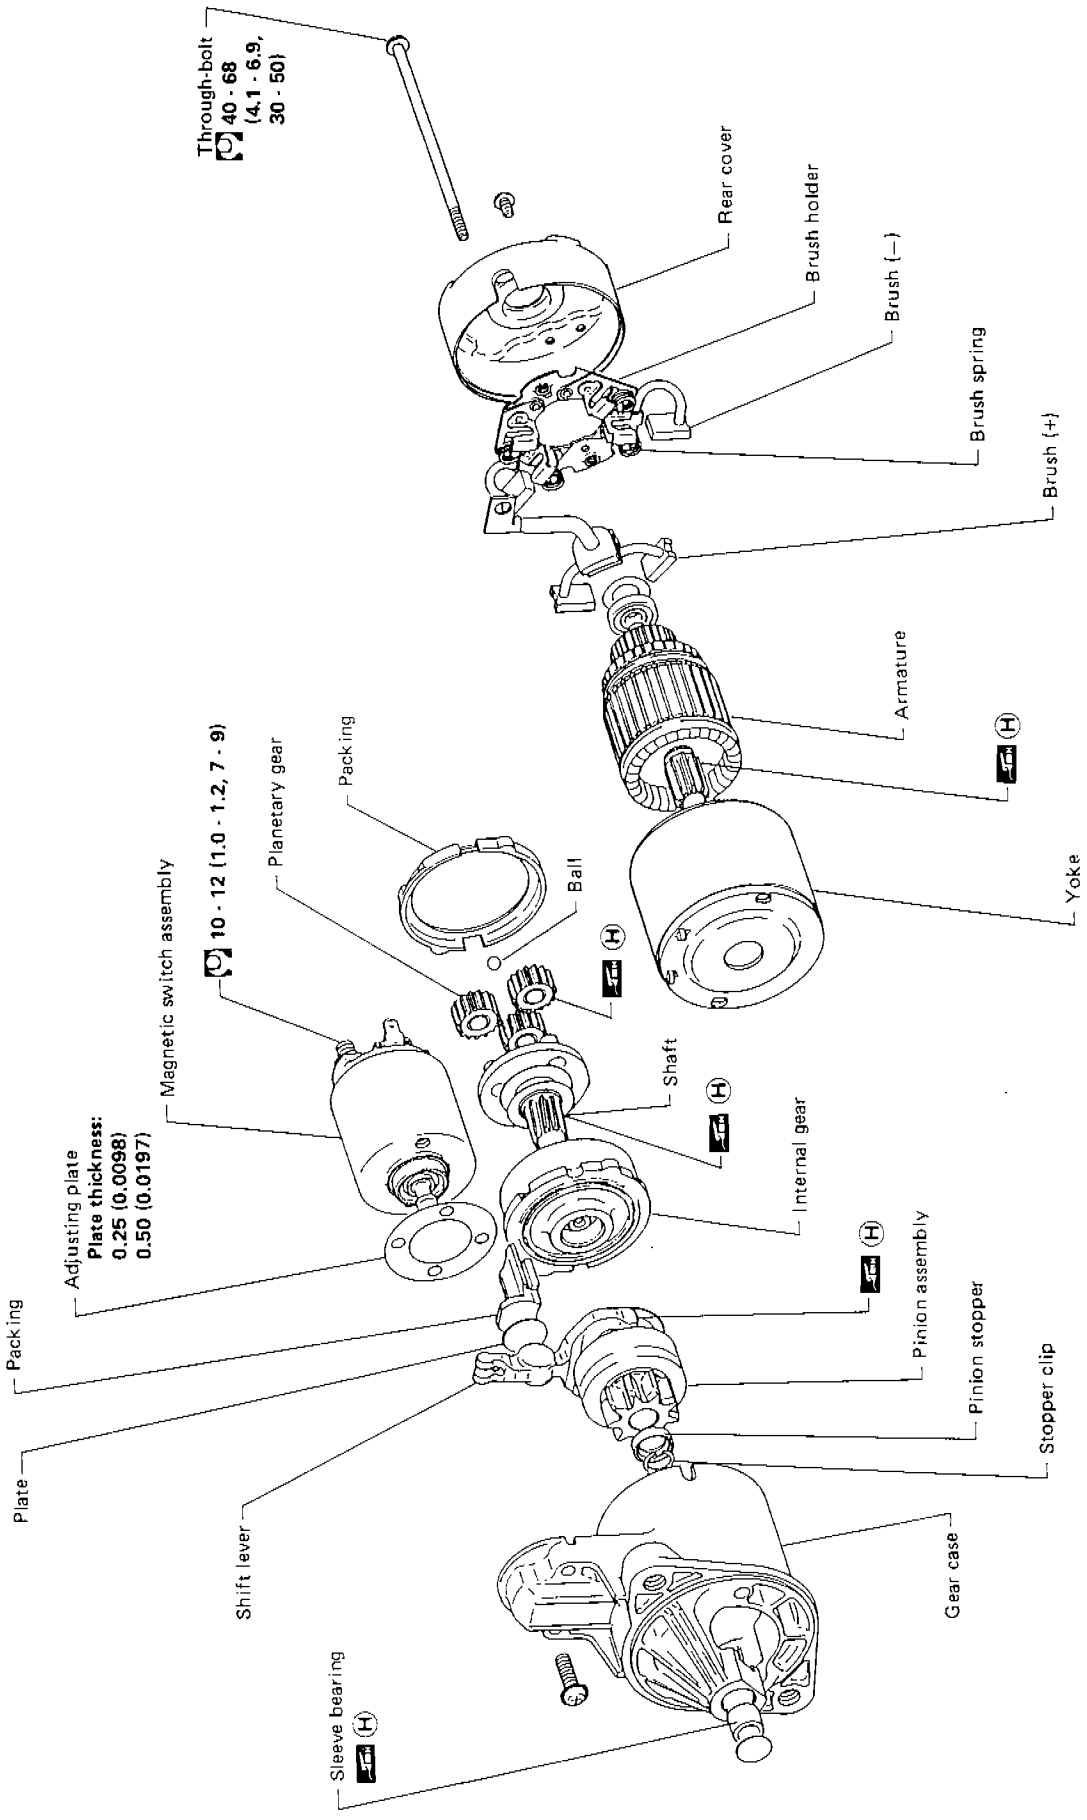


SEL707L

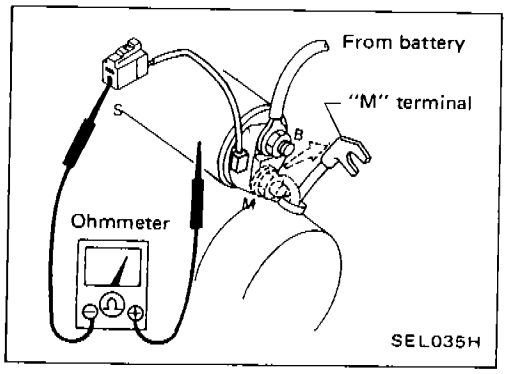


Magnetic Switch Check

- Before starting to check, disconnect battery ground cable.
- Disconnect "M" terminal of starter motor.

1. Continuity test (between "S" terminal and switch body).
- No continuity ... Replace.

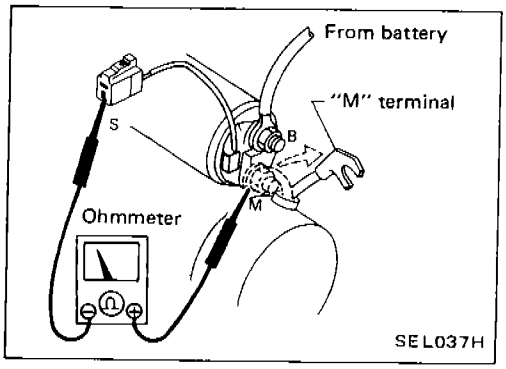


2. Continuity test (between "S" terminal and "M" terminal).
- No continuity ... Replace.

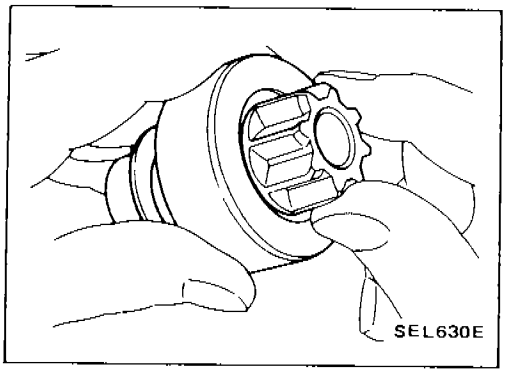

Pinion/Clutch Check

1. Inspect pinion teeth.
- Replace pinion if teeth are worn or damaged. (Also check condition of ring gear teeth.)

2. Check to see if pinion locks in one direction and rotates smoothly in the opposite direction.
- If it does not lock (or locks) in either direction or unusual resistance is evident. ... Replace.

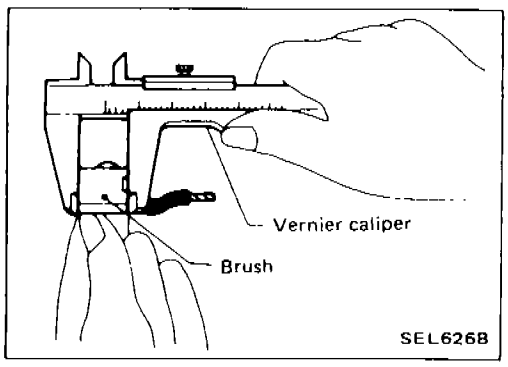

Brush Check

BRUSH


Check wear of brush.

Wear limit length:
Refer to S.D.S.

- Excessive wear ... Replace.


Brush Check (Cont'd)

M1T71481

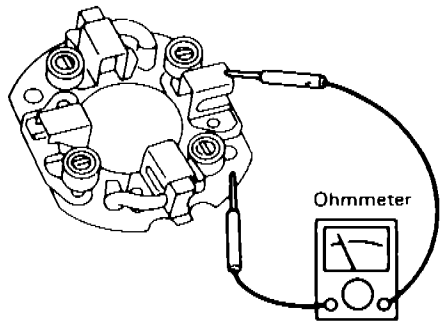

SEL568B


S114-523

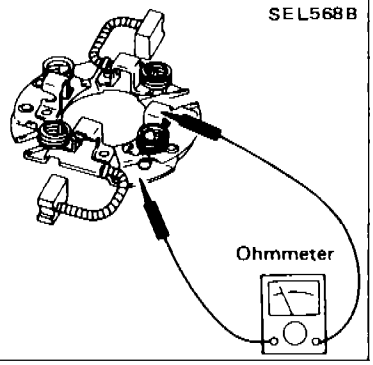

SEL558E

BRUSH HOLDER


1. Perform insulation test between brush holder (positive side) and its base (negative side).
- Continuity exists. ... Replace.
2. Check brush to see if it moves smoothly.
- If brush holder is bent, replace it; if sliding surface is dirty, clean.

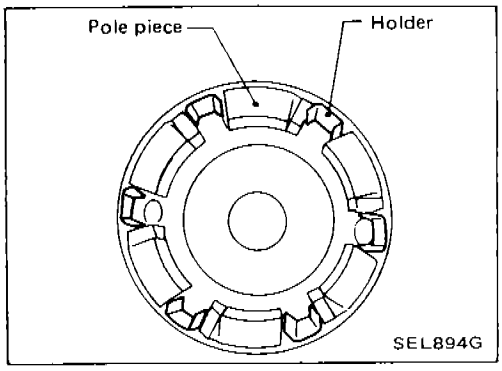

SEL894G

Pole Piece Check


Pole piece is secured to yoke by bonding agent. Check pole piece to see that it is secured to yoke and for any cracks. Replace malfunctioning parts as an assembly.
Holder may move slightly as it is only inserted and not bonded.

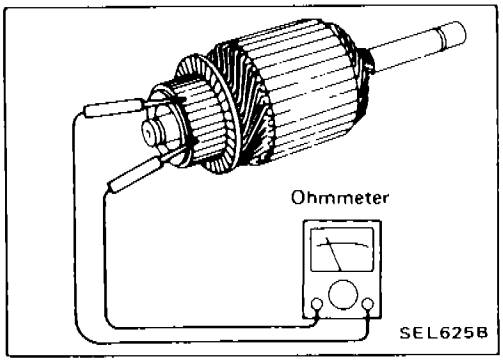

SEL625B

Armature Check


1. Continuity test (between two segments side by side).
- No continuity ... Replace.

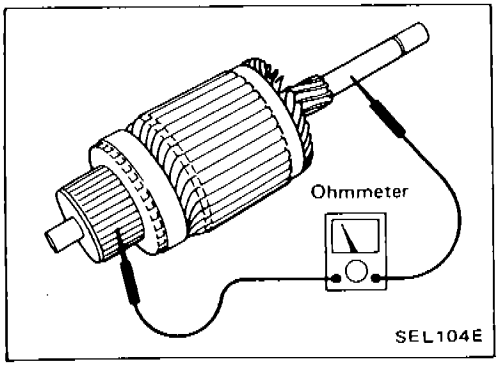


SEL104E

2. Insulation test (between each commutator bar and shaft).
- Continuity exists. ... Replace.


Armature Check (Cont'd)

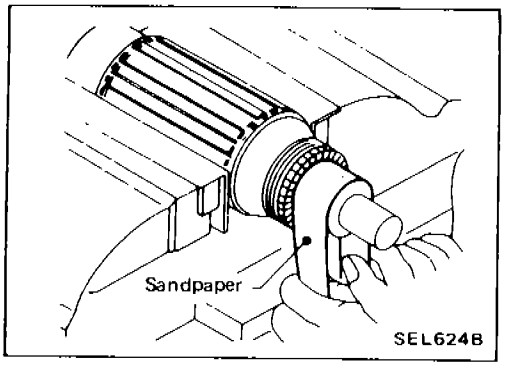

3. Check commutator surface.
- Rough ... Sand lightly with No. 500 to 600 sandpaper.

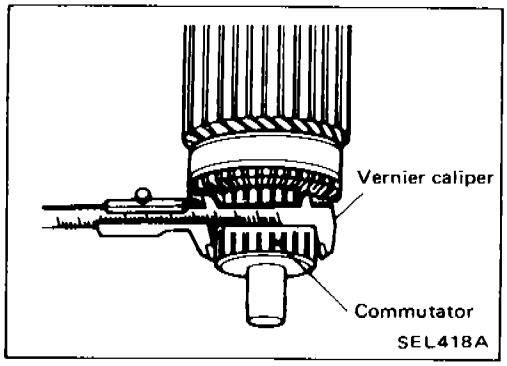


4. Check diameter of commutator.
Commutator minimum diameter:
Refer to S.D.S.
- Less than specified value ... Replace.

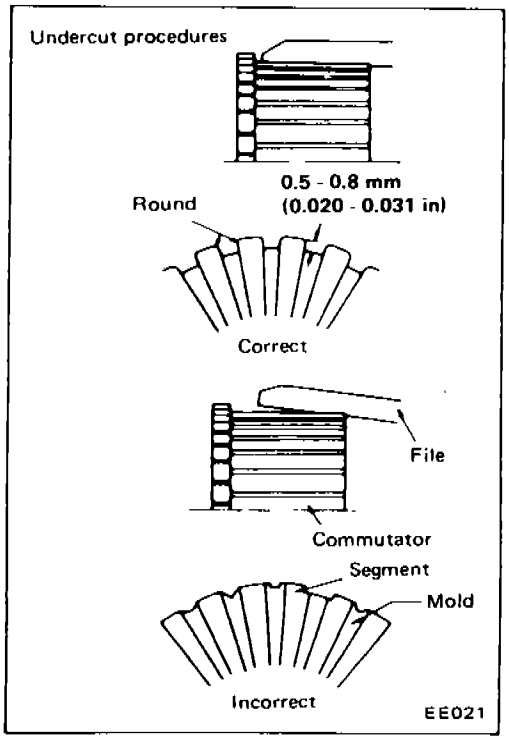


5. Check depth of insulating mold from commutator surface.
- Less than 0.2 mm (0.008 in) ... Undercut to 0.5 to 0.8 mm (0.020 to 0.031 in)

Assembly

Apply high-temperature grease to lubricate the bearing, gears and frictional surface when assembling the starter.
Carefully observe the following instructions.
- Gear case metal
- Moving portion of shift lever
- Plunger of magnetic switch
- Internal gear
- Planetary gear
- Shaft

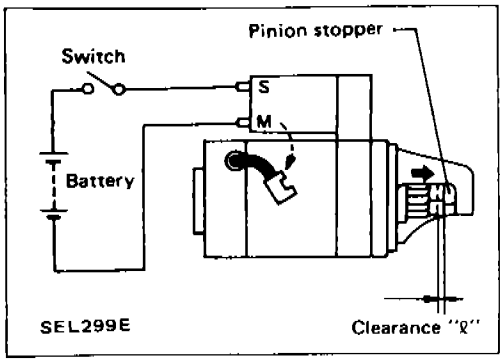

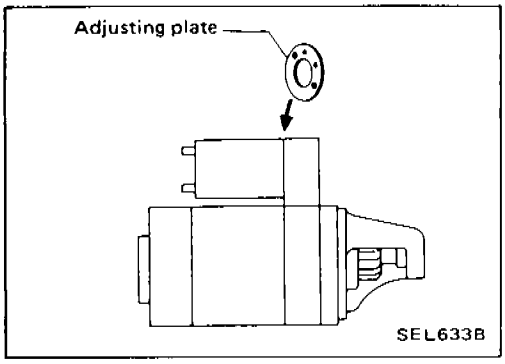

Assembly (Cont'd)

PINION PROTRUSION LENGTH ADJUSTMENT

With pinion driven out by magnetic switch, push pinion back to remove slack and measure clearance "ℓ" between the front edge of the pinion and the pinion stopper.

Clearance "ℓ":
Refer to S.D.S.


- Not in the specified value ... Adjust by adjusting plate.

Service Data and Specifications (S.D.S.)

STARTER

Type		S114-523	M1T71481
		HITACHI make	MITSUBISHI make
		Reduction gear type	
Applied model		All	
System voltage	V	12	
No-load Terminal voltage	V	11.0	
Current	A	Less than 90	50 - 75
Revolution	rpm	More than 2,950	3,000 - 4,000
Minimum diameter of commutator	mm (in)	32.0 (1.260)	28.8 (1.134)
Minimum length of brush	mm (in)	11.0 (0.433)	12.0 (0.472)
Brush spring tension	N (kg, lb)	17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)	13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)
Clearance of bearing metal and armature shaft	mm (in)	0.2 (0.008)	–
Clearance "ℓ" between pinion front edge and pinion stopper	mm (in)	0.3 - 1.5 (0.012 - 0.059)	0.5 - 2.0 (0.020 - 0.079)

Wiring Diagram

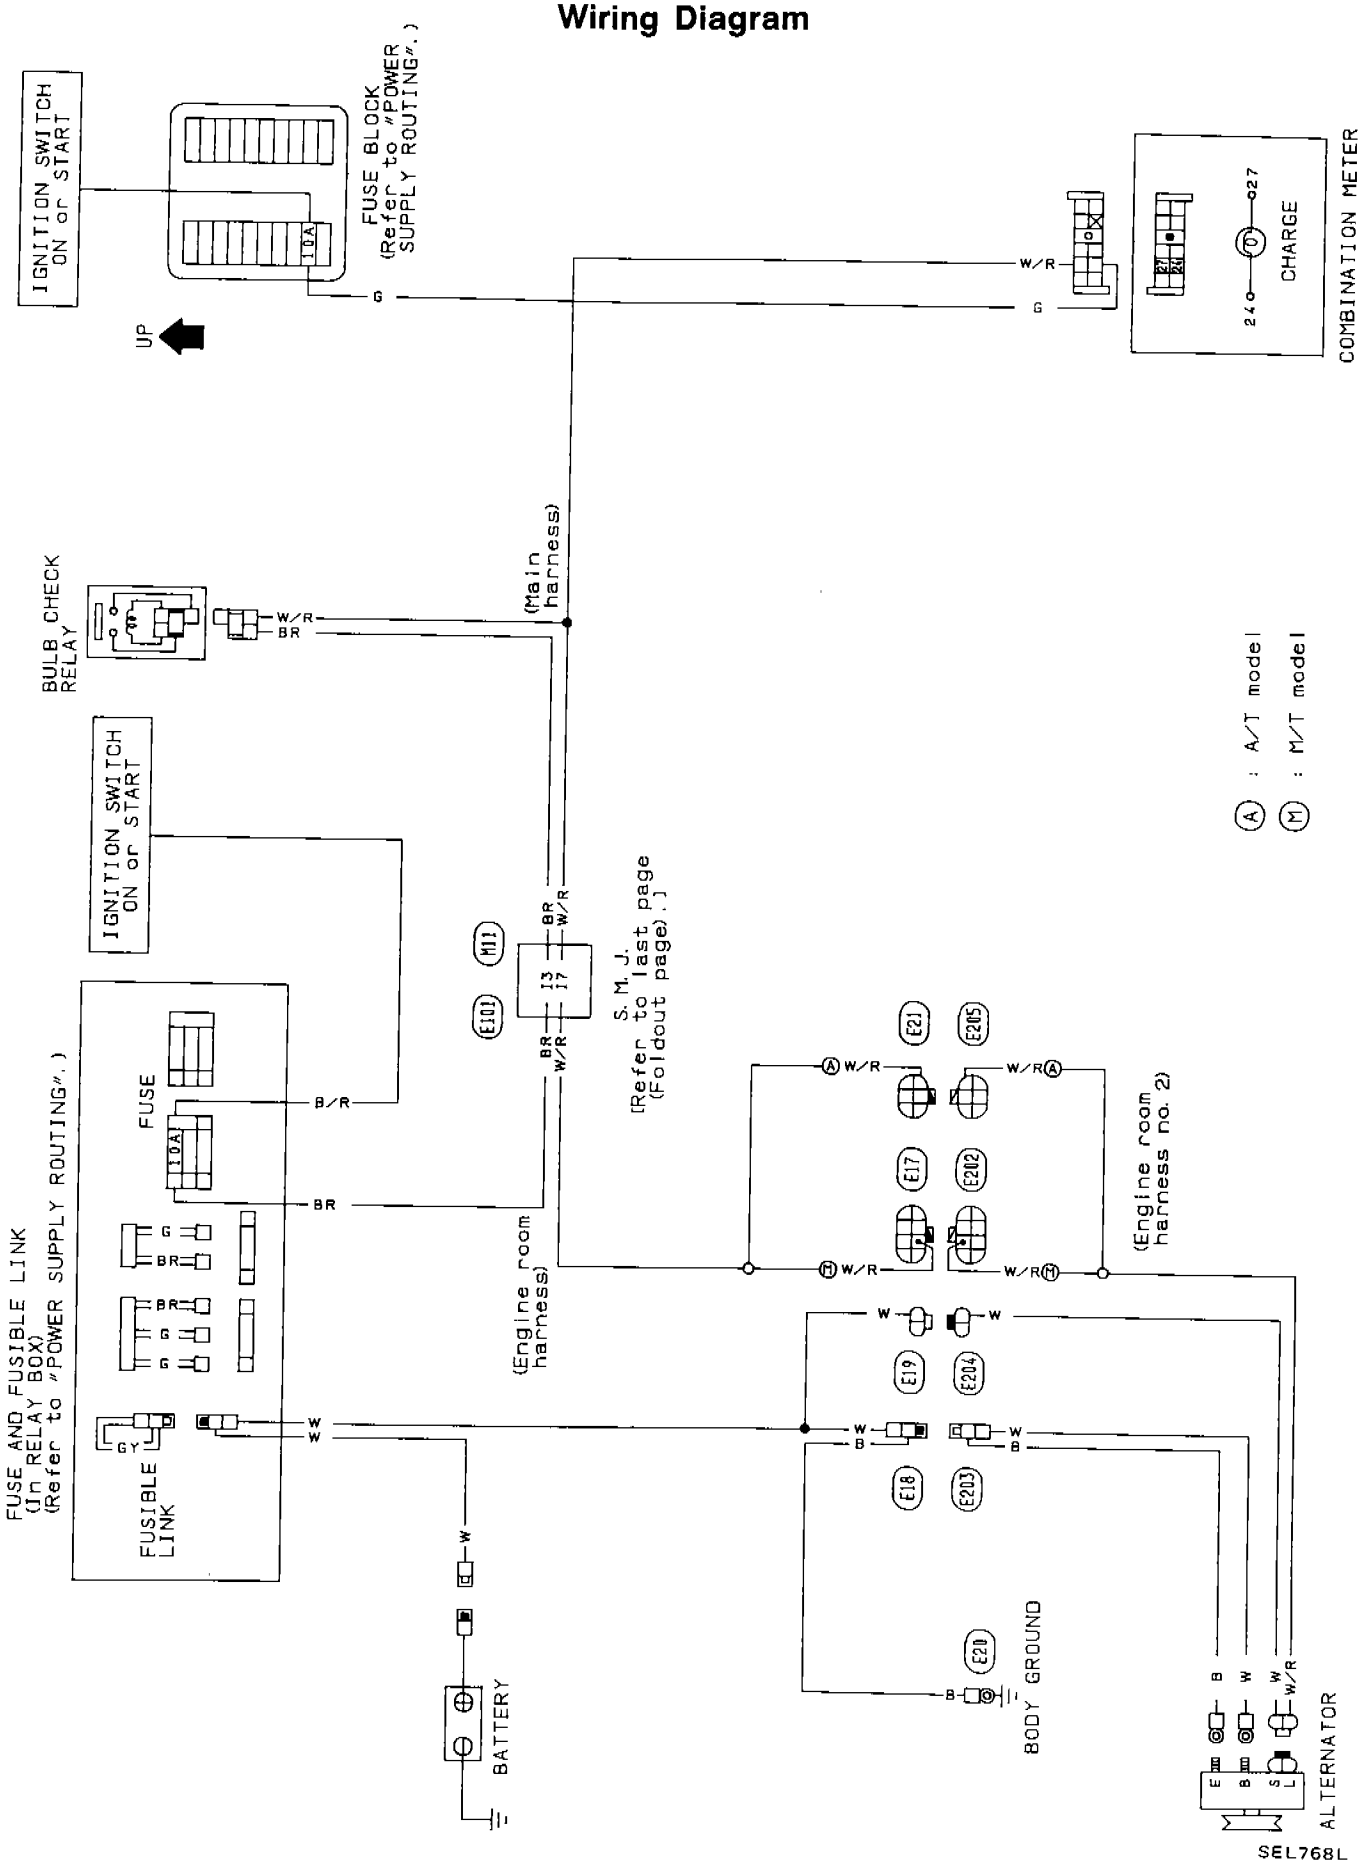


Trouble-shooting

Before conducting an alternator test, make sure that the battery is fully charged. A 30-volt voltmeter and suitable test probes are necessary for the test. The alternator can be checked easily by referring to the Inspection Table.


Before starting trouble-shooting, inspect the fusible link.

WITH IC REGULATOR

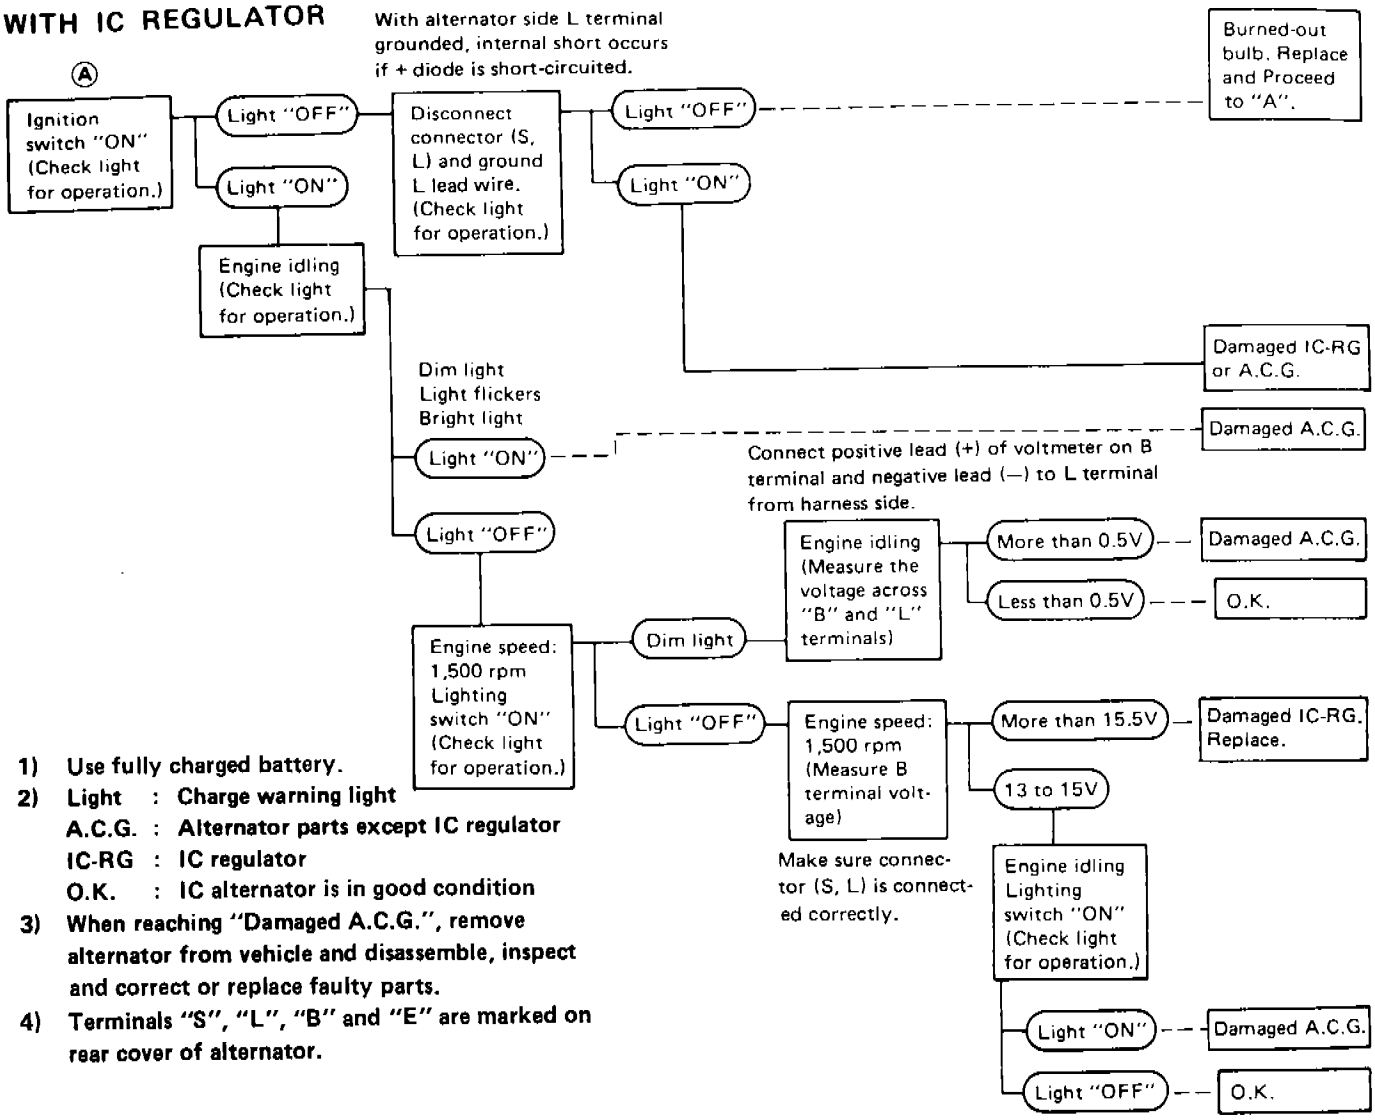

1) **Use fully charged battery.**
2) **Light : Charge warning light**
   A.C.G. : Alternator parts except IC regulator
   IC-RG : IC regulator
   O.K. : IC alternator is in good condition
3) **When reaching "Damaged A.C.G.", remove alternator from vehicle and disassemble, inspect and correct or replace faulty parts.**
4) **Terminals "S", "L", "B" and "E" are marked on rear cover of alternator.**


Construction

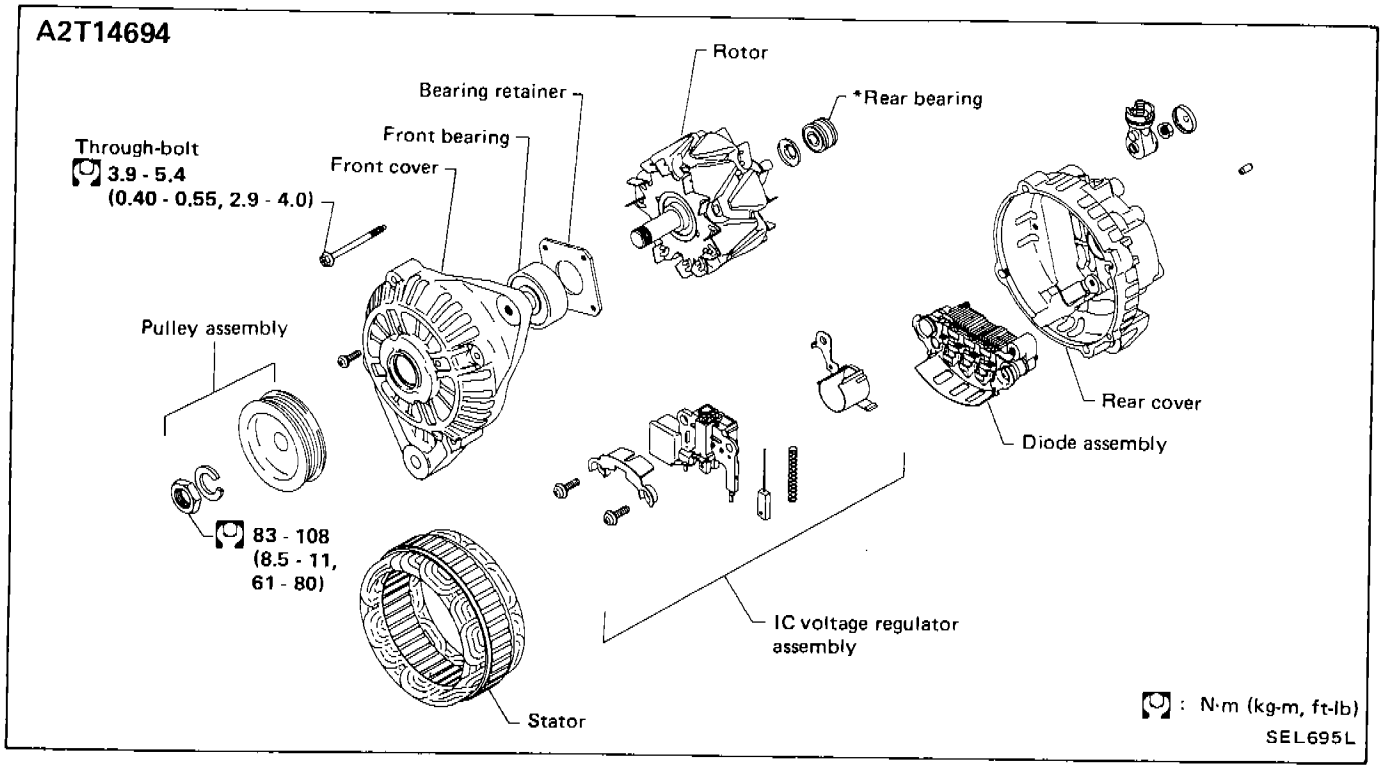

***Rear bearing**

CAUTION:

Rear cover may be hard to remove because a ring is used to lock outer race of rear bearing. Be careful not to lose this ring during removal.

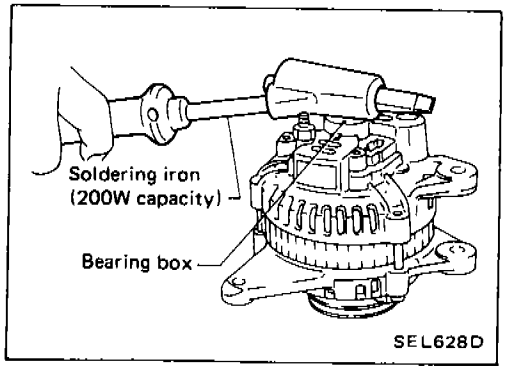


Disassembly

REAR COVER REMOVAL

CAUTION:

To facilitate removal of rear cover, heat just bearing box section with a 200W soldering iron.

Do not use a heat gun, as it can damage diode assembly.

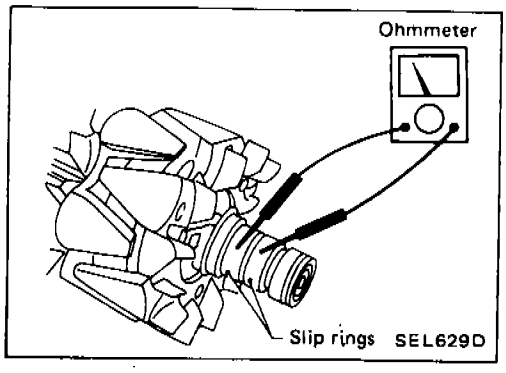


Rotor Slip Ring Check

1. Continuity test

● No continuity ... Replace rotor.

Rotor Slip Ring Check (Cont'd)

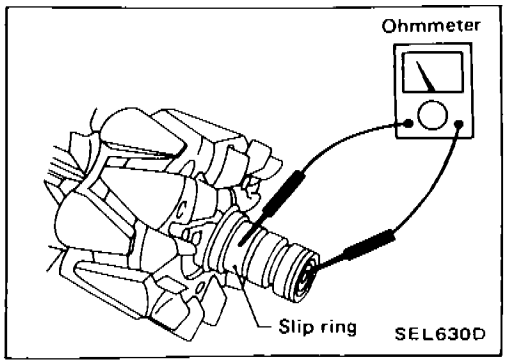


2. Insulator test
- Continuity exists. ... Replace rotor.

3. Check slip ring for wear.


Slip ring minimum outer diameter:
Refer to S.D.S.

Brush Check

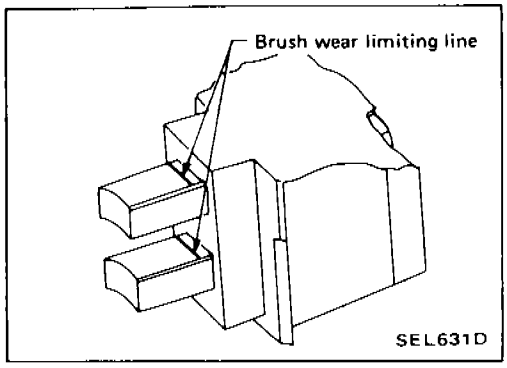

1. Check smooth movement of brush.
- Not smooth ... Check brush holder and clean.

2. Check brush for wear.
- Replace brush if it is worn down to the limit line.

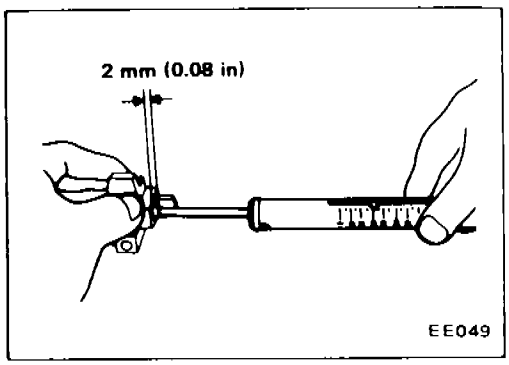

3. Check brush lead wire for damage.
- Damaged ... Replace.

4. Check brush spring pressure.
Measure brush spring pressure with brush projected approximately 2 mm (0.08 in) from brush holder.


Spring pressure:
Refer to S.D.S.


- Not within the specified values ... Replace.

Stator Check

To test the stator or diode, separate them by unsoldering the connecting wires.


CAUTION:
Use only as much heat as required to melt solder. Otherwise, diodes will be damaged by excessive heat.

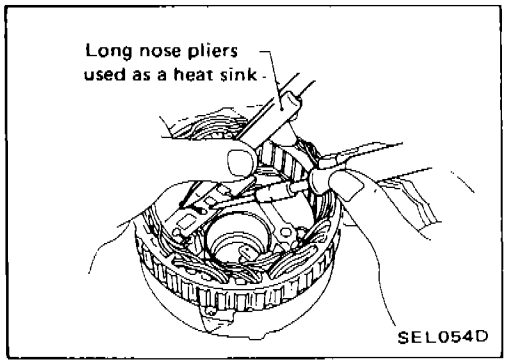

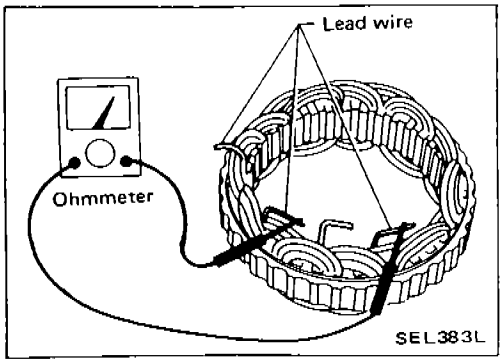

1. Continuity test
- No continuity ... Replace stator.

Stator Check (Cont'd)

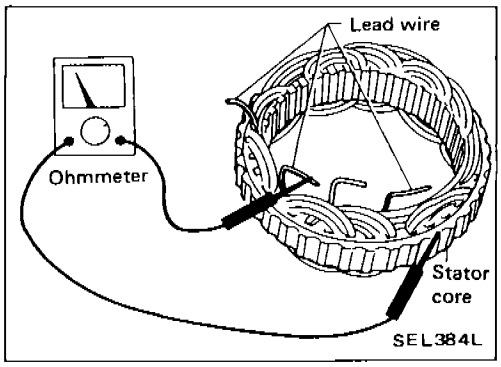


2. Ground test
- Continuity exists. ... Replace stator.


Diode Check

MAIN DIODES

- Use an ohmmeter to check condition of diodes as indicated in chart below:
- If any of the test results is not satisfactory, replace diode assembly.

	Ohmmeter probes		Continuity
	Positive ⊕	Negative ⊖	
Diodes check (Positive side)	Positive diode plate	Diode terminals	Yes
	Diode terminals	Positive diode plate	No
Diodes check (Negative side)	Negative diode plate	Diode terminals	No
	Diode terminals	Negative diode plate	Yes

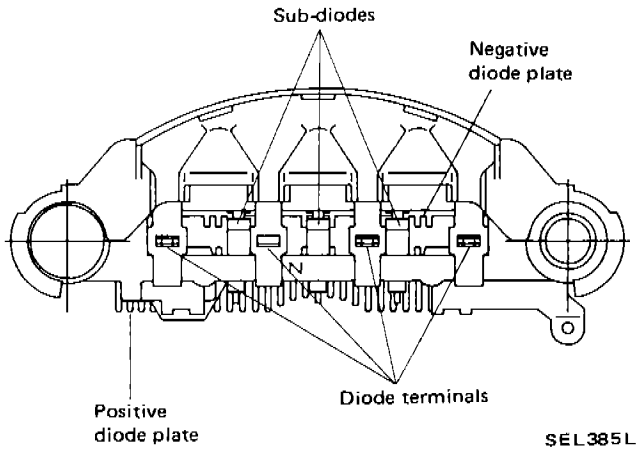

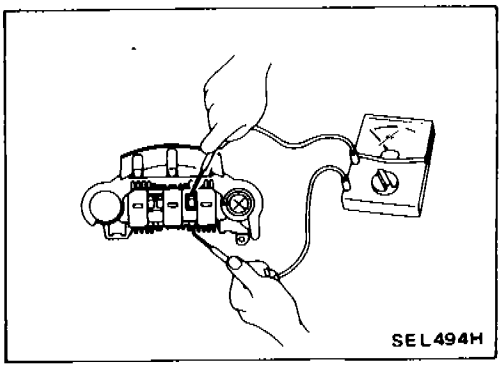


SUB-DIODES

- Attach ohmmeter's probe to each end of diode to check for continuity.
- Continuity is N.G. ... Replace diode assembly.

Assembly


Carefully observe the following instructions.

- When soldering each stator coil lead wire to diode assembly terminal, carry out the operation as fast as possible.

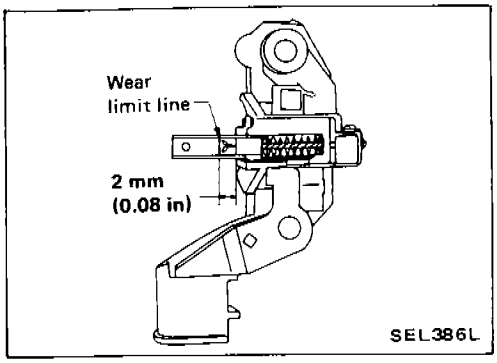


WHEN SOLDERING BRUSH LEAD WIRE

- Position brush so that its wear limit line protrudes 2 mm (0.08 in) beyond end face of brush holder.

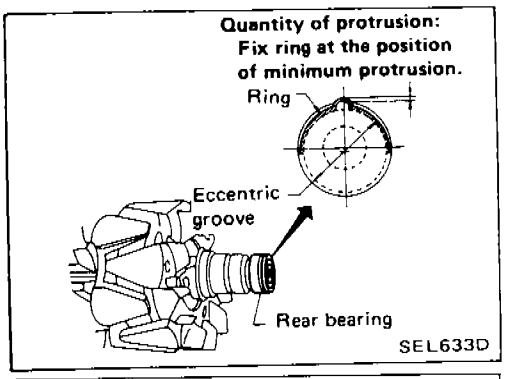

RING FITTING IN REAR BEARING


- Fix ring into groove in rear bearing so that it is as close to the adjacent area as possible.

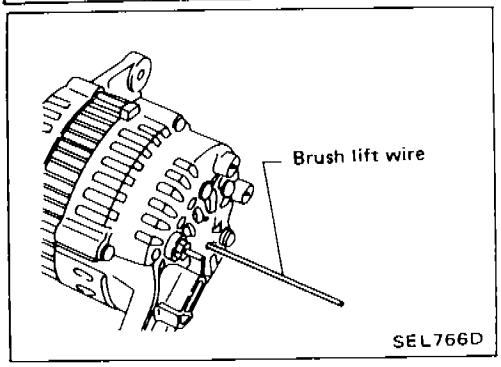

REAR COVER INSTALLATION

(1) Before installing front cover with pulley and rotor with rear cover, push brush up with fingers and retain brush by inserting brush lift wire into brush lift hole from outside.
(2) After installing front and rear sides of alternator, pull brush lift wire by pushing toward the center.

Do not pull brush lift wire by pushing toward outside of rear cover as it will damage slip ring sliding surface.

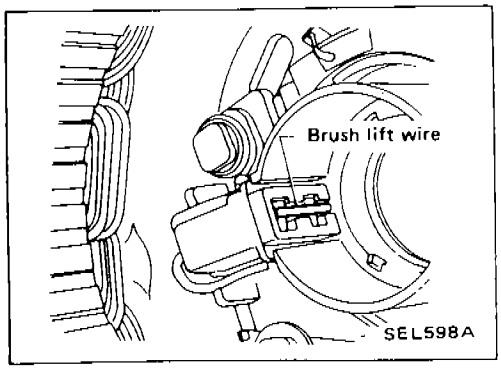



Service Data and Specifications (S.D.S.)

ALTERNATOR

Type		A2T14694
Applied model		All
Nominal rating	V-A	12-80
Ground polarity		Negative
Minimum revolution under no-load (When 13.5 volts is applied)	rpm	Less than 1,100
Hot output current	A/rpm	More than 22/1,300 More than 60/2,500
Regulated output voltage	V	14.1 - 14.7
Minimum length of brush	mm (in)	8.0 (0.315)
Brush spring pressure	N (g, oz)	3.040 - 4.217 (310 - 430, 10.93 - 15.17)
Slip ring minimum outer diameter	mm (in)	22.1 (0.870)

Check

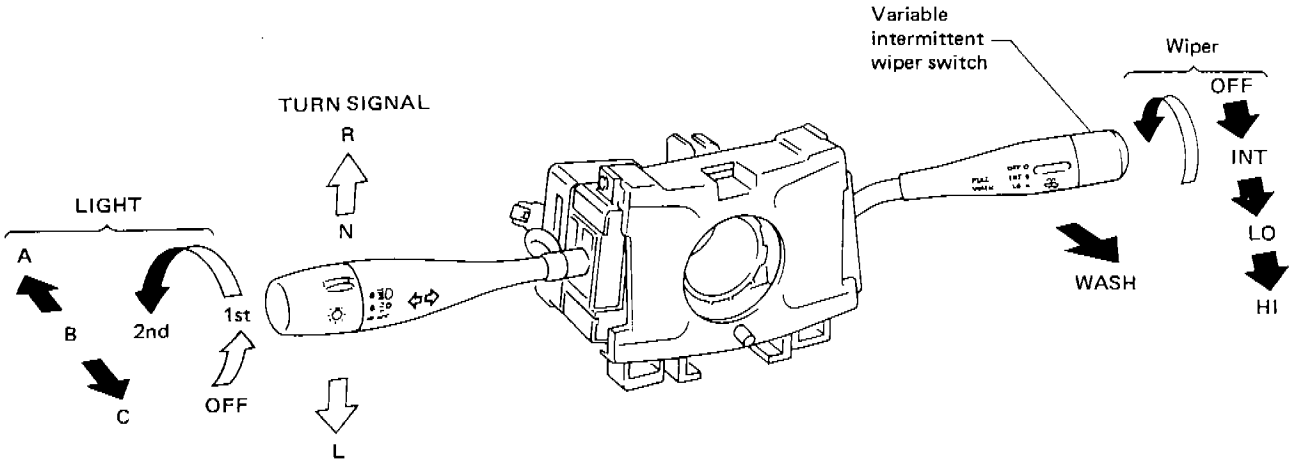

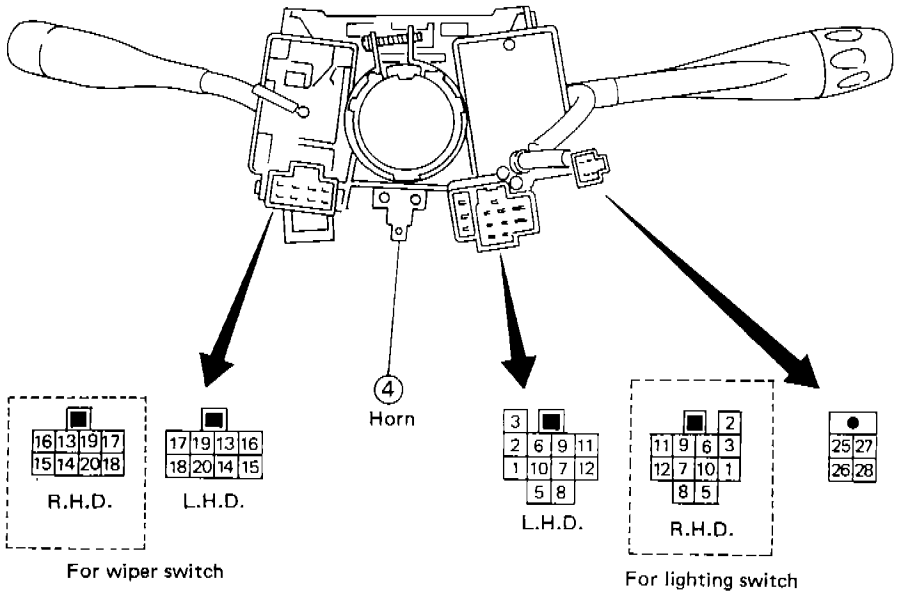


LIGHTING SWITCH

	OFF			1			2		
	A	B	C	A	B	C	A	B	C
5			○			○	○	○	○
6			○			○	○		○
7								○	
8			○			○	○	○	○
9			○			○	○	○	○
10								○	
11				○	○	○	○	○	○
12				○	○	○	○	○	○
25							○	○	○
26							○		○
27	○	○	○	○	○	○			
28	○	○	○	○	○	○			


WIPER SWITCH

	OFF	INT	LO	HI	WASH
13	○	○			
14	○	○	○		
15		○			
16				○	
17		○	○		○
18					○

INTERMITTENT WIPER VOLUME




HORN SWITCH



	R	N	L
1	○		○
2	○		
3			○


TURN SIGNAL SWITCH

SEL696L

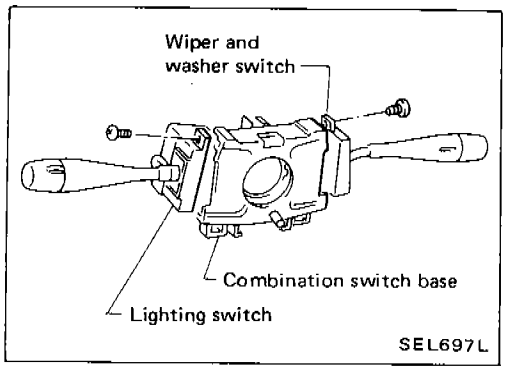

Replacement


- Each switch can be replaced without removing combination switch base.

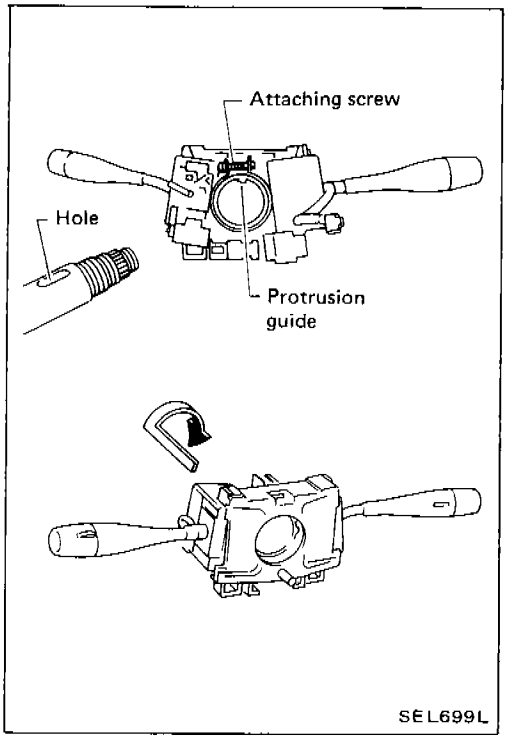

- To remove combination switch base, remove base attaching screw and turn after pushing on it.


Schematic

MODEL WITH DIM-DIP LAMP SYSTEM

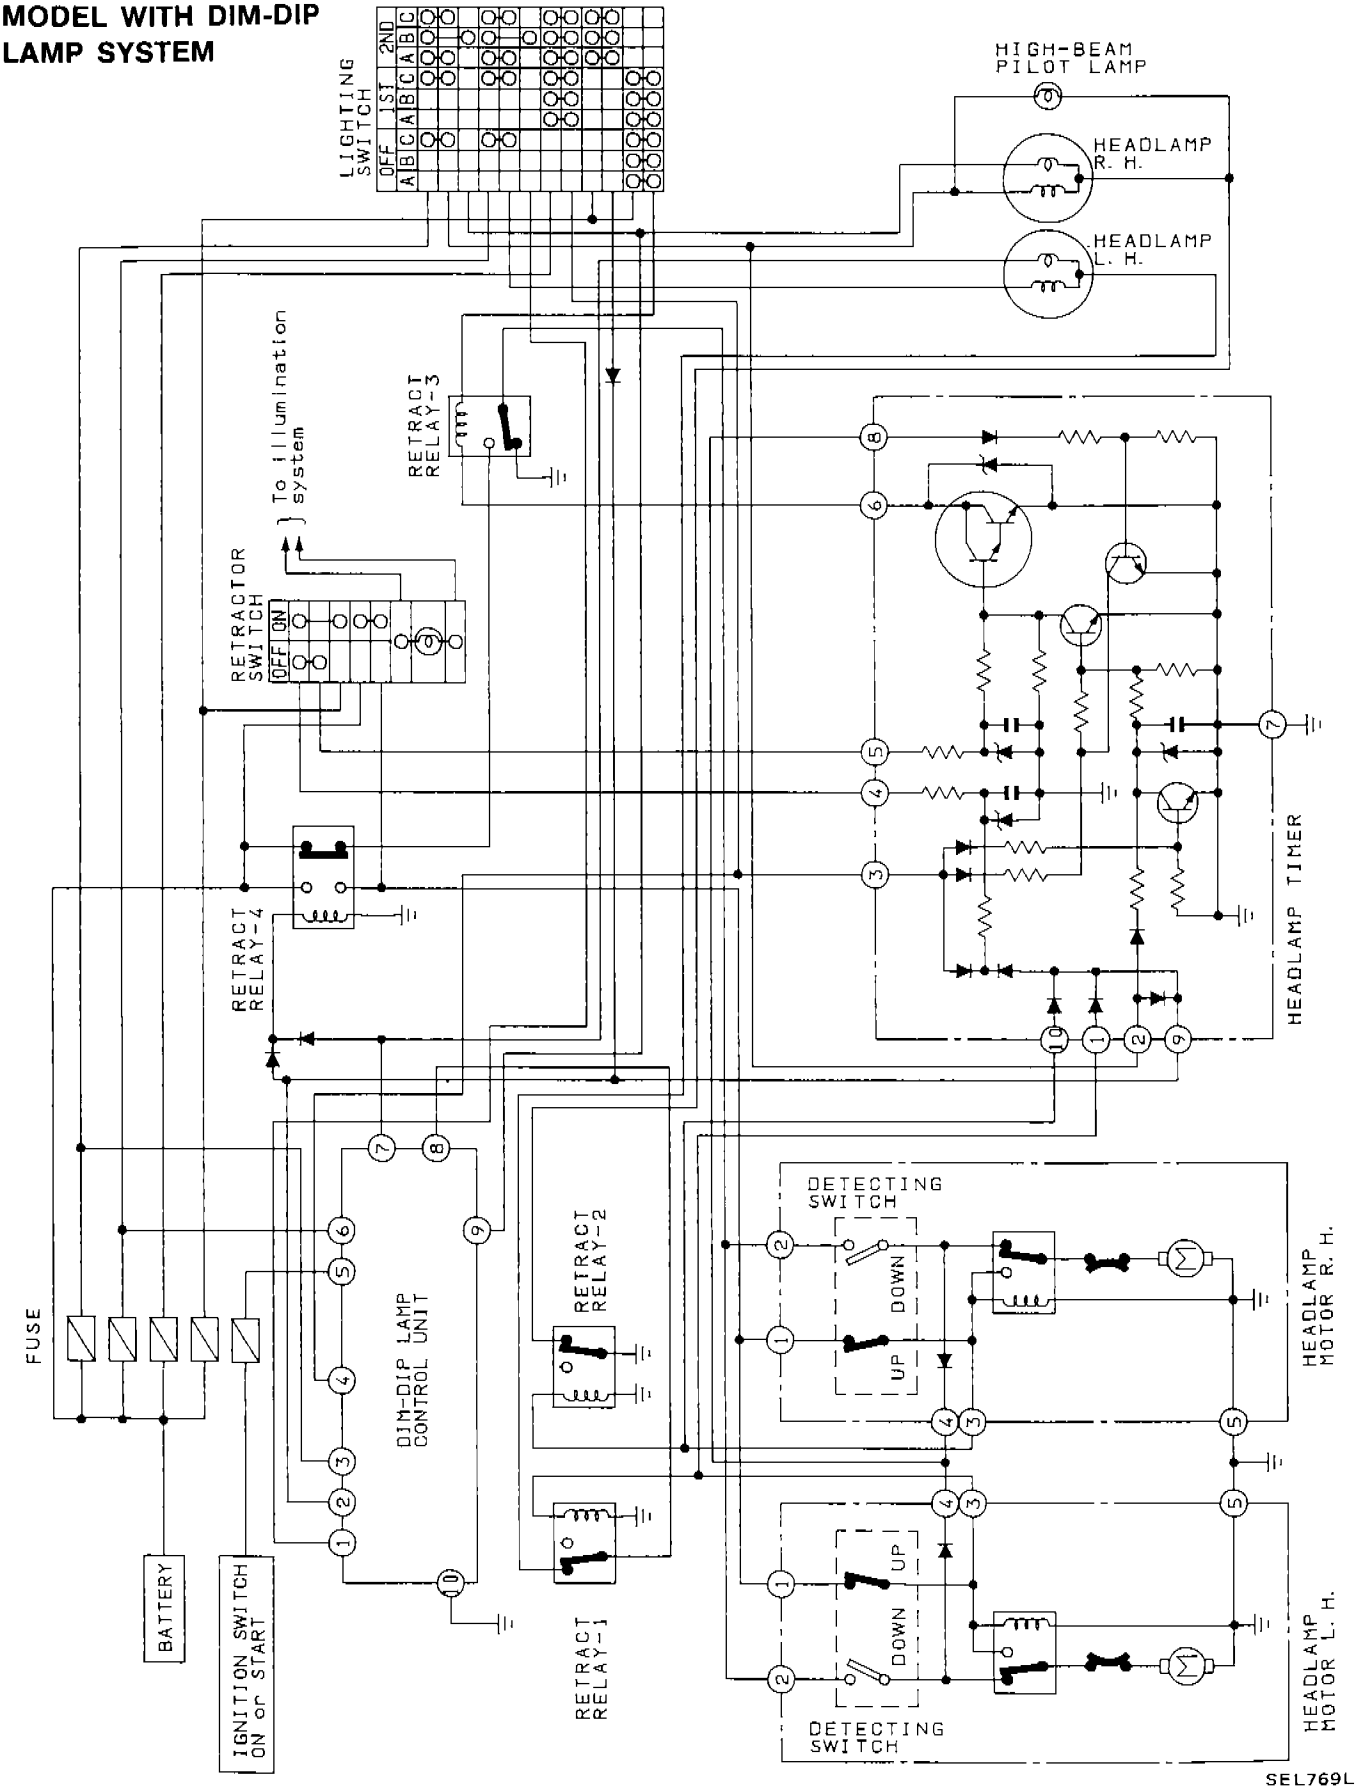

Schematic (Cont'd)


MODEL WITHOUT DIM-DIP LAMP SYSTEM

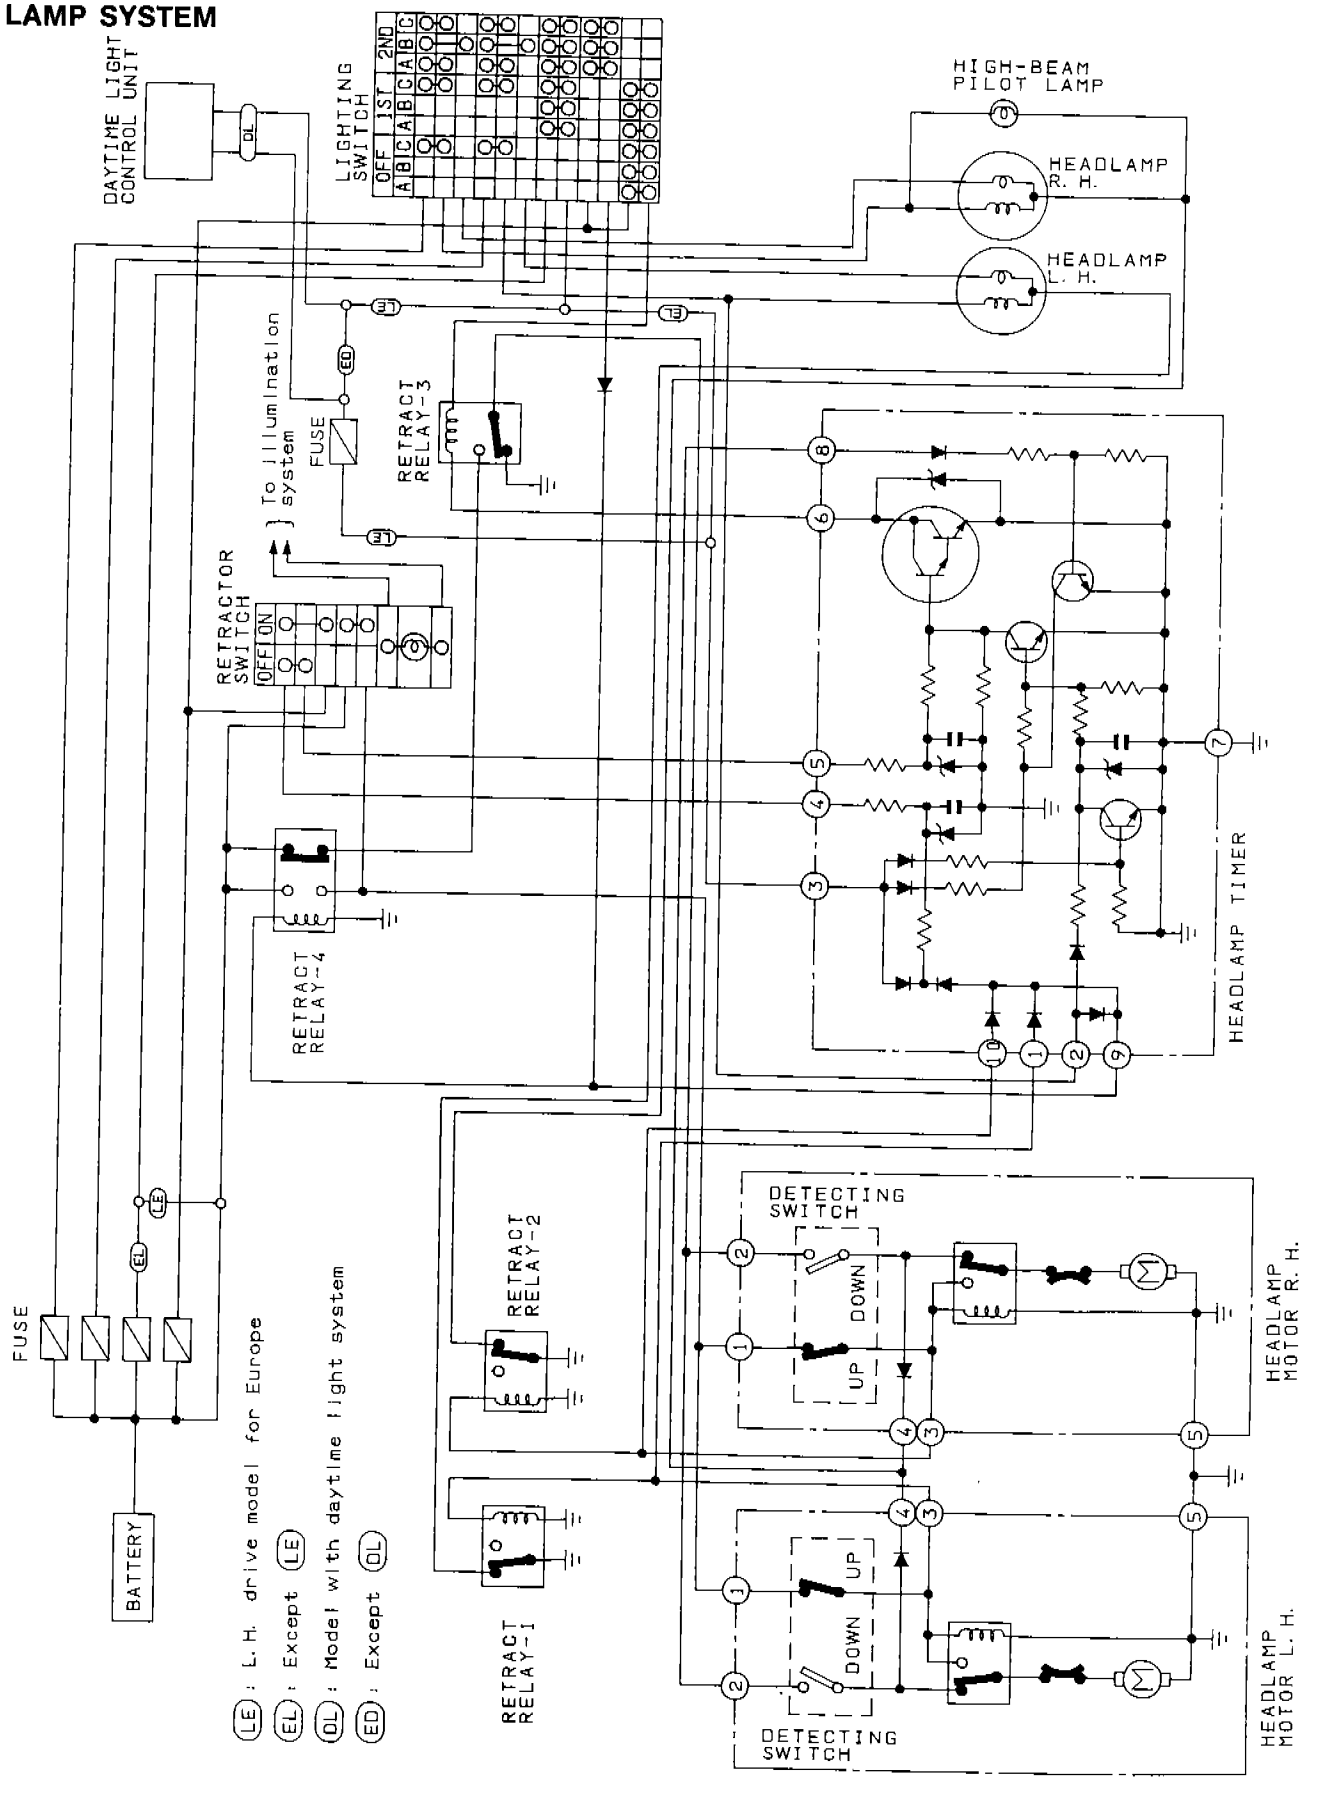

SEL770L

Wiring Diagram


L.H. DRIVE MODEL FOR EUROPE

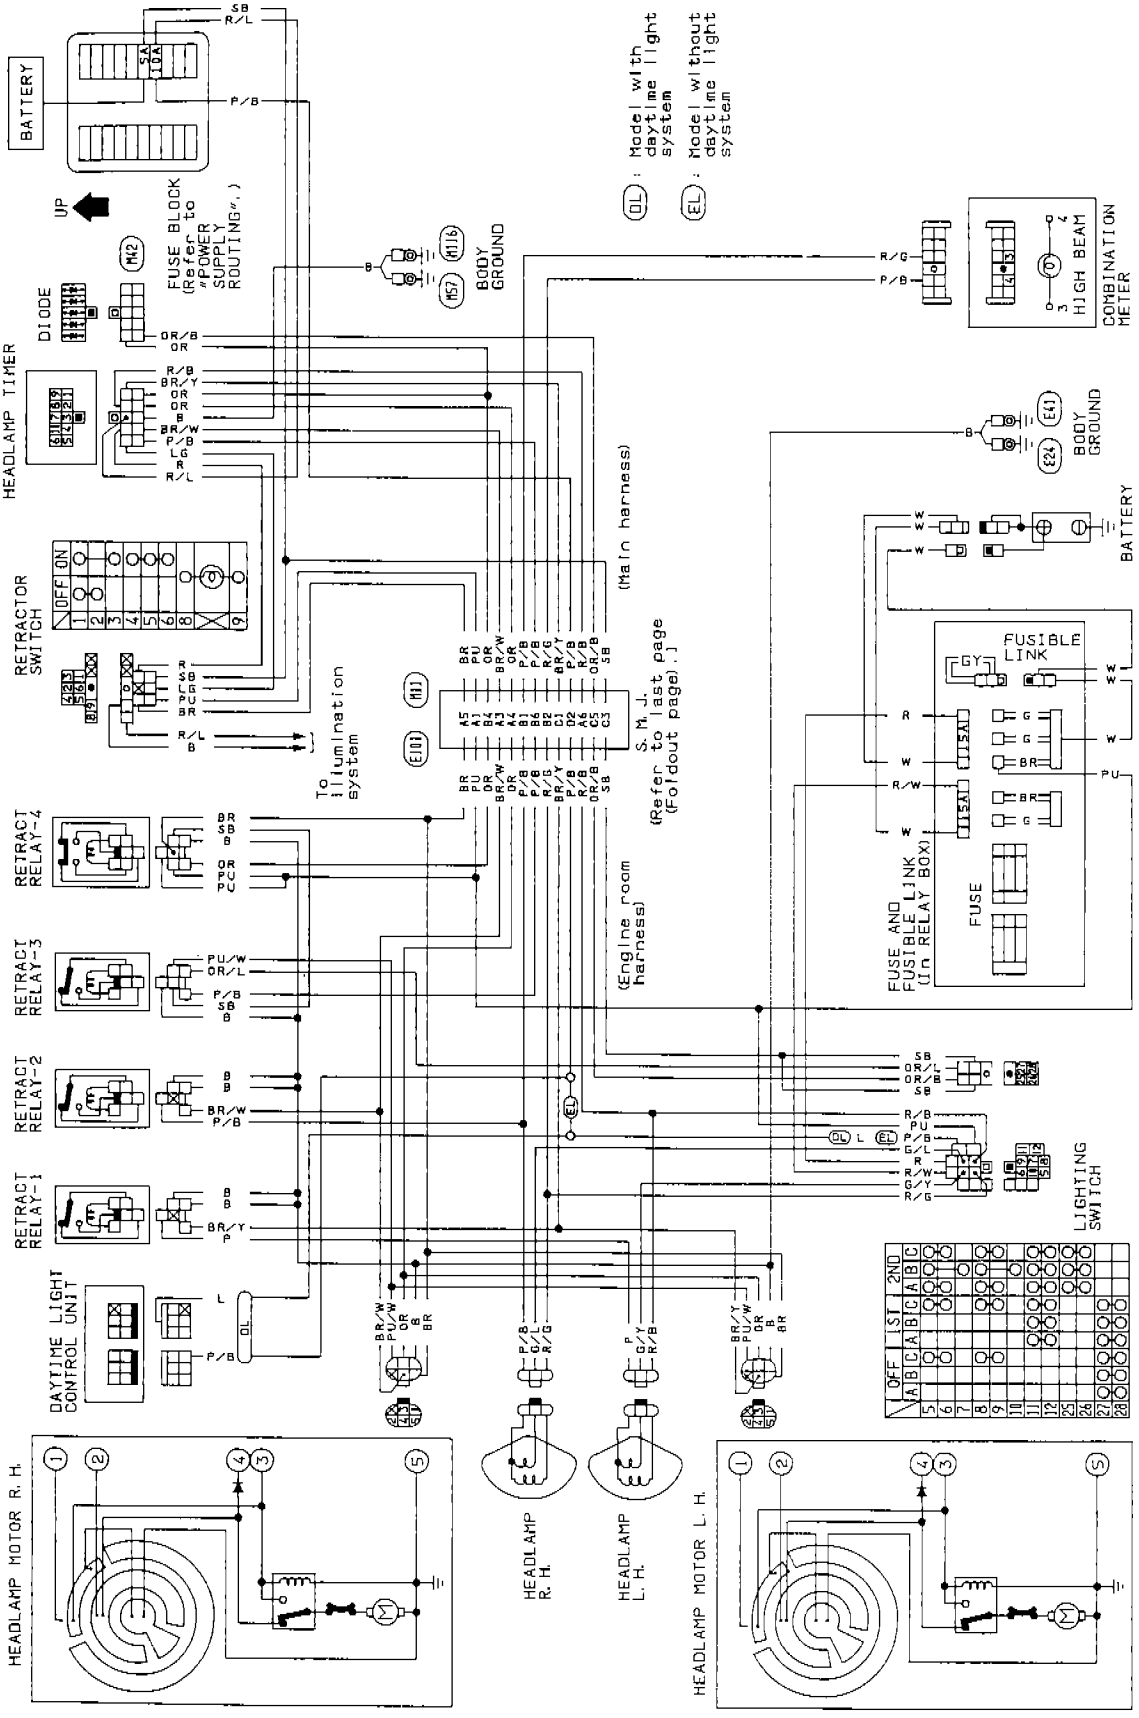

SEL771L

Wiring Diagram (Cont'd)


MODEL WITH DIM-DIP LAMP SYSTEM

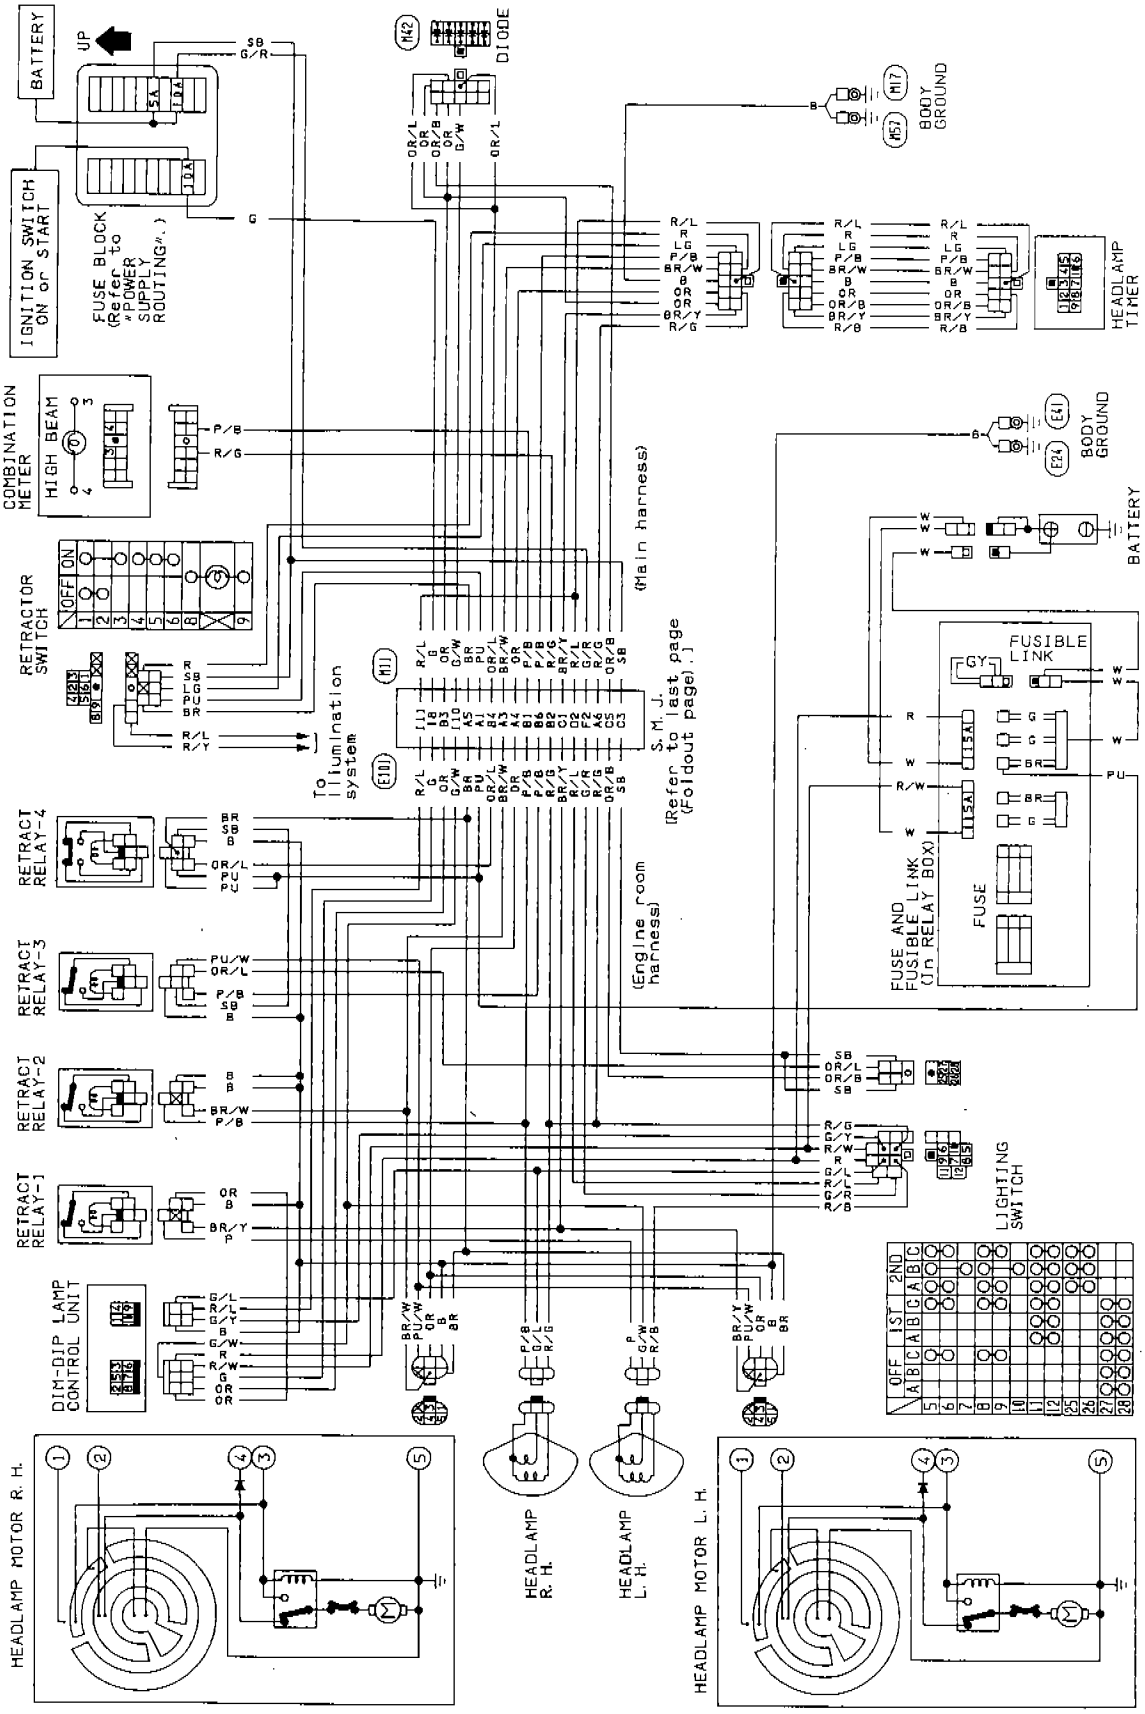

SEL772L

Wiring Diagram (Cont'd)

L.H. DRIVE MODEL EXCEPT FOR EUROPE AND R.H. DRIVE MODEL WITHOUT DIM-DIP LAMP SYSTEM

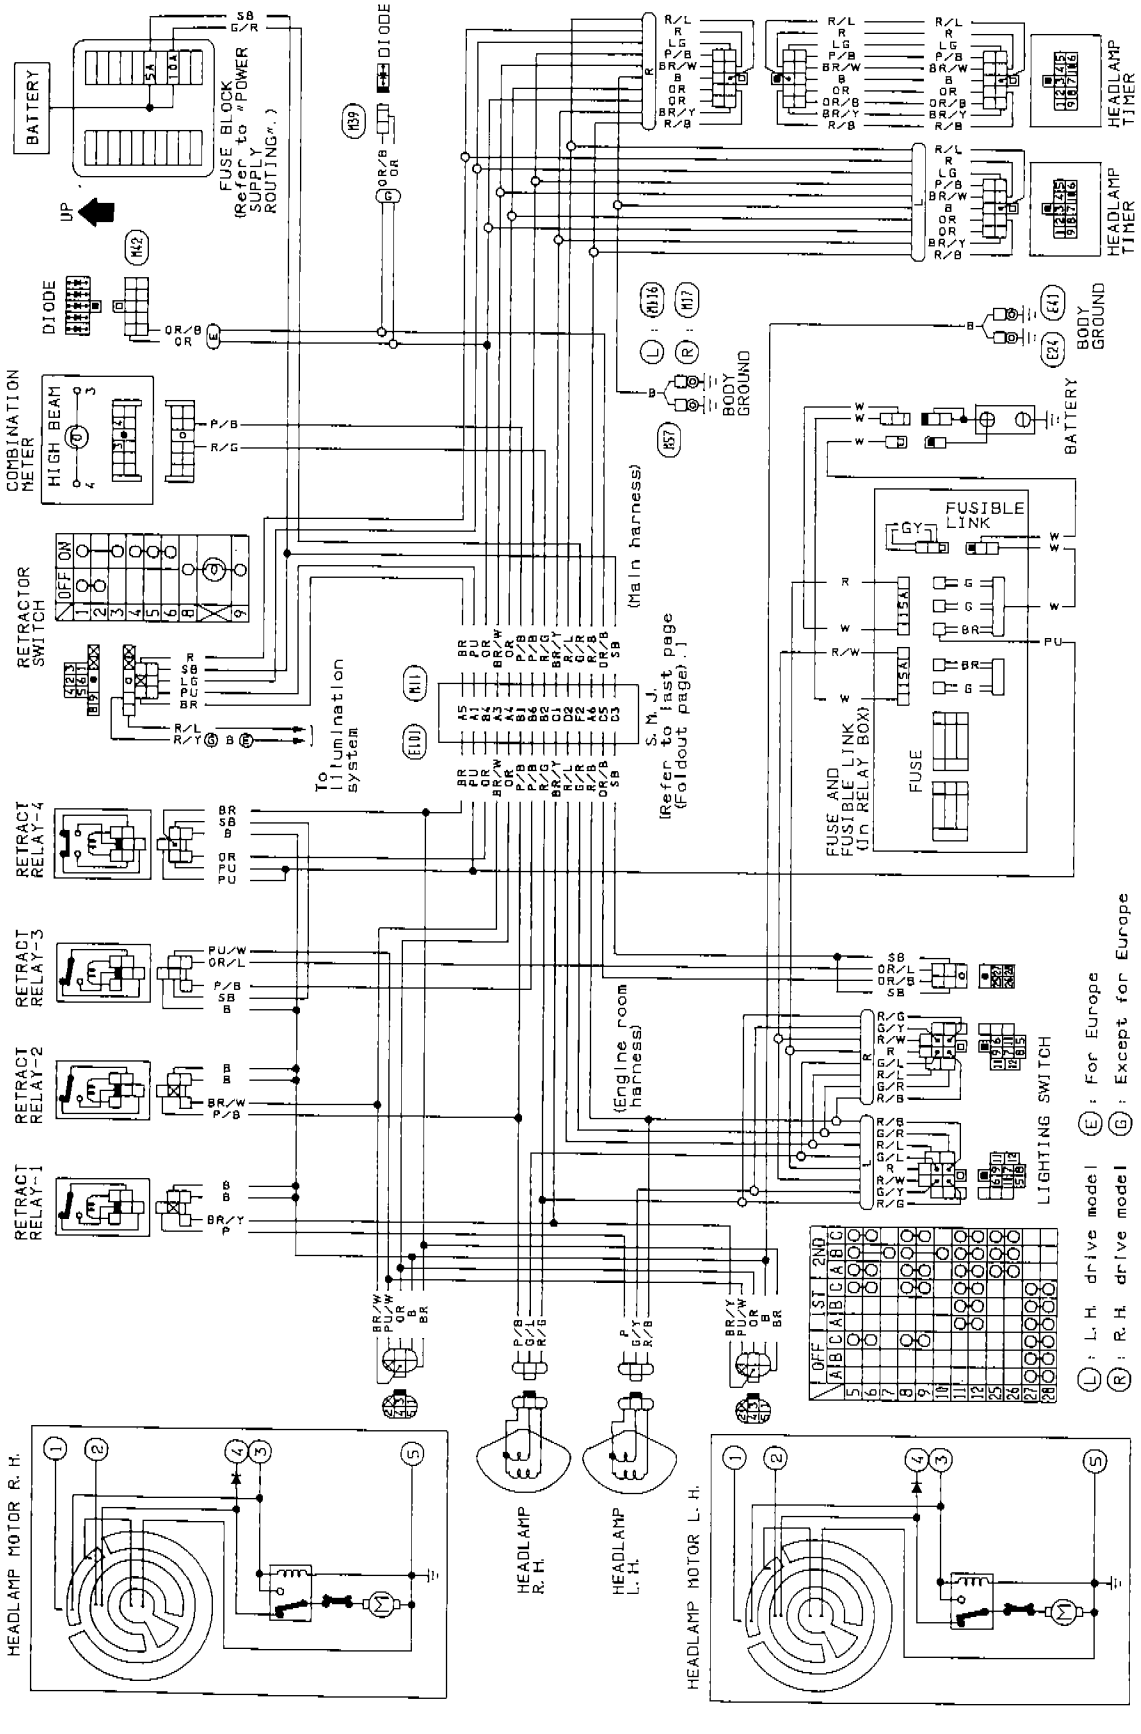

SEL811L

Description

BASIC OPERATION


Condition		Operation	
Lighting switch	Retractor switch	Headlamp motor	Headlamps
OFF → 1ST	OFF	No operation	OFF
1ST → 2ND	OFF	Open	ON after headlamp motor reaches fully open position.
2ND → 1ST	OFF	Held to open position	OFF
1ST → OFF	OFF	Closed	OFF
Except for Europe model Momentarily turned to PASSING	OFF	Opened and closed after headlamps go off.	Momentarily ON after headlamp motor reaches fully open position, and then go off.
For Europe model Momentarily turned to PASSING	OFF	Opened and closed	OFF
Held at PASSING position	OFF	Open	ON after headlamp motor reaches fully open position.
Release PASSING position	OFF	Closed after headlamps go off.	OFF
OFF	ON	Open	OFF

Description (Cont'd)


CIRCUIT OPERATION

[A] When lighting switch is switched from "1ST" → "2ND"

A-1: While operating the headlamp motor to open position

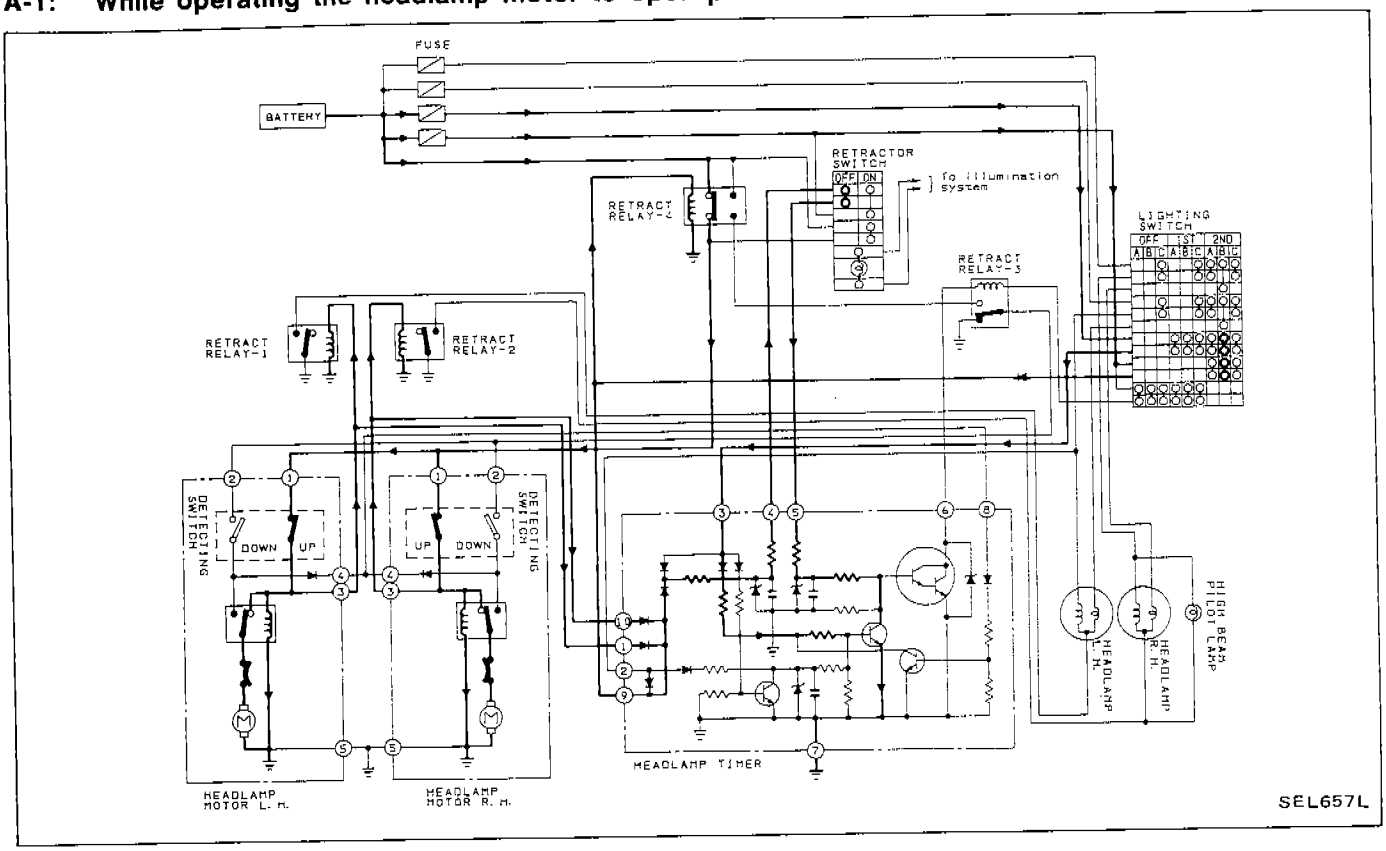


A-2: After the headlamp motor reaches fully open position

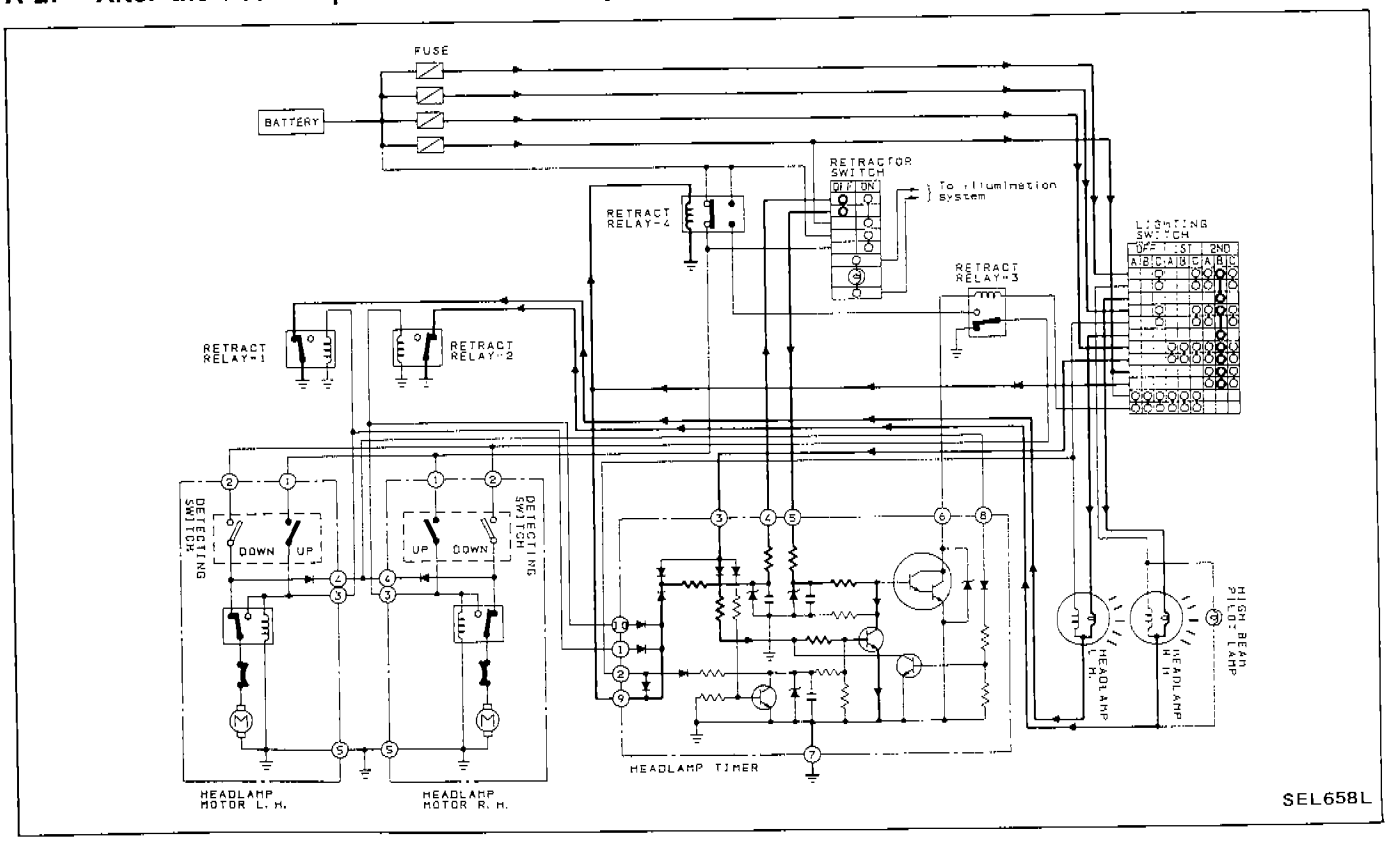


Description (Cont'd)

[B] When lighting switch is switched from "1ST" → "OFF"
(While operating the headlamp motor to closed position)

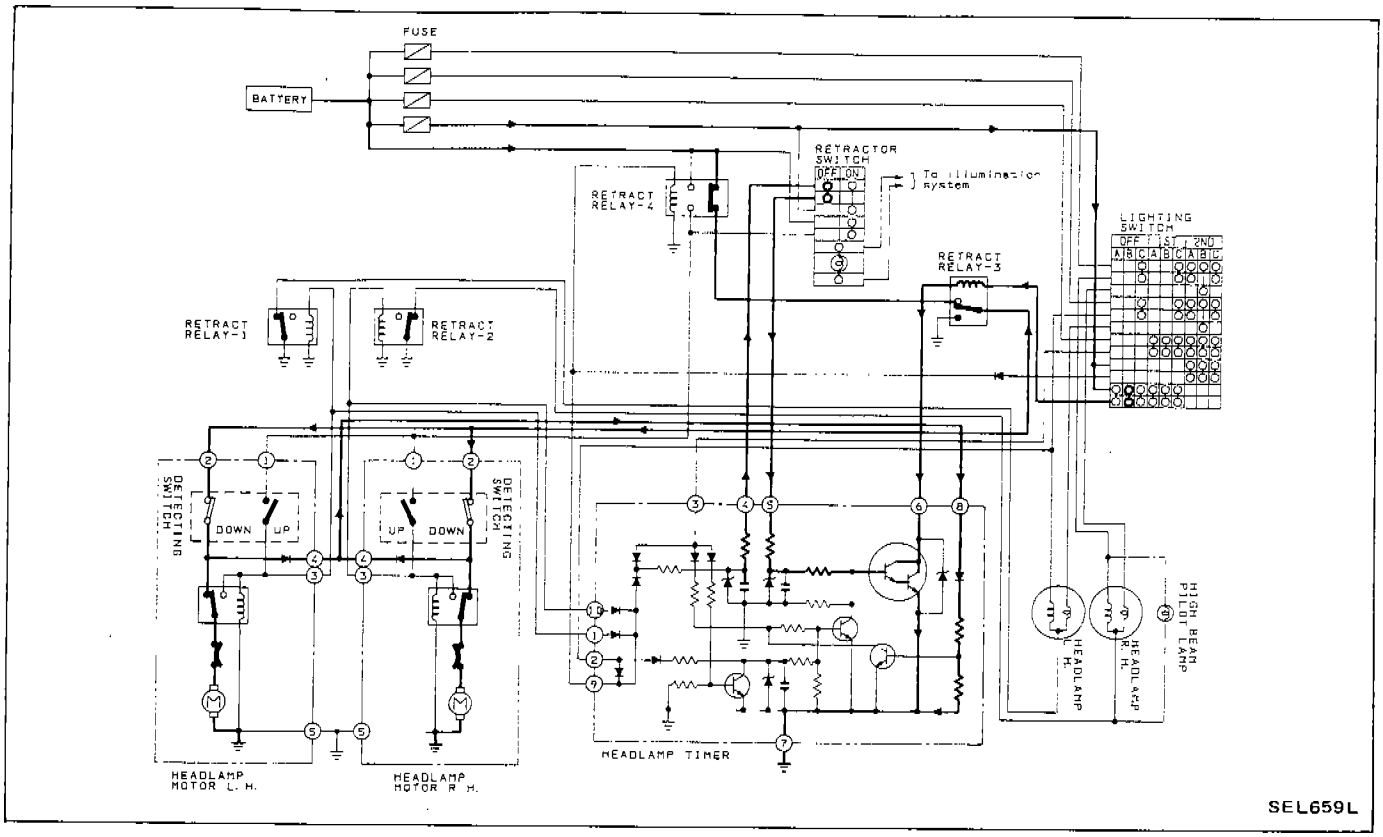


[C] When lighting switch is switched to "PASSING"
C-1: While operating the headlamp motor to open position

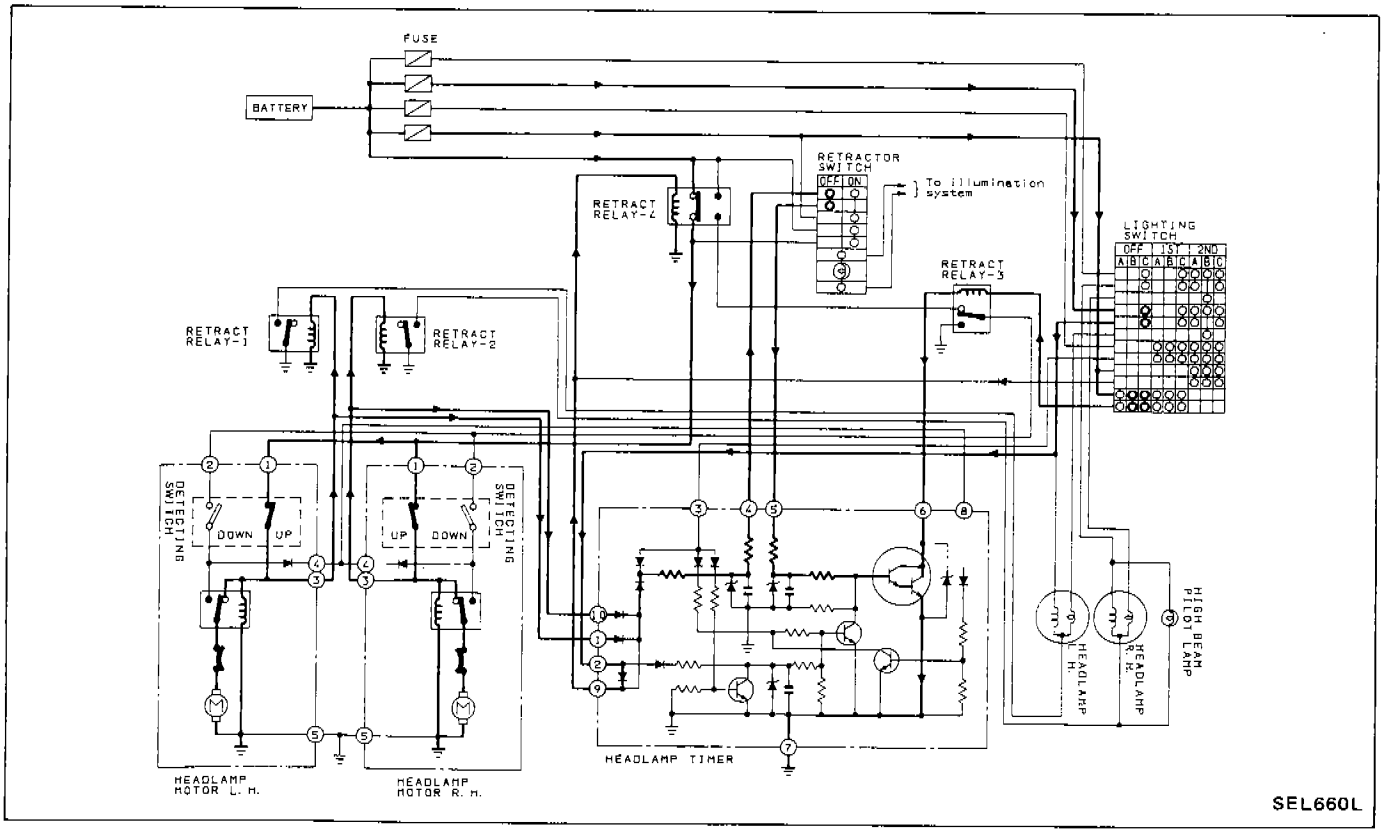


Description (Cont'd)


C-2: After the headlamp reaches fully open position

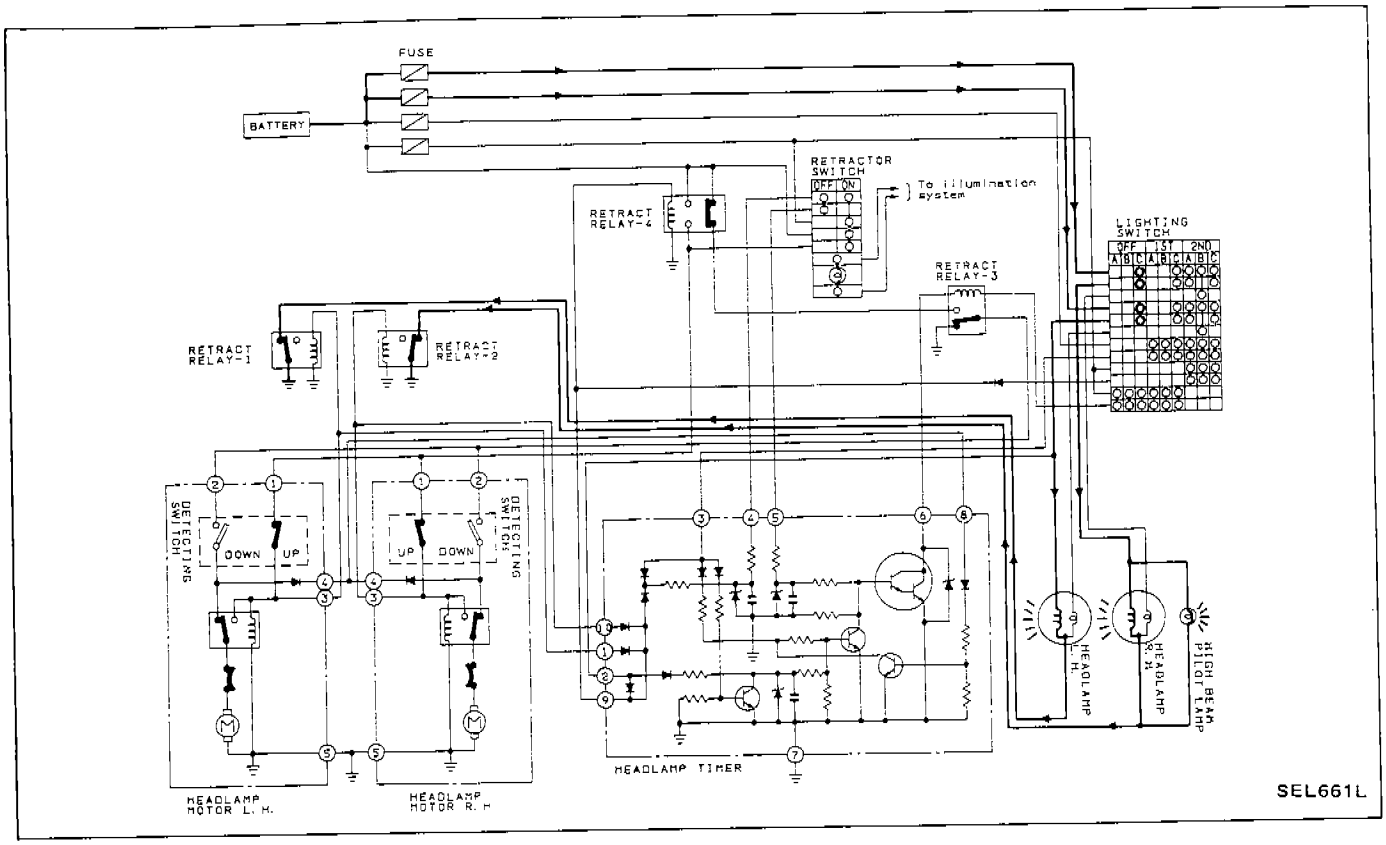


[D] When retractor switch is turned ON
(While operating the headlamp motor to open position)

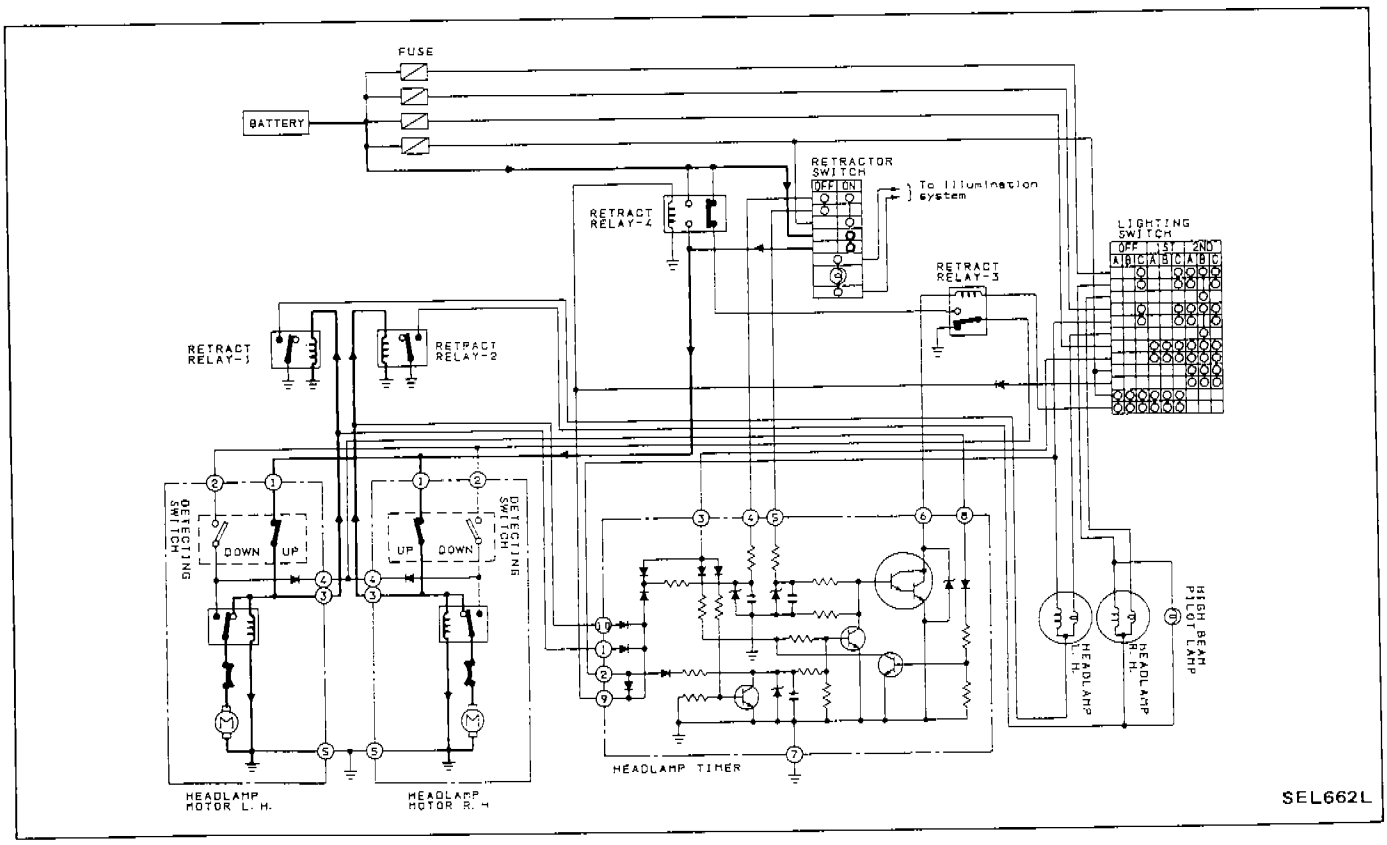


Constructions

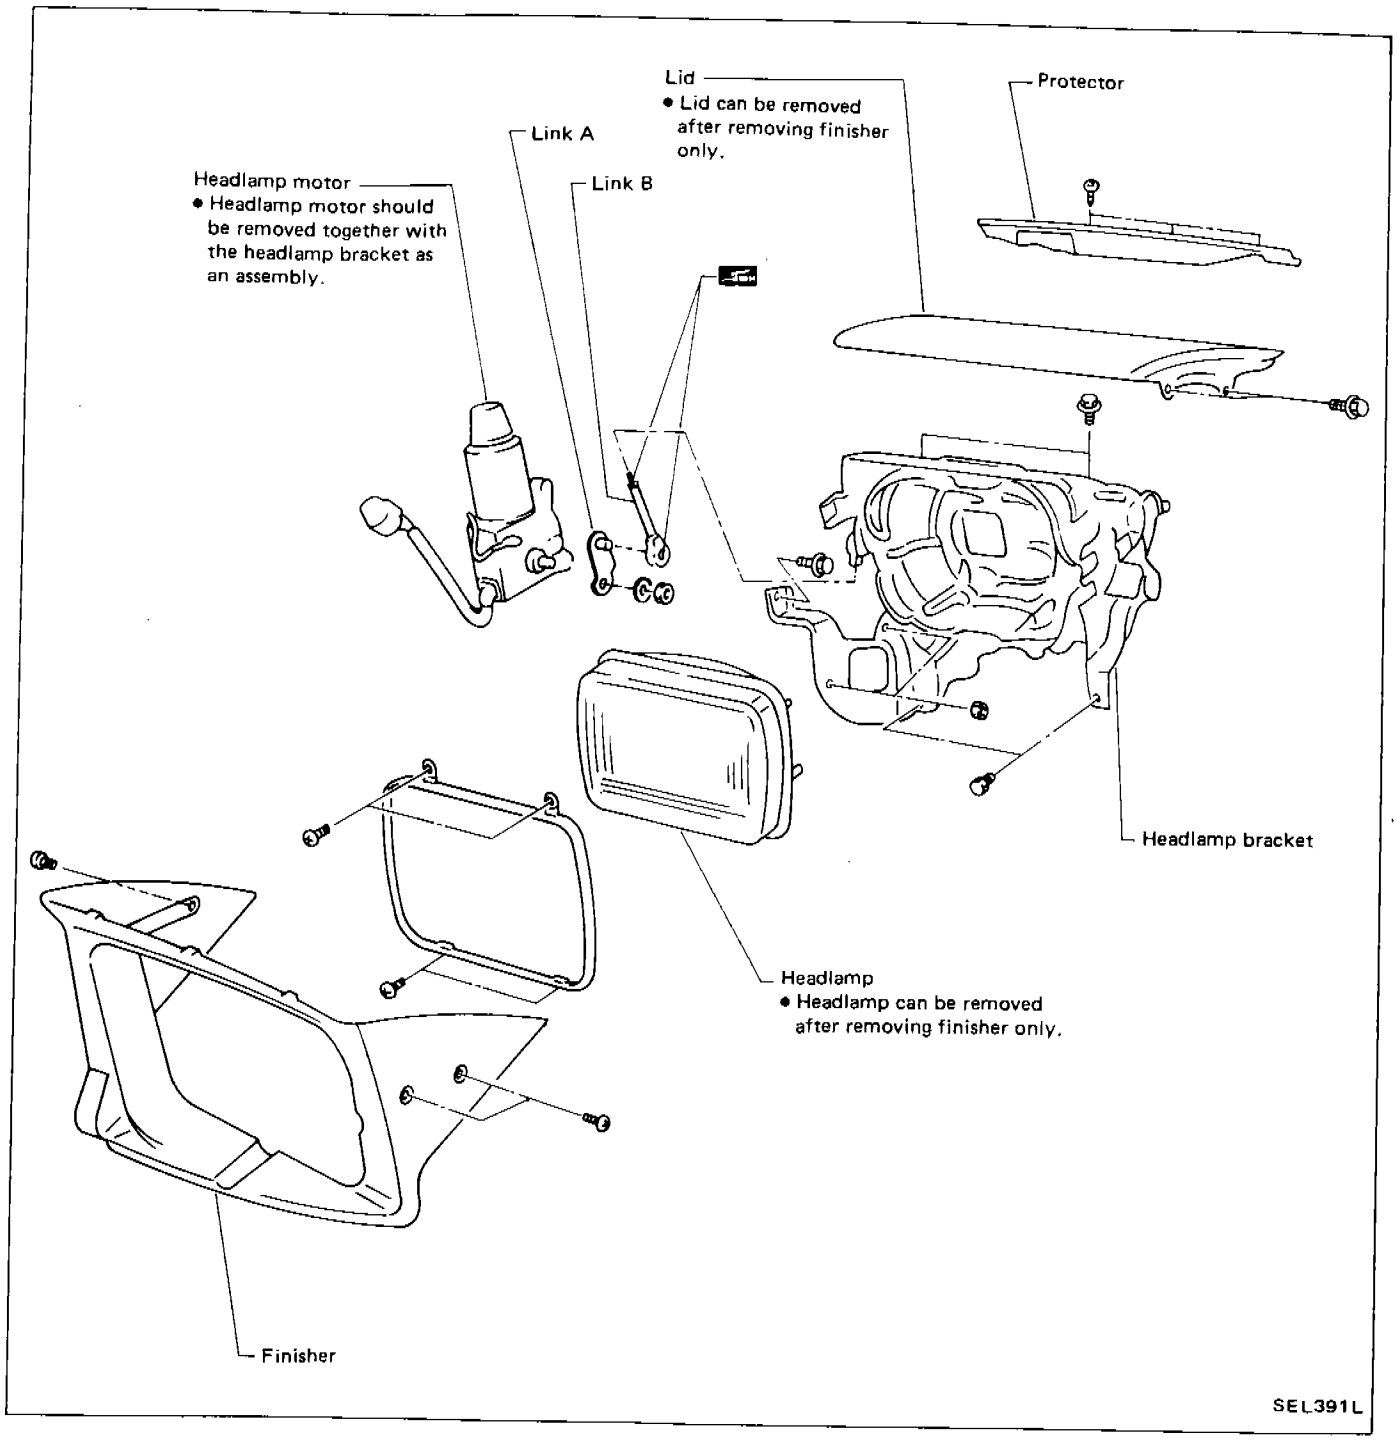

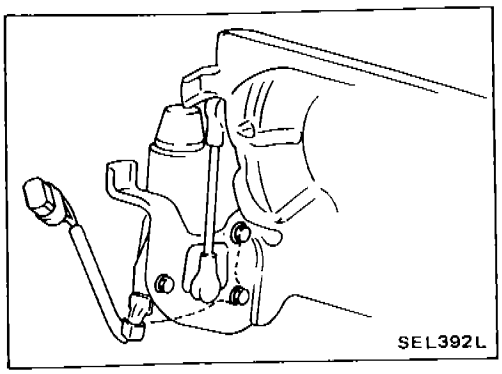
SEL392L

Assembly

1. Install headlamp motor, ball joint and link A (as one unit) on headlamp bracket.
2. While turning link B, install link A's ball joint on headlamp housing's ball joint.
3. Set distance between centers of upper and lower ball joints as shown in figure at left, and tighten lock nuts.
4. Assemble headlamp, finisher and lid.

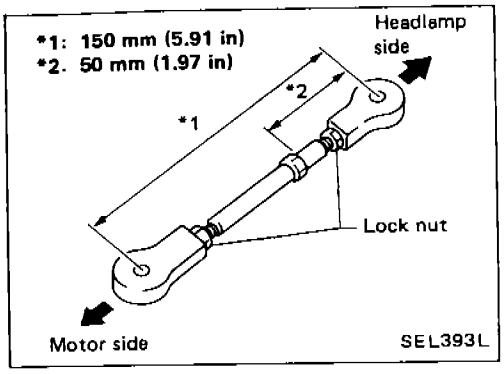


SEL393L

Installation and Adjustment

Before doing this, be sure to disconnect battery ground cable.


1. Install headlamp bracket to body temporarily.
1) Determine headlamp bracket location on body so that alignment between lid, hood, and fender looks straight.
2) After adjusting alignment, tighten headlamp bracket to body.

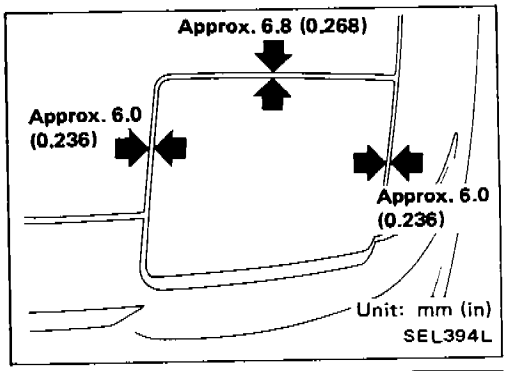


SEL394L

2. Adjust lid alignment.

- Adjust lid, hood and fender for alignment while opening and closing headlamp with motor manual knob.
  Use motor manual knob to open and close headlamp, and adjust alignment while checking that lid is not interfering with hood.

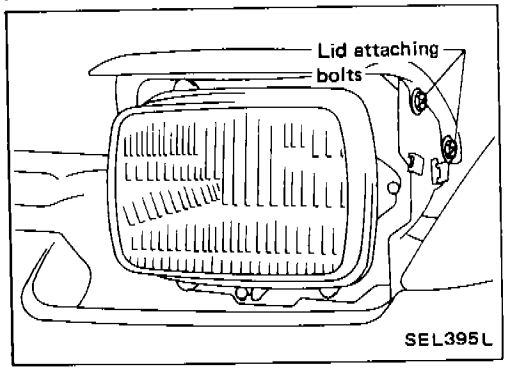


SEL395L

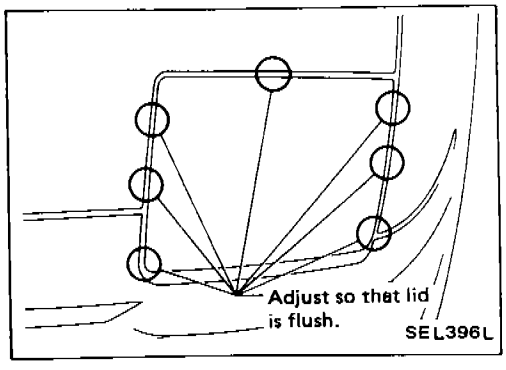


SEL396L

Installation and Adjustment (Cont'd)

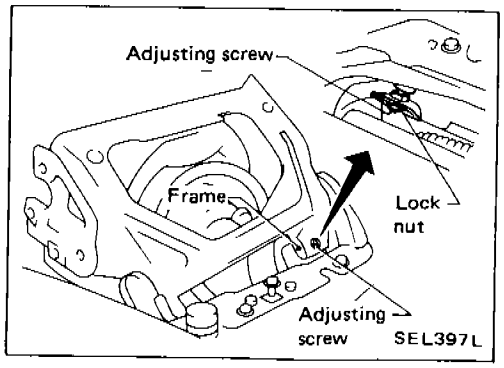


3. Adjust stopper.
1) Loosen lock nut on stopper.
2) Turn motor manual knob to open headlamp assembly completely.
3) Adjust stopper screw.

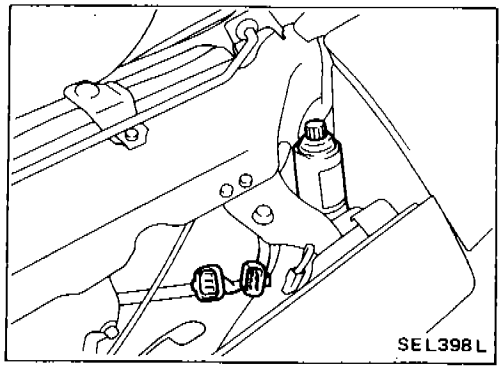

Headlamp Motor Check

1. Disconnect battery ground cable.
2. Disconnect the headlamp motor connector.
3. Use an ohmmeter to check for continuity in headlamp motor circuit while rotating motor with manual knob.

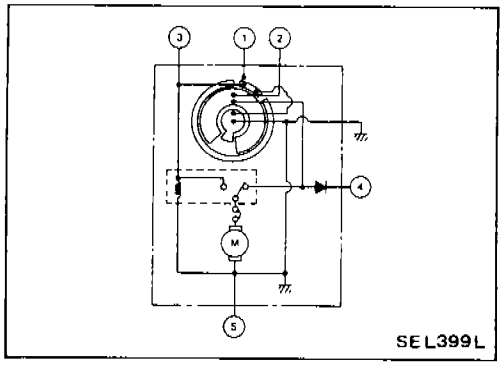


Link A position	Ohmmeter probe (+)	Ohmmeter probe (−)	Continuity
"CLOSE"	①	⑤	YES
	②	⑤	NO
	①	③	NO
	③	①	YES
"OPEN"	①	⑤	NO
	②	⑤	YES
	②	④	NO
	④	②	YES


Bulb Replacement

INSTALLING HEADLAMP RUBBER CAP

When installing the rubber cap, set the "TOP" or "▲" mark so that it is facing up.

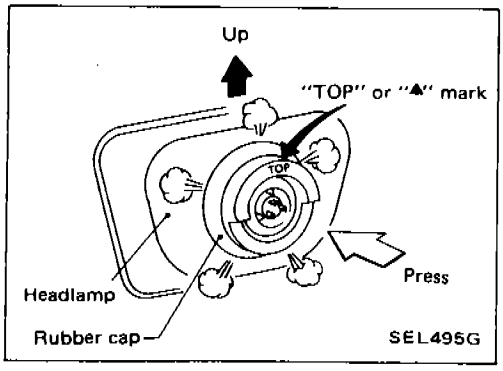

Press the rubber cap firmly so that the lip makes contact with the headlamp body.

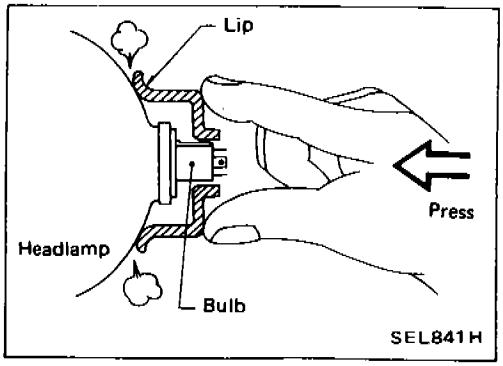

Aiming Adjustment


When performing headlamp aiming adjustment, use an aiming machine, aiming wall screen or headlamp tester. For operating instructions of any aimer, it should be in good repair, calibrated and used according to respective operation manuals supplied with the unit.

If any aimer is not available, aiming adjustment can be done as follows:

For details, refer to the regulations in your own country.

CAUTION:


a. **Keep all tires inflated to correct pressures.**
b. **Place vehicle and tester on one and same flat surface.**
c. **See that there is no-load in vehicle (coolant, engine oil filled up to correct level and full fuel tank) other than the driver (or equivalent weight placed in driver's position).**

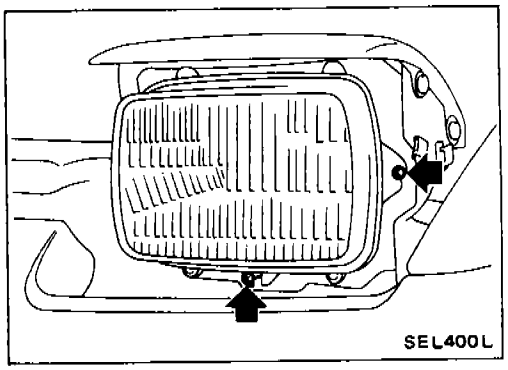

LOW BEAM

1. Turn headlamp low beam on.
2. Use adjusting screws to perform aiming adjustment.

- **First tighten the adjusting screw all the way and then make adjustment by loosening the screw.**

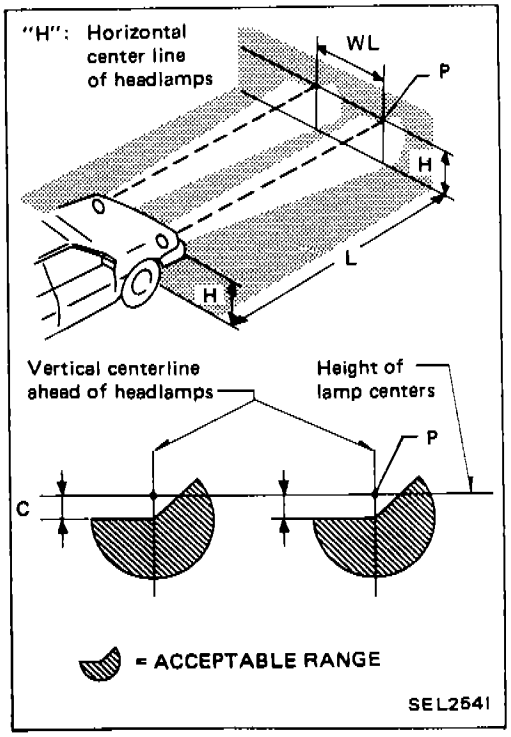


a. **Adjust headlamps so that main axis of light is parallel to center line of body and is aligned with point P shown in illustration.**
b. **Figure to the left shows headlamp aiming pattern for driving on right side of road; for driving on left side of road, aiming pattern is reversed.**
c. **Dotted lines in illustration show center of headlamp.**

"H": Horizontal center line of headlamps
"WL": Distance between each headlamp center
"L": 5,000 mm (196.85 in)
"C": 50 mm (1.97 in)


Clearance, License, Tail and Stop Lamps/Wiring Diagram

L.H. DRIVE MODEL
FOR EUROPE

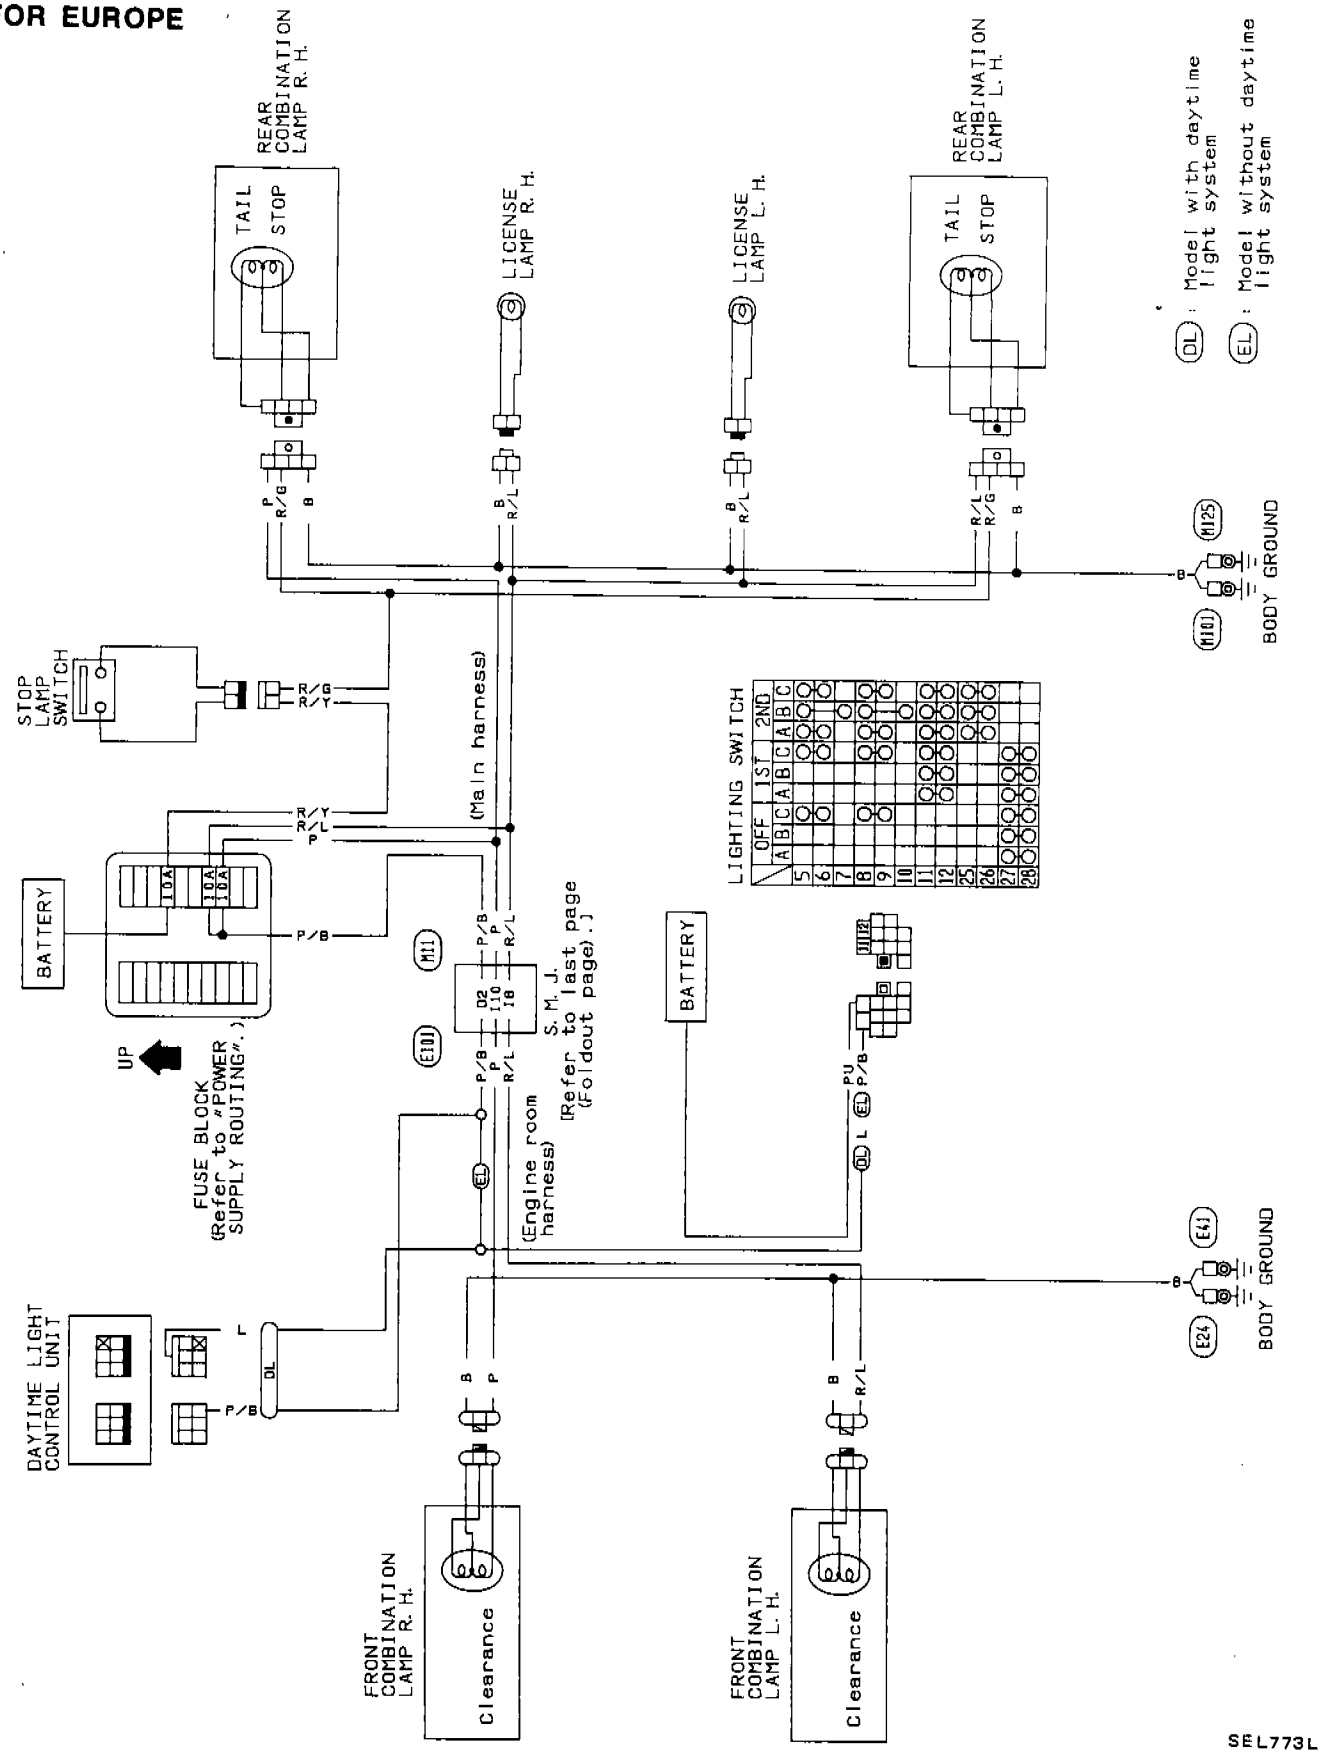


Clearance, License, Tail and Stop Lamps/Wiring Diagram (Cont'd)

EXCEPT L.H. DRIVE MODEL
FOR EUROPE

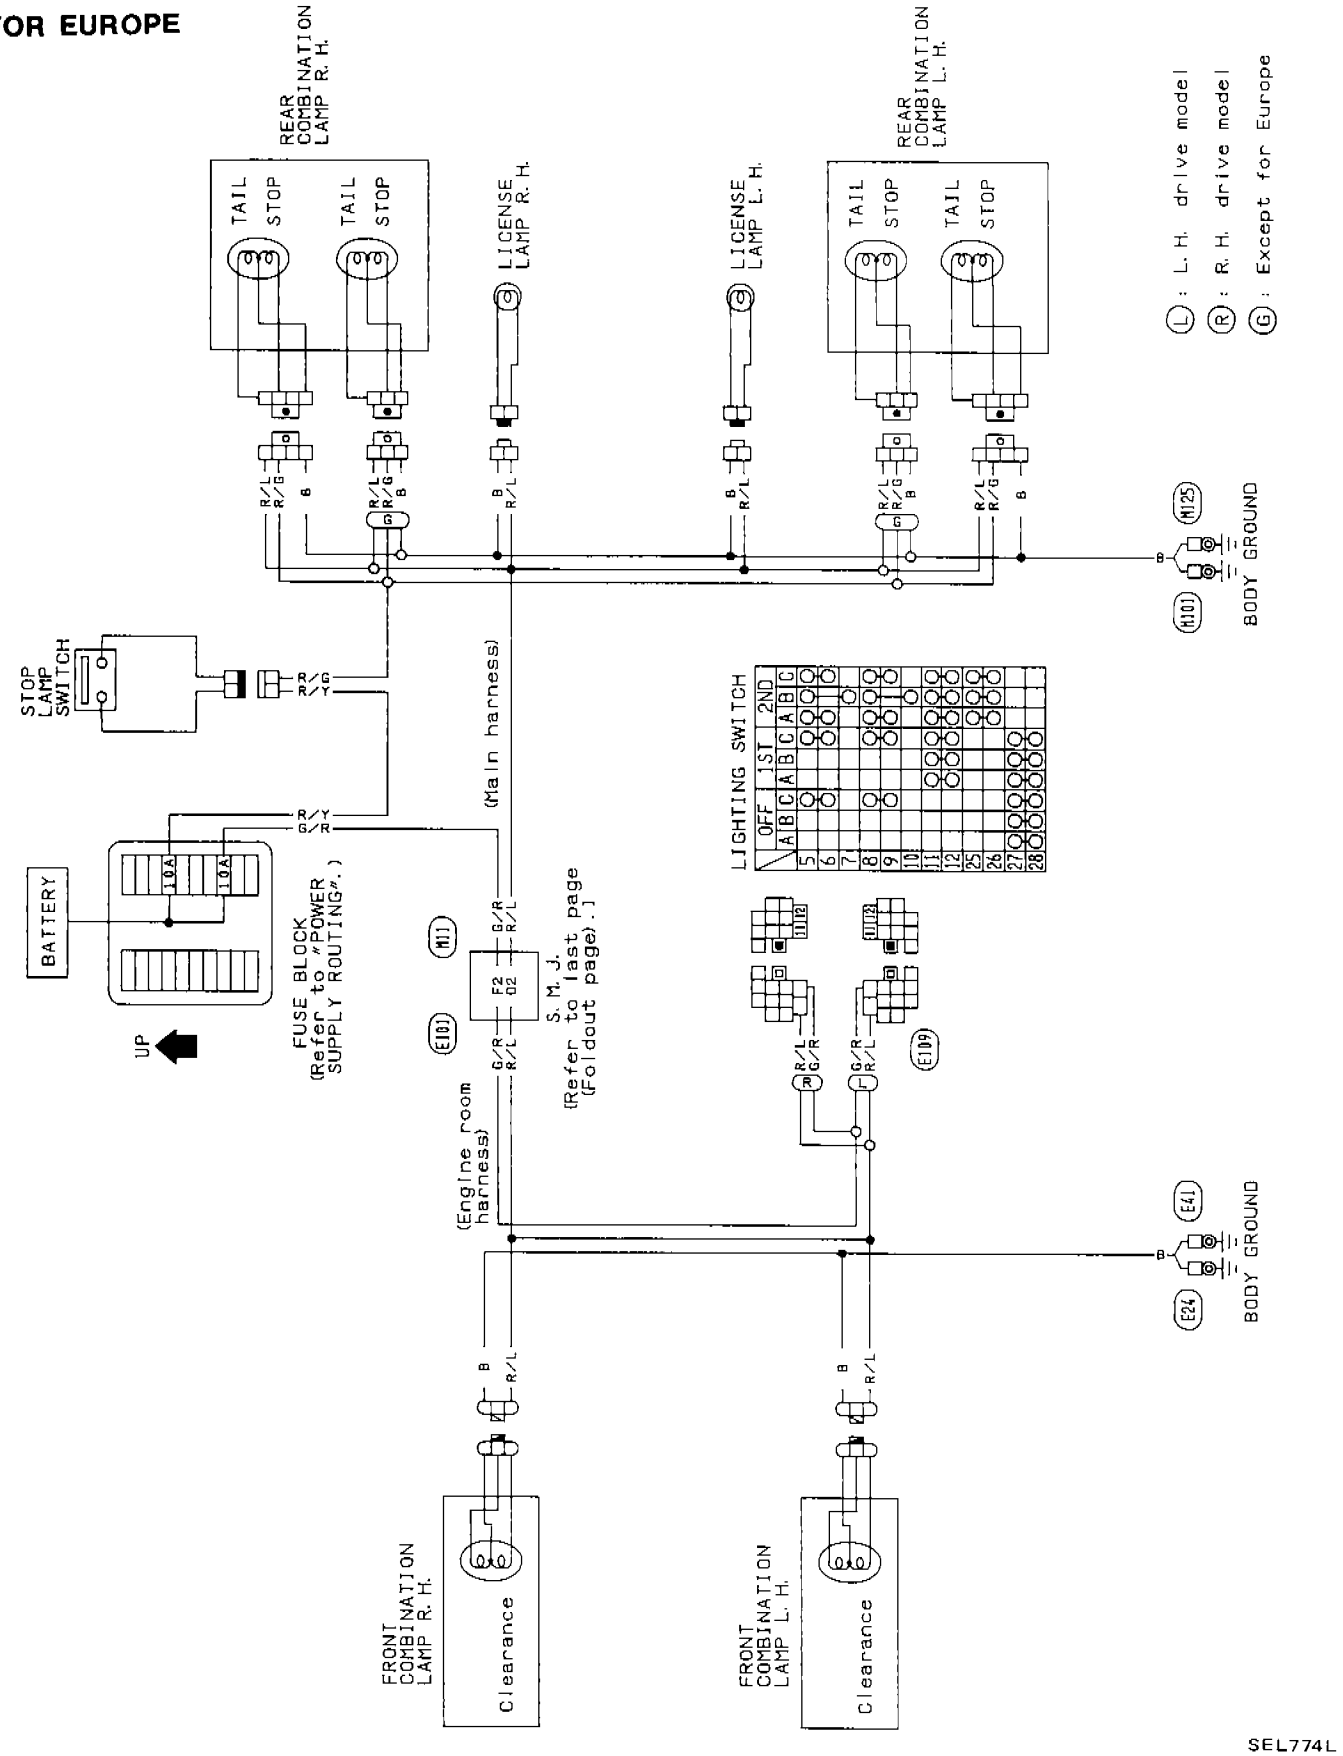


SEL774L

Back-up Lamp/Wiring Diagram

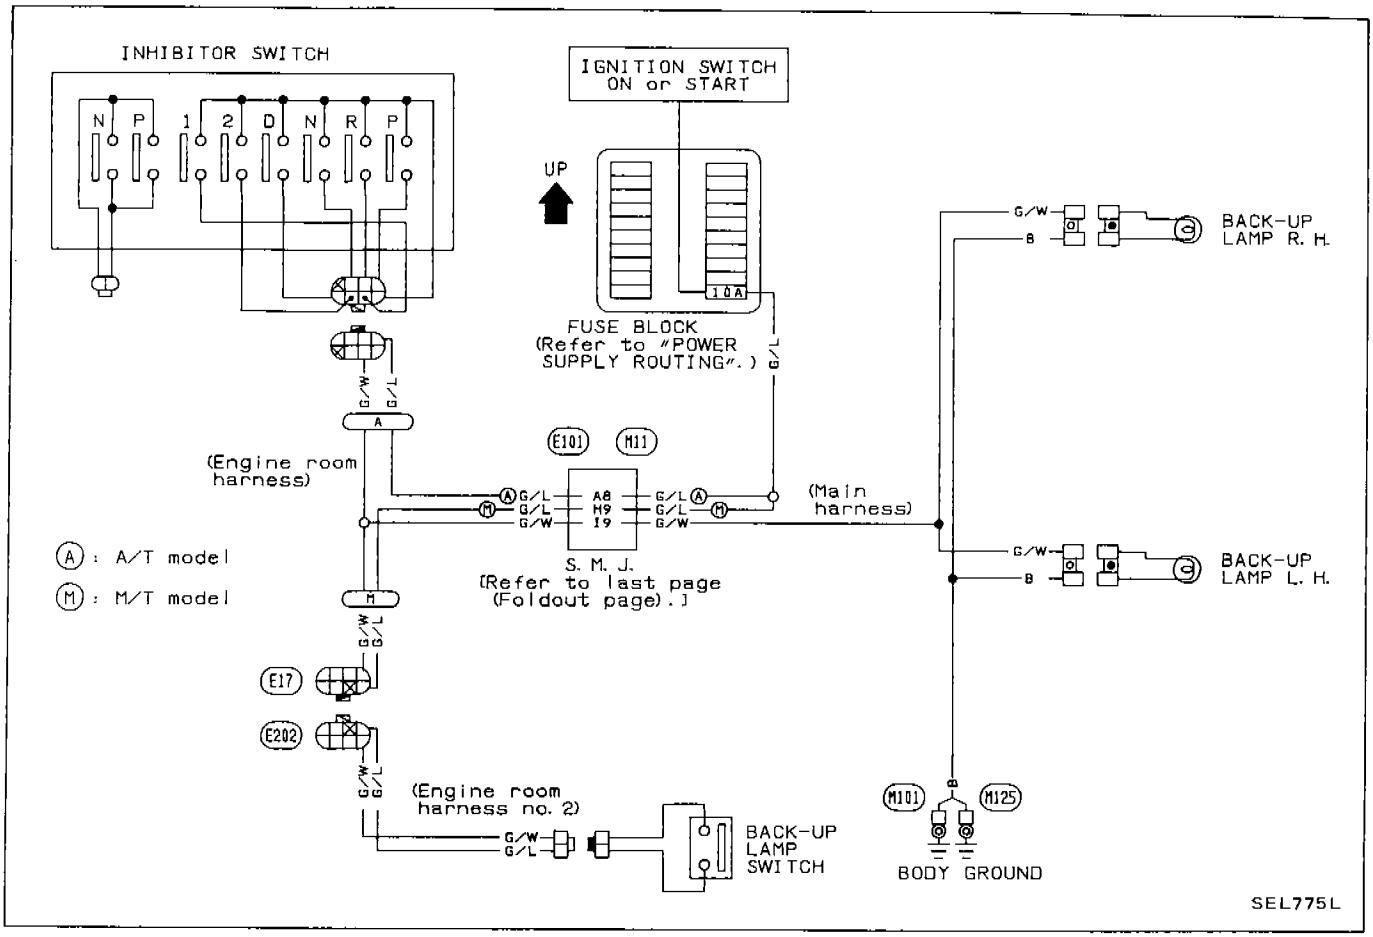


Rear Fog Lamp/Wiring Diagram

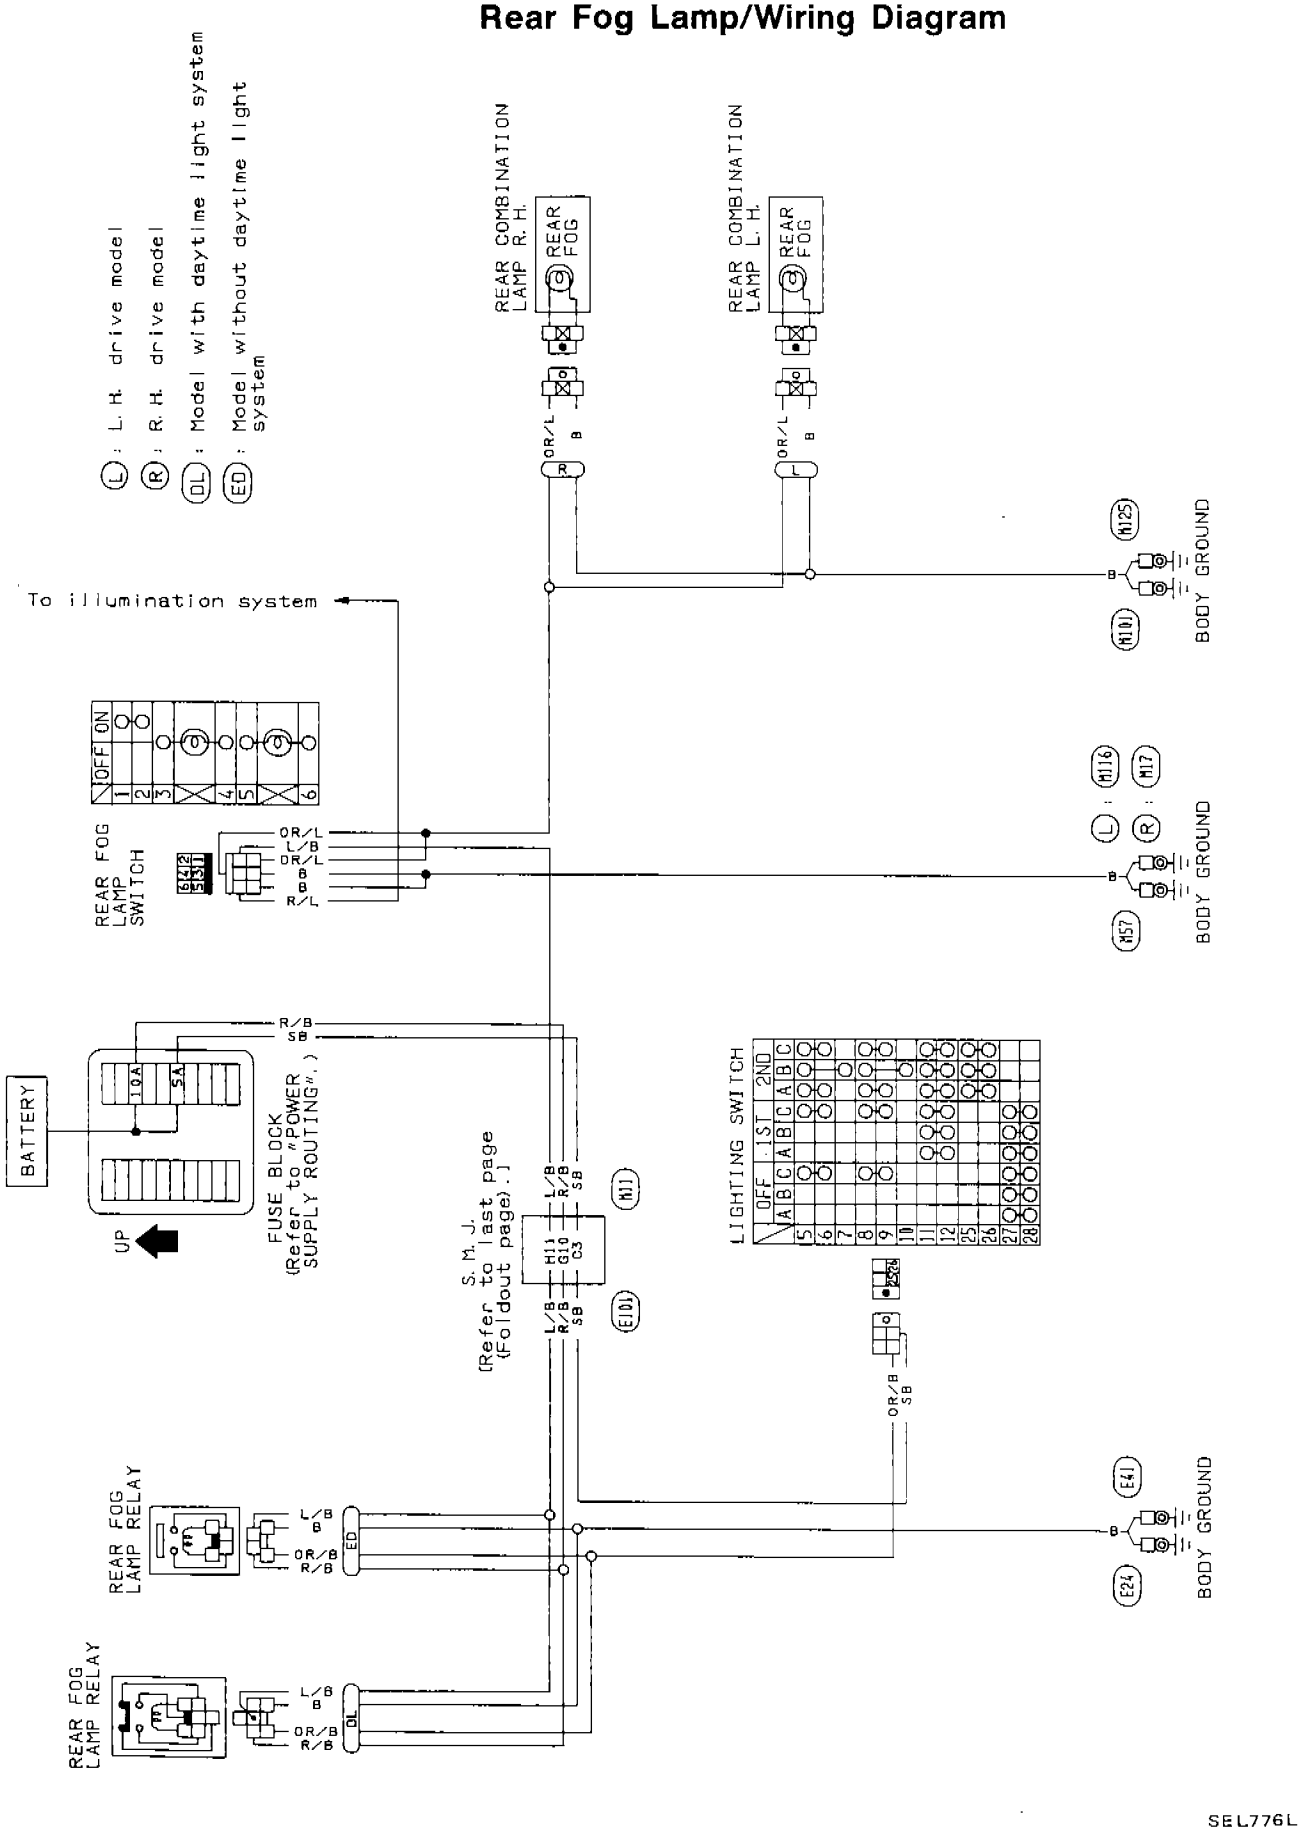


SEL776L


Daytime Light/Schematic

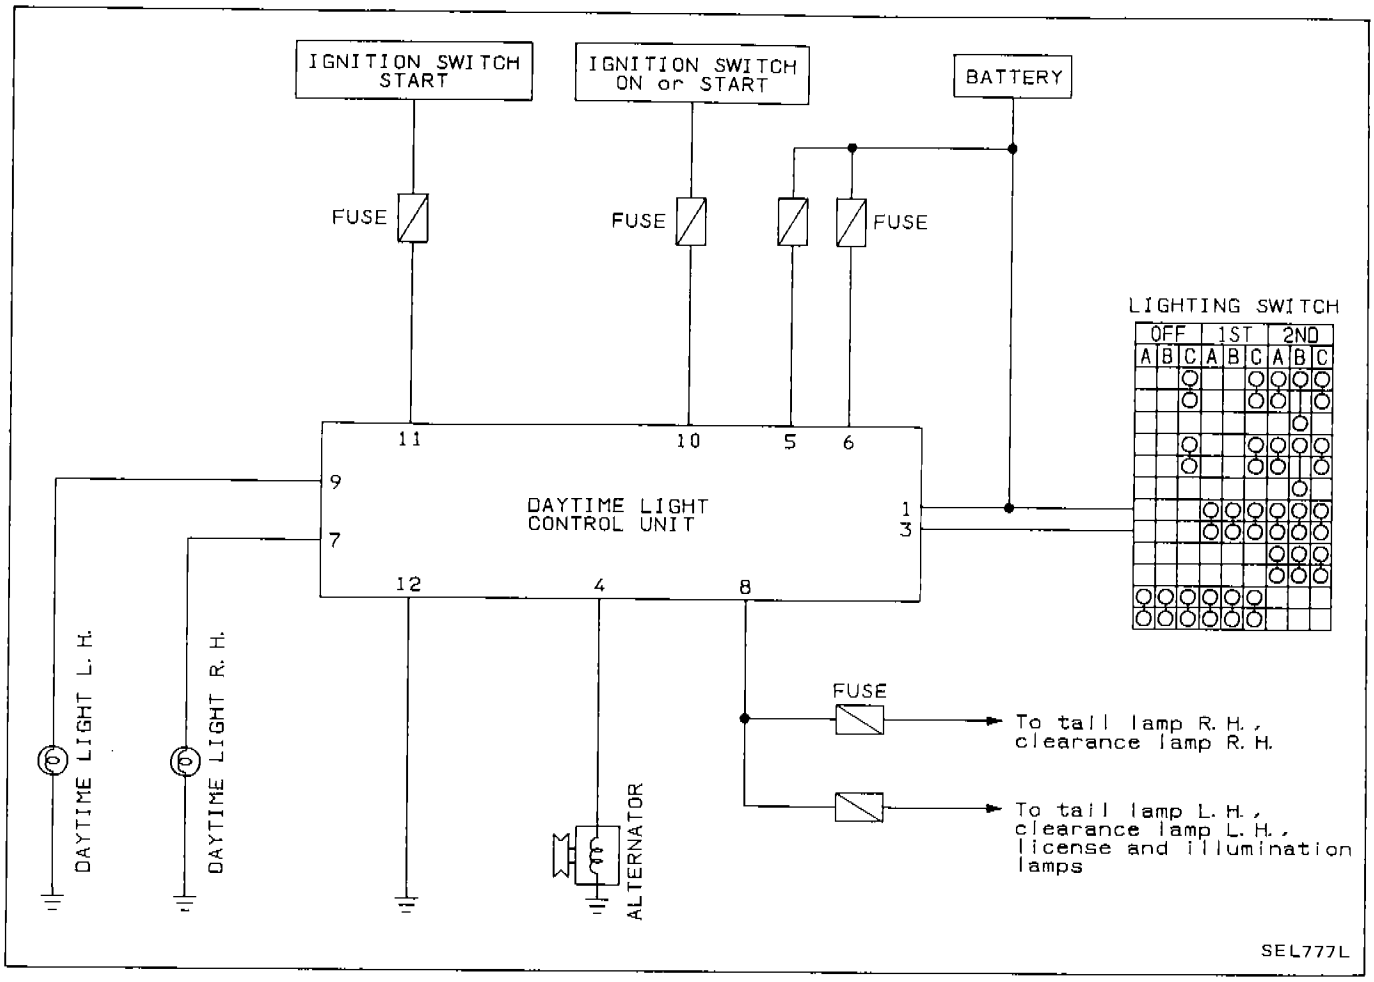


Daytime Light/Wiring Diagram

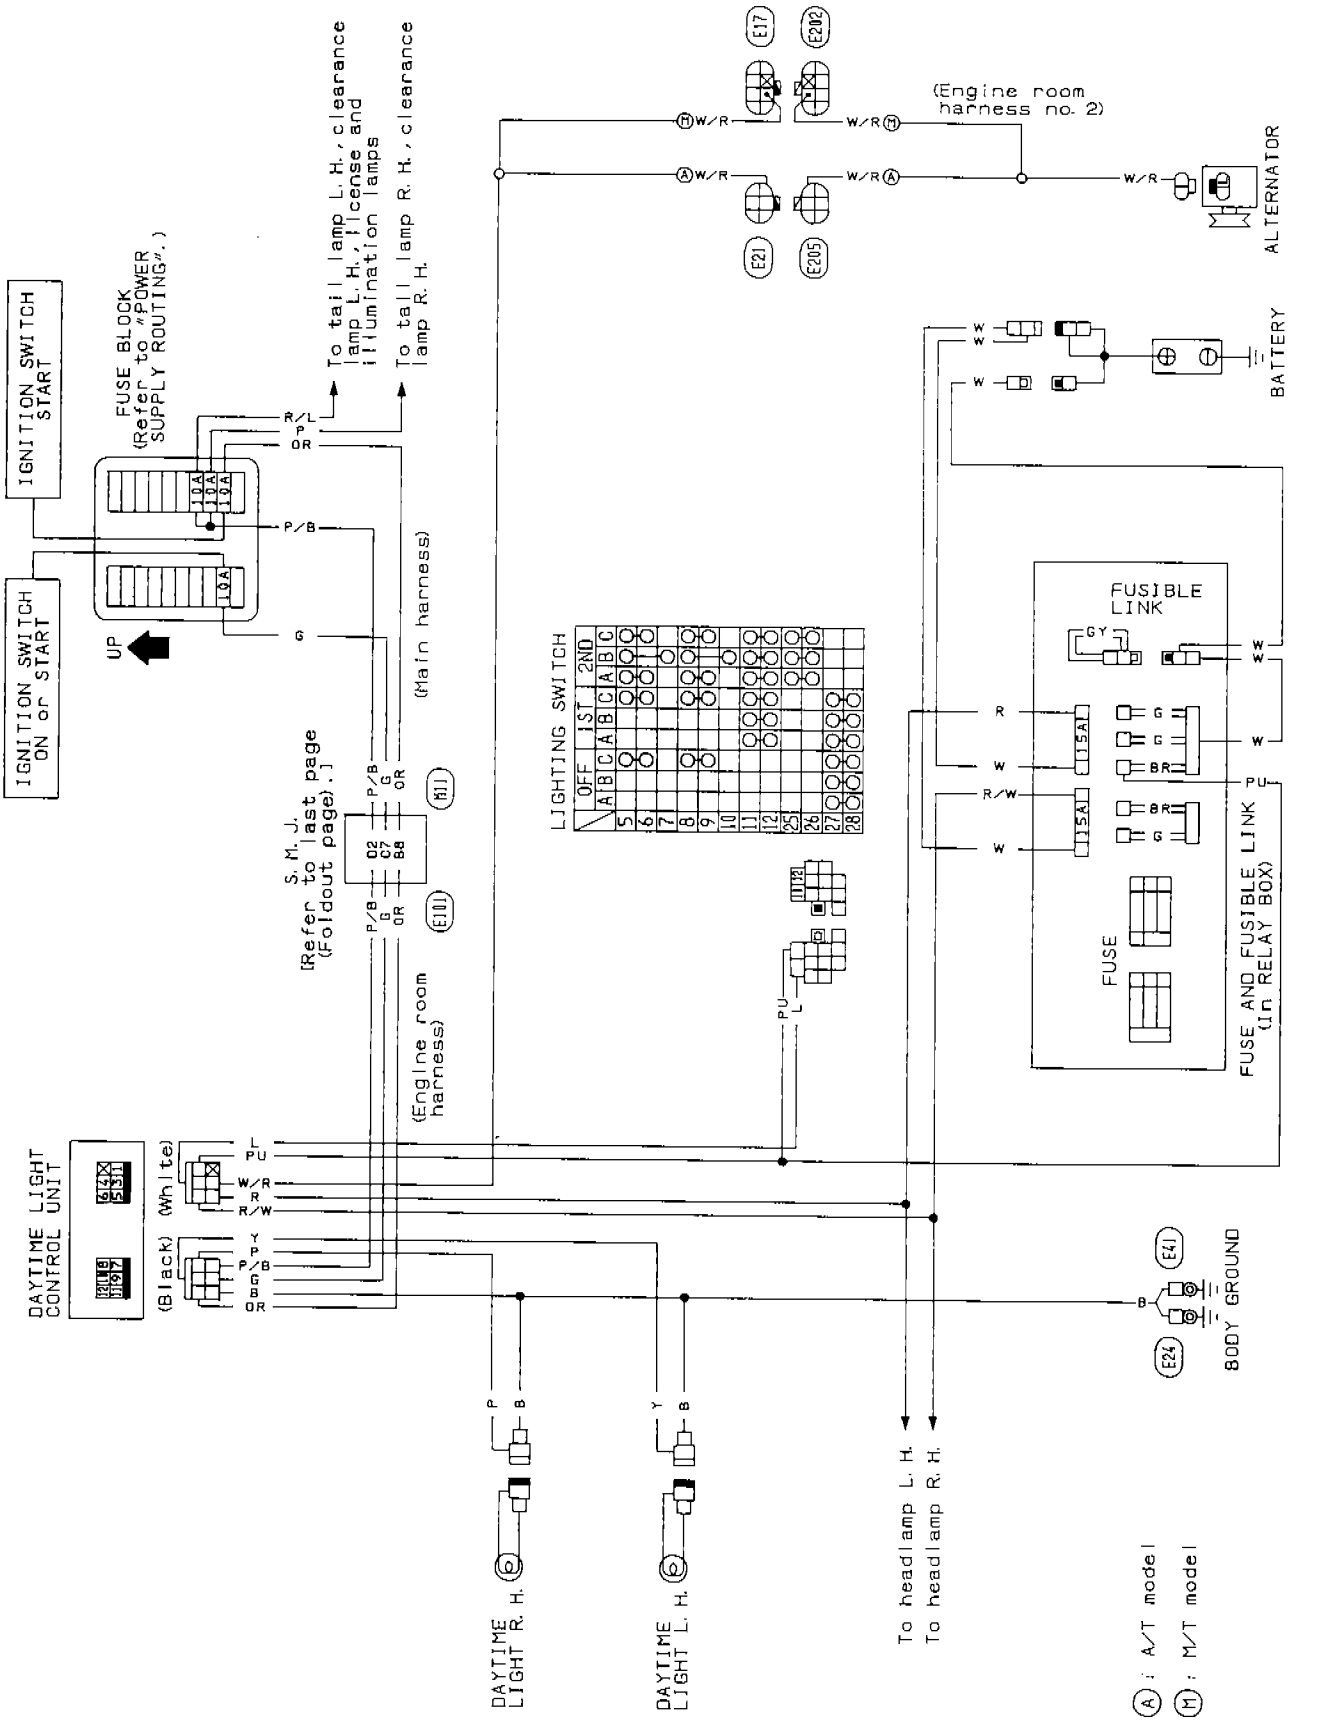

Turn Signal and Hazard Warning Lamps/Wiring Diagram

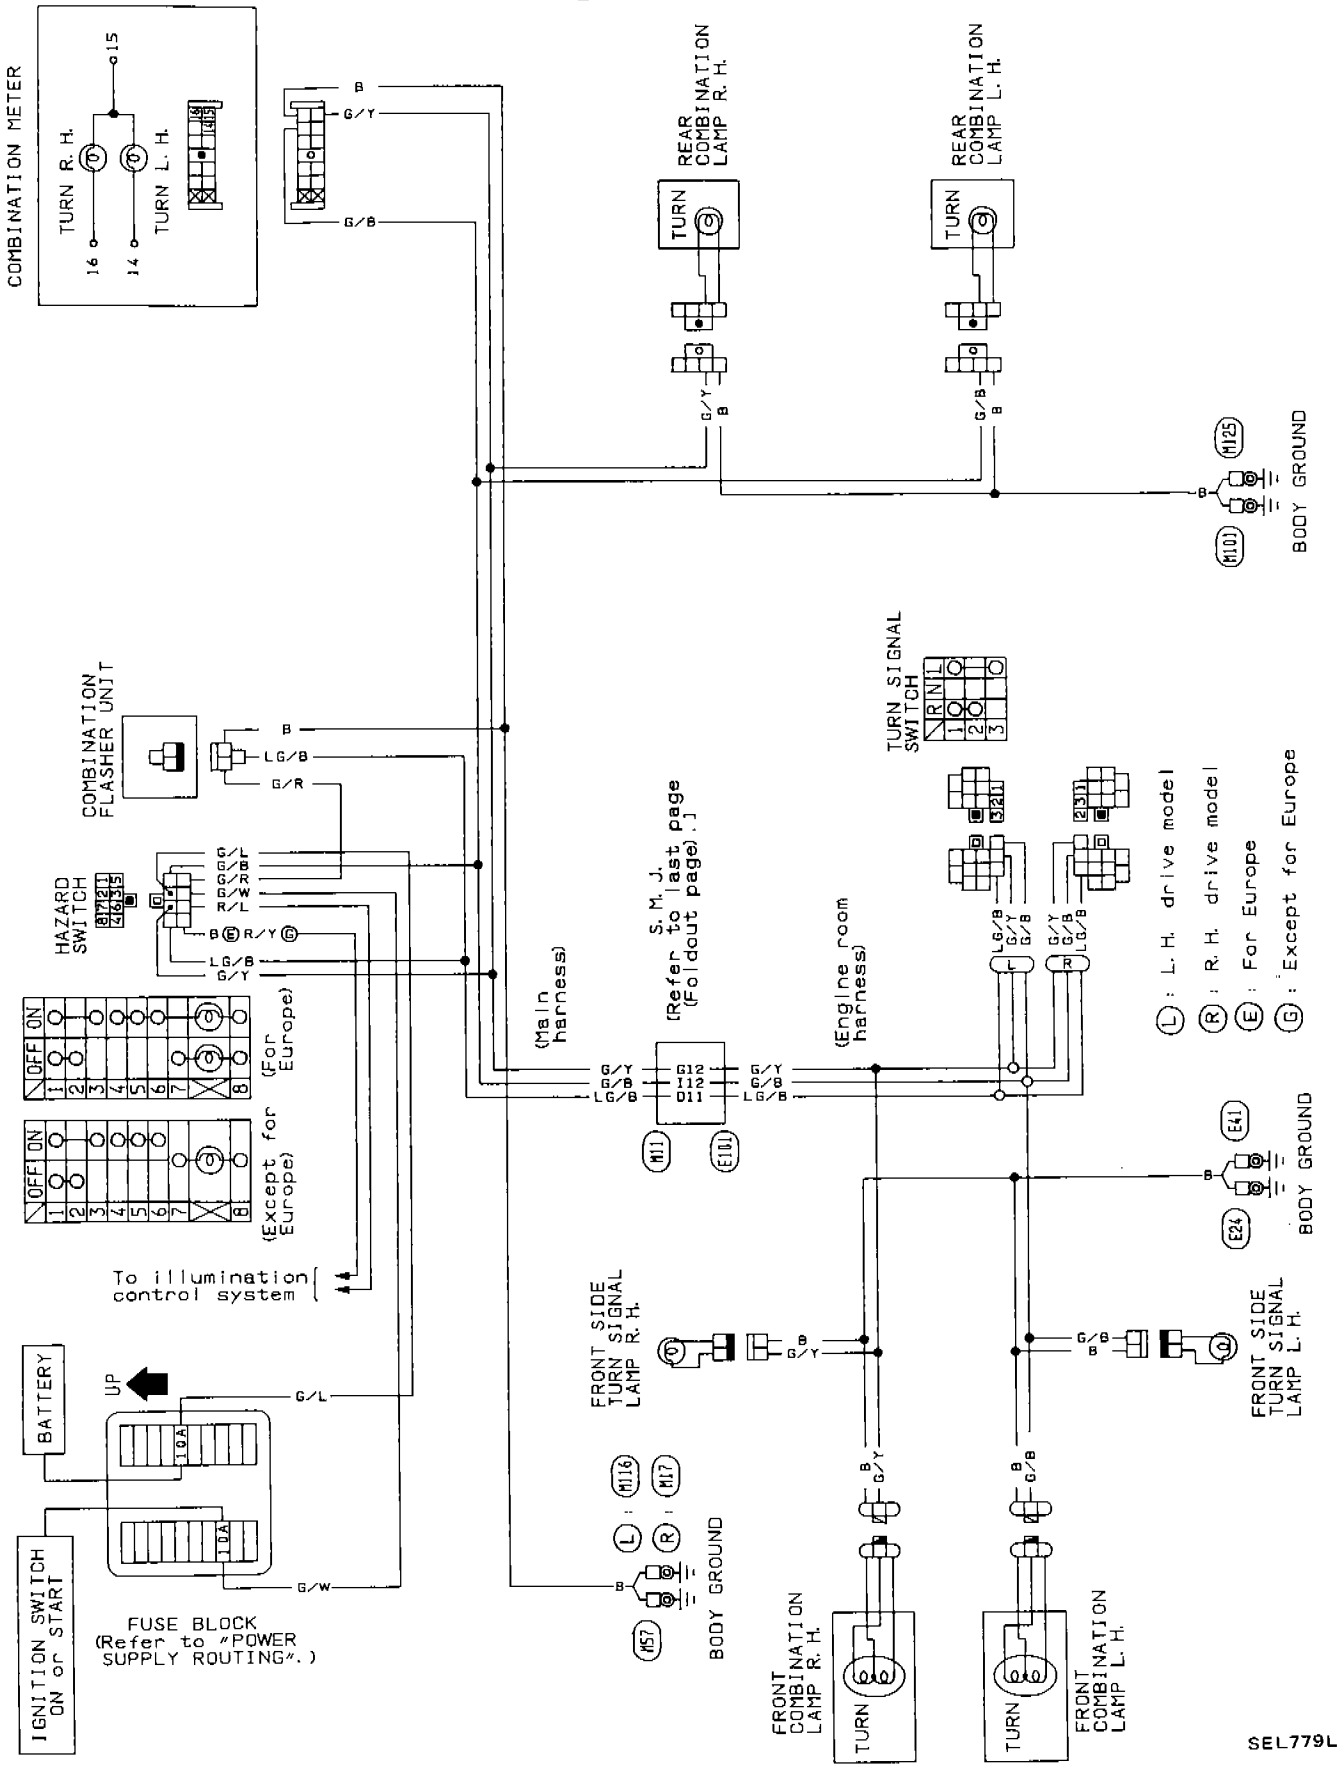

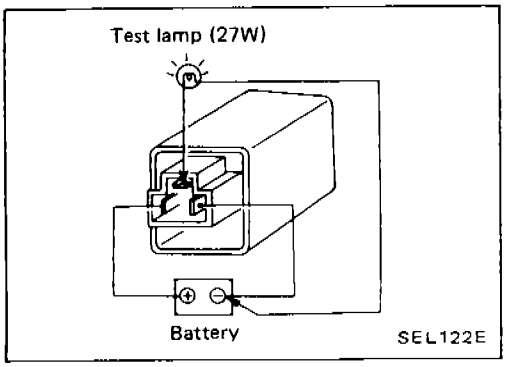


Combination Flasher Unit Check

- Before checking, ensure that bulbs meet specifications.
- Connect a battery and test lamp to the combination flasher unit, as shown. Combination flasher unit is properly functioning if it blinks when power is supplied to the circuit.

Bulb Specifications


Item	Wattage (W)
Headlamp	60/55
Front combination lamp	
Turn signal/clearance lamp	21/5
Daytime running lamp	27
Side turn signal lamp	5
Rear combination lamp	
Stop/Tail	21/5
Turn signal	21
Rear fog	21
Back-up lamp	21
License plate lamp	5
Interior lamp	10
Spot lamp	8
Luggage compartment lamp	5

Illumination/Wiring Diagram

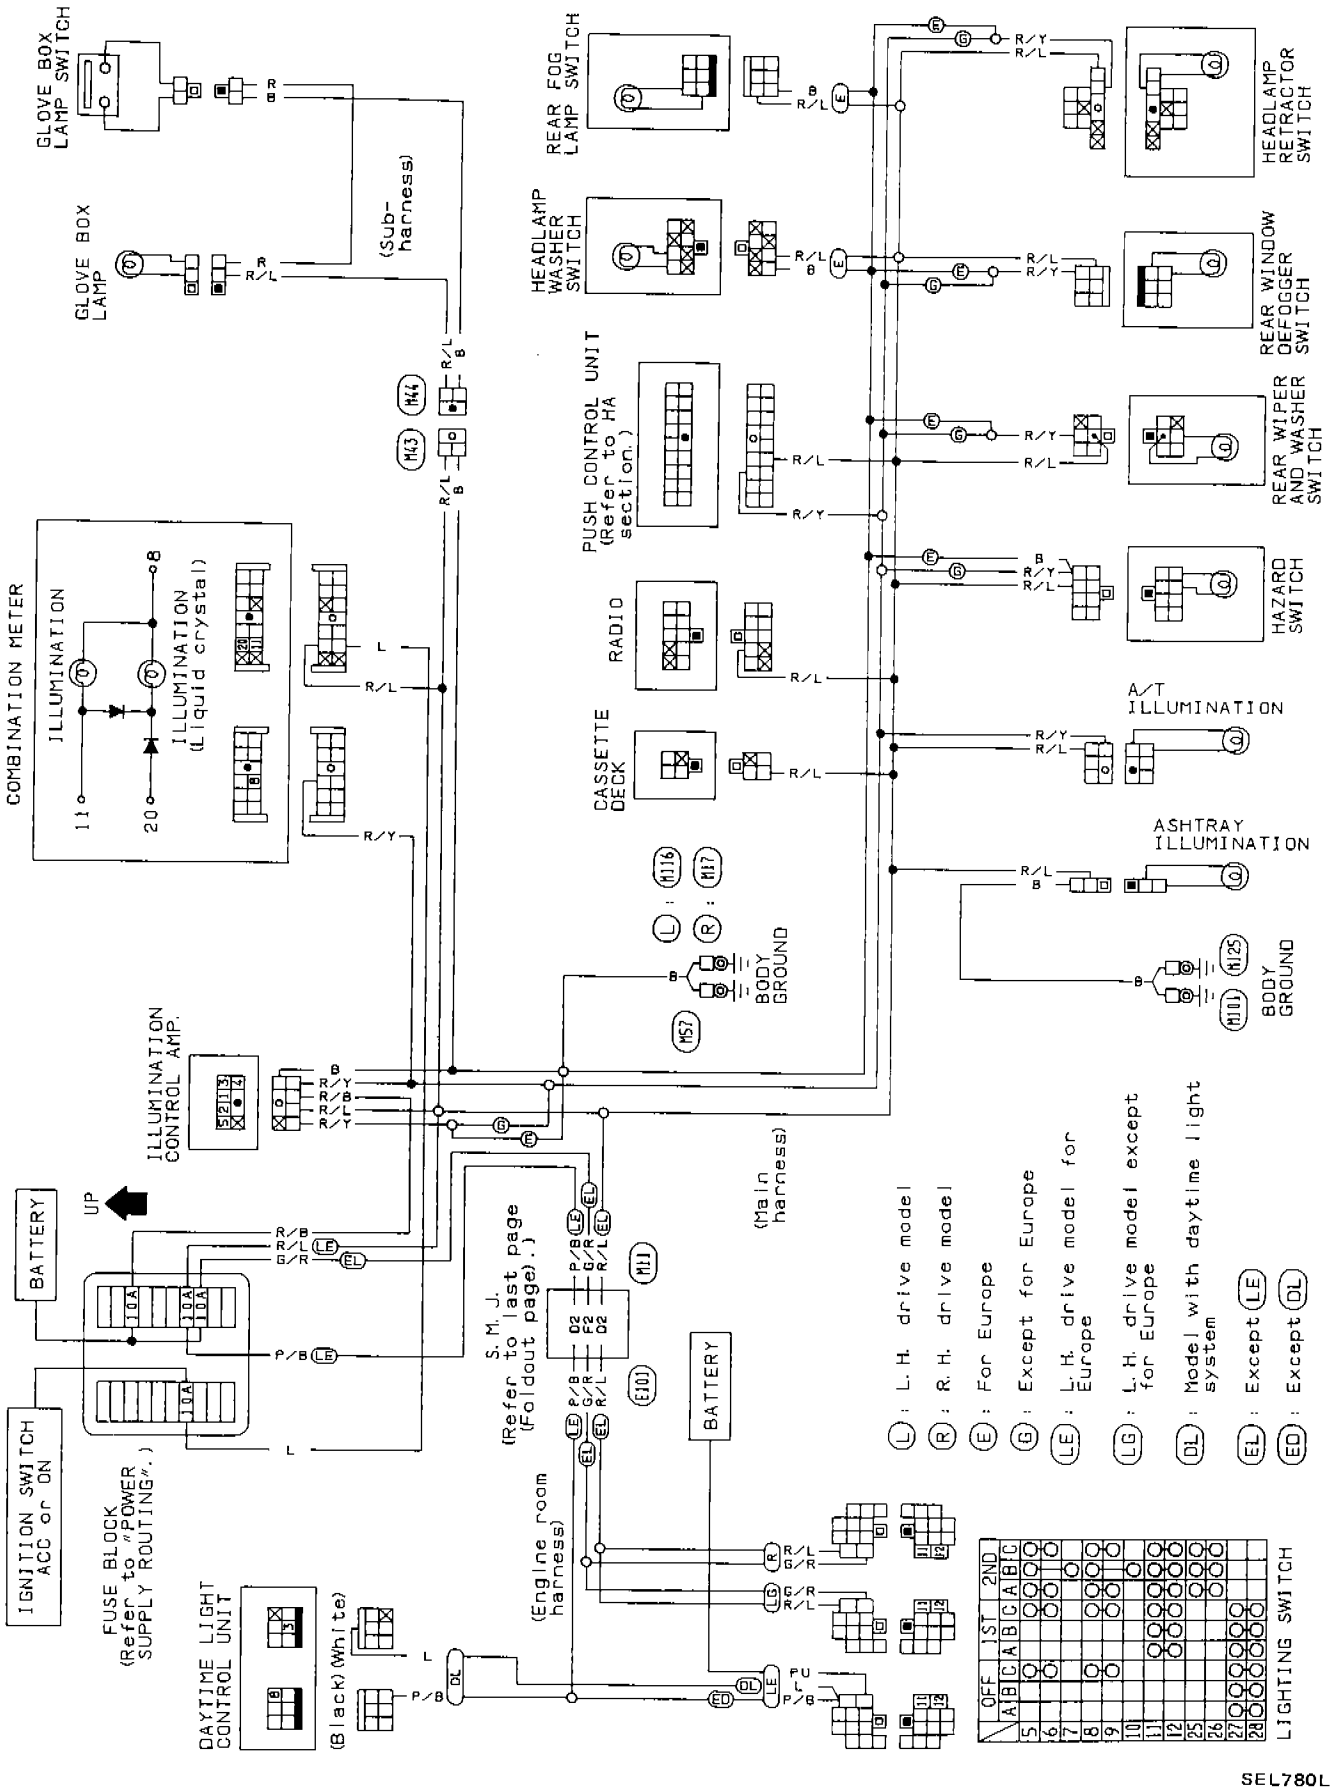


SEL780L


Interior Lamp/Wiring Diagram

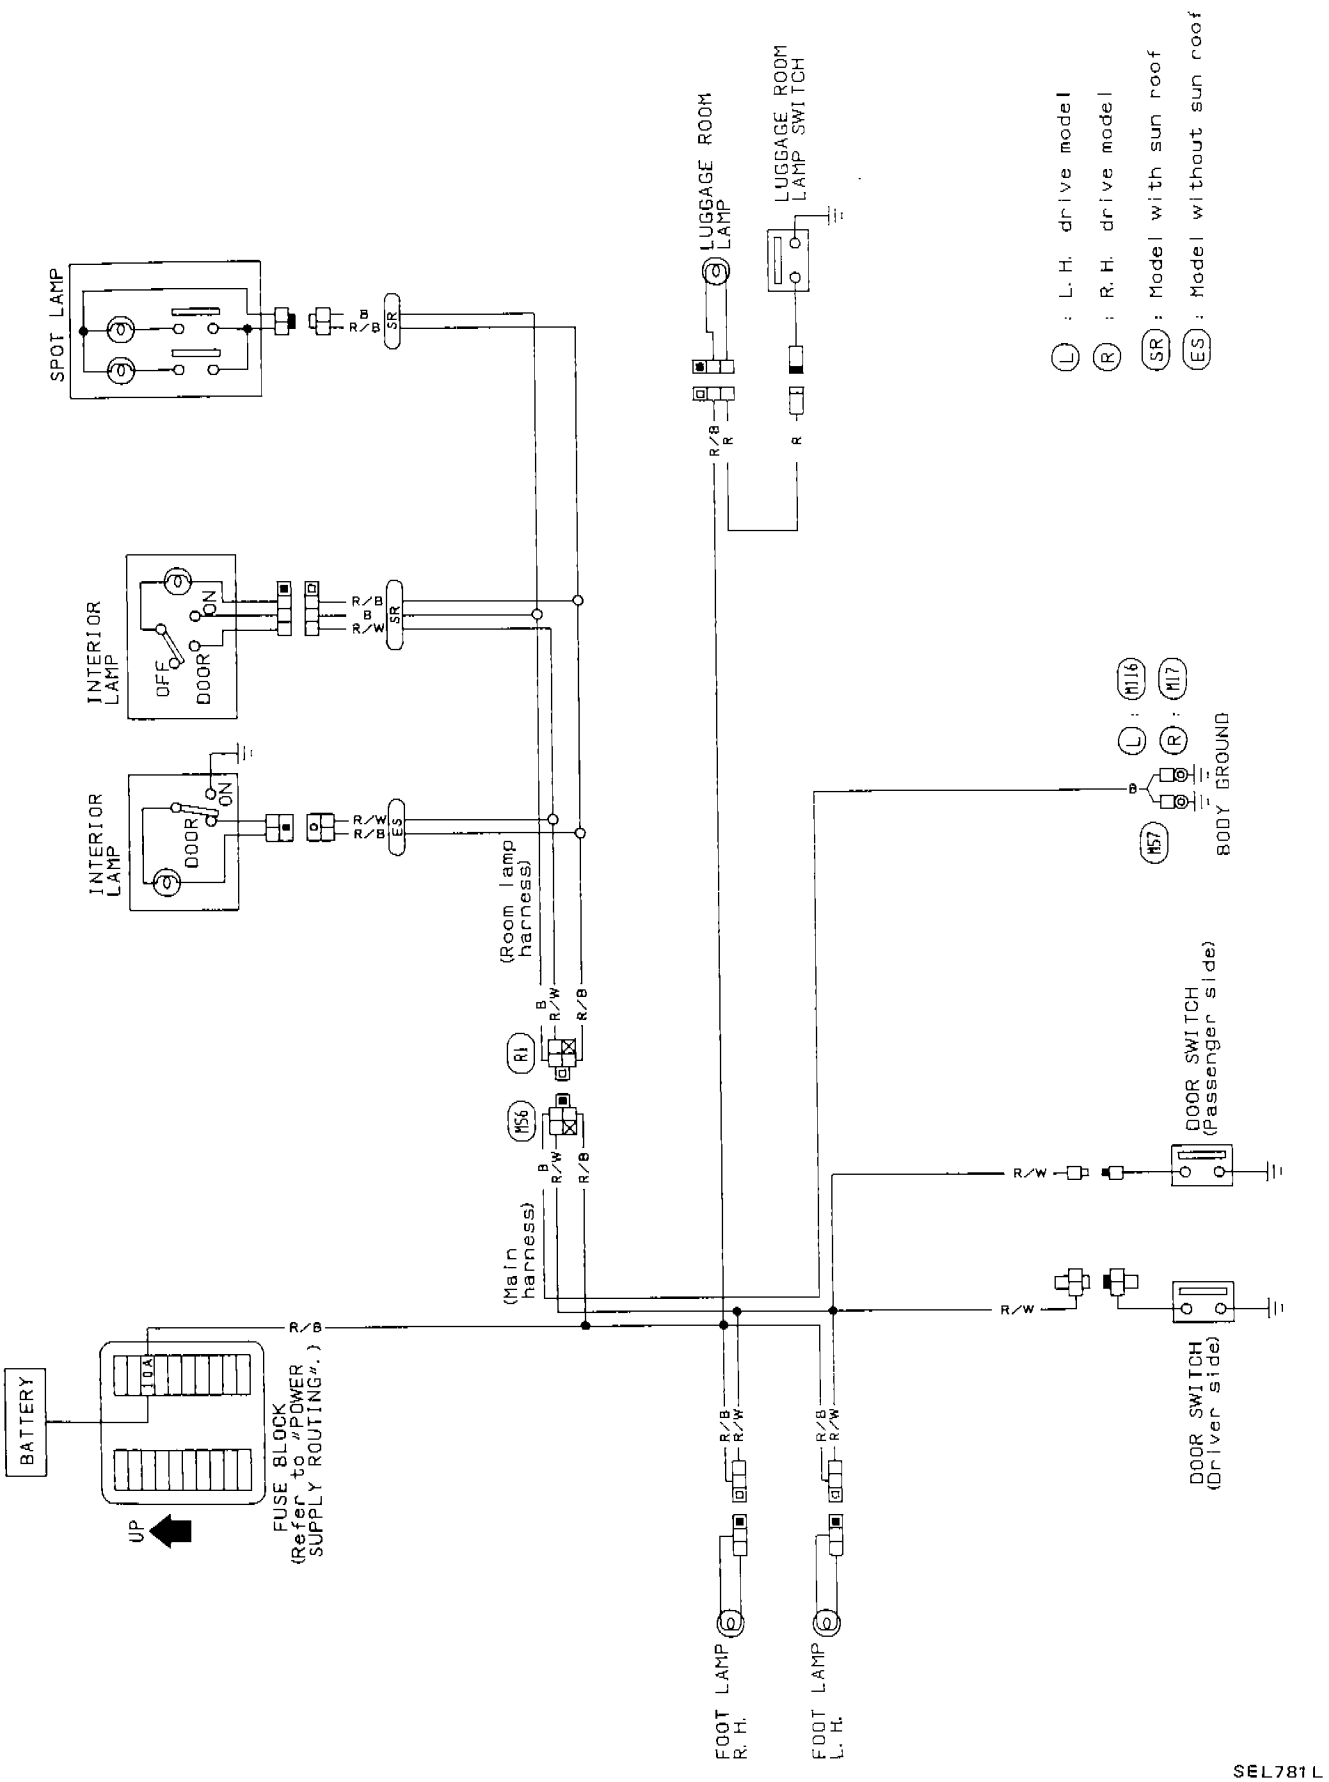



SEL781L

Combination Meter

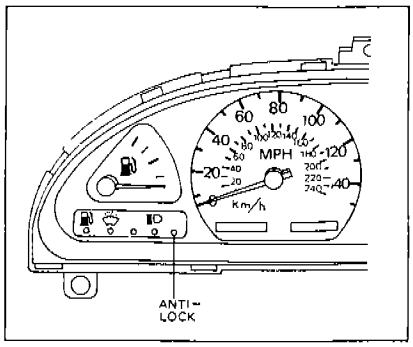

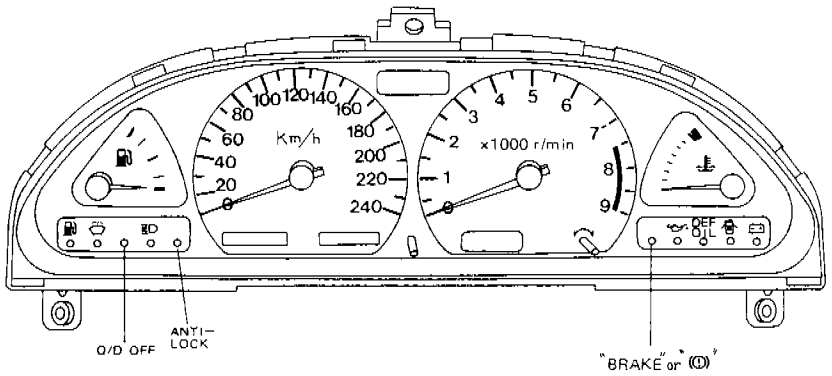


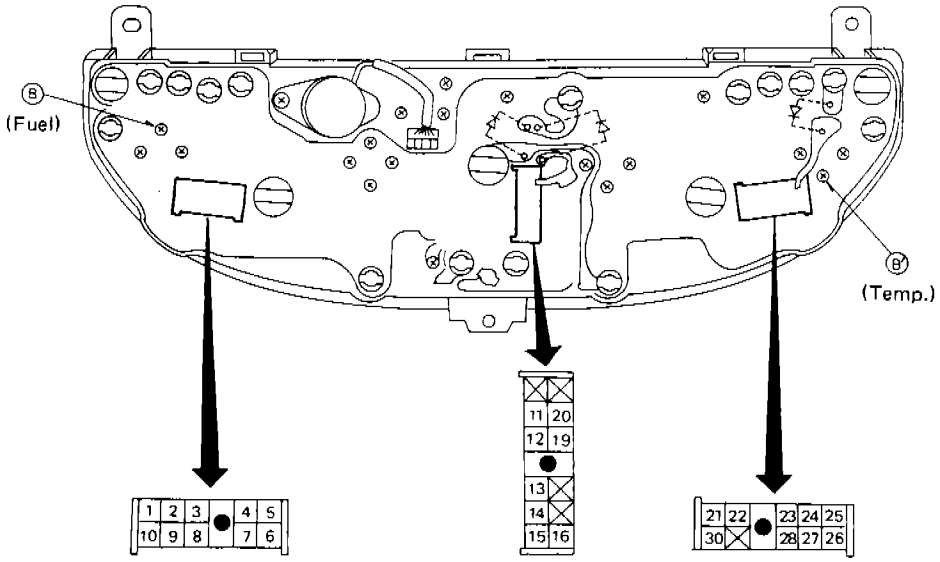


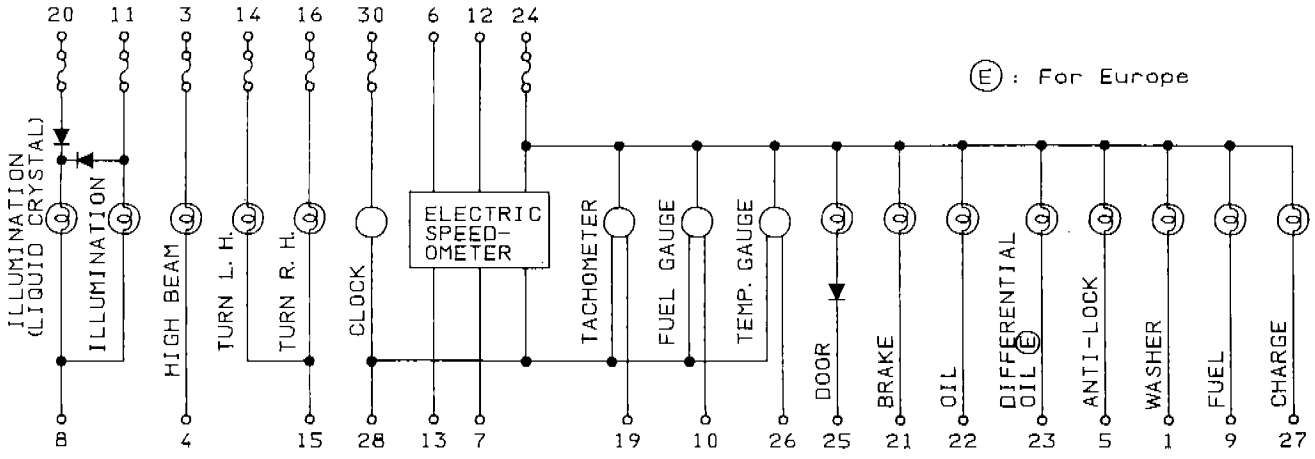



SEL698L

Tachometer, Temp. and Fuel Gauges/Wiring Diagram

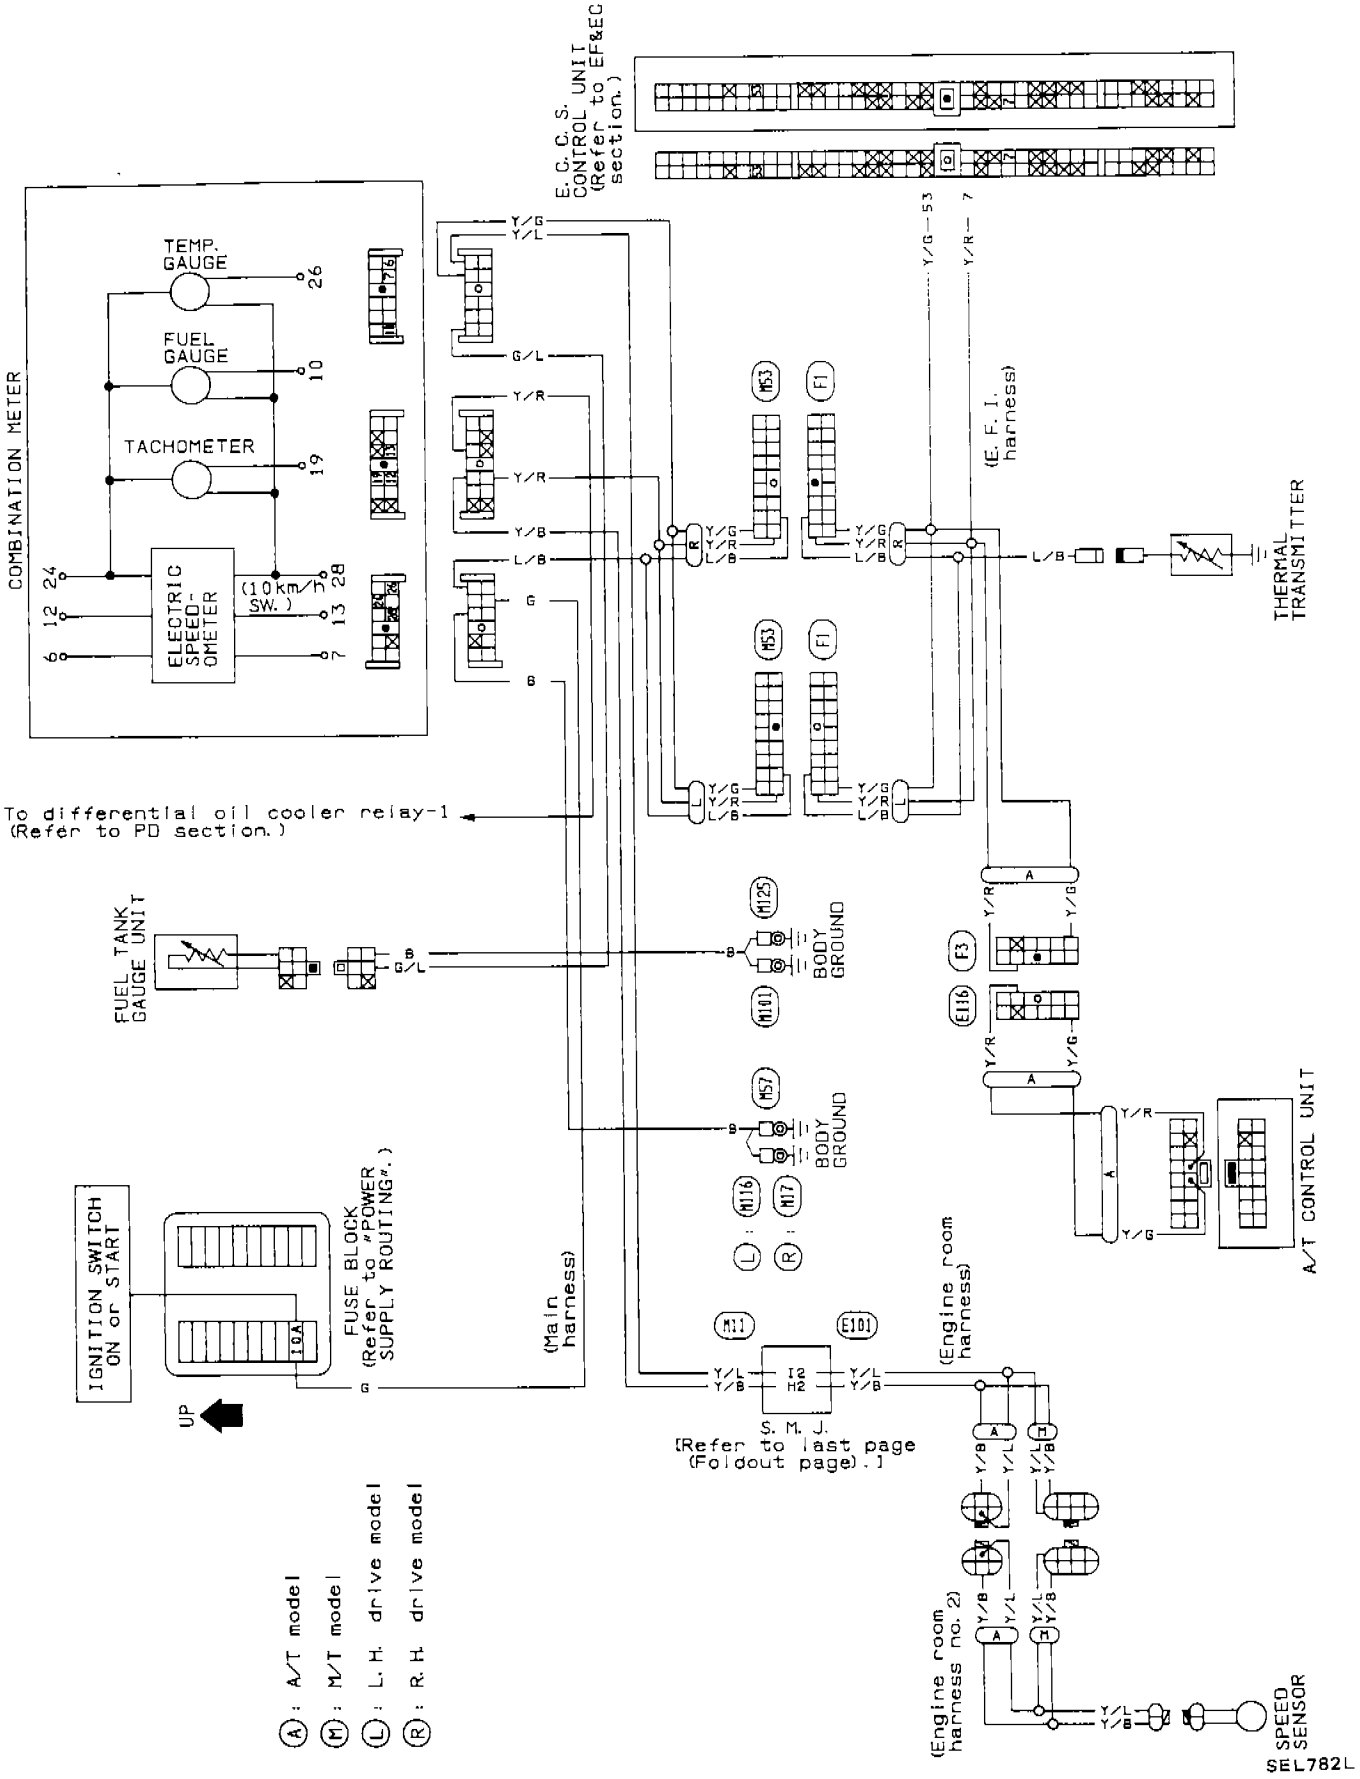

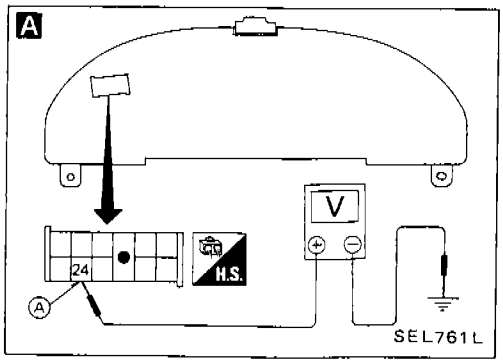

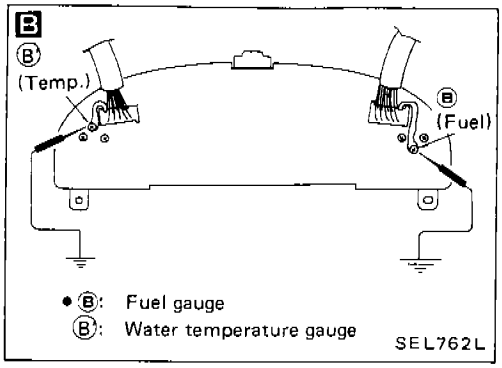

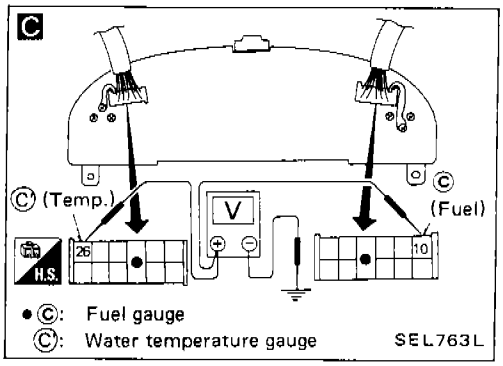

Inspection/Fuel Gauge and Water Temperature Gauge

INSPECTION START

A

CHECK POWER SOURCE.
1) Turn ignition switch "ON".
2) Check voltage between terminal Ⓐ and ground.
Battery voltage should exist.

N.G. → Check the following items.
1) Harness continuity between battery terminal and combination meter
2) Ignition relay
3) Fusible link and fuse
4) Ignition switch

O.K.

B

CHECK GAUGE OPERATION.
1) Turn ignition switch "ON".
2) Connect terminals Ⓑ (Fuel), Ⓑ (Temp.) and ground with wire for **less than 10 seconds.**
3) Check operation of gauge.
Gauge should move smoothly to full scale.

N.G. → Repair or replace gauge.

O.K.

C

Check harness continuity between component and combination meters Ⓒ (Fuel), Ⓒ (Temp.).

N.G. → Repair or replace.

O.K.


CHECK COMPONENT.
Check gauge units and harness.
Refer to "Fuel Tank Gauge Unit Check" or "Thermal Transmitter Check".

N.G. → Repair or replace.
Refer to FE section. (Fuel gauge)

O.K.

Reinstall any part removed.

INSPECTION END

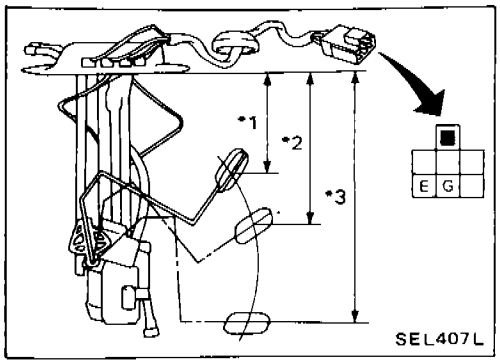


Fuel Tank Gauge Unit Check

● For removal, refer to FE section.

Check the resistance between terminals Ⓖ and Ⓔ.


Ohmmeter (+)	Ohmmeter (−)	Float position mm (in)			Resistance Ω	Fuel value ℓ (Imp gal)
G	E	*1	Full	Approx. 64 (2.52)	4.3 - 6.3	57.6 (12-5/8)
		*2	1/2	Approx. 137 (5.39)	27.7 - 34.3	32.9 (7-1/4)
		*3	Empty	Approx. 210 (8.27)	73.3 - 84.8	7.2 (1-5/8)

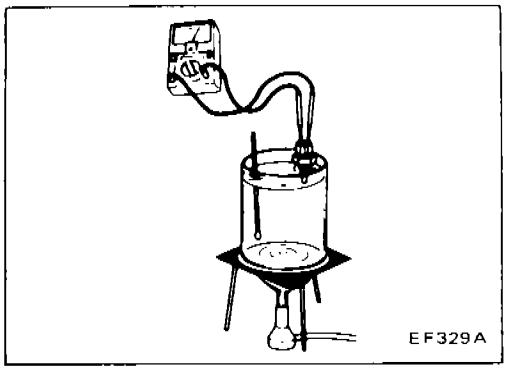

Thermal Transmitter Check

Check the resistance between the terminals of thermal transmitter and body ground.


Water temperature	Resistance
60°C (140°F)	Approx. 70 - 90Ω
100°C (212°F)	Approx. 21 - 24Ω

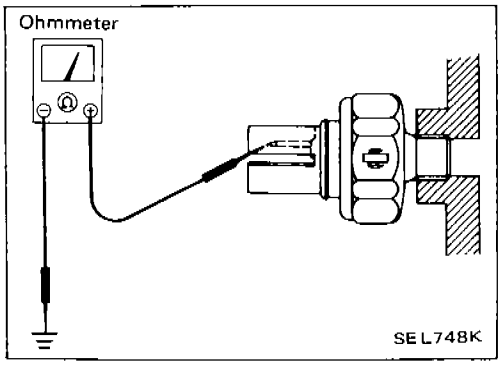

Oil Pressure Switch Check

Check the continuity between the terminals of oil pressure switch and body ground.


	Oil pressure kPa (bar, kg/cm², psi)	Continuity
Engine start	More than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1.4 - 2.8)	NO
Engine stop	Less than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1.4 - 2.8)	YES

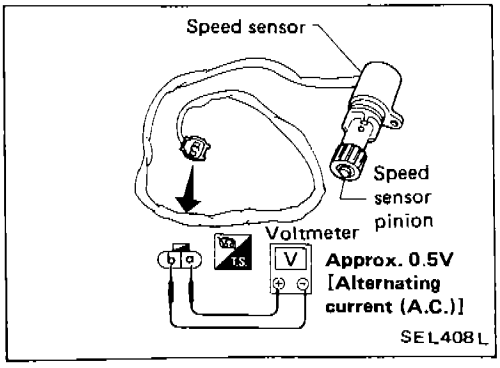

Speed Sensor Signal Check


1. Remove speed sensor from transmission.
   Location: Refer to "Location of Electrical Units".
2. Turn speedometer pinion quickly and measure voltage across ⓐ and ⓑ.

Warning Lamps/Schematic

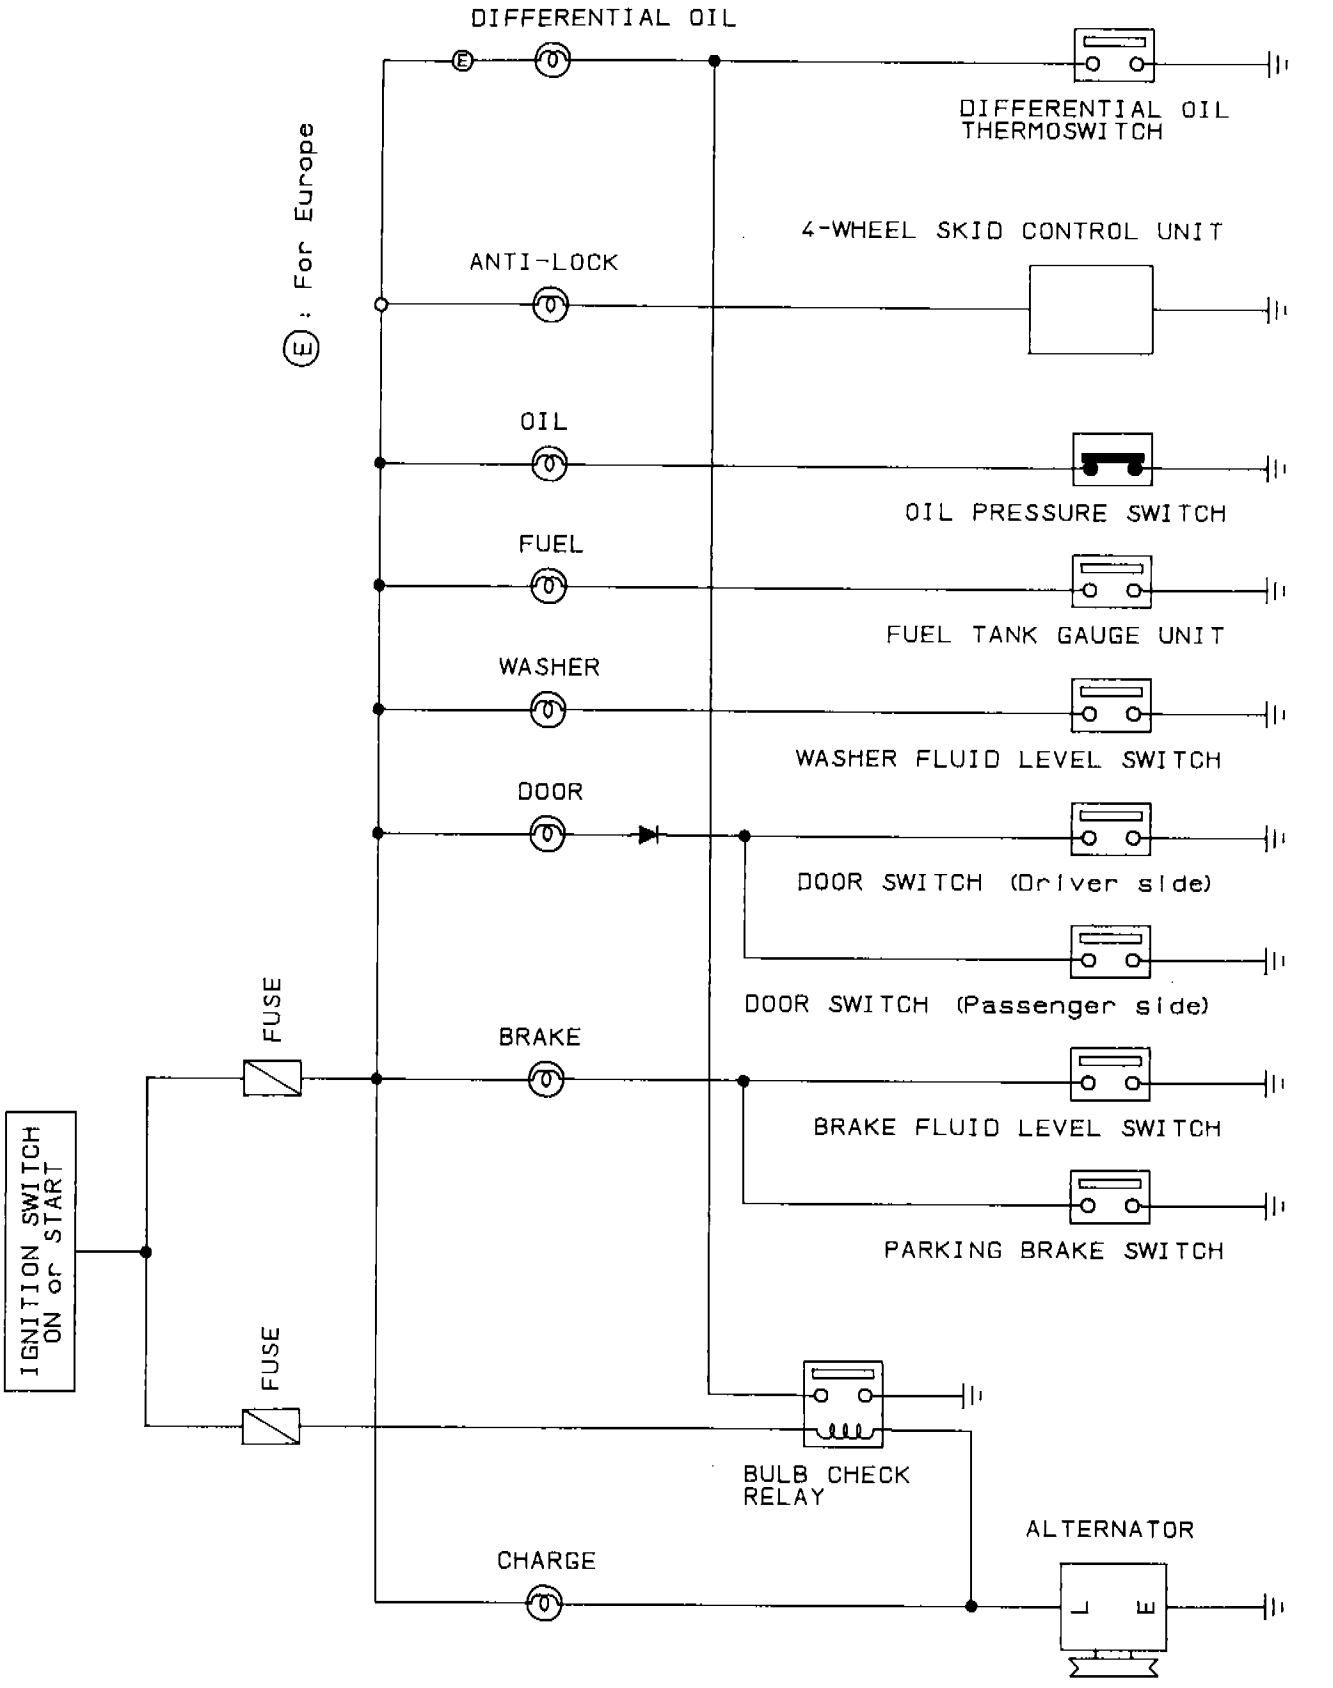



SEL783L

Warning Lamps/Wiring Diagram

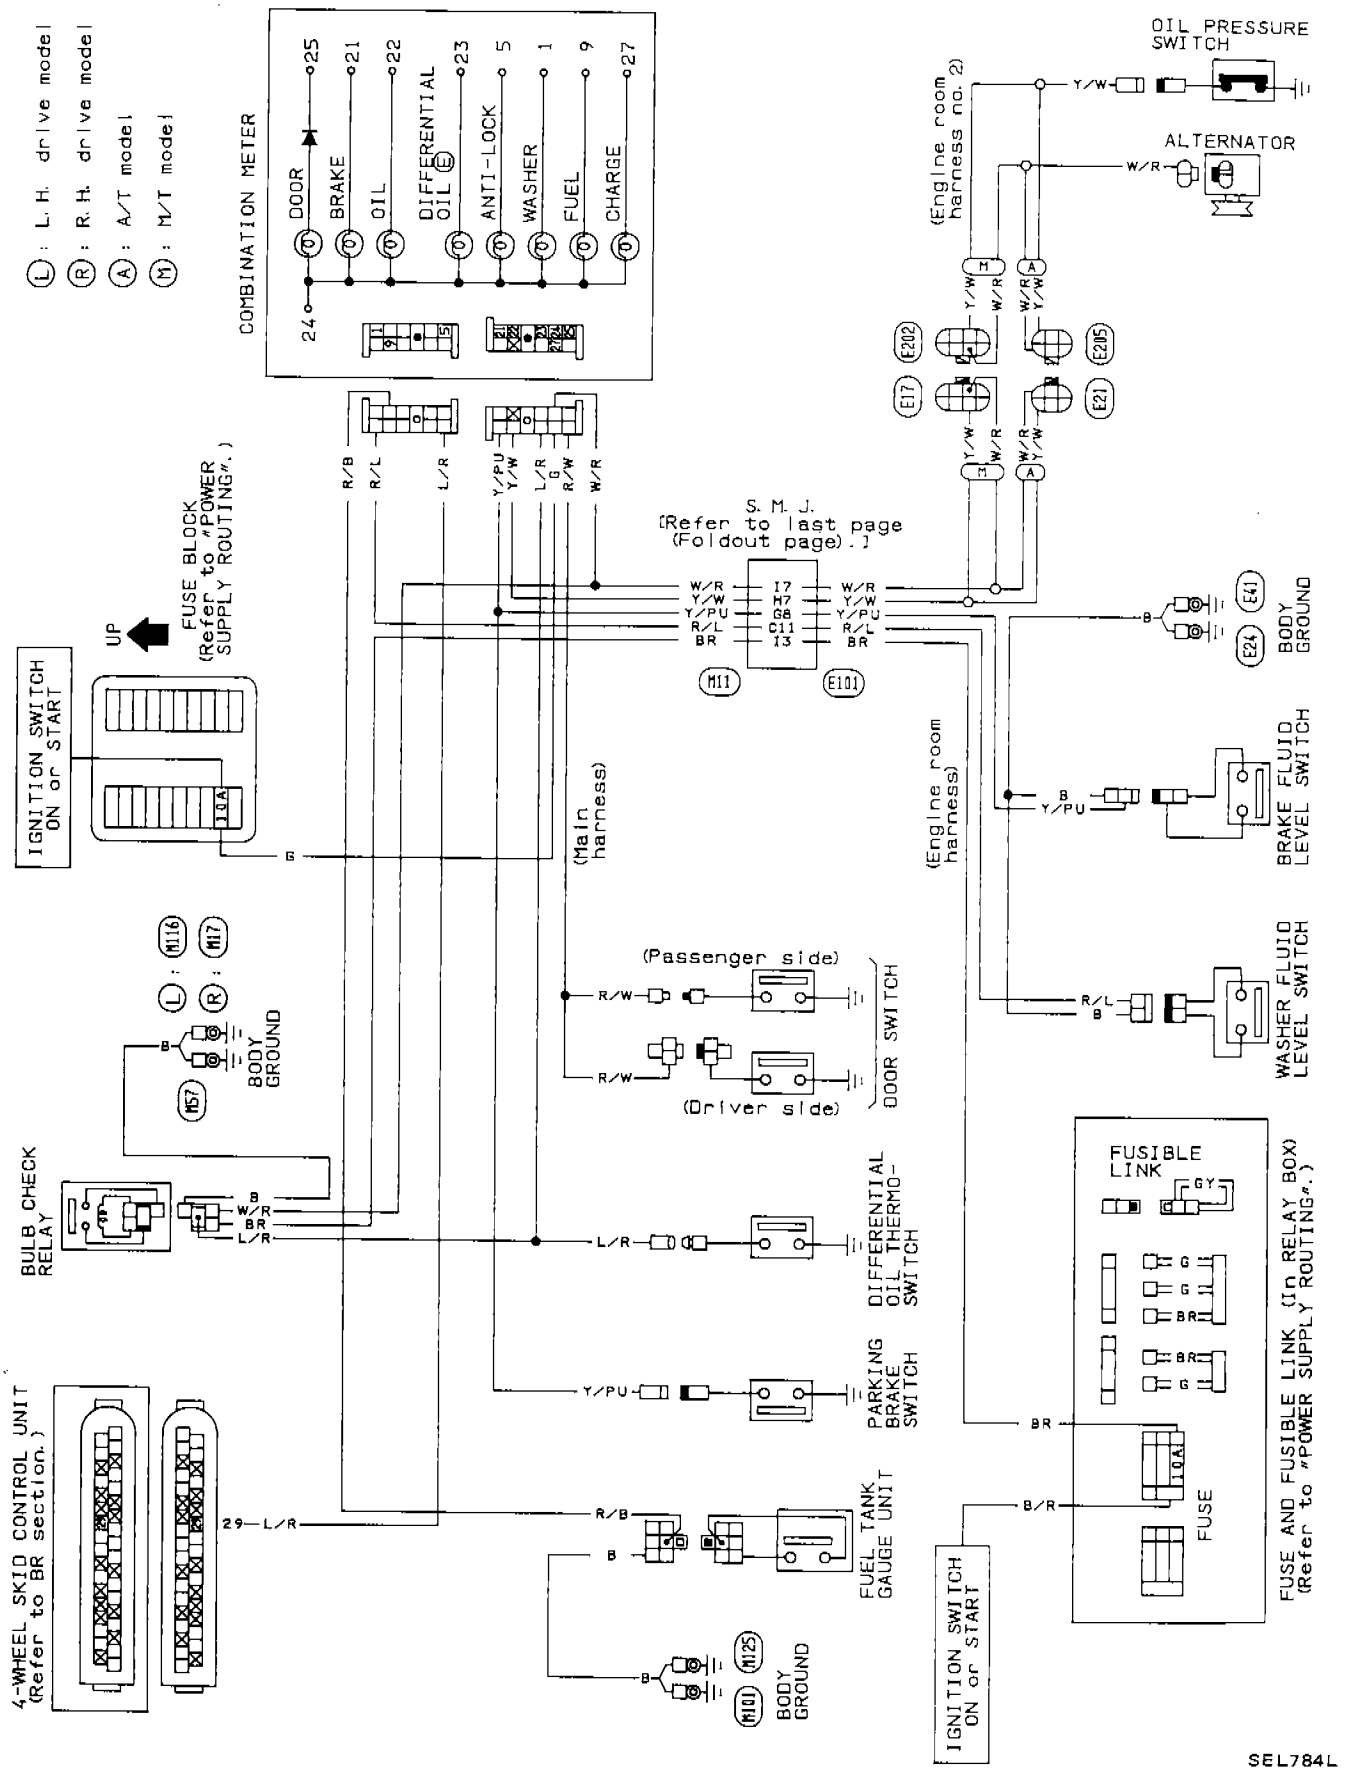


Warning Chime/Wiring Diagram

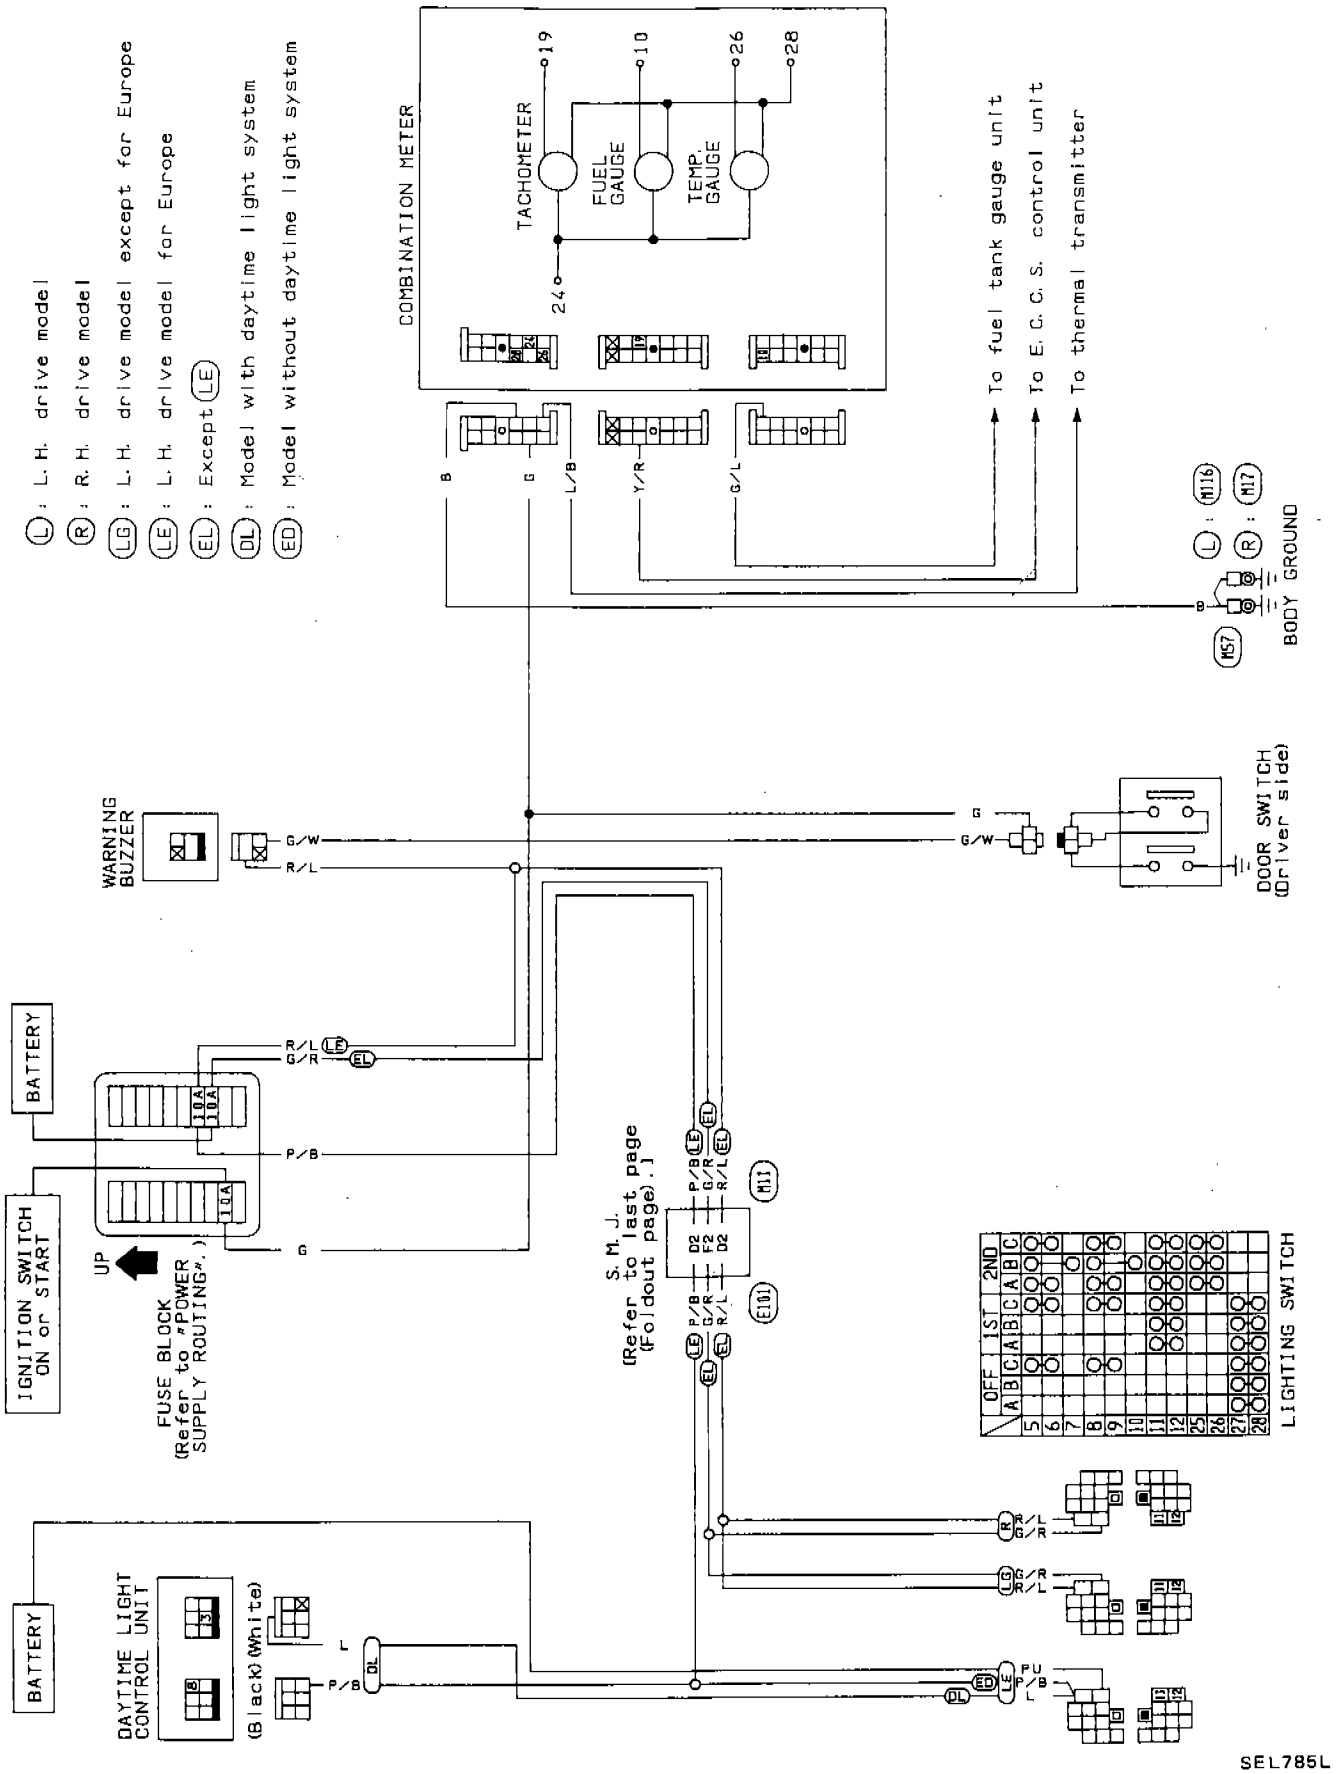

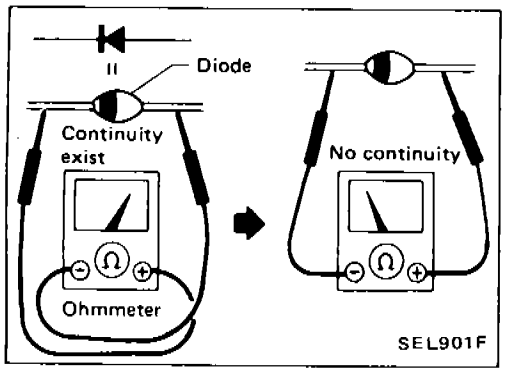


Diode Check

- Check continuity using an ohmmeter.
- Diode is functioning properly if test results are as shown in the figure at left.

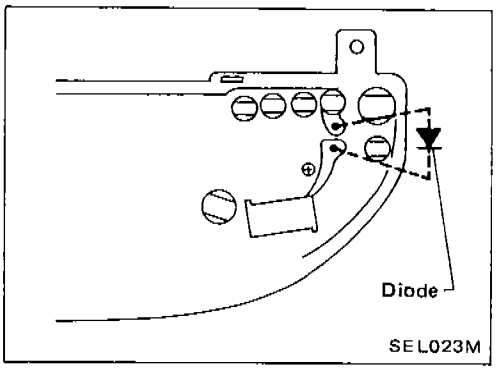


- Diodes for warning lamps are built into the combination meter printed circuit.

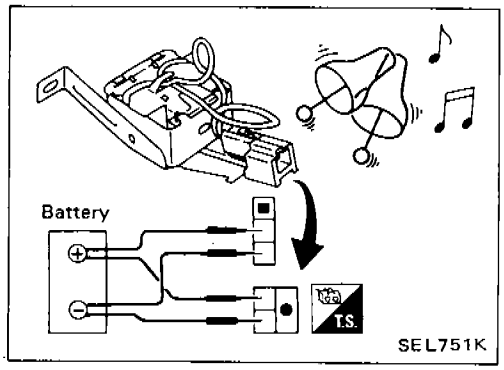


Warning Chime Check


Front Wiper and Washer/Wiring Diagram

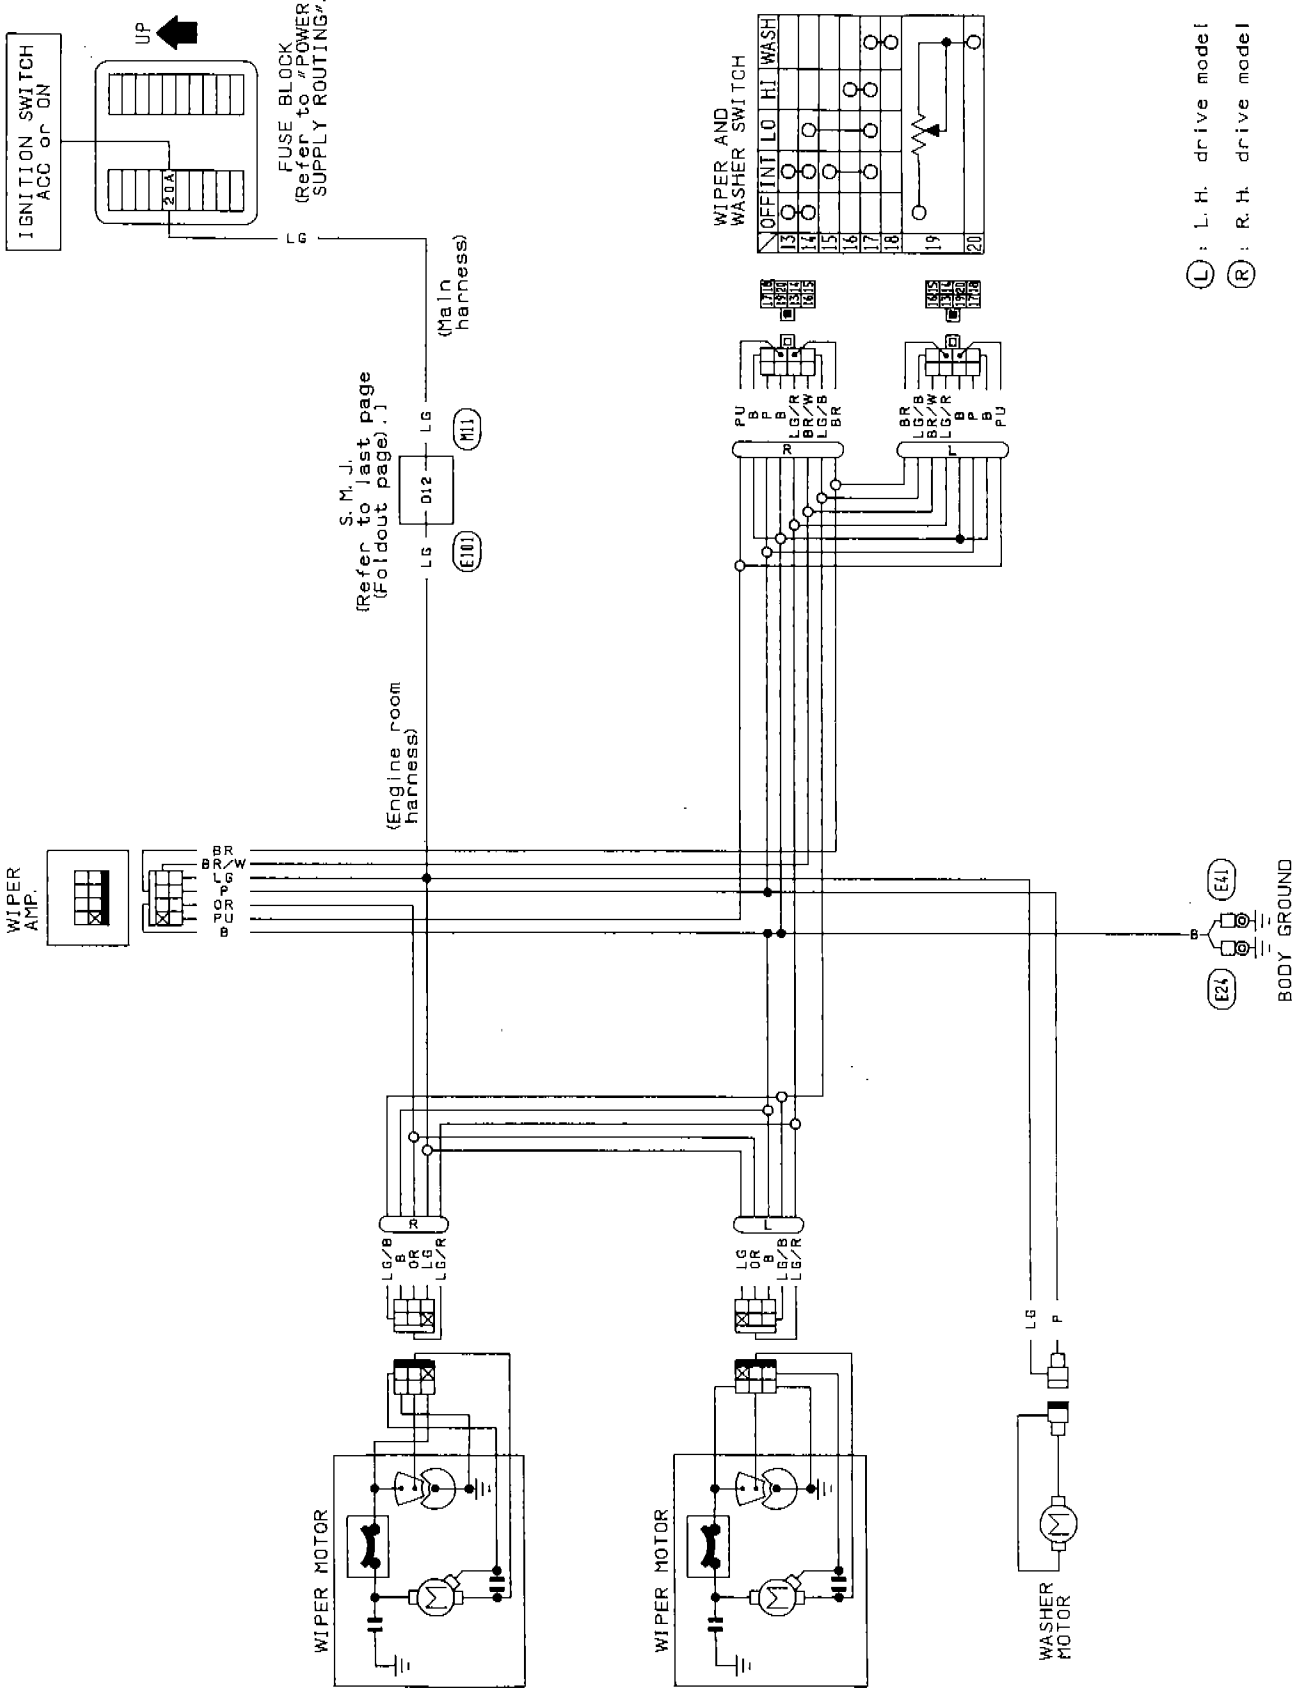

Rear Wiper and Washer/Wiring Diagram

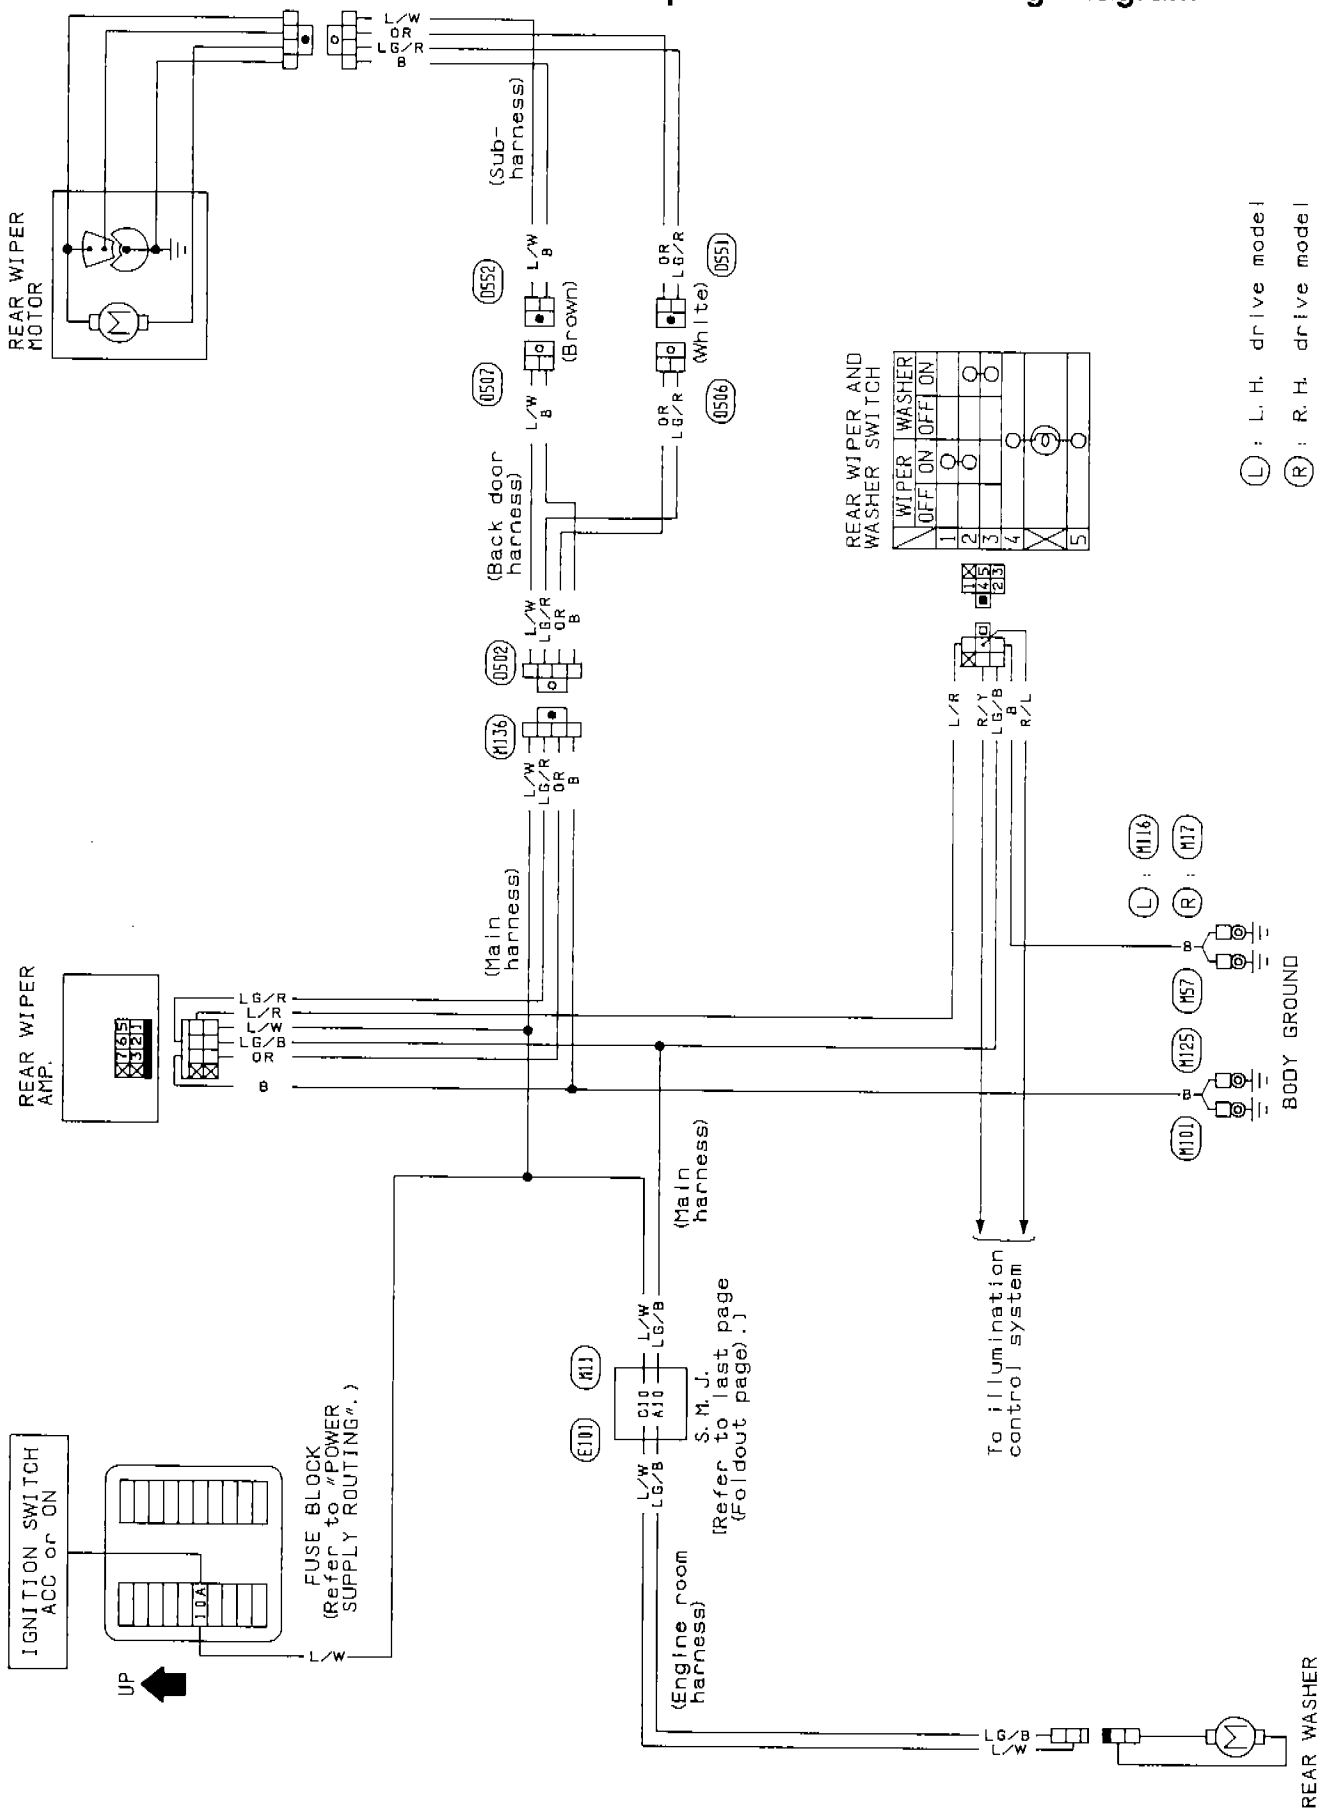



Headlamp Wiper and Washer/Wiring Diagram

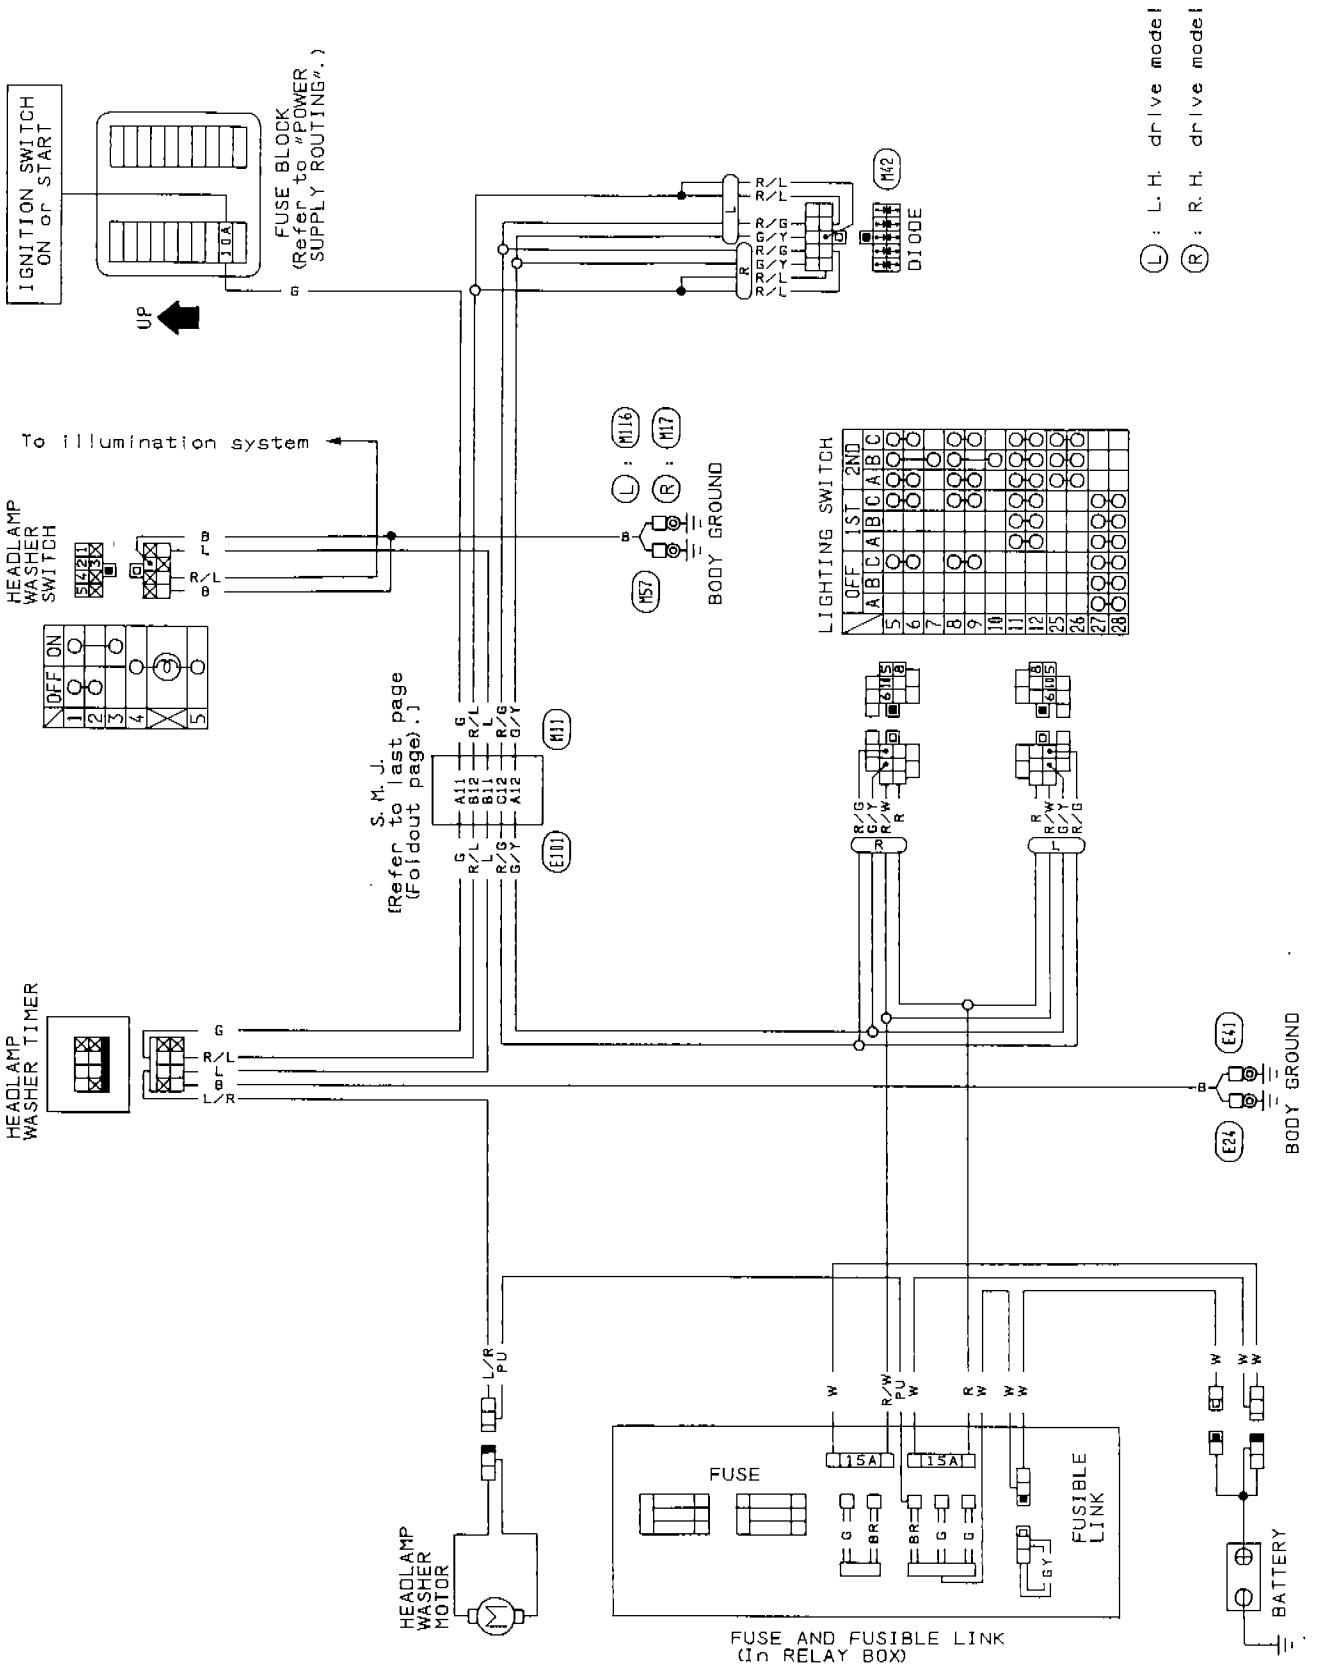

SEL788L

Wiper Removal and Installation

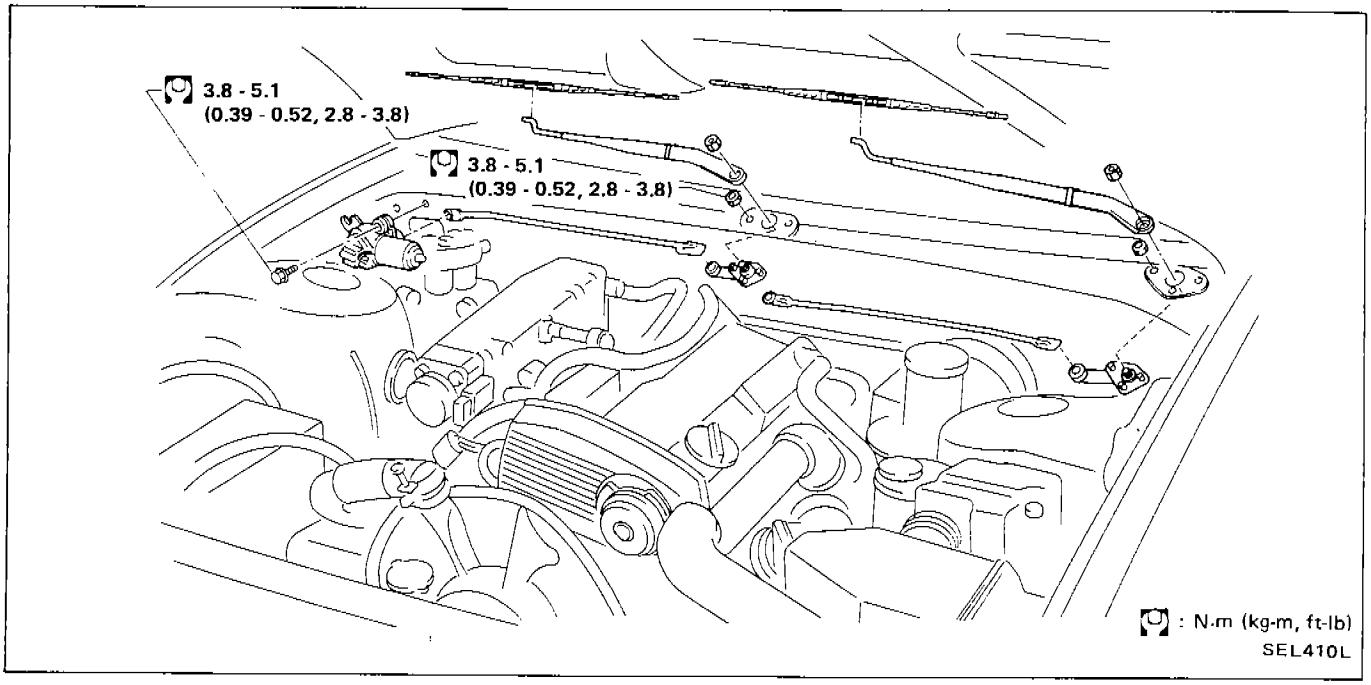


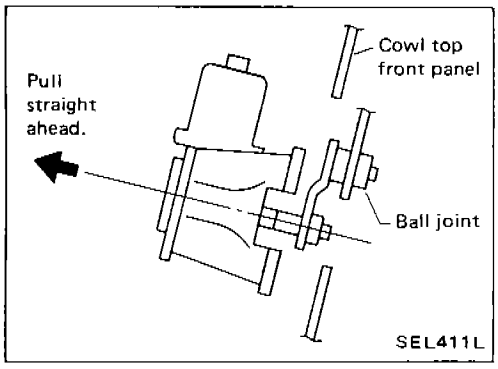

FRONT WIPER REMOVAL

Before removing front wiper motor link, turn wiper switch OFF and disconnect motor leads at connectors.

1. Remove wiper arm.
2. Remove cowl cover.
3. Remove bolts which secure wiper motor.
4. Extract wiper motor so that wiper motor link comes out of hole in front cowl top panel. Then, pull motor straight out to disconnect ball joint which connects motor link and wiper link. Wiper motor can then be removed.
5. Remove wiper link pivot blocks on driver and passenger sides.
6. Extract wiper link and pivot blocks (as one unit) from oblong hole on left side (L.H.D.) or right side (R.H.D.) of cowl top.

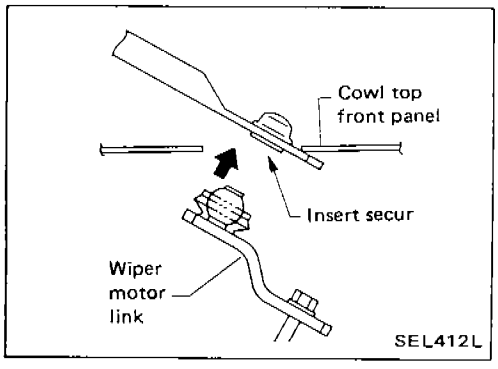


FRONT WIPER INSTALLATION


1. Position wiper link and pivot blocks (as one unit) in cowl top through oblong hole.
2. Before installing pivot blocks on cowl top, hold end (motor link side) of wiper link at hole in front cowl top panel and insert motor link's ball pin into hole in wiper link.
3. Install front wiper in reverse order of above removal procedures.

- Apply a small amount of grease to ball joints before installation.

Variable Pressure Window Screen Wiper/Wiring Diagram

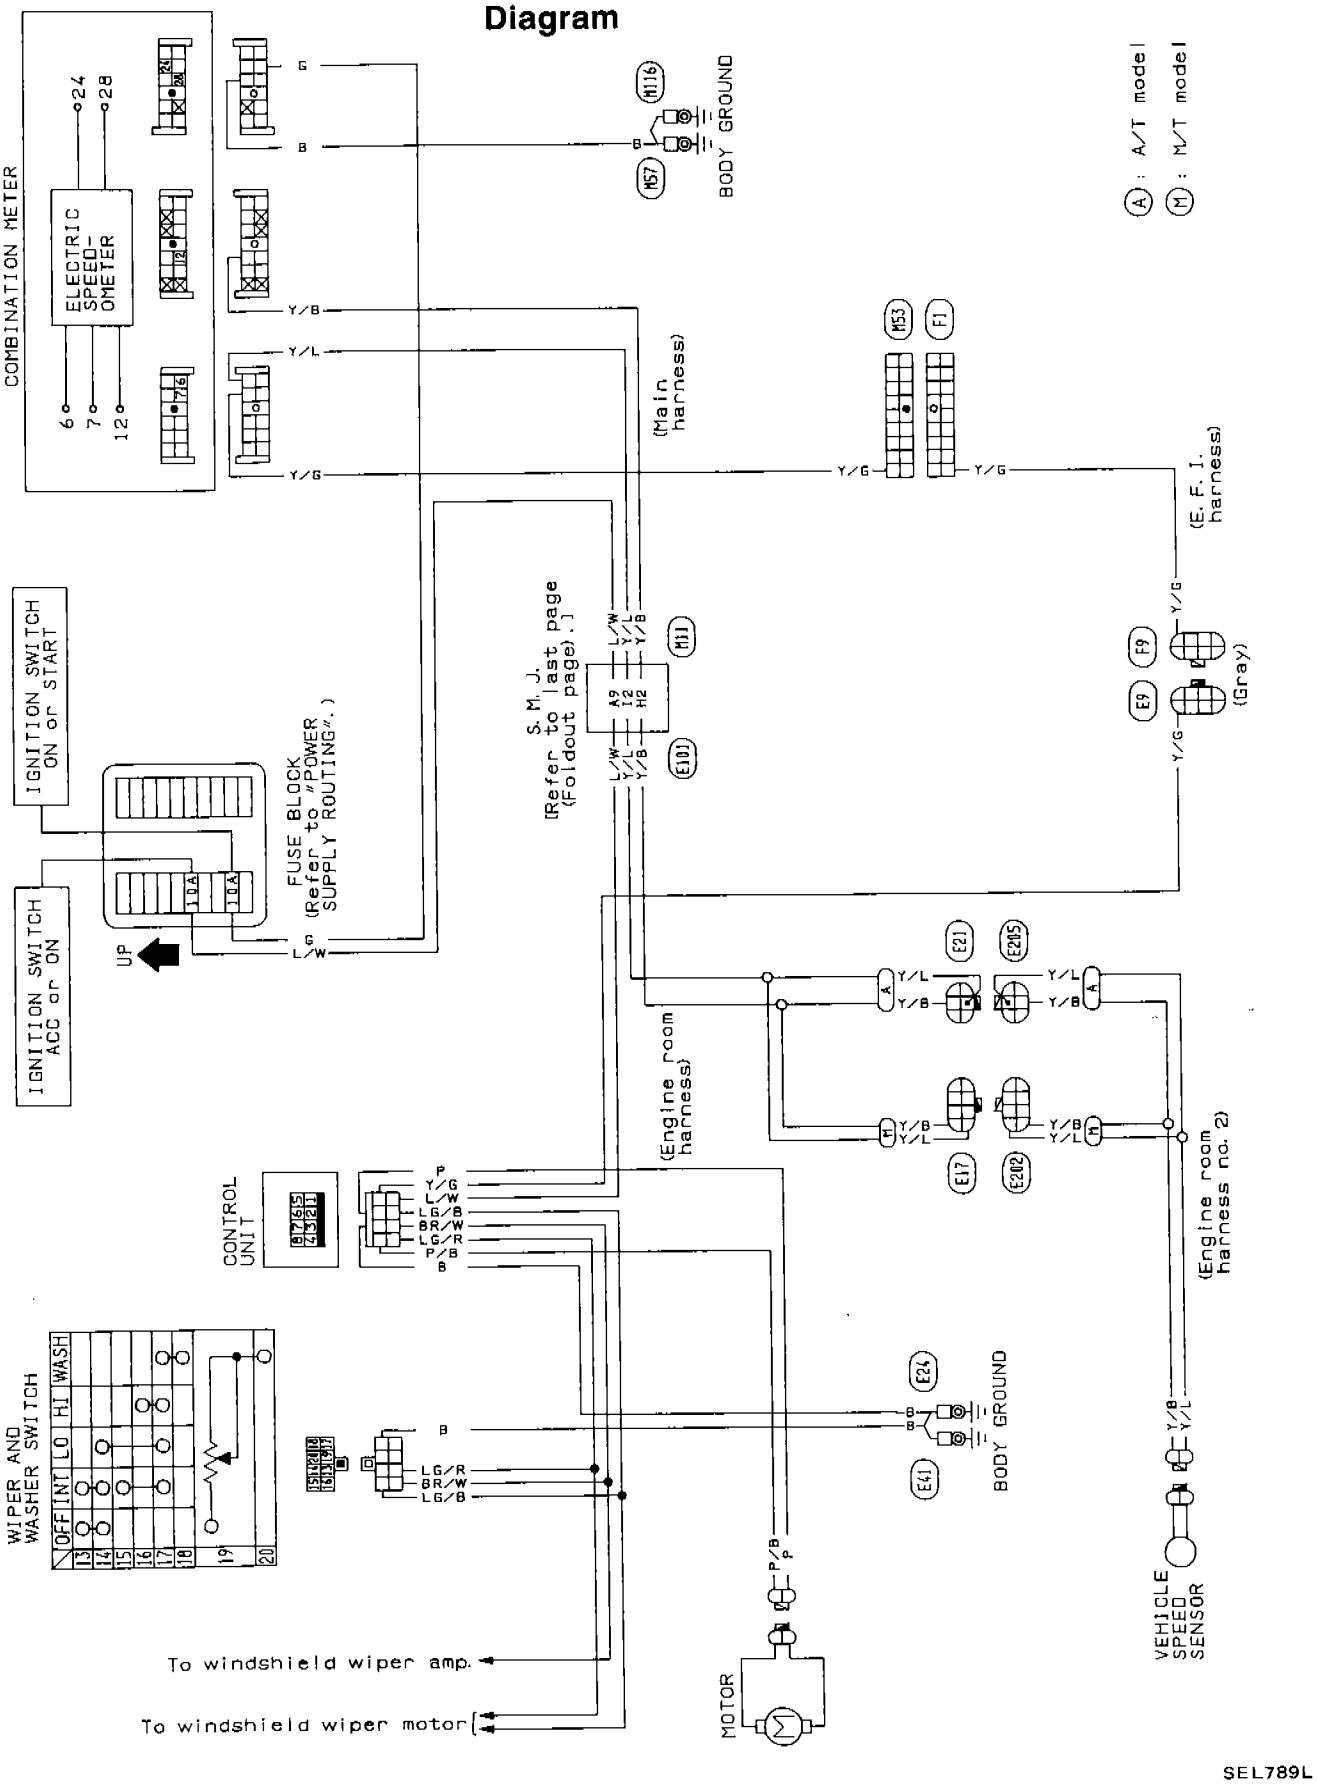

SEL789L

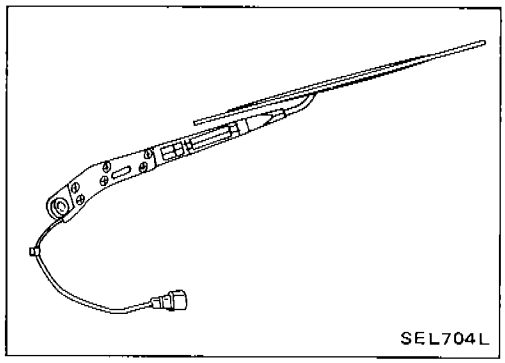
SEL704L

Wiper Arm (For Europe L.H.D. model)

The wiper arm pressure is controlled by the vehicle speed when the wiper switch is in the "ON" position.


Vehicle speed km/h (MPH)	Wiper arm pressure
More than 130 (81)	Low → High
Less than 120 (75)	High → Low

Wiper and Washer Adjustment


INSTALLATION


1. Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
2. Lift the blade up and then set it down onto glass surface to set the blade center to clearance "L_1" & "L_2" immediately before tightening nut.
3. Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
4. Ensure that wiper blades stop within clearance "L_1" & "L_2".
   Clearance "L_1": 17.5 - 32.5 mm (0.689 - 1.280 in)
   Clearance "L_2": 25 - 35 mm (0.98 - 1.38 in)

- Tighten wiper arm nuts to specified torque.
  Front wiper: 17 - 23 N·m (1.7 - 2.3 kg-m, 12 - 17 ft-lb)
  Rear wiper: 13 - 18 N·m (1.3 - 1.8 kg-m, 9 - 13 ft-lb)

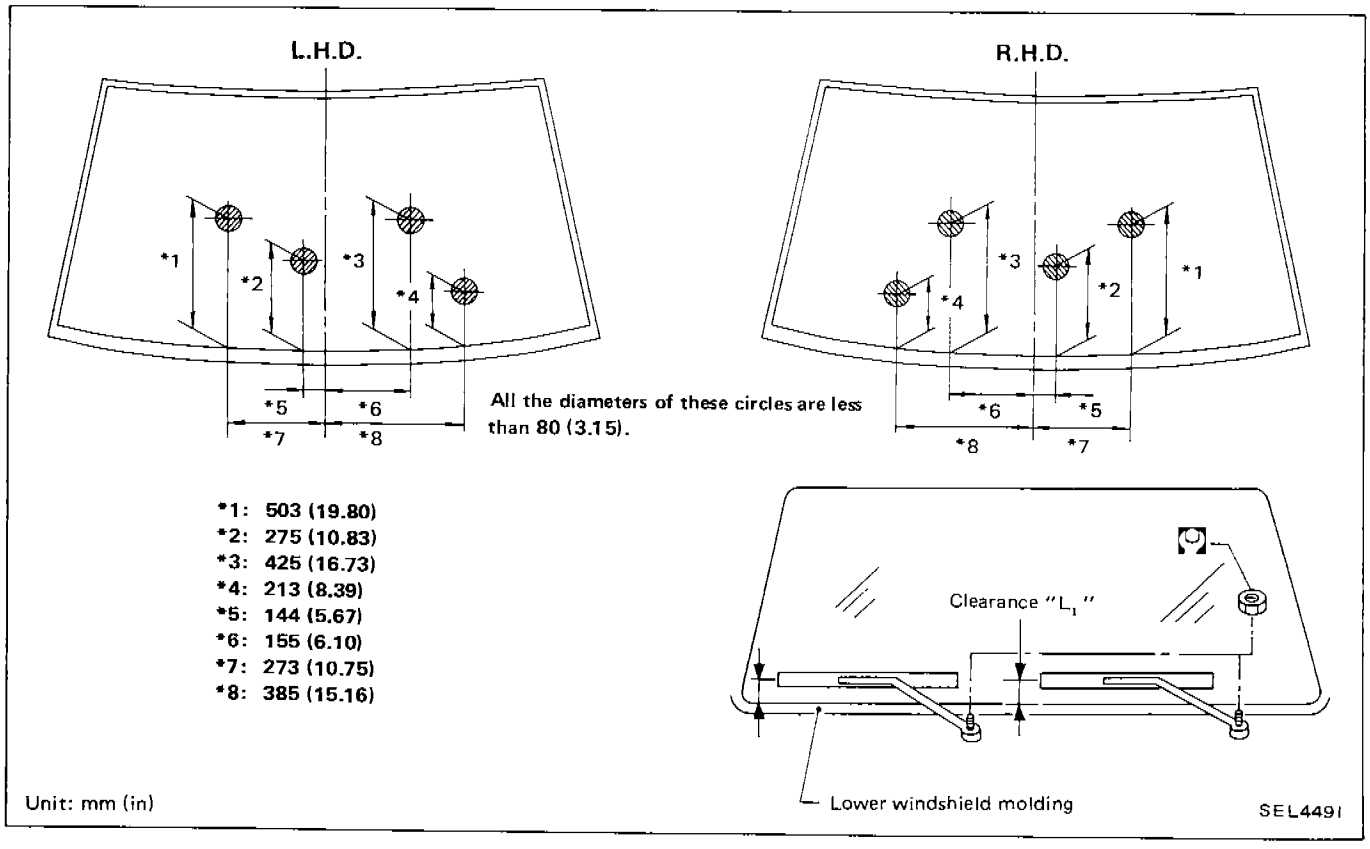

Wiper and Washer Adjustment (Cont'd)

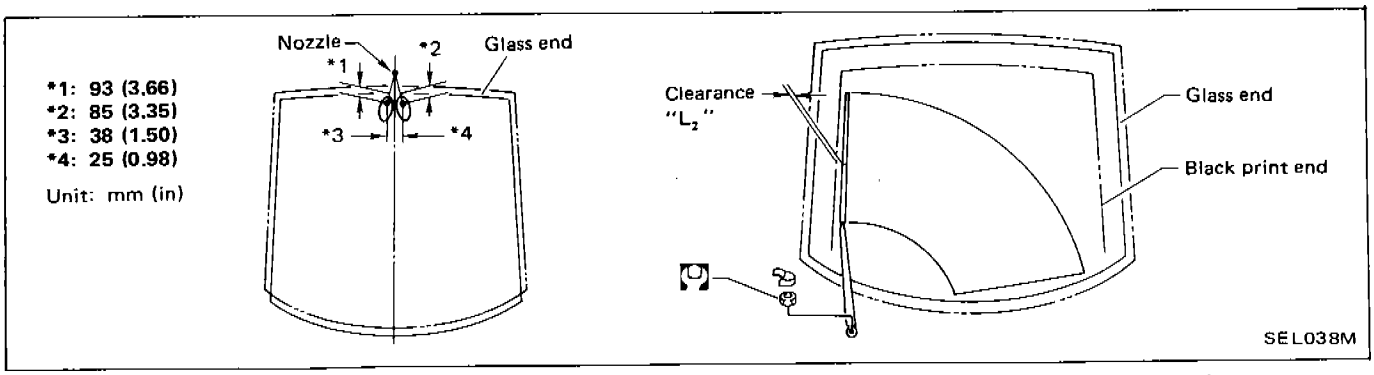


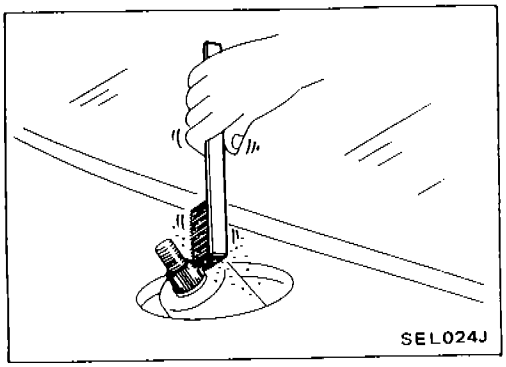


- **Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.**

Washer Nozzle Adjustment

- Adjust washer nozzle with suitable tool as shown in the figure at left.
  Details of tool are shown below.

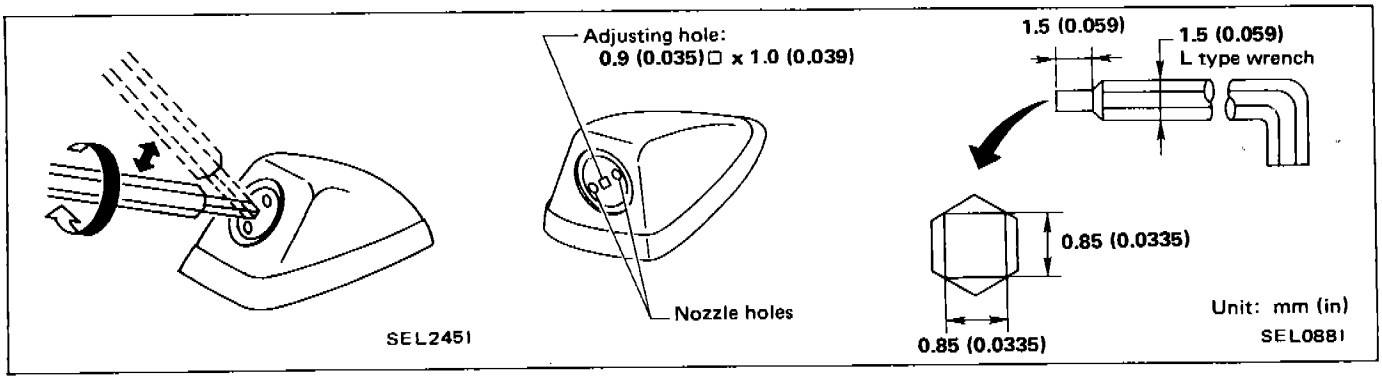


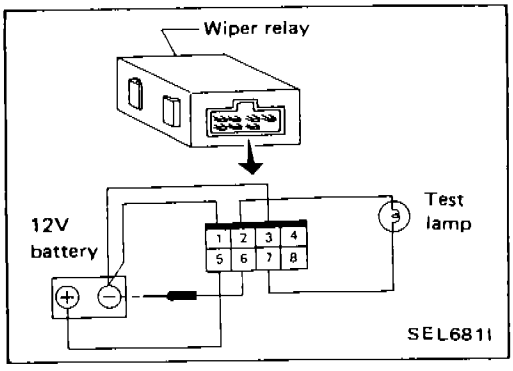


Wiper Amplifier Check

1. Connect as shown in the figure at left.
2. If test lamp comes on when connected to terminal ⑥ and battery ground, wiper relay is normal.

Washer Tube Layout

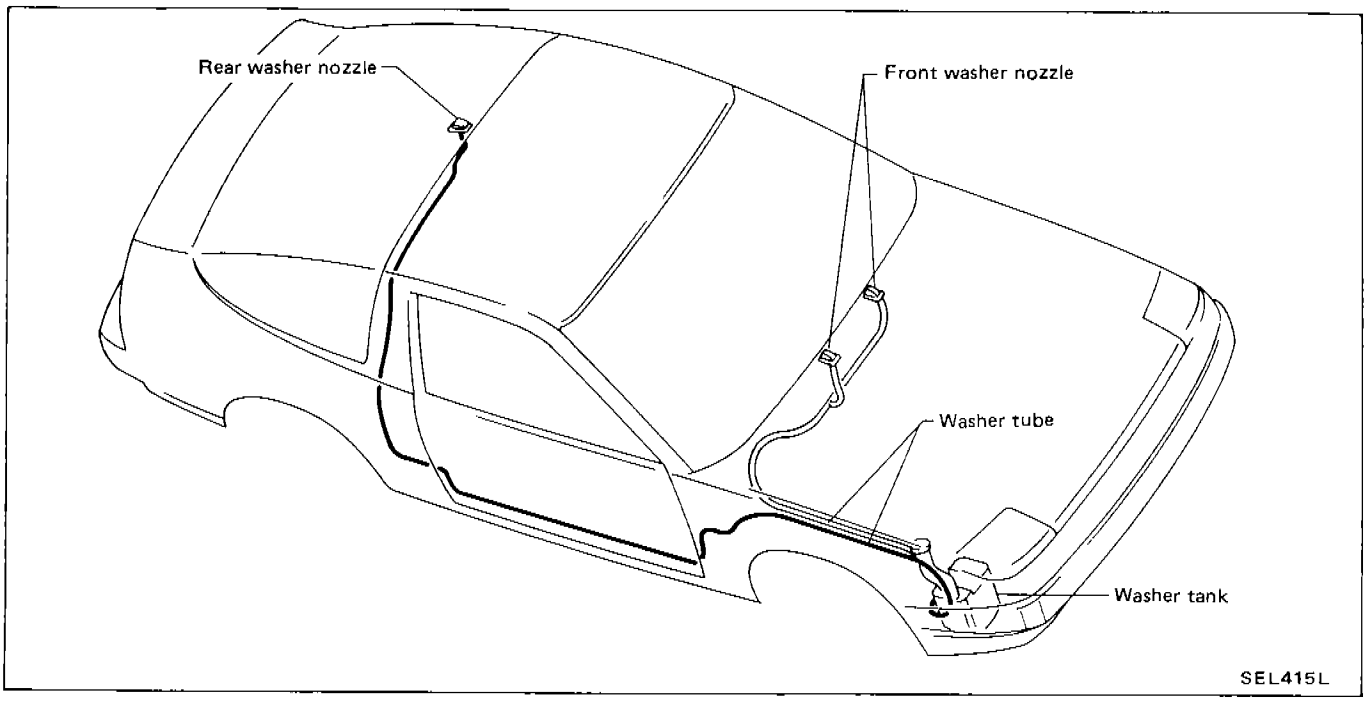



Wiring Diagram

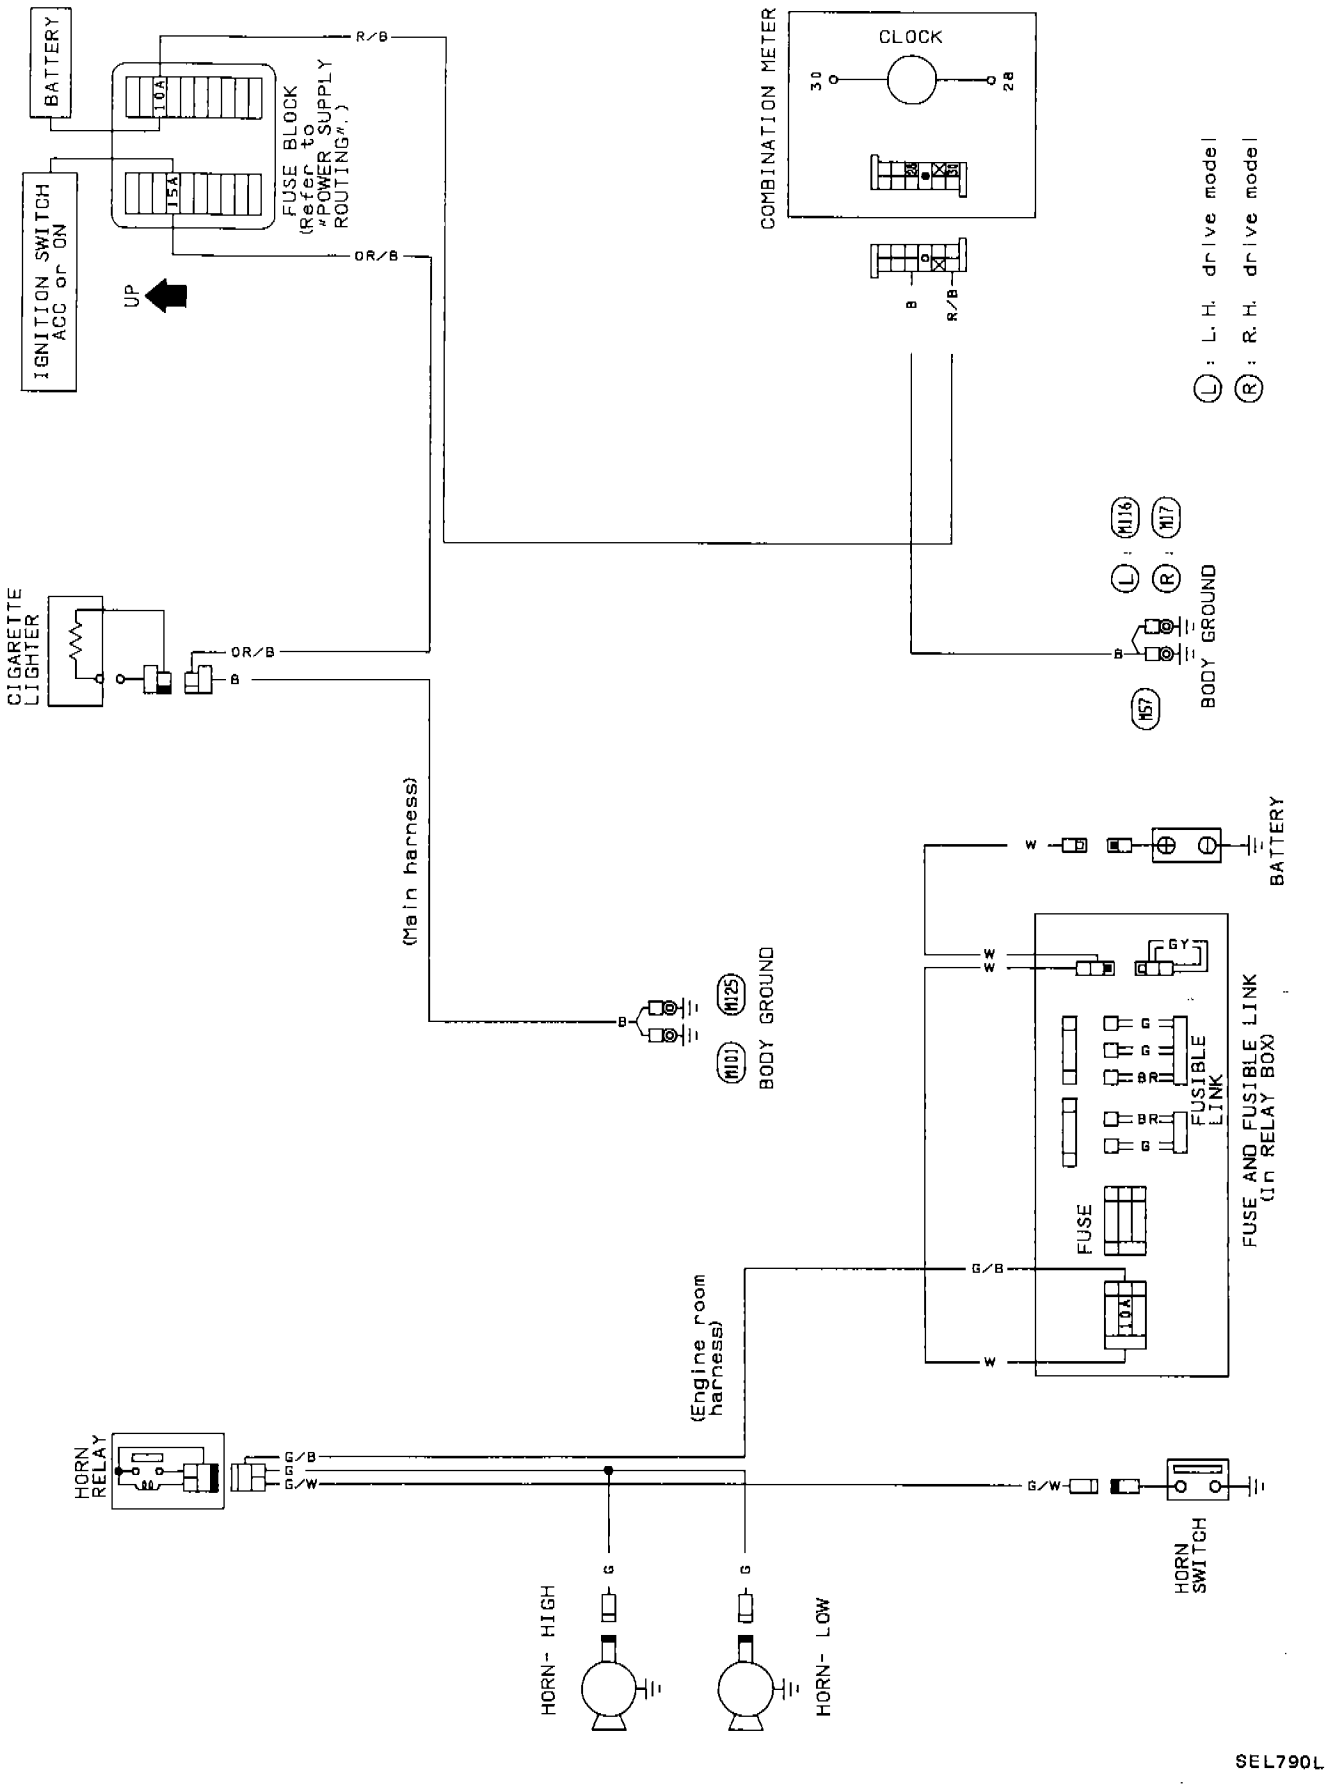

SEL790L

Wiring Diagram

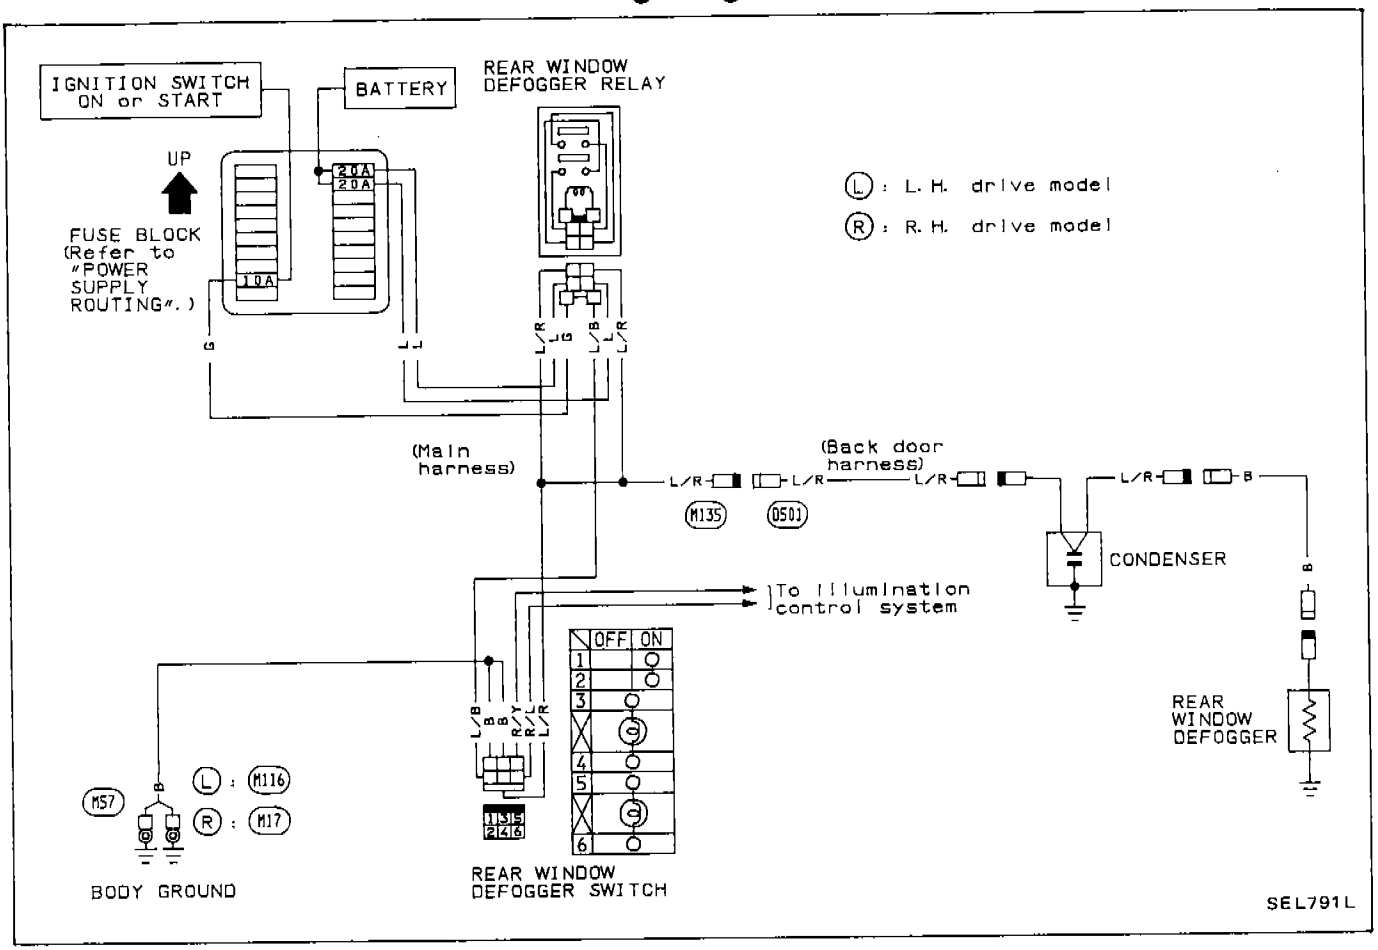


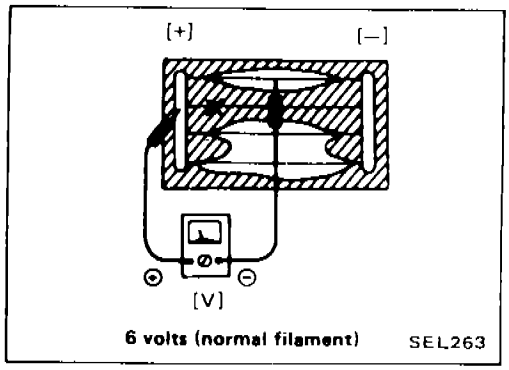


6 volts (normal filament) SEL263

Filament Check

1. Attach probe circuit tester (in volt range) to middle portion of each filament.

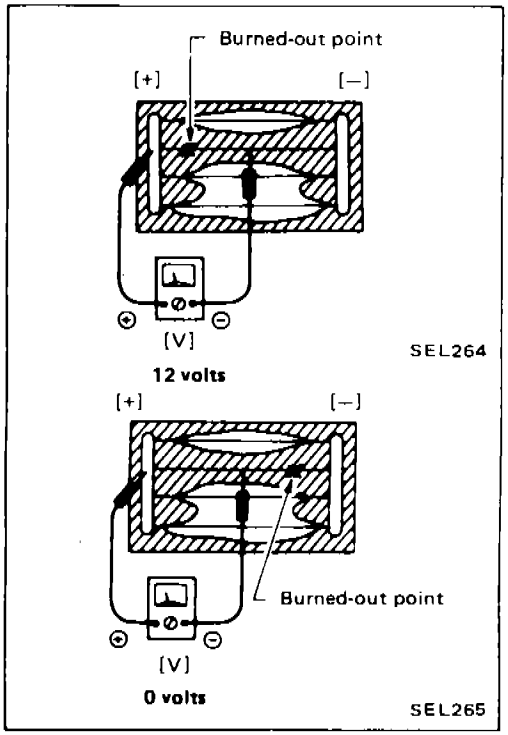

2. If a filament is burned out, circuit tester registers 0 or 12 volts.

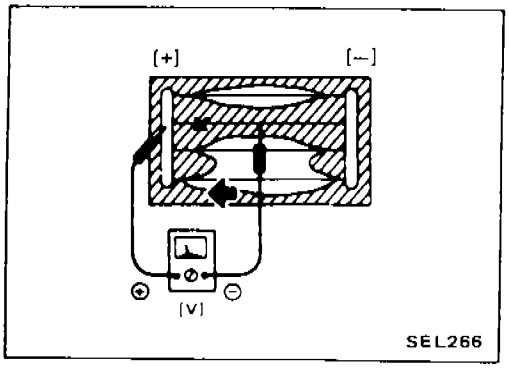


3. To locate burned out point, move probe to left and right along filament to determine point where tester needle swings abruptly.

Filament Repair

REPAIR EQUIPMENT

1. Conductive silver composition (Dupont No. 4817 or equivalent)
2. Ruler 30 cm (11.8 in) long
3. Drawing pen
4. Heat gun
5. Alcohol
6. Cloth

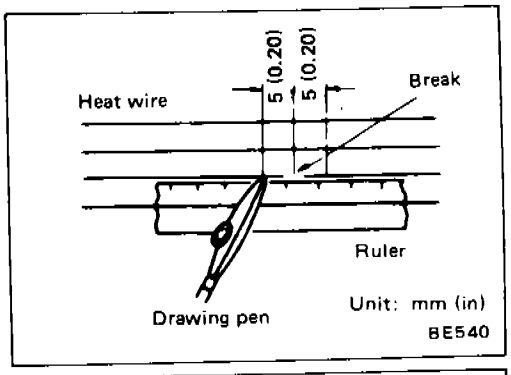


REPAIRING PROCEDURE

1. Wiper broken heat wire and its surrounding area clean with a cloth dampened in alcohol.
2. Apply a small amount of conductive silver composition to tip of drawing pen.


Shake silver composition container before use.

3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.

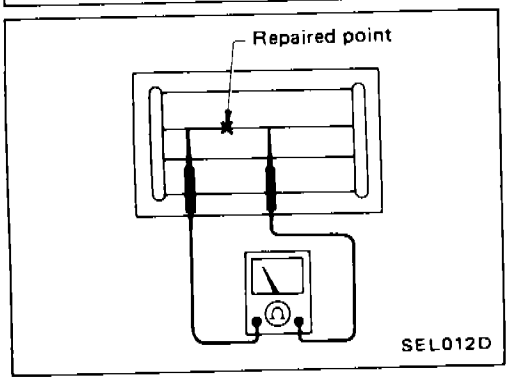


4. After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited.

Do not touch repaired area while test is being conducted.

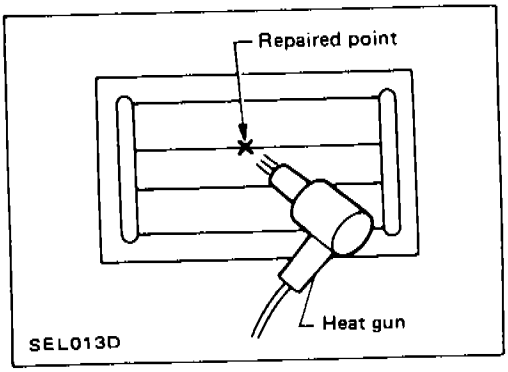


5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.


Audio/Wiring Diagram

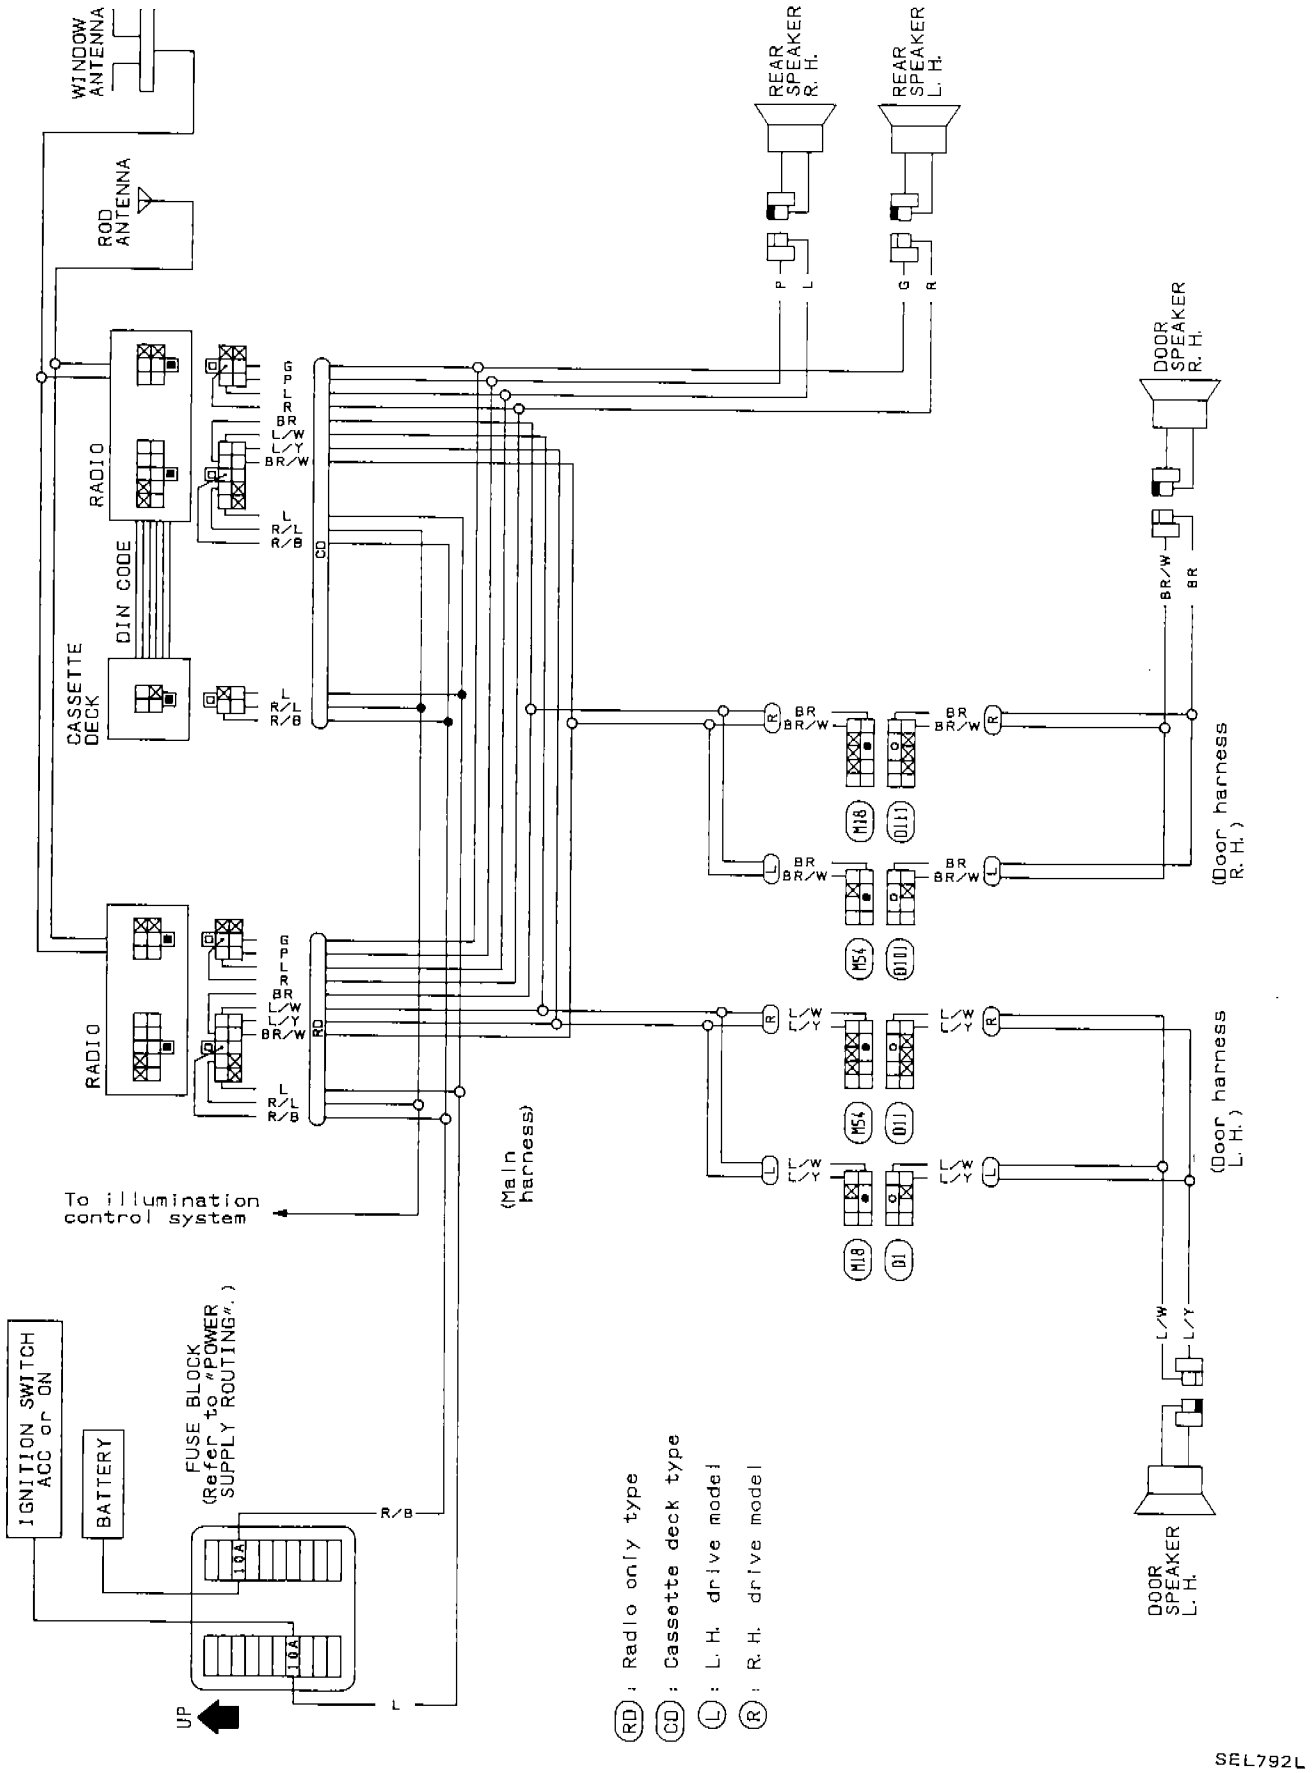


Power Antenna/Wiring Diagram

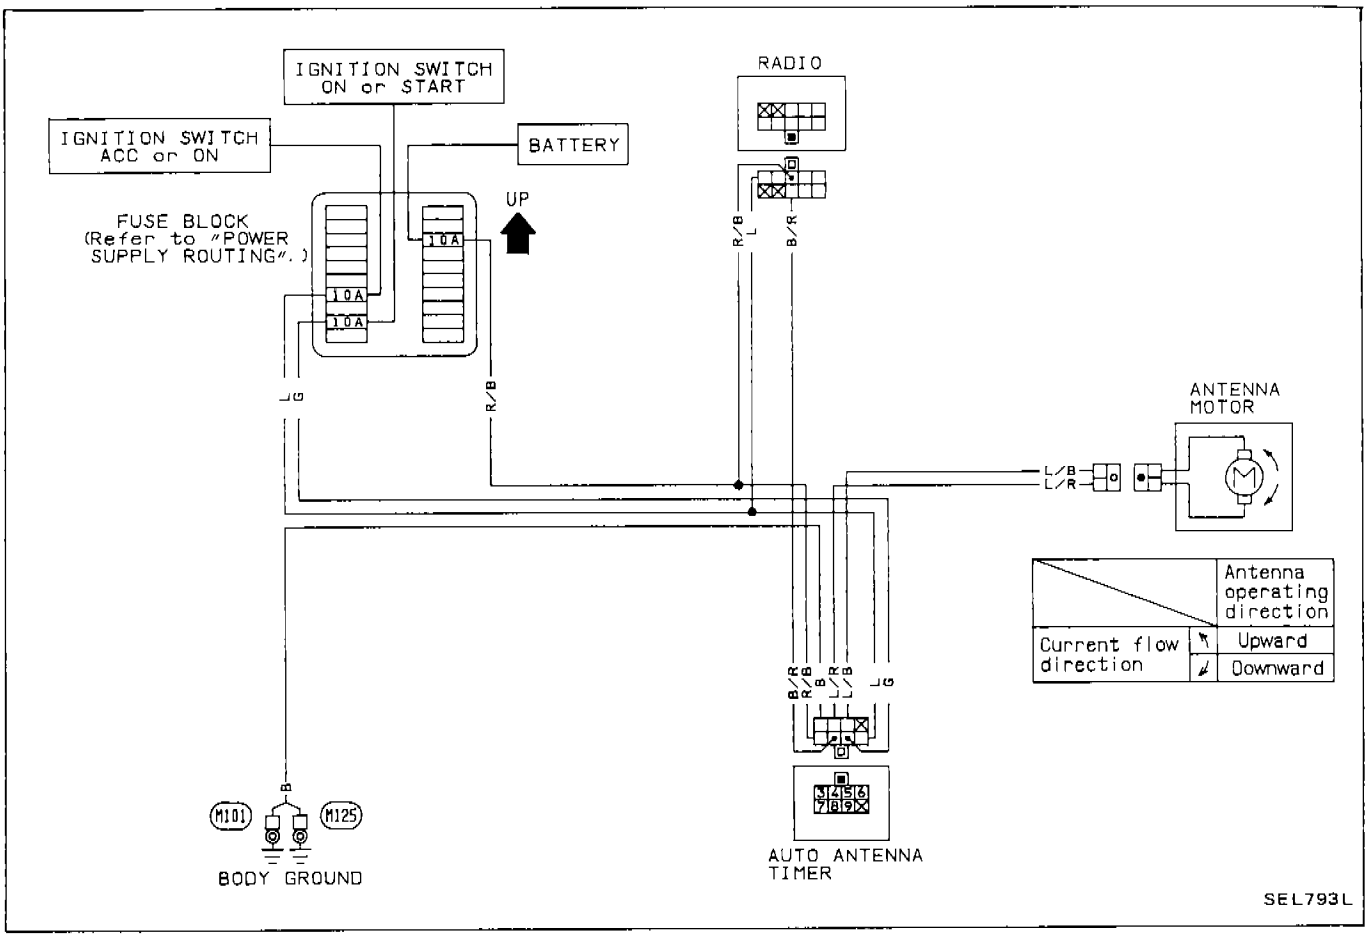

Location of Antenna

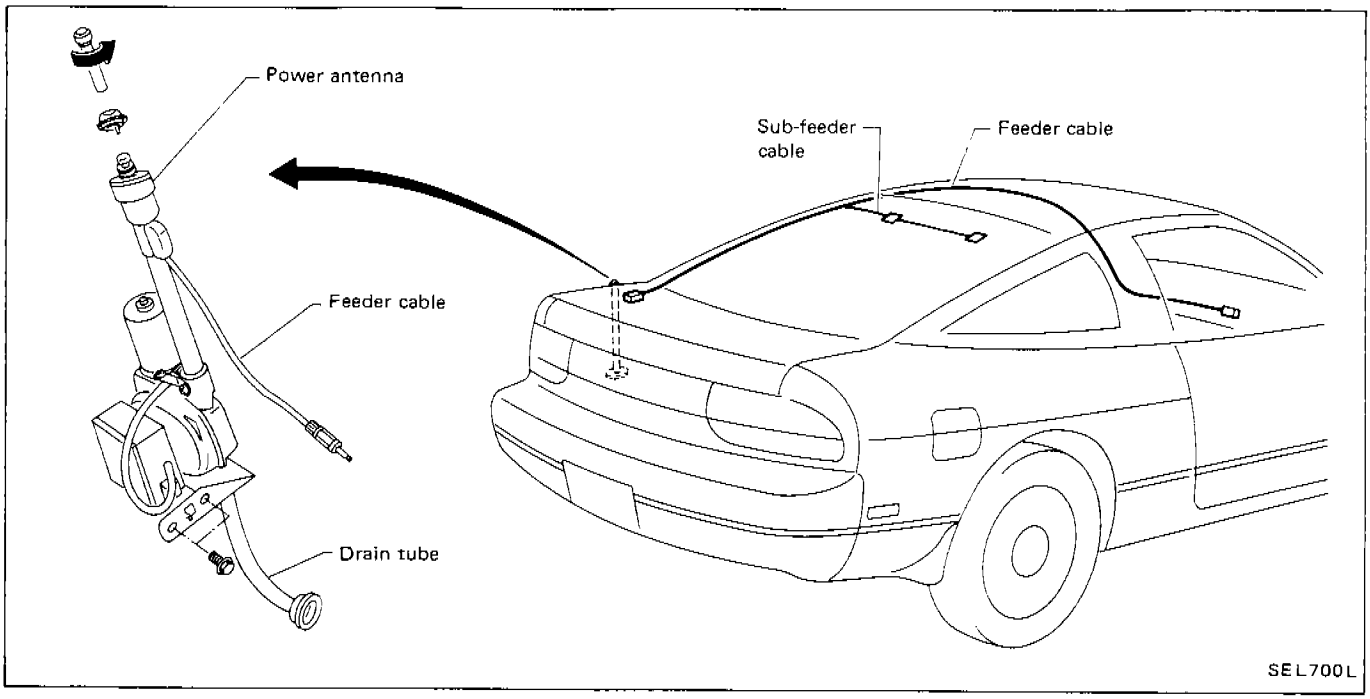


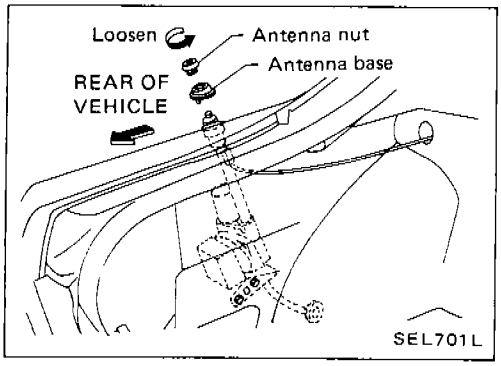


Antenna Rod Replacement

REMOVAL

1. Remove antenna nut and antenna base.

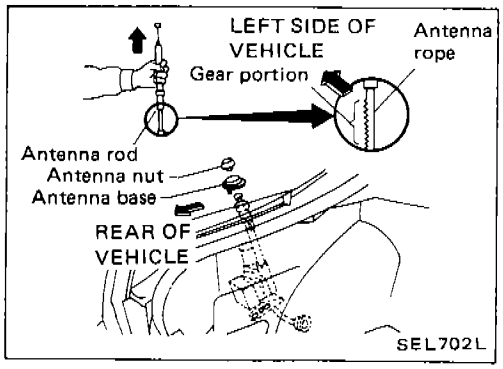


2. Withdraw antenna rod while raising it by operating antenna motor.

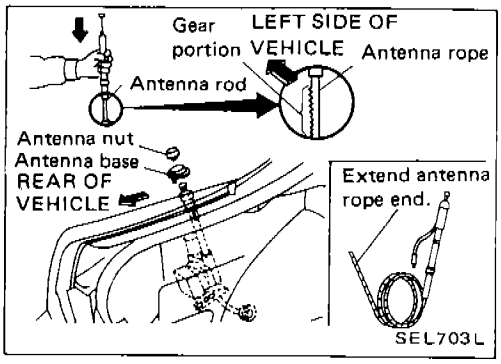

INSTALLATION


1. Lower antenna rod by operating antenna motor.
2. Insert gear section of antenna rope into place with it facing toward antenna motor.
3. As soon as antenna rope is wound on antenna motor, stop antenna motor. Insert antenna rod lower end into antenna motor pipe.
4. Retract antenna rod completely by operating antenna motor.
5. Install antenna nut and base.

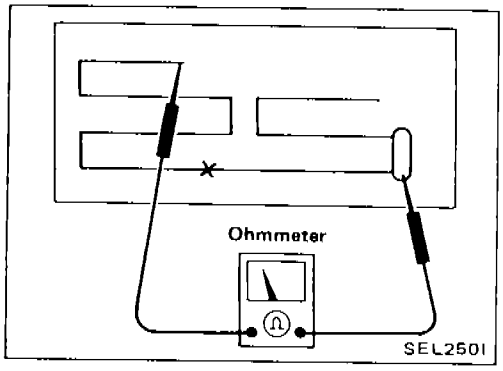


Window Antenna Repair

ELEMENT CHECK

1. Attach probe circuit tester (in ohm range) to antenna terminal on each side.

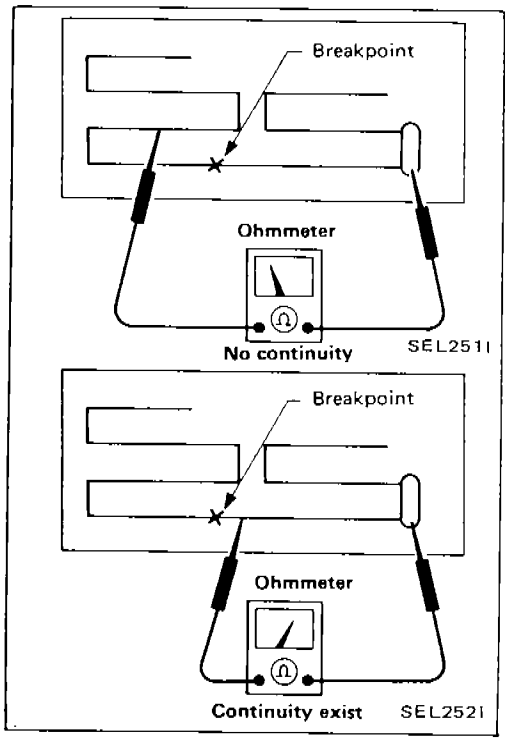

2. If an element is broken, no continuity will exist.

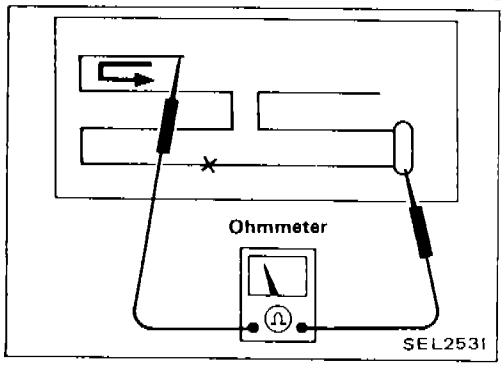



3. To locate broken point, move probe to left and right along element to determine point where tester needle swings abruptly.


ELEMENT REPAIR

Refer to "Filament Repair" of REAR WINDOW DEFOGGER.

Engine Compartment

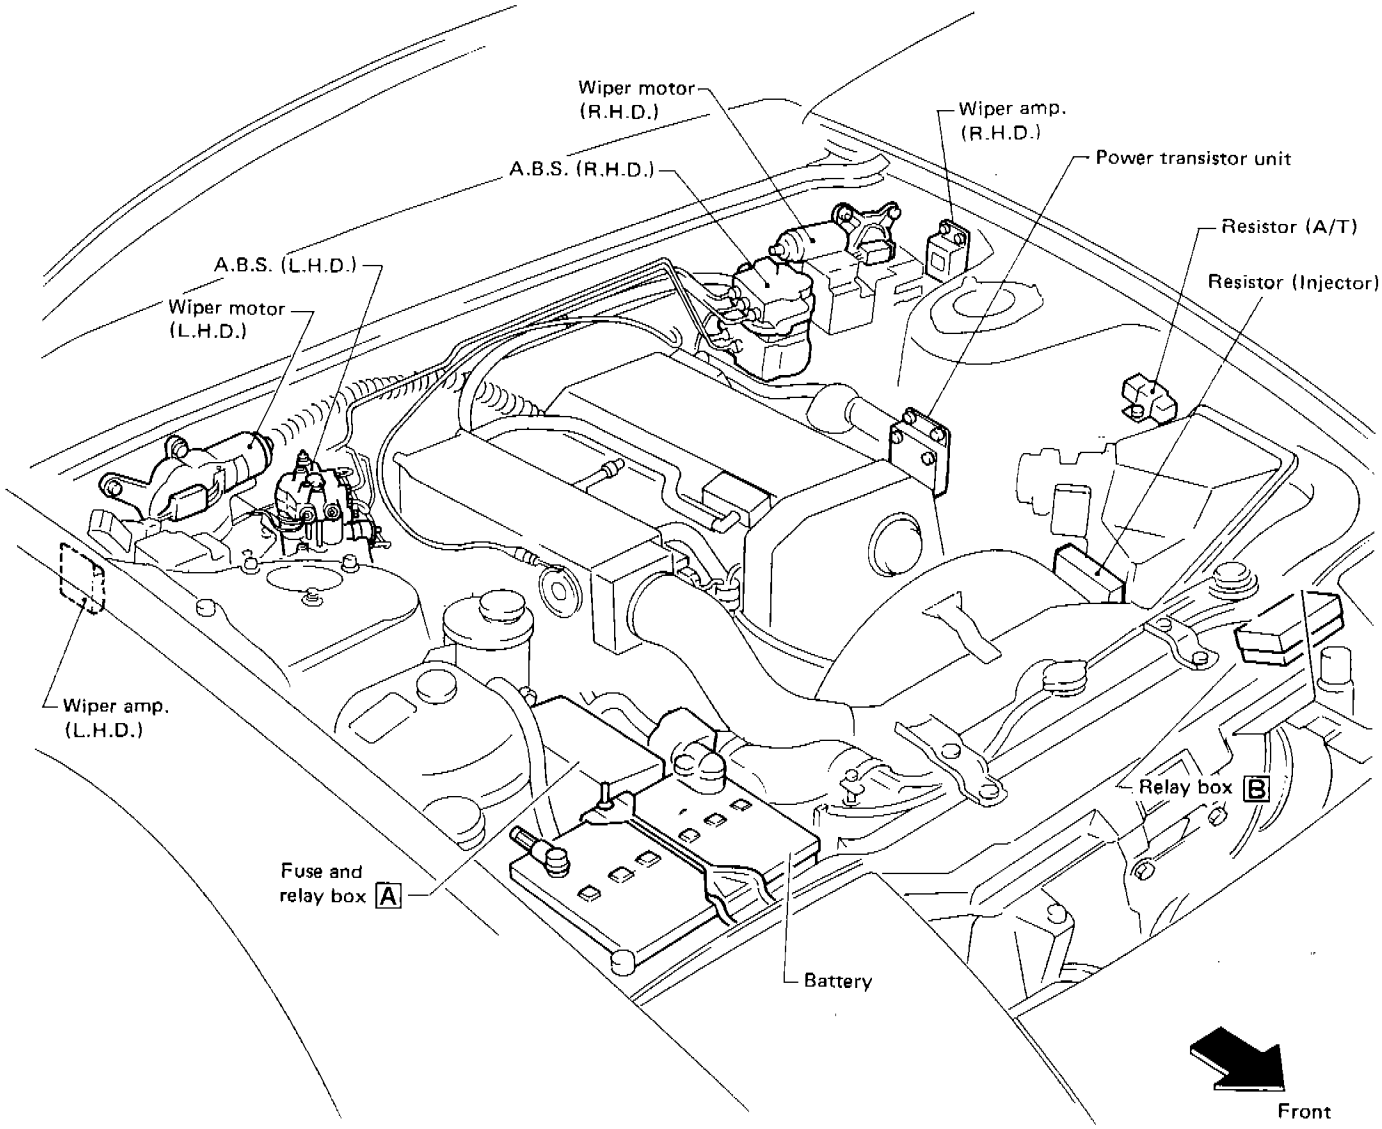


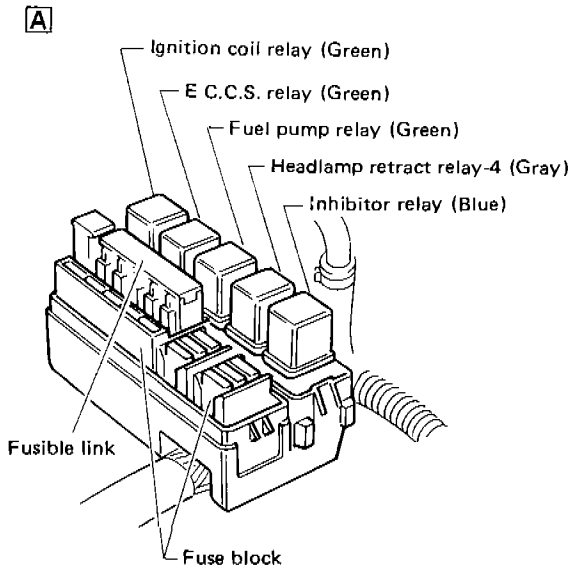

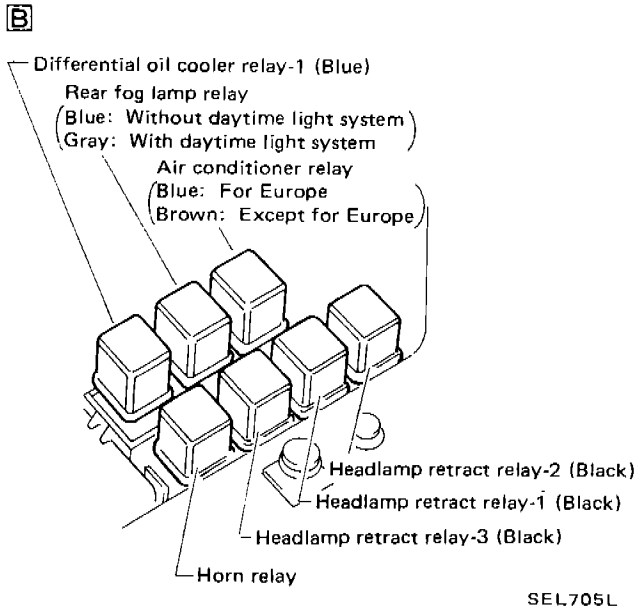


SEL705L

Passenger Compartment

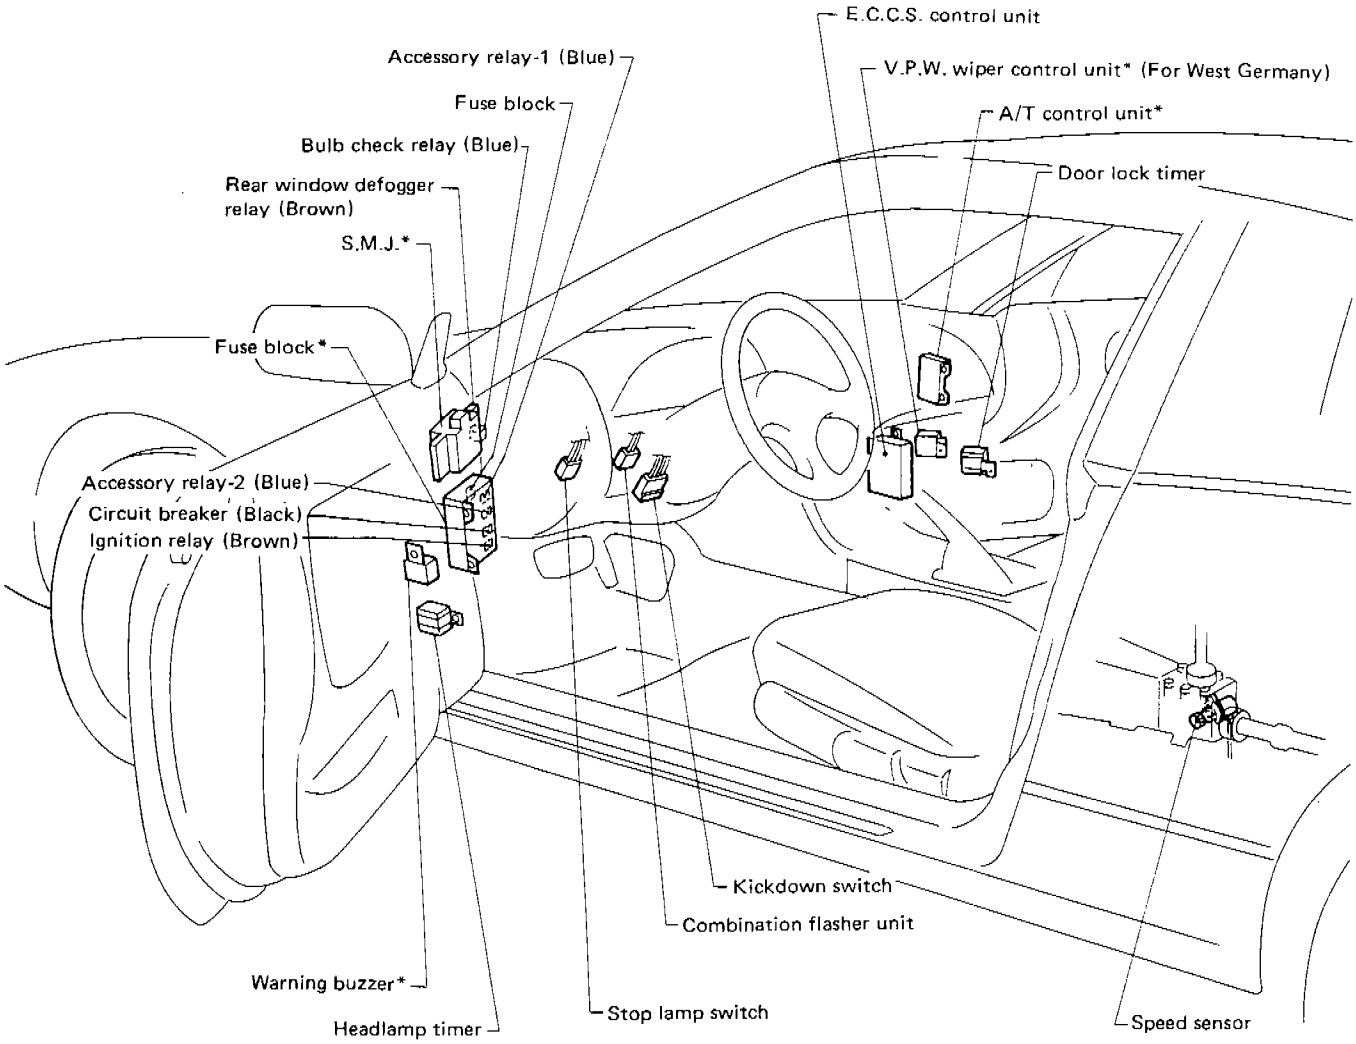


- **Figure shows dashboard for L.H.D. models.**
- **On R.H.D. models, all side panel unit parts marked with an asterisk "*" are symmetrically located to those of L.H.D. models. However, switches and units around steering column remain in the same relative position to each other except that they have all been moved to the right side.**

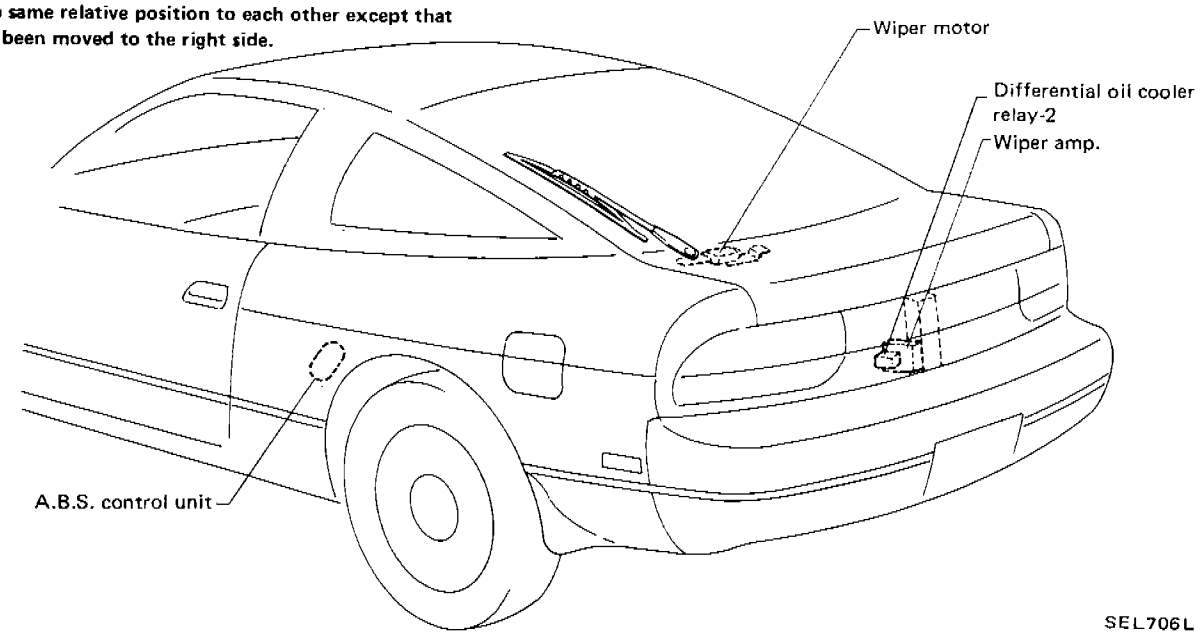


SEL706L

Outline

L.H. DRIVE MODEL

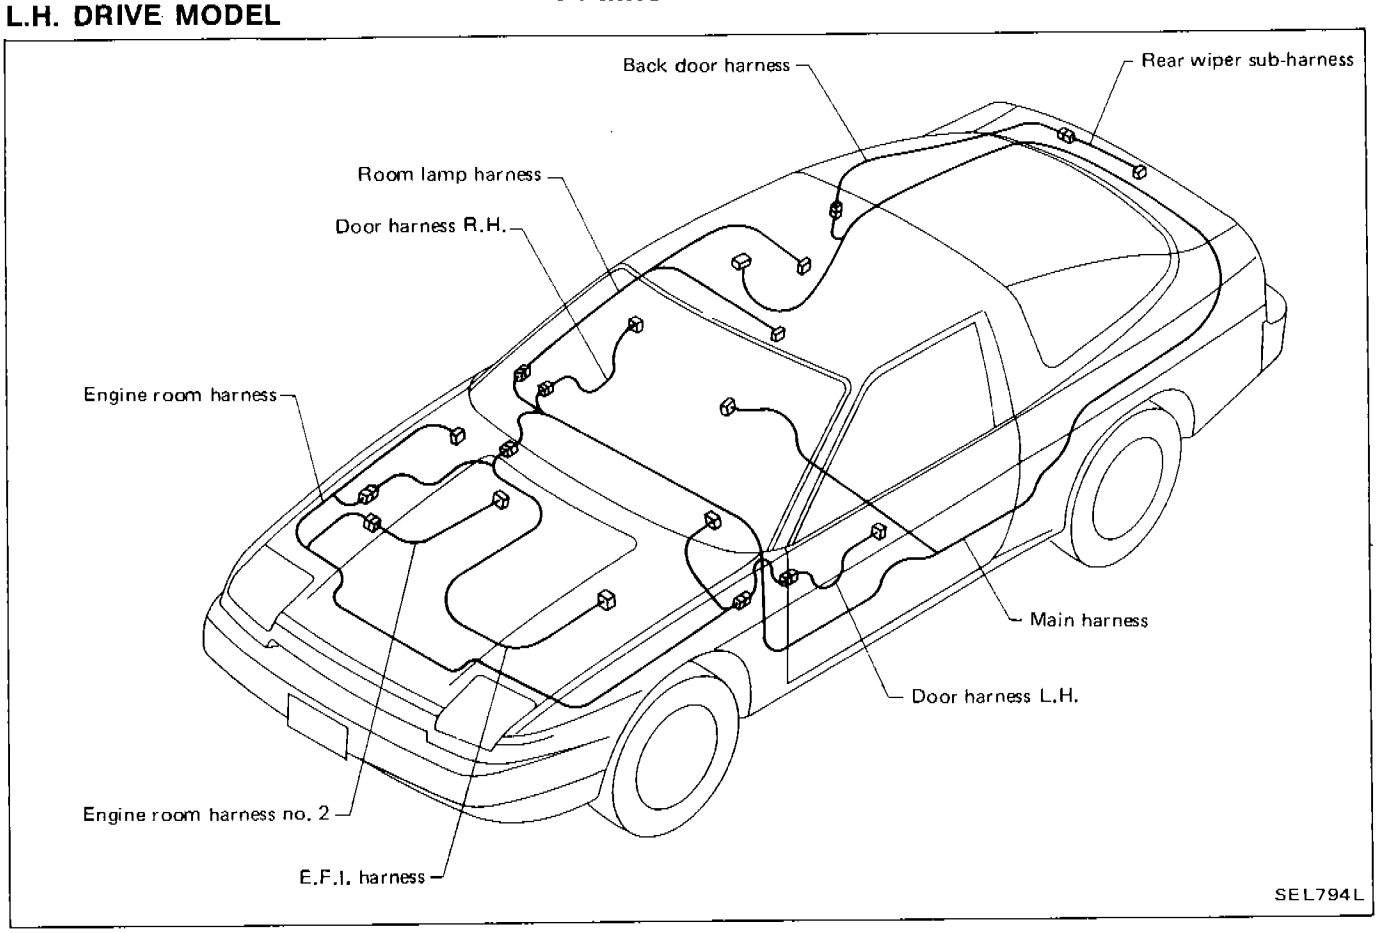


R.H. DRIVE MODEL

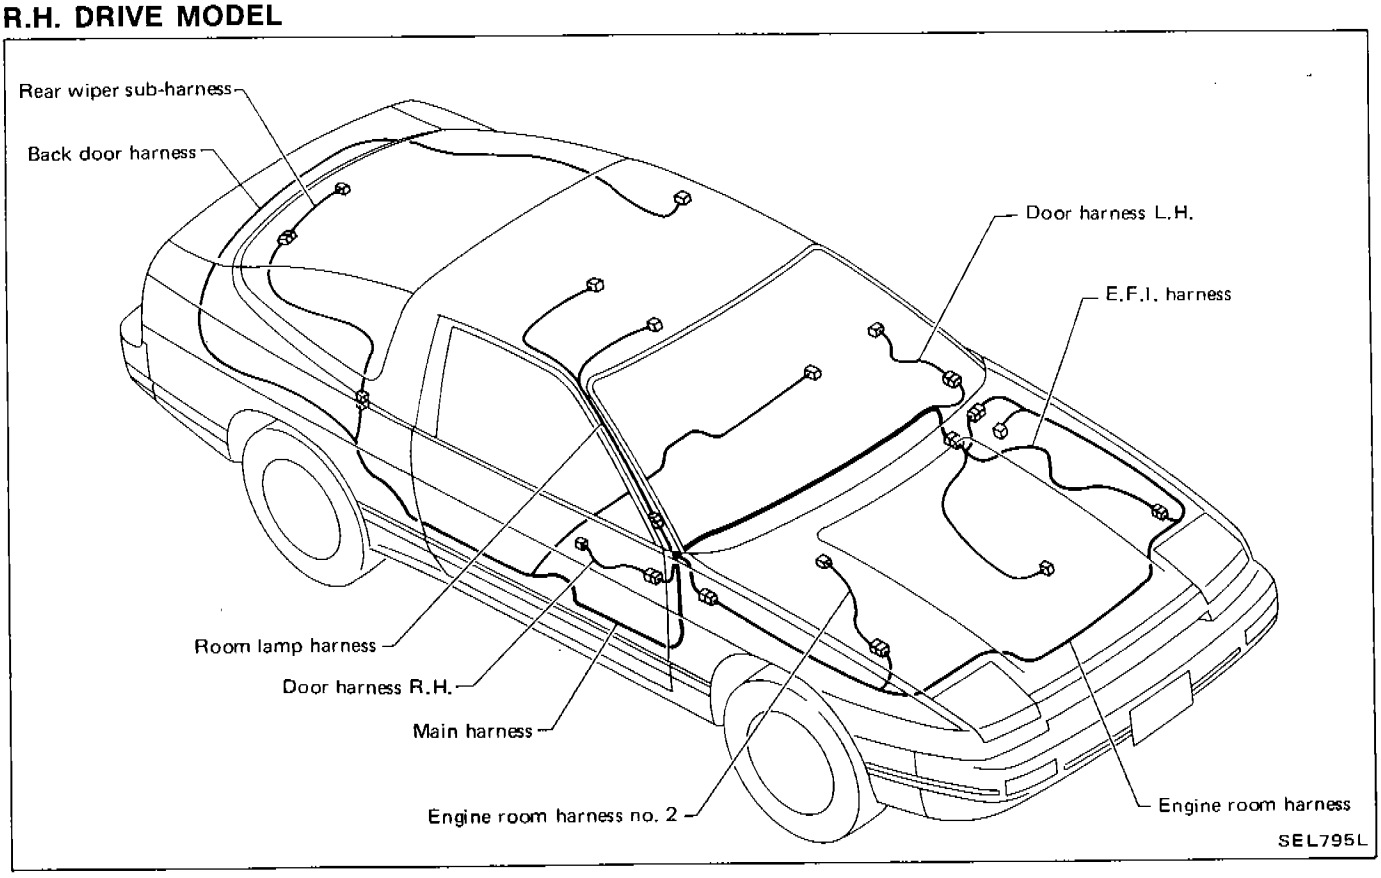


Main Harness

L.H. DRIVE MODEL

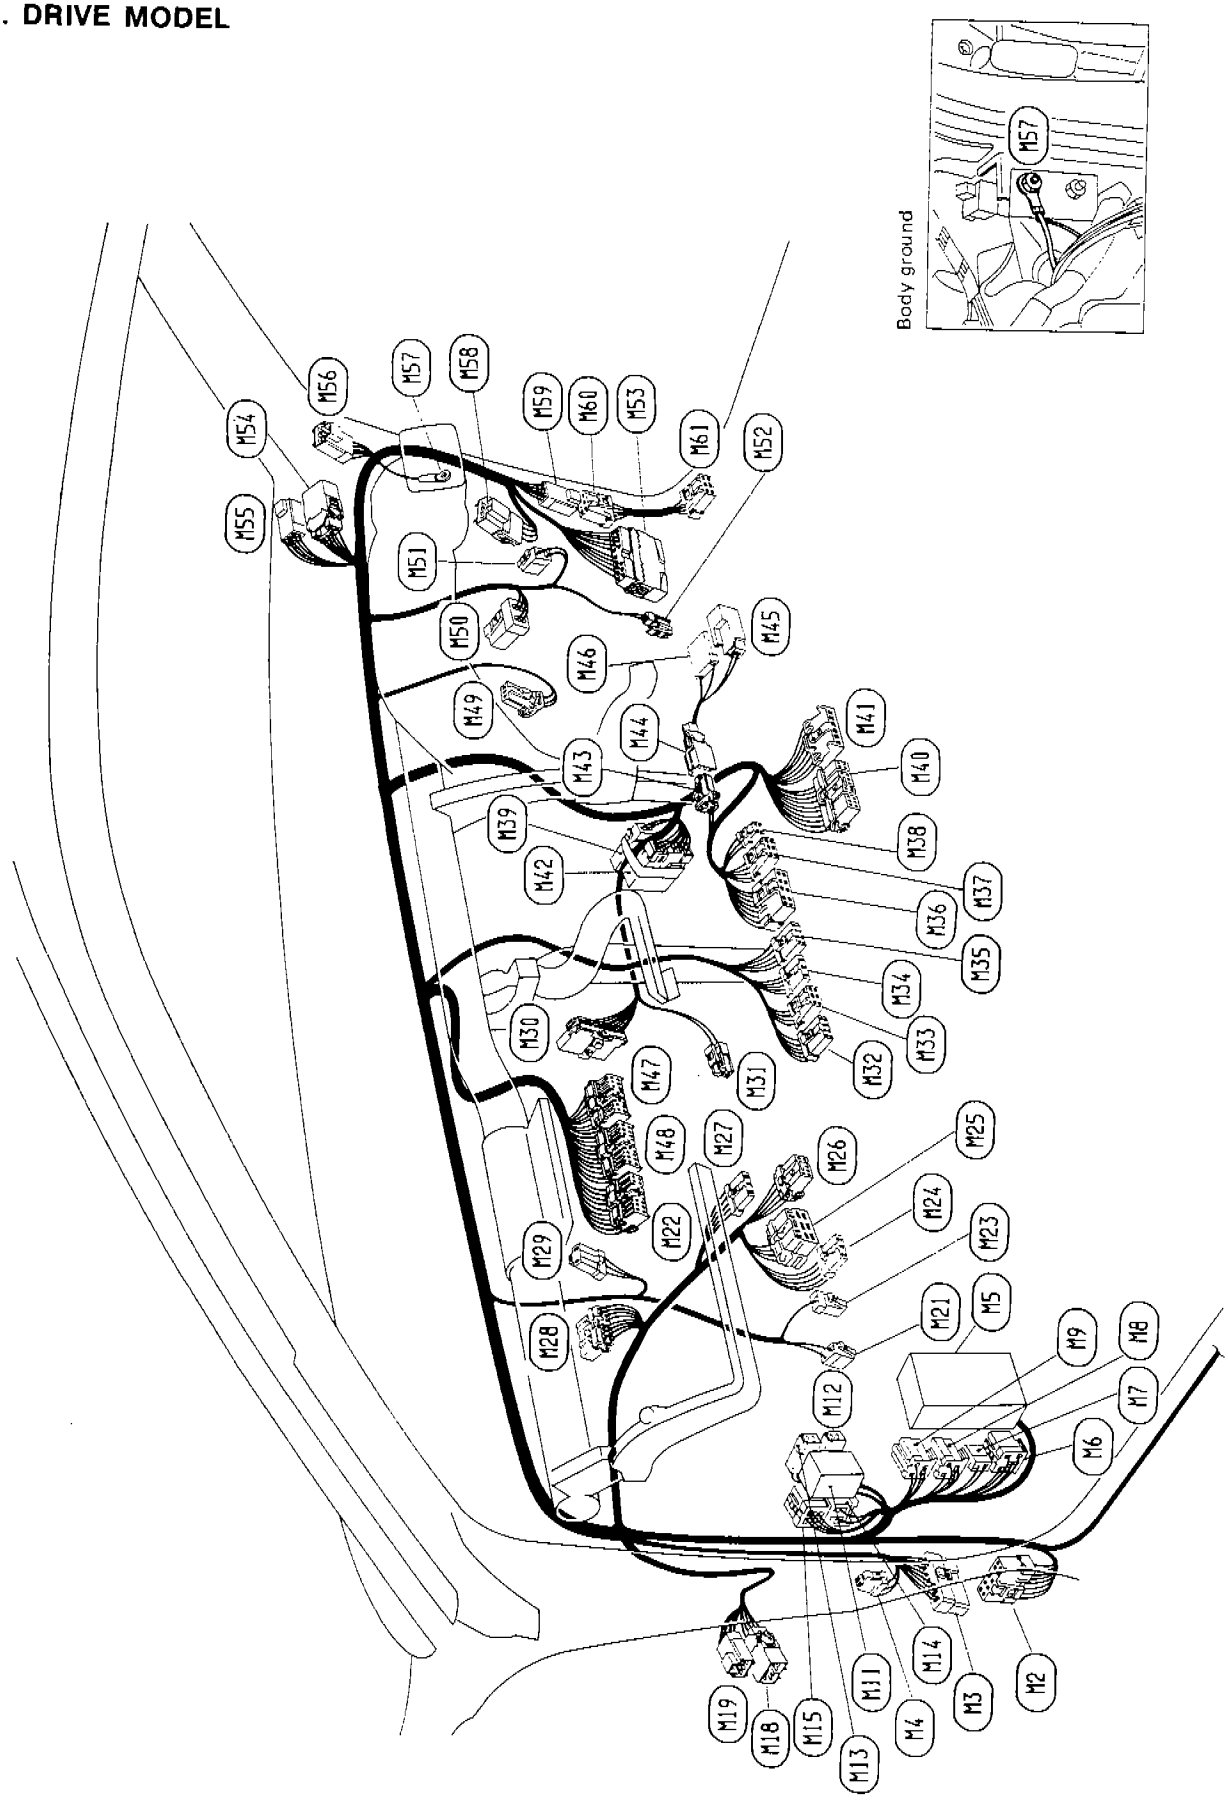


(M2) : Headlamp timer
(M3) : Check connector
(M4) : Warning buzzer
(M5) : Fuse block
(M6) : Ignition relay
(M7) : Circuit breaker (Model with power window system)
(M8) : Accessory relay-2
(M9) : Accessory relay-1
(M11) : To engine room harness (E101)
(M12) : To engine room harness (E102) (Blue)
(M13) : To engine room harness (E103) (Black)
(M14) : Bulb check relay
(M15) : Rear window defogger relay
(M18) : To door harness L.H. (D1)
(M19) : To door harness L.H. (D2)
(M21) : Kickdown switch (A/T model)
(M22) : Combination meter
(M23) : Stop lamp switch
(M24) : Rear fog lamp switch
(M25) : Headlamp retractor switch
(M26) : Illumination control amplifier
(M27) : Not used
(M28) : Not used
(M29) : Combination flasher unit
(M30) : Mode door motor
(M31) : Foot lamp L.H.
(M32) : Headlamp washer switch
(M33) : Rear wiper and washer switch
(M34) : Rear window defogger switch
(M35) : Hazard switch
(M36) : Radio
(M37) : Radio
(M38) : Cassette deck
(M39) : Diode (Except for Europe)
(M40) : Push control unit
(M41) : Fan switch
(M42) : Diode (For Europe)
(M43) : To sub-harness (M44)
(M44) : To main harness (M43)
(M45) : Glove box lamp
(M46) : Glove box lamp switch
(M47) : Combination meter
(M48) : Combination meter
(M49) : Thermo control amplifier
(M50) : Heater resistor
(M51) : Blower motor
(M52) : Foot lamp R.H.
(M53) : To E.F.I. harness (F1)
(M54) : To door harness R.H. (D101)
(M55) : To door harness R.H. (D102)
(M56) : To room lamp harness (R1)
(M57) : Body ground
(M58) : Intake door motor
(M59) : To sub-harness (M60)
(M60) : To main harness (M59)
(M61) : Door lock timer

Diode (M42)

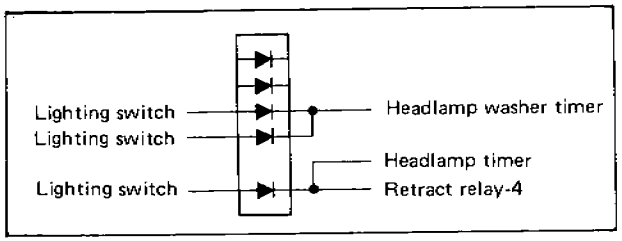


Diode (M39)

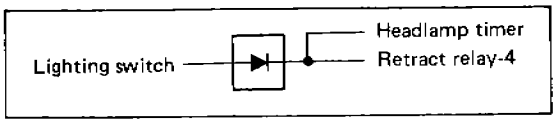

SEL800L

Main Harness (Cont'd)

L.H. DRIVE MODEL

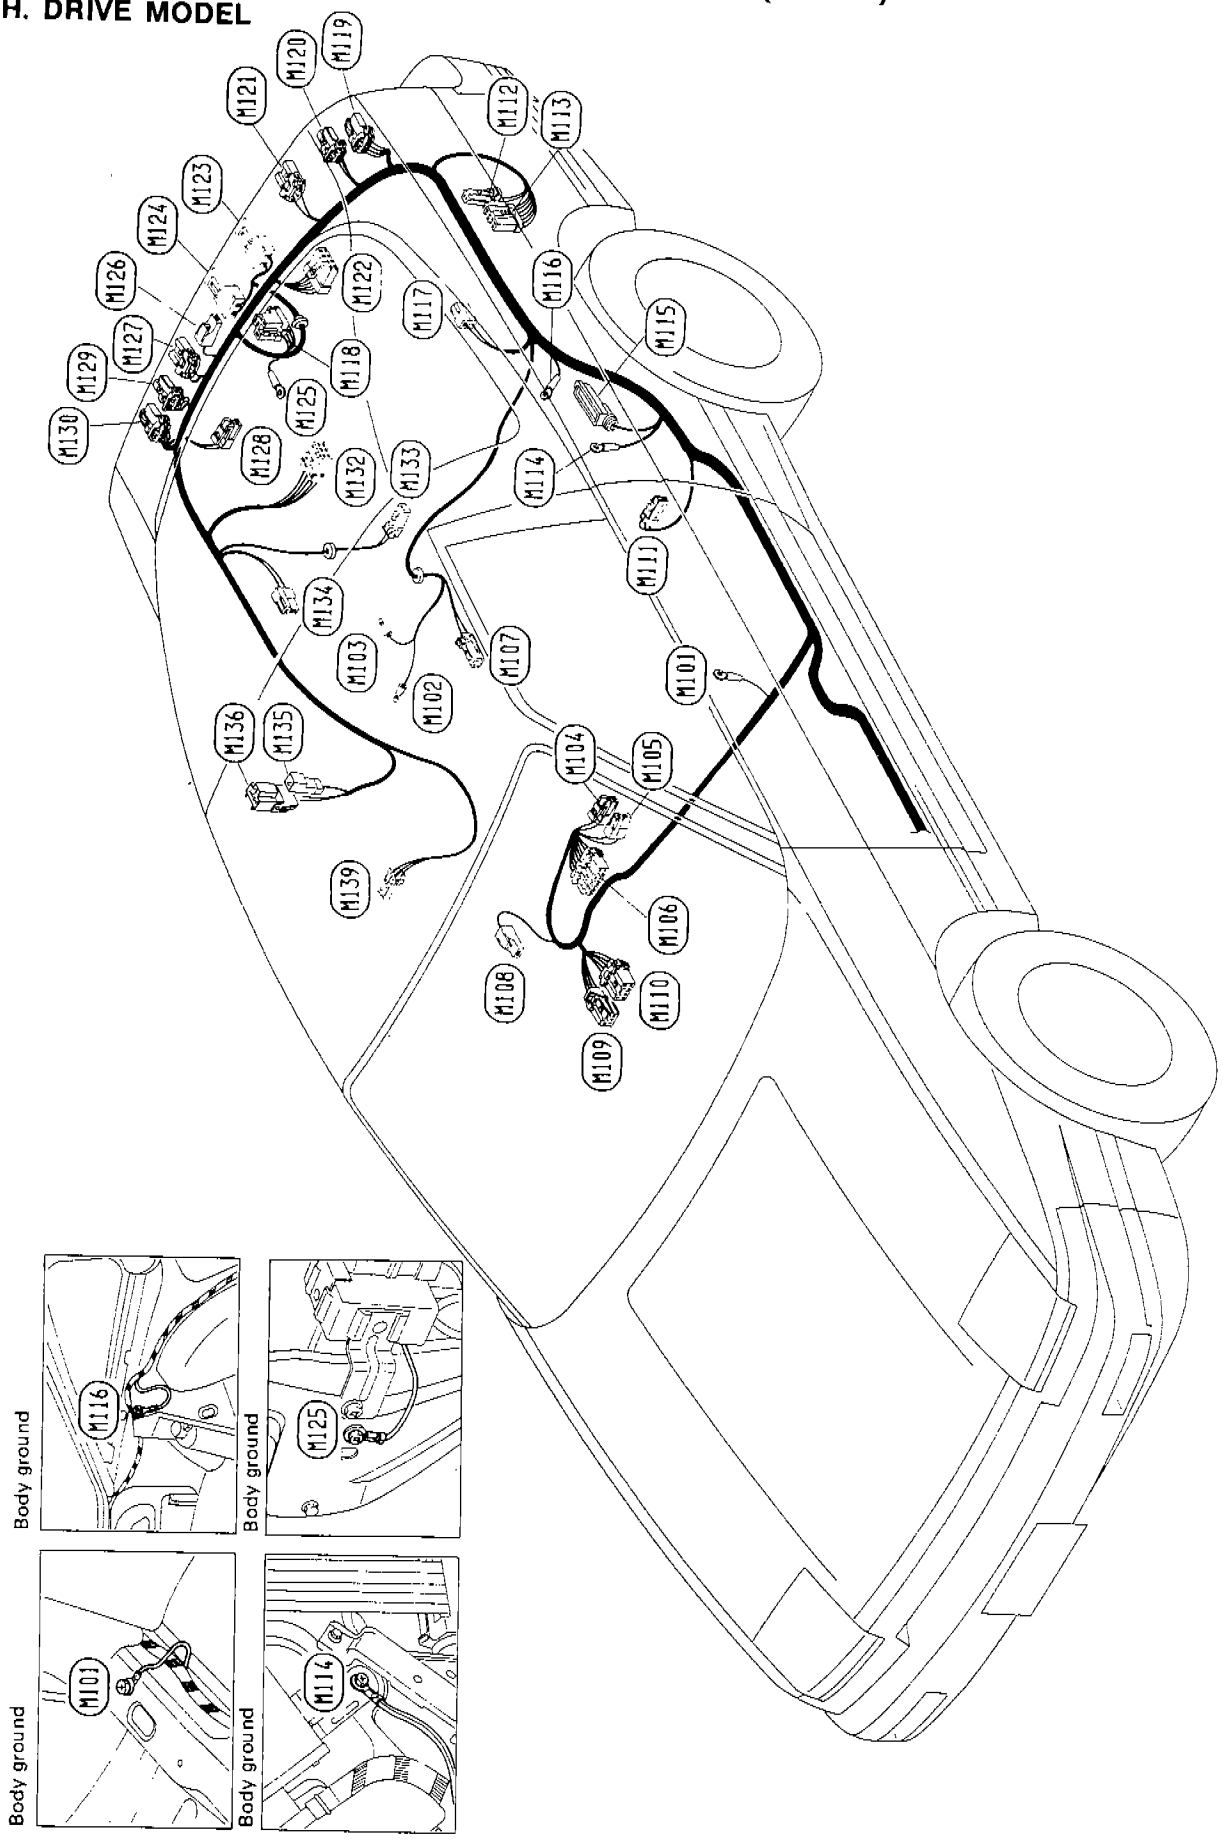

Main Harness (Cont'd)


(f101) : Body ground
(f102) : Differential oil temperature sensor
(f103) : Differential oil temperature switch
(f104) : Ash tray illumination
(f105) : Cigarette lighter
(f106) : Door mirror control switch
(f107) : Differential oil cooler pump
(f108) : Parking brake switch
(f109) : A/T device (A/T illumination and O.D. control switch) (A/T model)
(f110) : Not used
(f111) : Door switch L.H.
(f112) : Power antenna motor
(f113) : Power antenna timer
(f114) : Body ground
(f115) : 4-wheel skid control unit
(f116) : Body ground
(f117) : Rear speaker L.H.
(f118) : Differential oil cooler relay-2

(f119) : Rear combination lamp L.H.
(f120) : Rear combination lamp L.H.
(f121) : Back-up lamp L.H.
(f122) : Rear wiper amplifier
(f123) : License lamp L.H.
(f124) : License lamp R.H.
(f125) : Body ground
(f126) : Luggage room lamp switch
(f127) : Back-up lamp R.H.
(f128) : Luggage room lamp
(f129) : Rear combination lamp R.H.
(f130) : Rear combination lamp R.H.
(f132) : Fuel tank gauge unit
(f133) : Rear brake skid sensor
(f134) : Rear speaker R.H.
(f135) : To back door harness (05I1)
(f136) : To back door harness (05I2)
(f139) : Door switch R.H.

SEL801L


Main Harness (Cont'd)

R.H. DRIVE MODEL

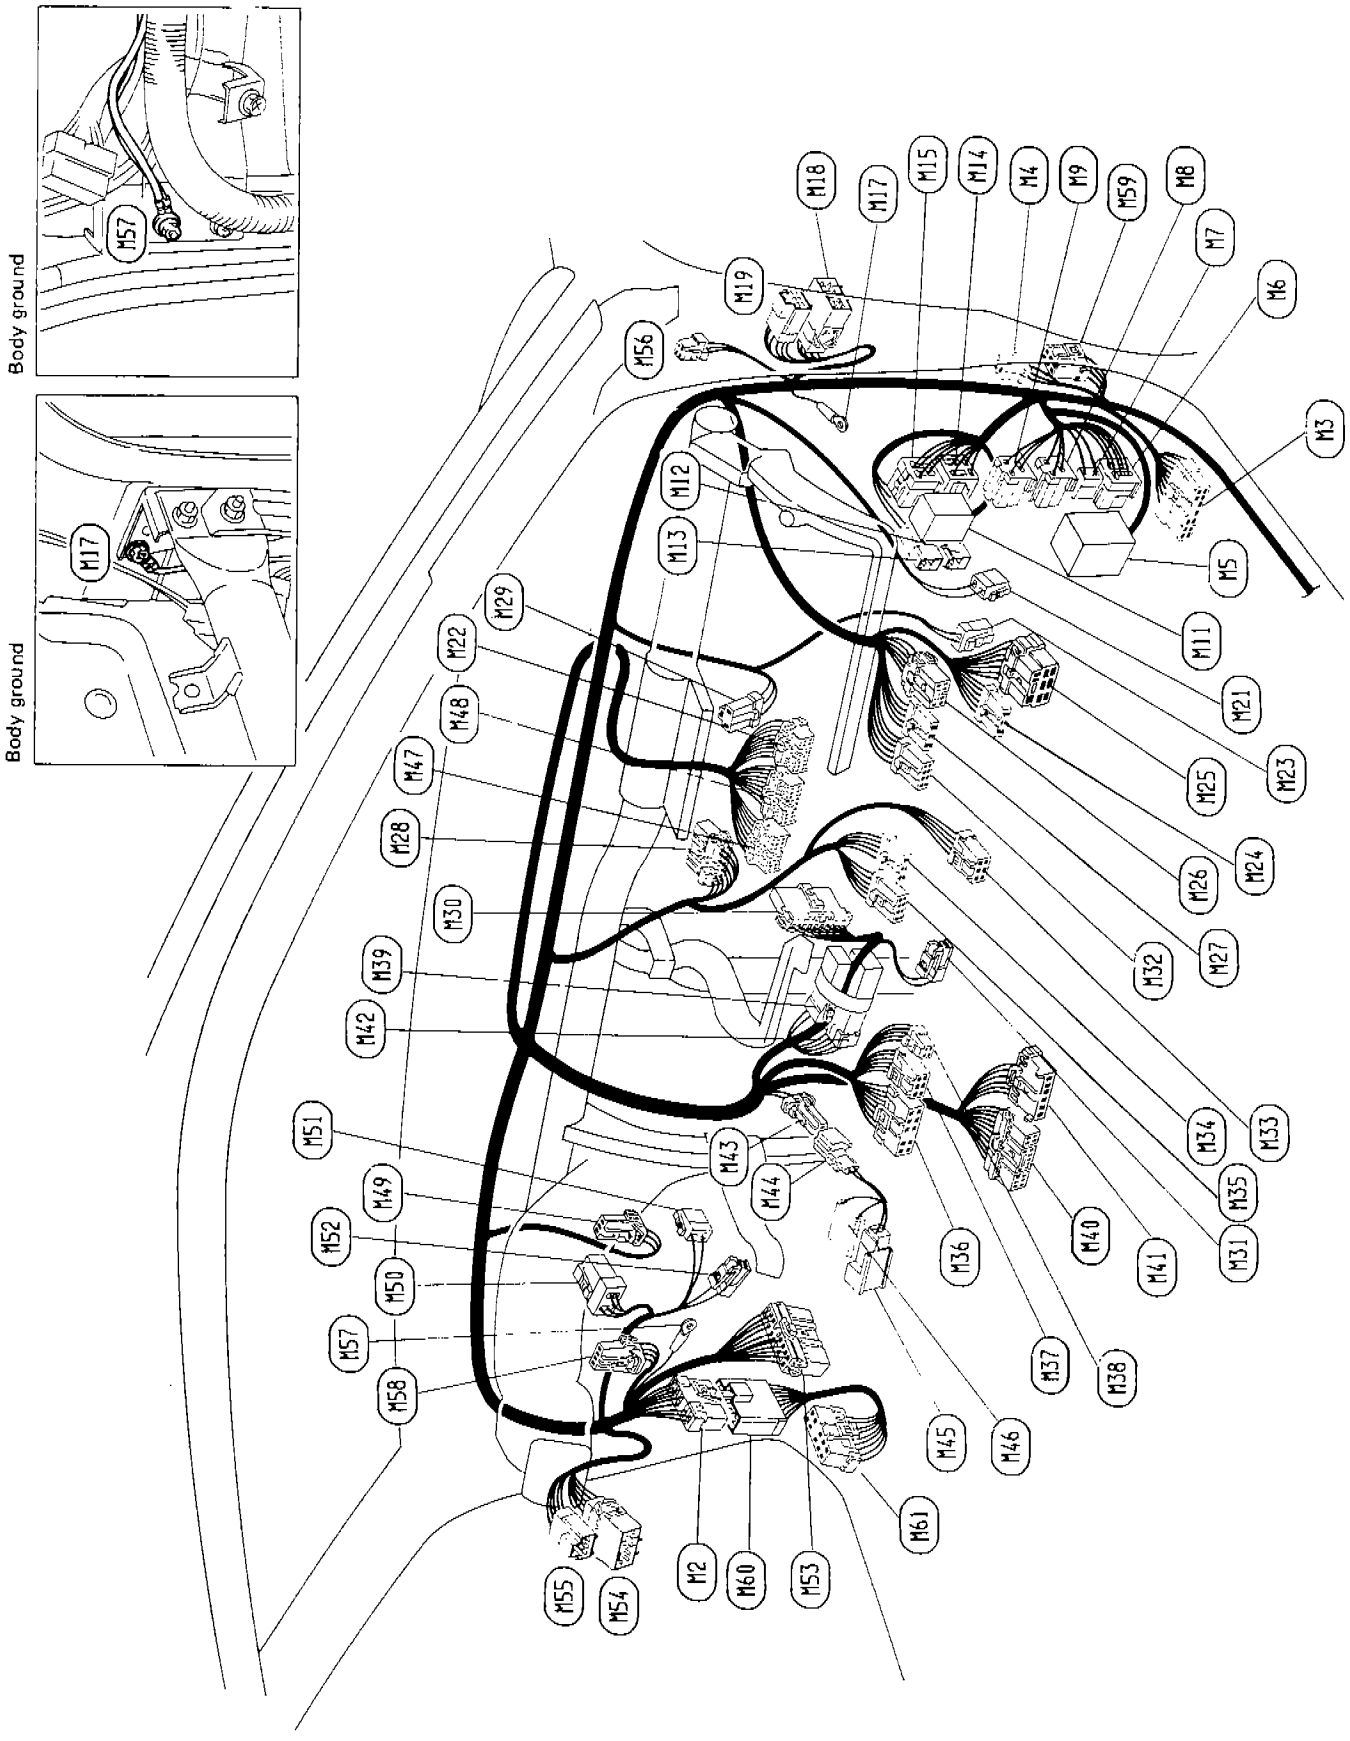


(M2) : To sub-harness (M60)
(M3) : Check connector
(M4) : Warning buzzer
(M5) : Fuse block
(M6) : Ignition relay
(M7) : Circuit breaker (Model with power window system)
(M8) : Accessory relay-2
(M9) : Accessory relay-1
(M11) : To engine room harness (E101)
(M12) : To engine room harness (E102) (Blue)
(M13) : To engine room harness (E103) (Black)
(M14) : Bulb check relay
(M15) : Rear window defogger relay
(M17) : Body ground
(M18) : To door harness R.H. (D111)
(M19) : To door harness R.H. (D112)
(M21) : Kickdown switch (A/T model)
(M22) : Combination meter
(M23) : Stop lamp switch
(M24) : Rear fog lamp switch
(M25) : Headlamp retractor switch
(M26) : Illumination control amplifier
(M27) : Not used
(M28) : Not used
(M29) : Combination flasher unit
(M30) : Mode door motor
(M31) : Foot lamp L.H.
(M32) : Headlamp washer switch
(M33) : Rear wiper and washer switch
(M34) : Rear window defogger switch
(M35) : Hazard switch
(M36) : Radio
(M37) : Radio
(M38) : Cassette deck
(M39) : Diode (Except for Europe)
(M40) : Push control unit
(M41) : Fan switch
(M42) : Diode (For Europe)
(M43) : To sub-harness (M44)
(M44) : To main harness (M43)
(M45) : Glove box lamp
(M46) : Glove box lamp switch
(M47) : Combination meter
(M48) : Combination meter
(M49) : Thermo control amplifier
(M50) : Heater resistor
(M51) : Blower motor
(M52) : Foot lamp R.H.
(M53) : To E.F.I. harness (F1)
(M54) : To door harness L.H. (D11)
(M55) : To door harness L.H. (D12)
(M56) : To room lamp harness (R1)
(M57) : Body ground
(M58) : Intake door motor
(M59) : Door lock timer
(M60) : To main harness (M2)
(M61) : Headlamp timer

Diode (M42)

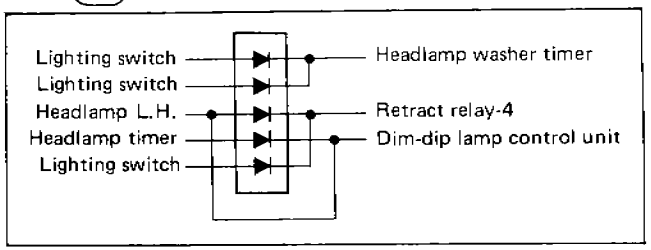


Diode (M39)

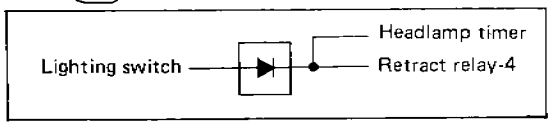

SEL802L

Main Harness (Cont'd)

R.H. DRIVE MODEL

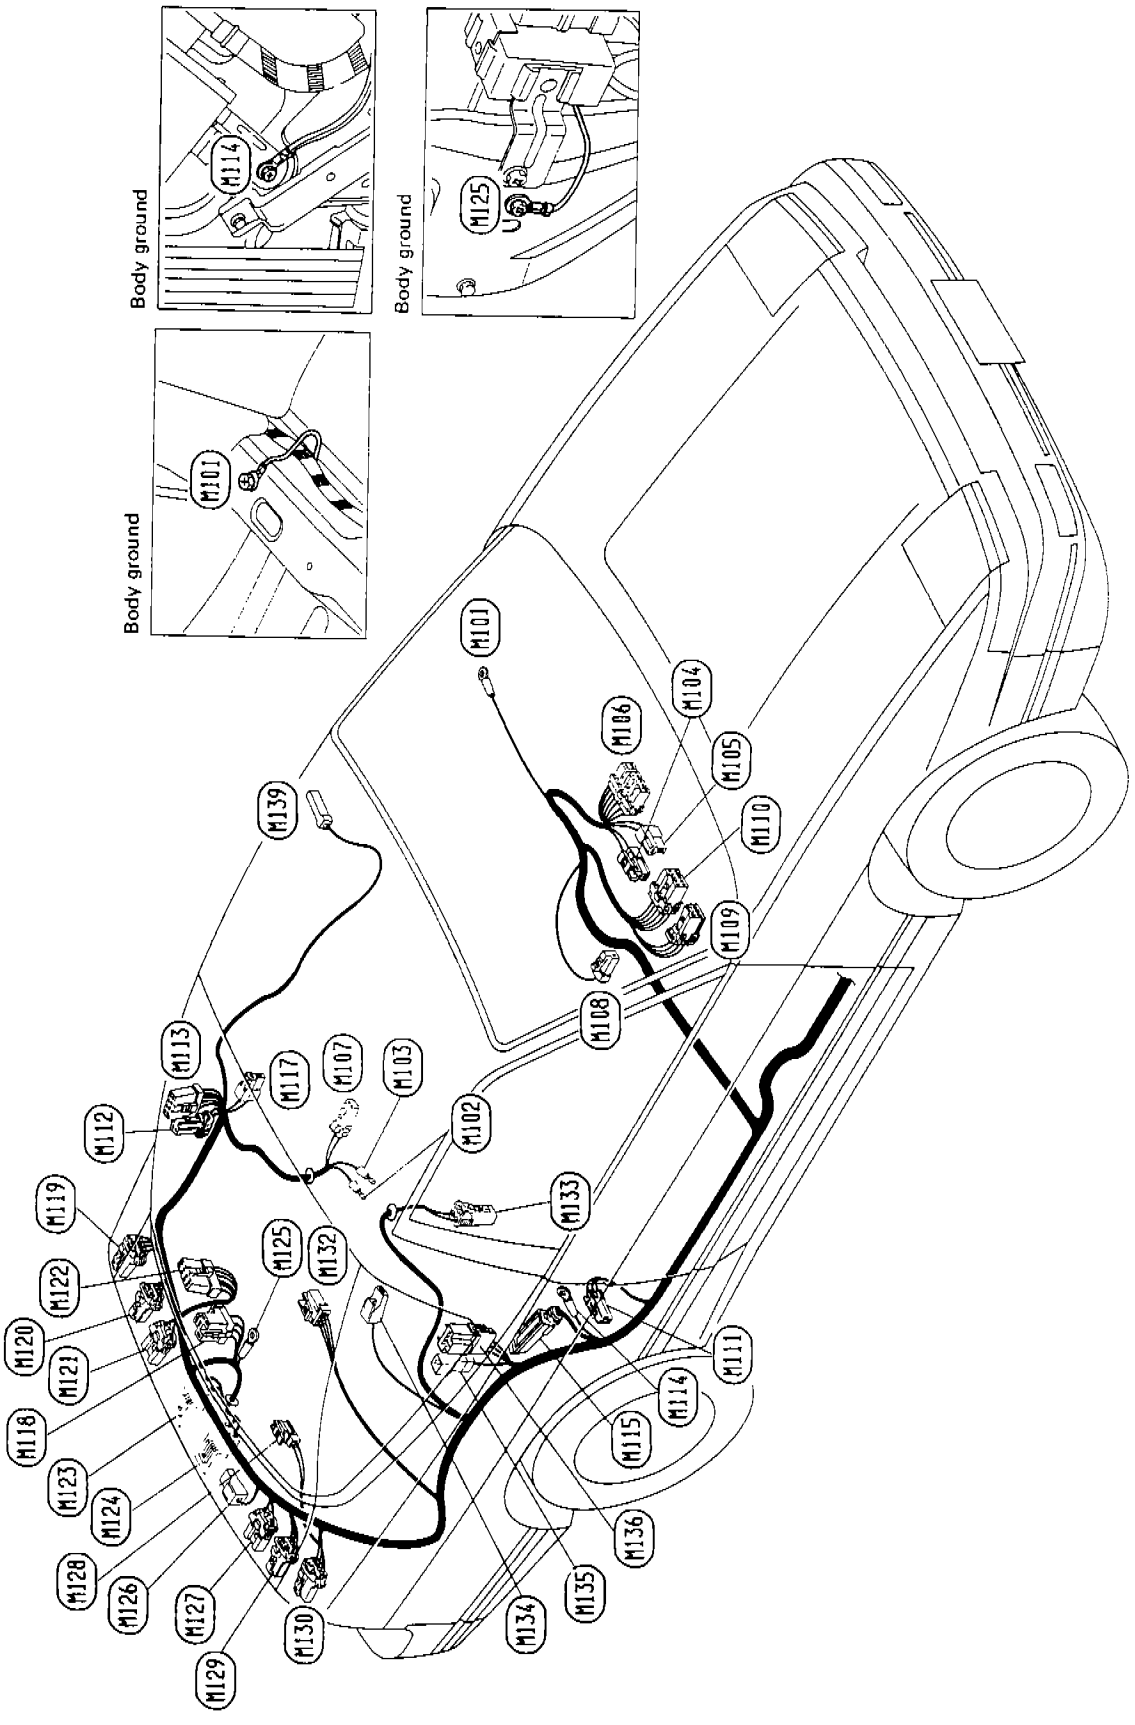


Main Harness (Cont'd)

(M101) : Body ground
(M102) : Differential oil temperature sensor
(M103) : Differential oil temperature switch
(M104) : Ash tray illumination
(M105) : Cigarette lighter
(M106) : Door mirror control switch
(M107) : Differential oil cooler pump
(M108) : Parking brake switch
(M109) : A/T device (A/T illumination and O.D. control switch) (A/T model)
(M110) : Not used
(M111) : Door switch R.H.
(M112) : Power antenna motor
(M113) : Power antenna timer
(M114) : Body ground
(M115) : 4-wheel skid control unit
(M117) : Rear speaker L.H.
(M118) : Differential oil cooler relay-2
(M119) : Rear combination lamp L.H.


(M120) : Rear combination lamp L.H.
(M121) : Back-up lamp L.H.
(M122) : Rear wiper amplifier
(M123) : License lamp L.H.
(M124) : License lamp R.H.
(M125) : Body ground
(M126) : Luggage room lamp switch
(M127) : Back-up lamp R.H.
(M128) : Luggage room lamp
(M129) : Rear combination lamp R.H.
(M130) : Rear combination lamp R.H.
(M132) : Fuel tank gauge unit
(M133) : Rear brake skid sensor
(M134) : Rear speaker R.H.
(M135) : To back door harness (D501)
(M136) : To back door harness (D502)
(M139) : Door switch L.H.

SEL803L


Room Lamp Harness

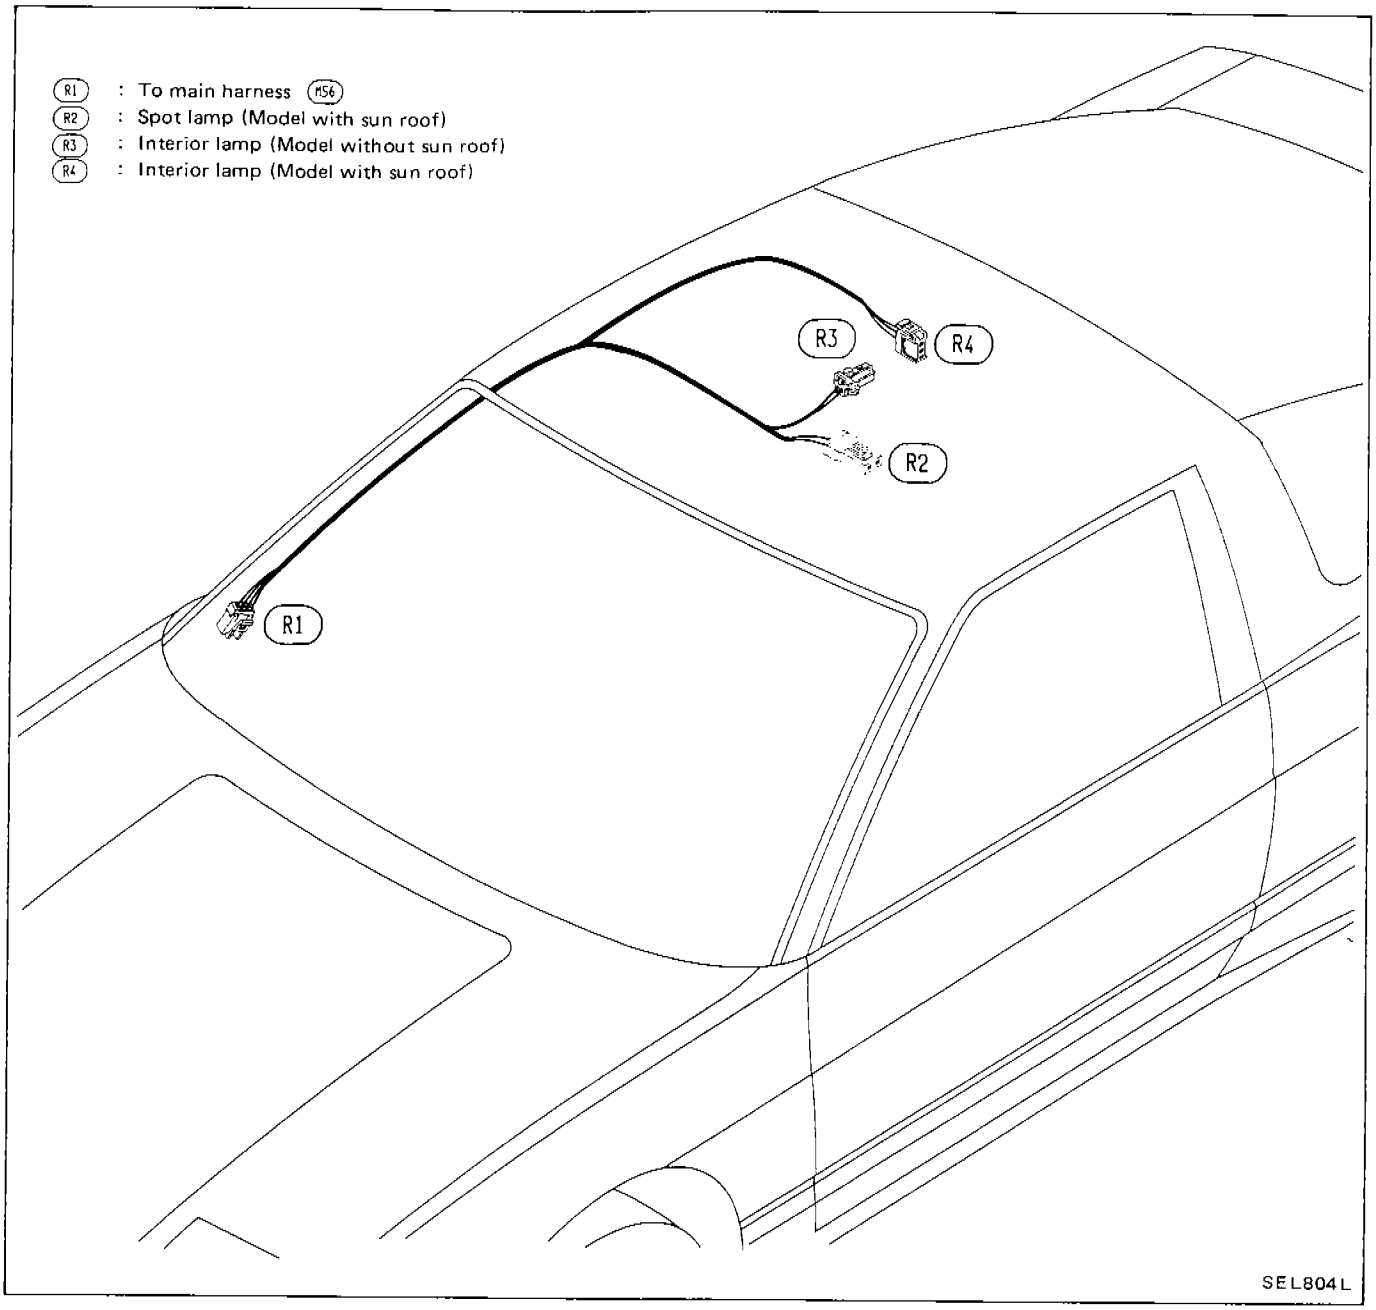

Door Harness L.H.

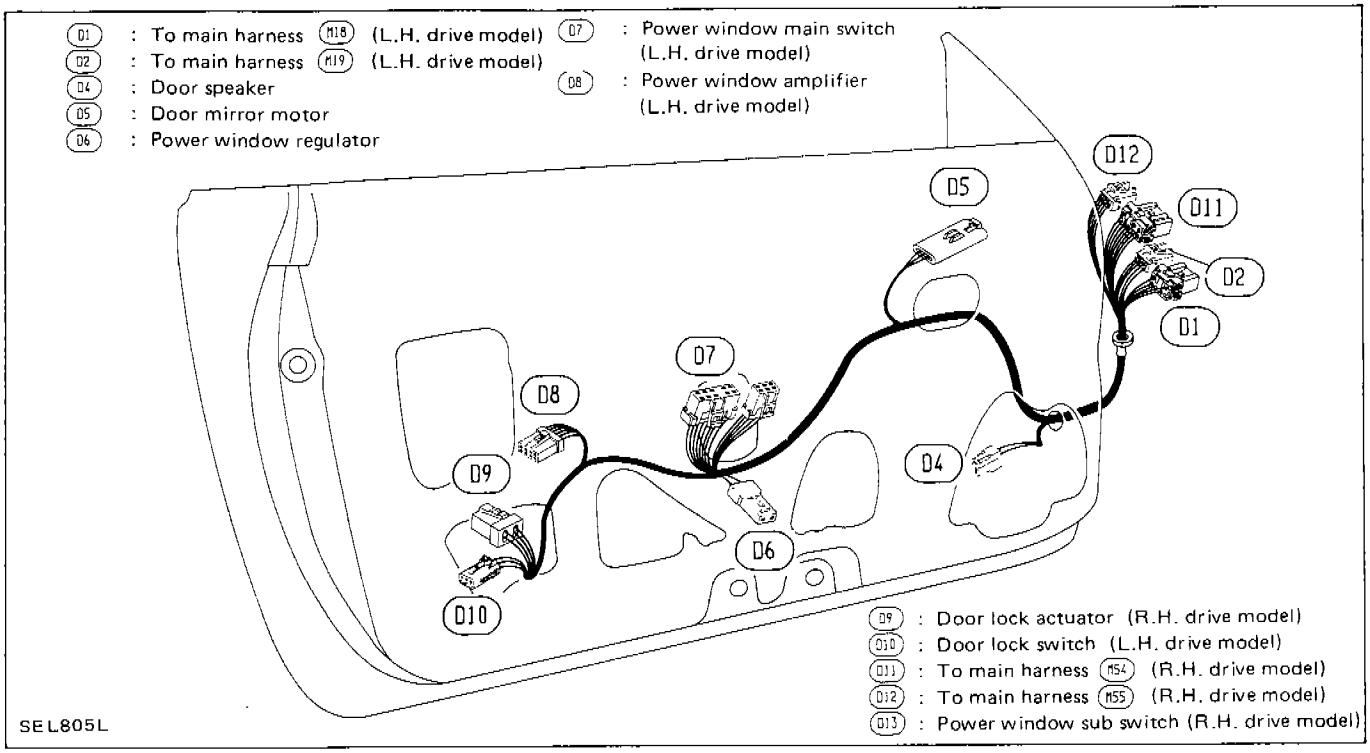


Door Harness R.H.

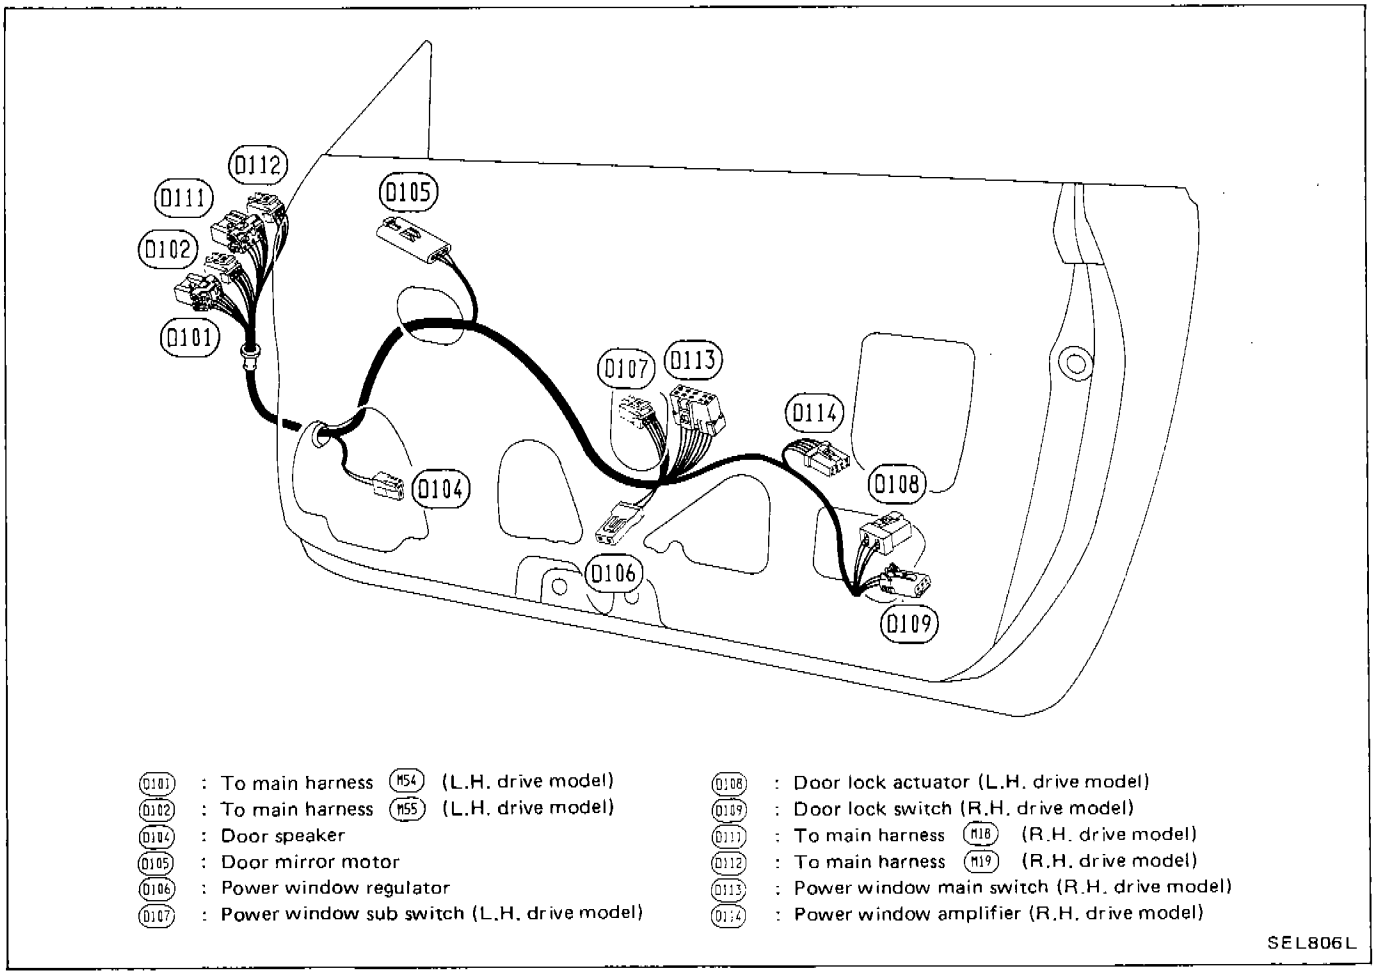

Engine Room Harness

L.H. DRIVE MODEL

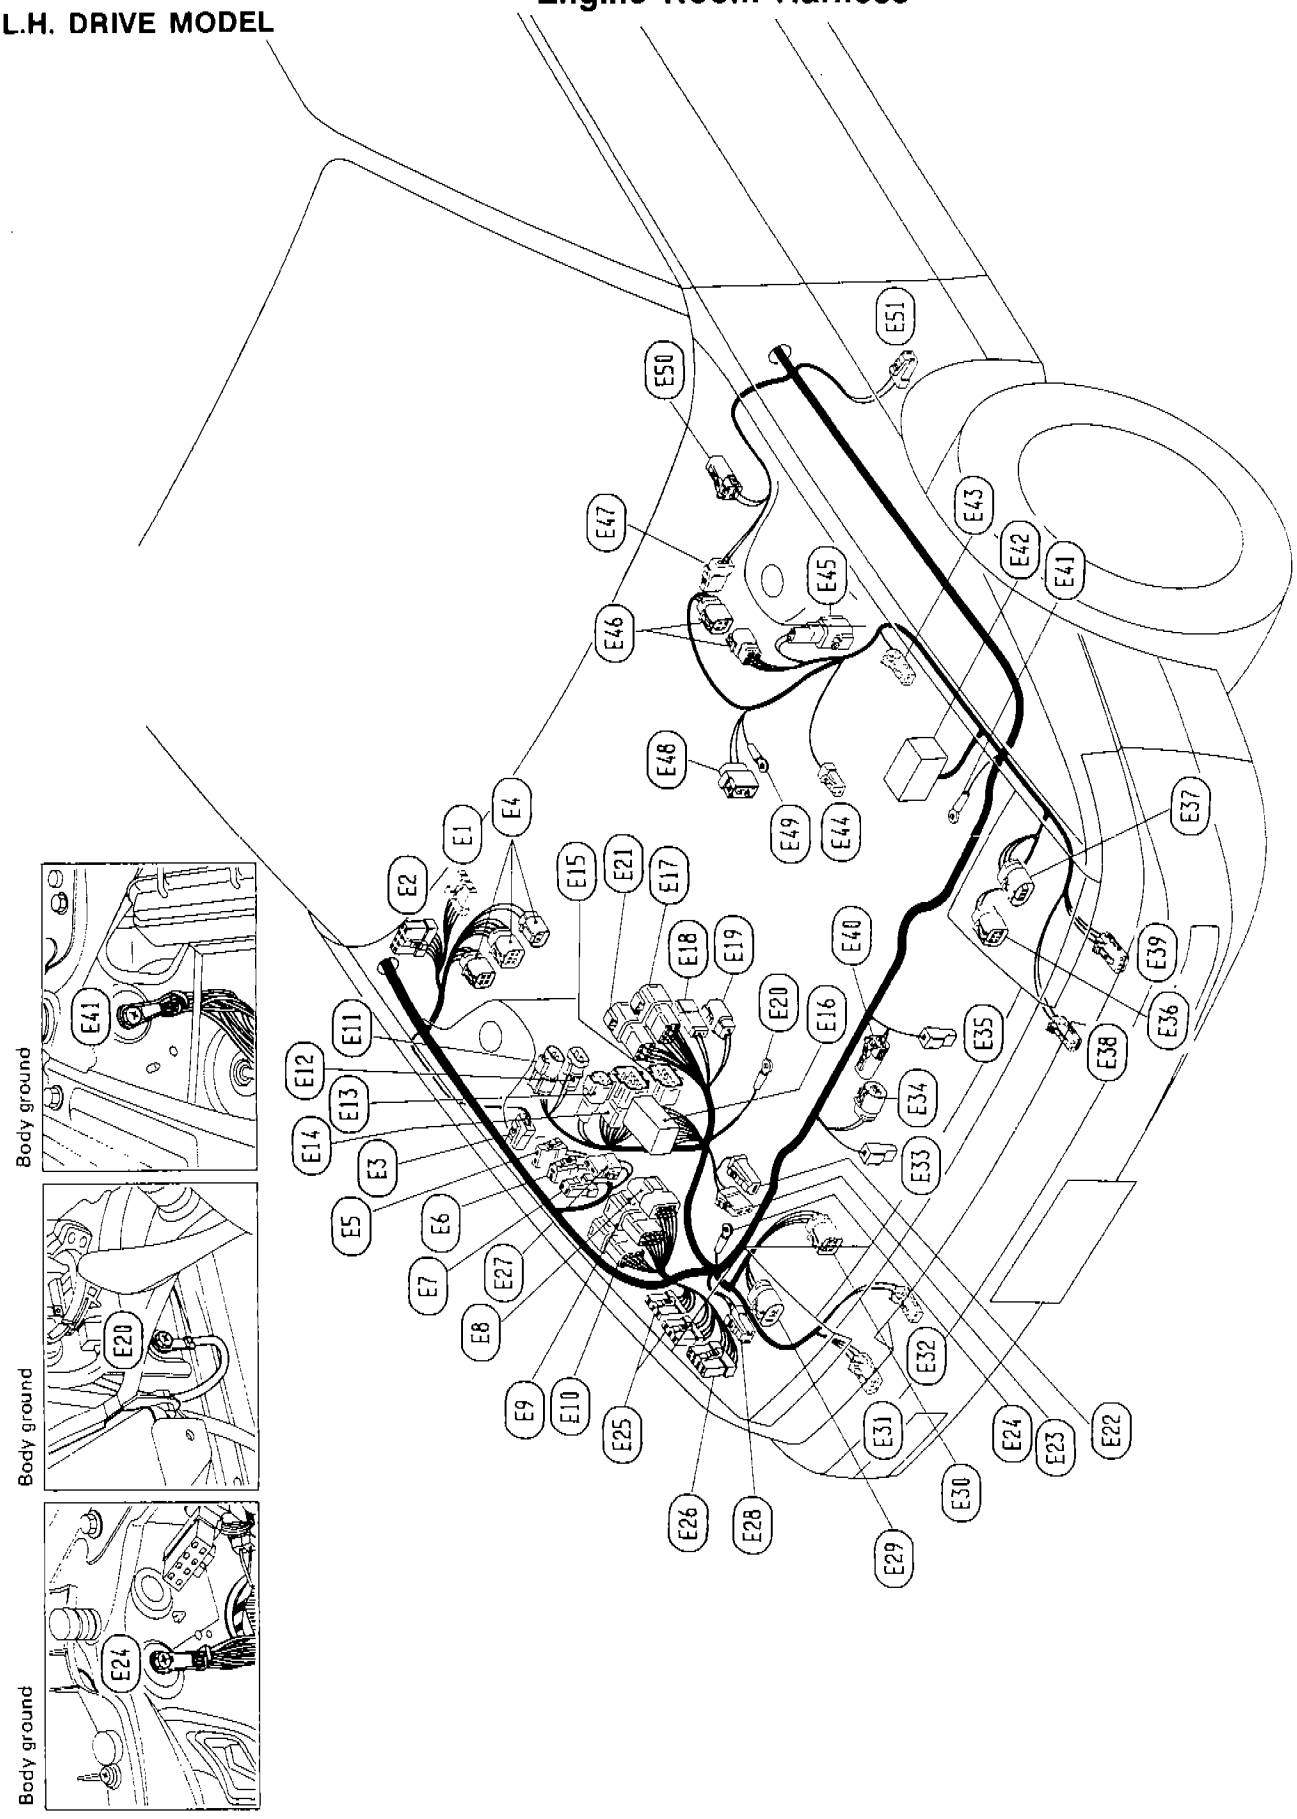


Engine Room Harness (Cont'd)

E1 : Windshield wiper motor
E2 : Windshield wiper amplifier
E3 : Side turn signal lamp R.H.
E4 : Anti-skid brake actuator
E5 : Rear washer motor
E6 : Front washer motor
E7 : Washer fluid level switch
E8 : To E.F.I. harness (F8) (White)
E9 : To E.F.I. harness (F9) (Gray)
E10 : To E.F.I. harness (F10) (Brown)
E11 : To engine room harness no. 2 (E201) (M/T model)
E12 : Inhibitor switch (A/T model)
E13 : Revolution sensor (A/T model)
E14 : Inhibitor switch (A/T model) (Gray)
E15 : To solenoid valve sub-harness (A/T model) (Brown)
E16 : Relay box (Refer to page EL-81.)
E17 : To engine room harness no. 2 (E202) (A/T model)
E18 : To engine room harness no. 2 (E203)
E19 : To engine room harness no. 2 (E204)
E20 : Body ground
E21 : To engine room harness no.2 (E205) (M/T model)
E22 : Battery
E23 : Battery
E24 : Body ground
E25 : Daytime light control unit
E26 : Headlamp washer amplifier
E27 : Headlamp washer motor
E28 : Not used
E29 : Headlamp R.H.
E30 : Headlamp motor R.H.
E31 : Front combination lamp R.H.
E32 : Daytime light R.H.
E33 : Horn-high
E34 : Condenser fan motor
E35 : Horn-low
E36 : Headlamp motor L.H.
E37 : Headlamp L.H.
E38 : Daytime light L.H.
E39 : Front combination lamp L.H.
E40 : Dual-pressure switch
E41 : Body ground
E42 : Relay box (Refer to page EL-81.)
E43 : Dropping resistor (A/T model)
E44 : Compressor
E45 : Front brake skid sensor L.H.
E46 : Power transistor unit
E47 : Brake fluid level switch
E48 : Pressure regulator control solenoid valve
E49 : Body ground for front brake skid sensor L.H.
E50 : V.P.W. wiper motor
E51 : Side turn signal lamp L.H.
E52 : To engine room harness (E28)

SEL796L

Engine Room Harness (Cont'd)

L.H. DRIVE MODEL

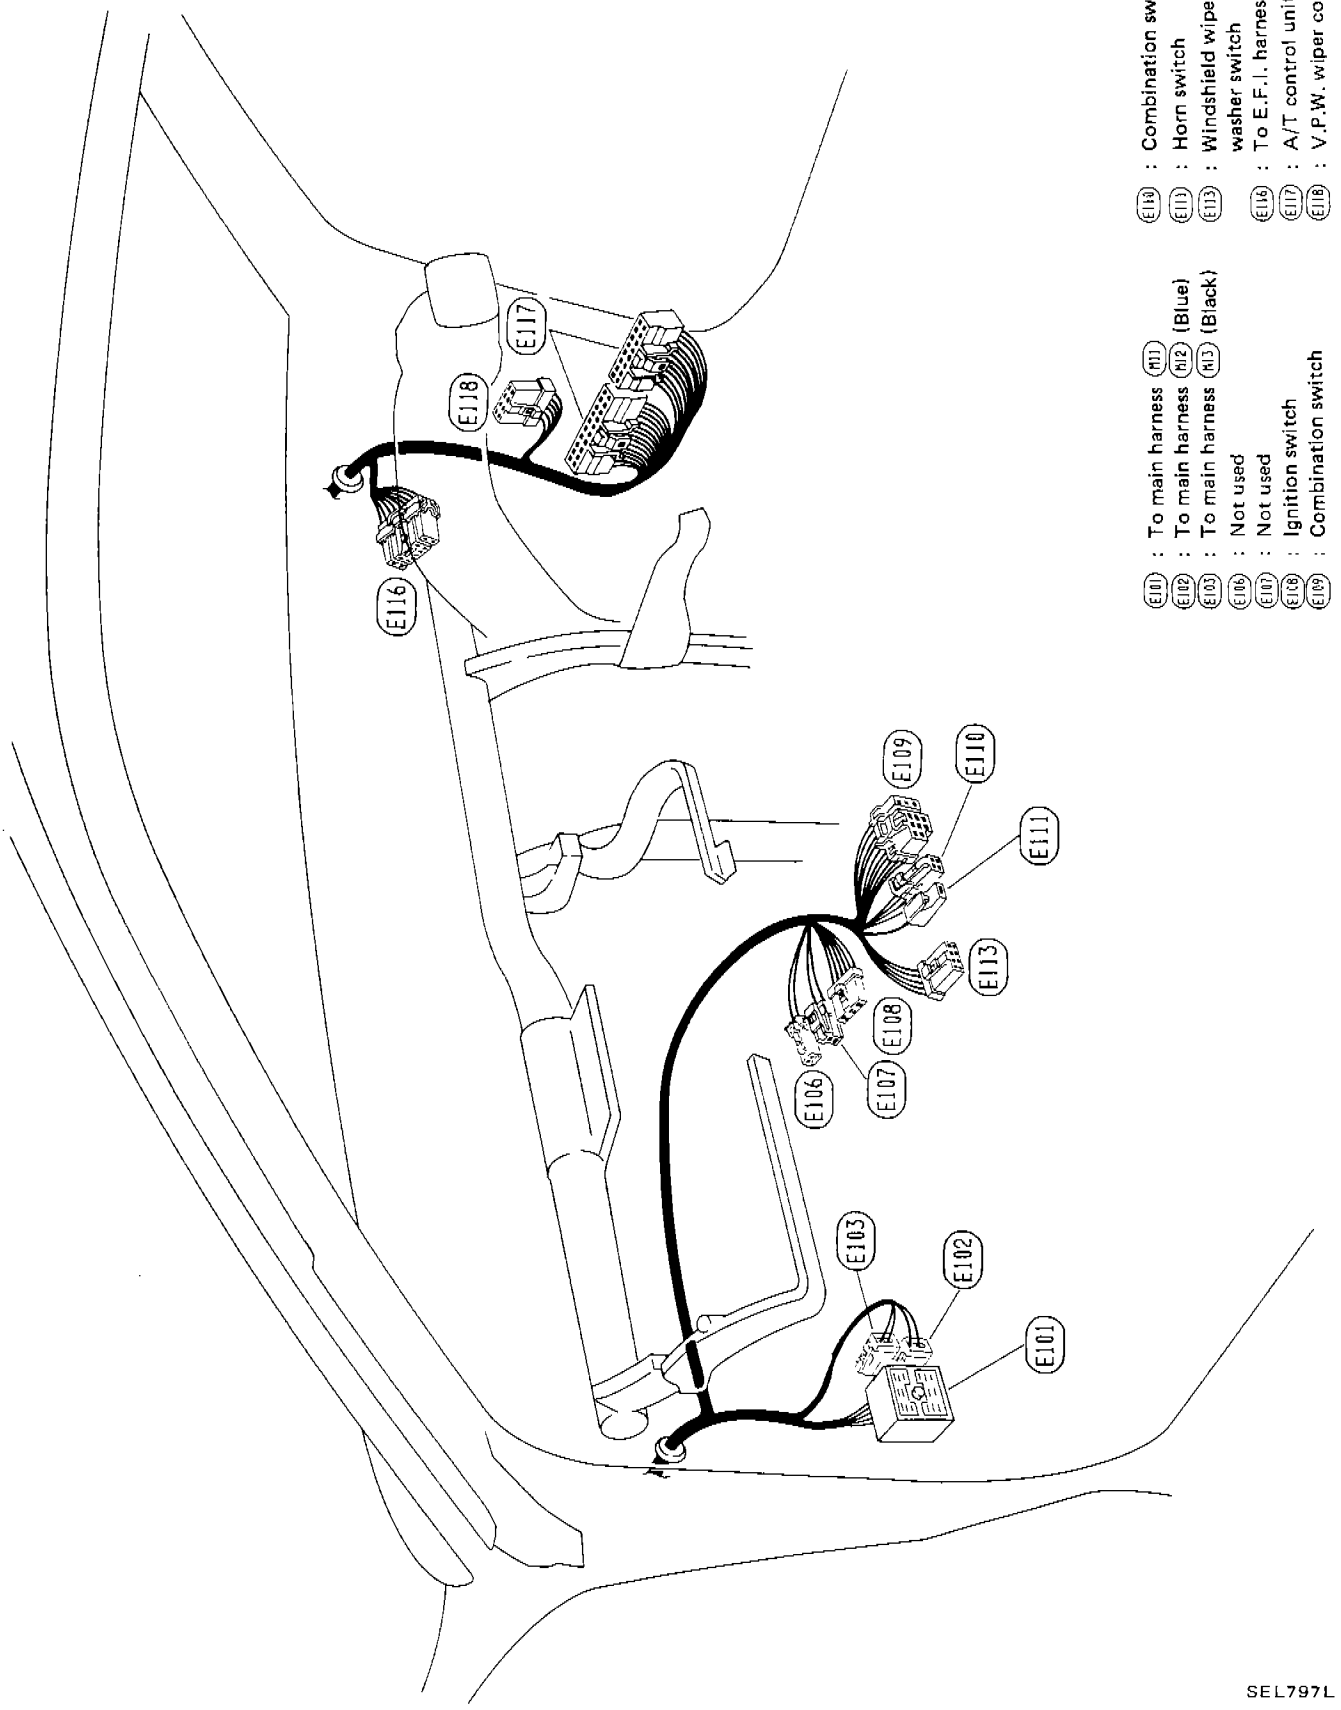

E101 : To main harness (M11)
E102 : To main harness (M12) (Blue)
E103 : To main harness (M13) (Black)
E106 : Not used
E107 : Not used
E108 : Ignition switch
E109 : Combination switch
E110 : Combination switch
E111 : Horn switch
E113 : Windshield wiper and washer switch
E116 : To E.F.I. harness (F3)
E117 : A/T control unit
E118 : V.P.W. wiper control unit

SEL797L

NOTE

Engine Room Harness (Cont'd)

R.H. DRIVE MODEL




Engine Room Harness (Cont'd)

(E1) : Windshield wiper motor
(E2) : Windshield wiper amplifier
(E3) : Side turn signal lamp R.H.
(E4) : Anti-skid brake actuator
(E5) : Rear washer motor
(E6) : Front washer motor
(E7) : Washer fluid level switch
(E8) : To E.F.I. harness (F8) (White)
(E10) : To E.F.I. harness (F10) (Brown)
(E11) : To engine room harness no. 2 (E201) (M/T model)
(E12) : Inhibitor switch (A/T model)
(E13) : Revolution sensor (A/T model)
(E14) : Inhibitor switch (A/T model) (Gray)
(E15) : To solenoid valve sub-harness (A/T model) (Brown)
(E16) : Relay box (Refer to page EL-81.)
(E17) : To engine room harness no. 2 (E202) (A/T model)
(E18) : To engine room harness no. 2 (E203)
(E19) : To engine room harness no. 2 (E204)
(E20) : Body ground
(E21) : To engine room harness no.2 (E205) (M/T model)
(E22) : Battery
(E23) : Battery
(E24) : Body ground
(E26) : Headlamp washer amplifier
(E27) : Headlamp washer motor
(E28) : Not used
(E29) : Headlamp R.H.
(E30) : Headlamp motor R.H.
(E31) : Front combination lamp R.H.
(E33) : Horn-high
(E34) : Condenser fan motor
(E35) : Horn-low
(E36) : Headlamp motor L.H.
(E37) : Headlamp L.H.
(E39) : Front combination lamp L.H.
(E40) : Dual-pressure switch
(E41) : Body ground
(E42) : Relay box (Refer to page EL-81.)
(E45) : Front brake skid sensor R.H.
(E47) : Brake fluid level switch
(E51) : Side turn signal lamp L.H.
(E52) : To engine room harness (F28)

SEL798L

Engine Room Harness (Cont'd)


R.H. DRIVE MODEL

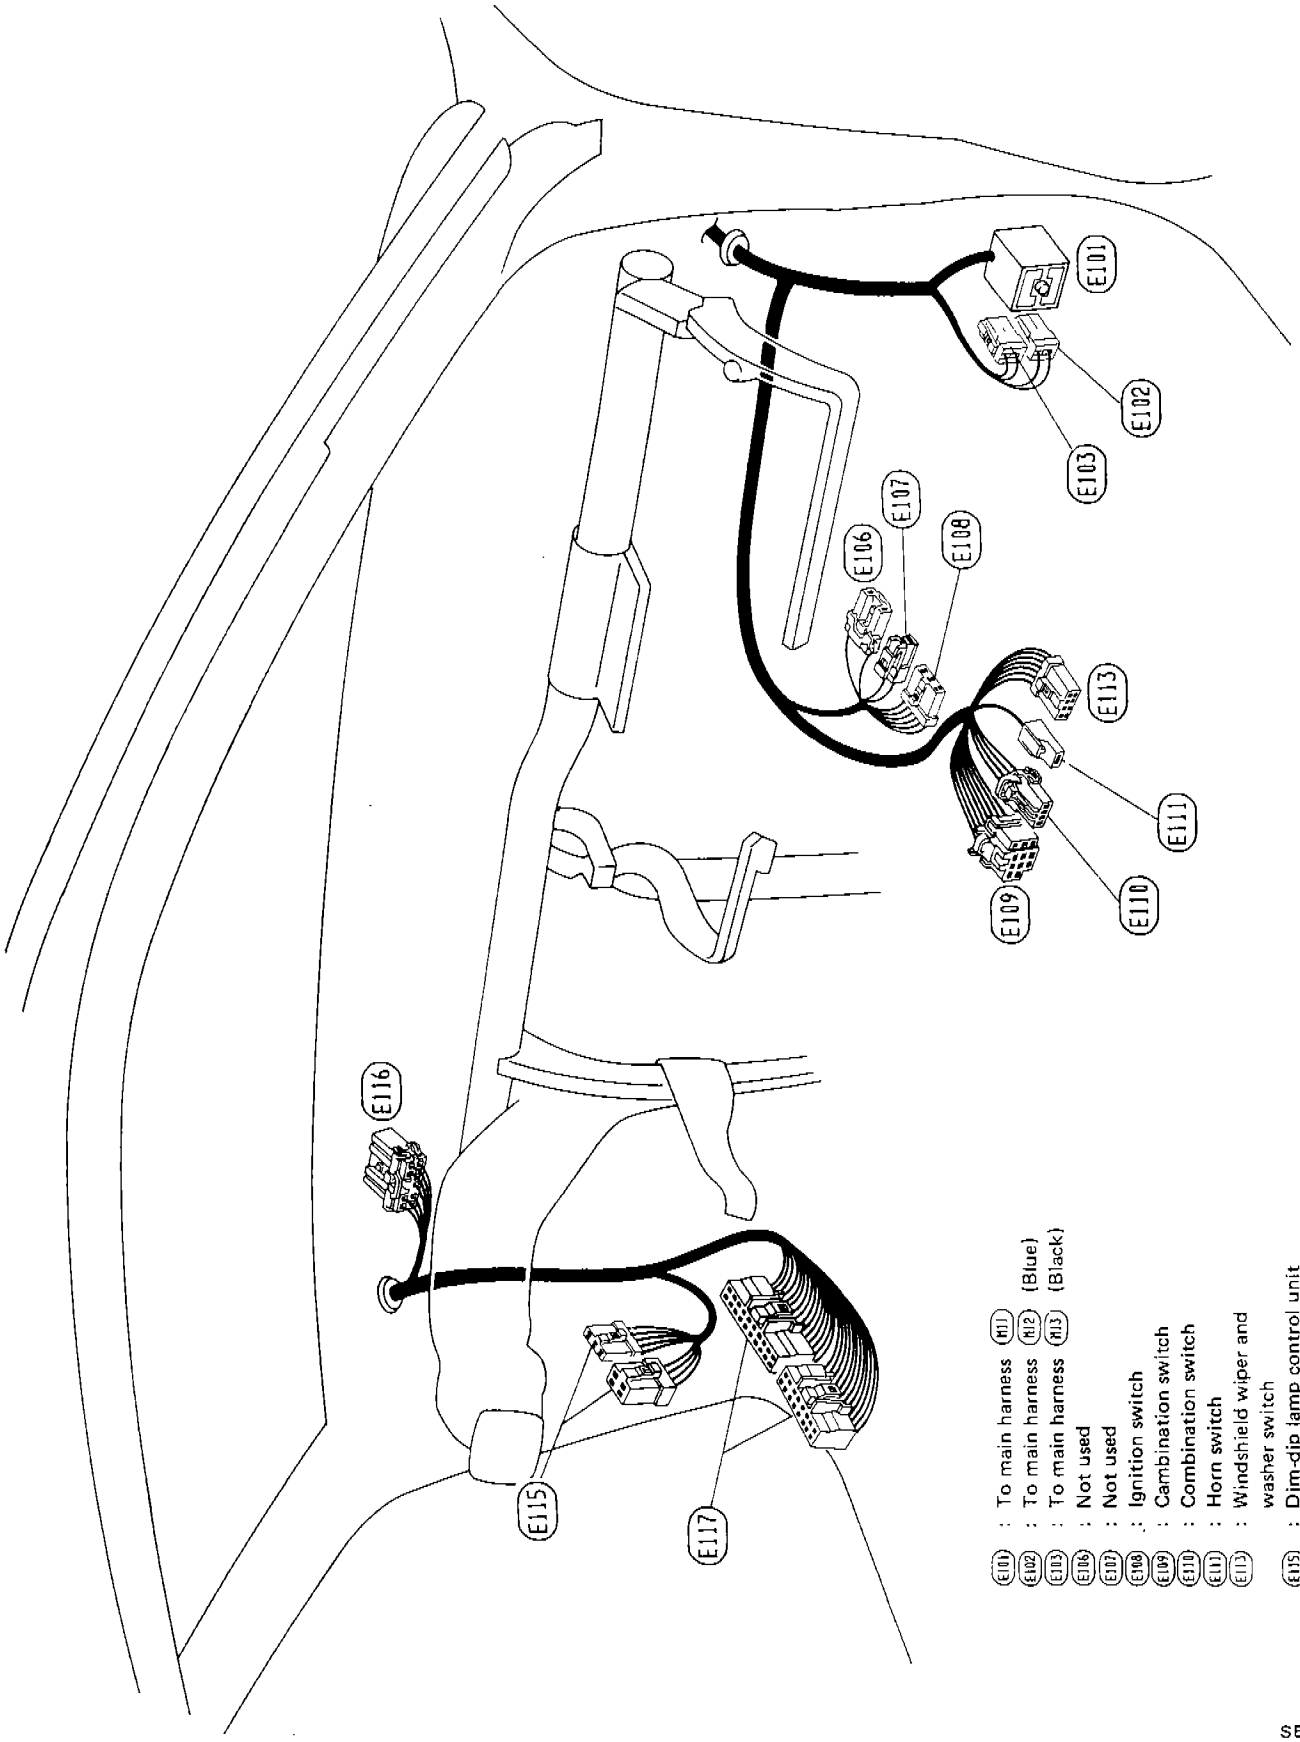

E101 : To main harness (H1) (Blue)
E102 : To main harness (H2) (Blue)
E103 : To main harness (H3) (Black)
E106 : Not used
E107 : Not used
E108 : Ignition switch
E109 : Cambination switch
E110 : Combination switch
E111 : Horn switch
E113 : Windshield wiper and washer switch
E115 : Dim-dip lamp control unit
E116 : To E.F.I. harness (F3)
E117 : A/T control unit

SEL799L


Engine Room Harness No. 2

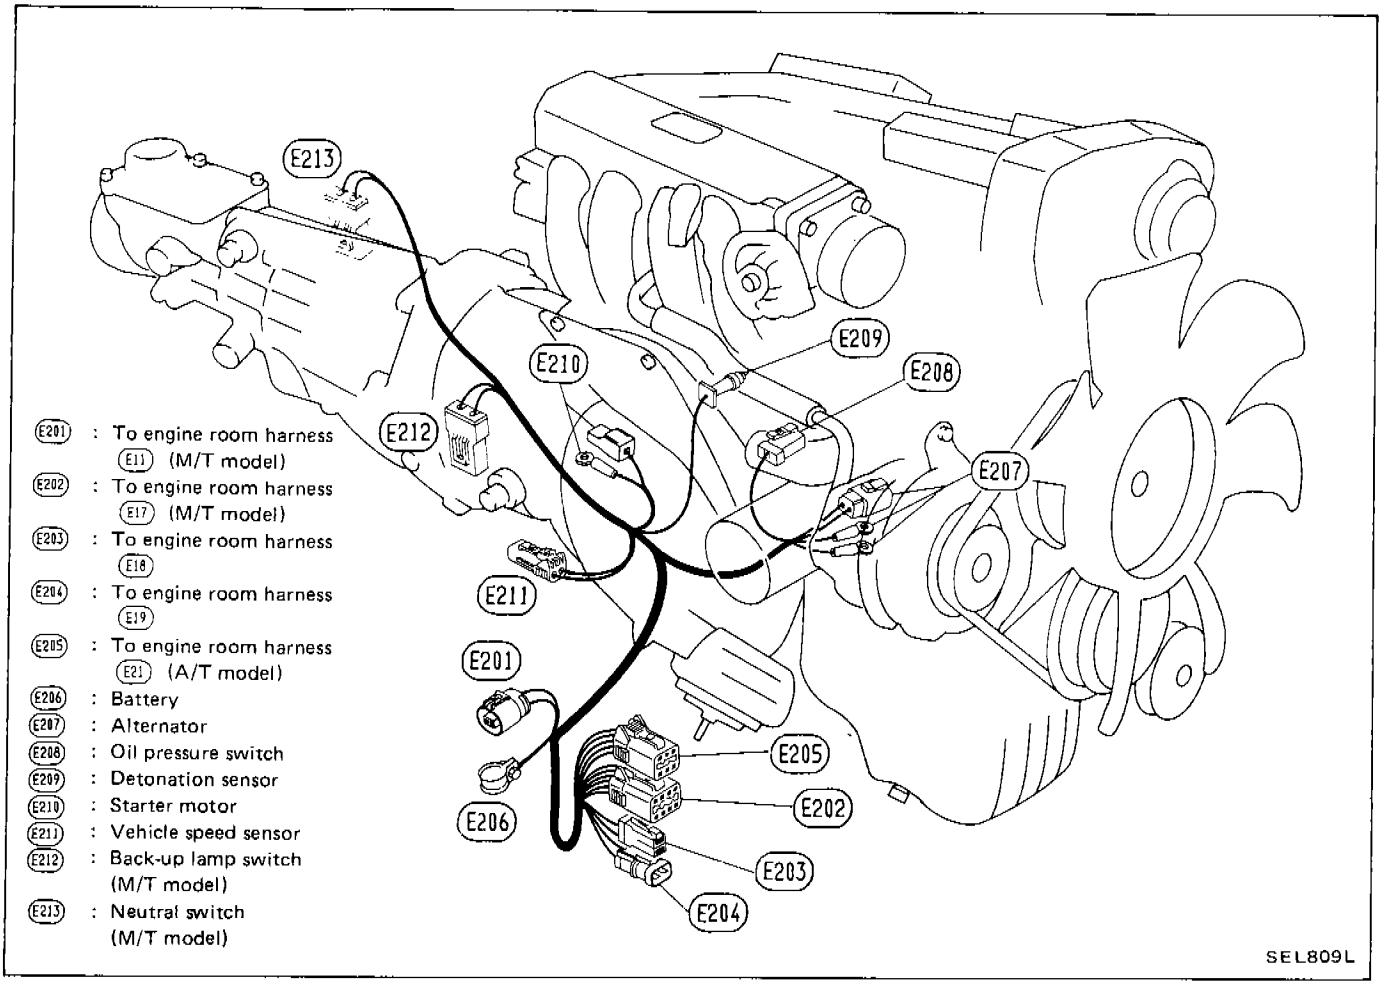

E201 : To engine room harness E11 (M/T model)
E202 : To engine room harness E17 (M/T model)
E203 : To engine room harness E18
E204 : To engine room harness E19
E205 : To engine room harness E21 (A/T model)
E206 : Battery
E207 : Alternator
E208 : Oil pressure switch
E209 : Detonation sensor
E210 : Starter motor
E211 : Vehicle speed sensor
E212 : Back-up lamp switch (M/T model)
E213 : Neutral switch (M/T model)

E.F.I. Harness

L.H. DRIVE MODEL

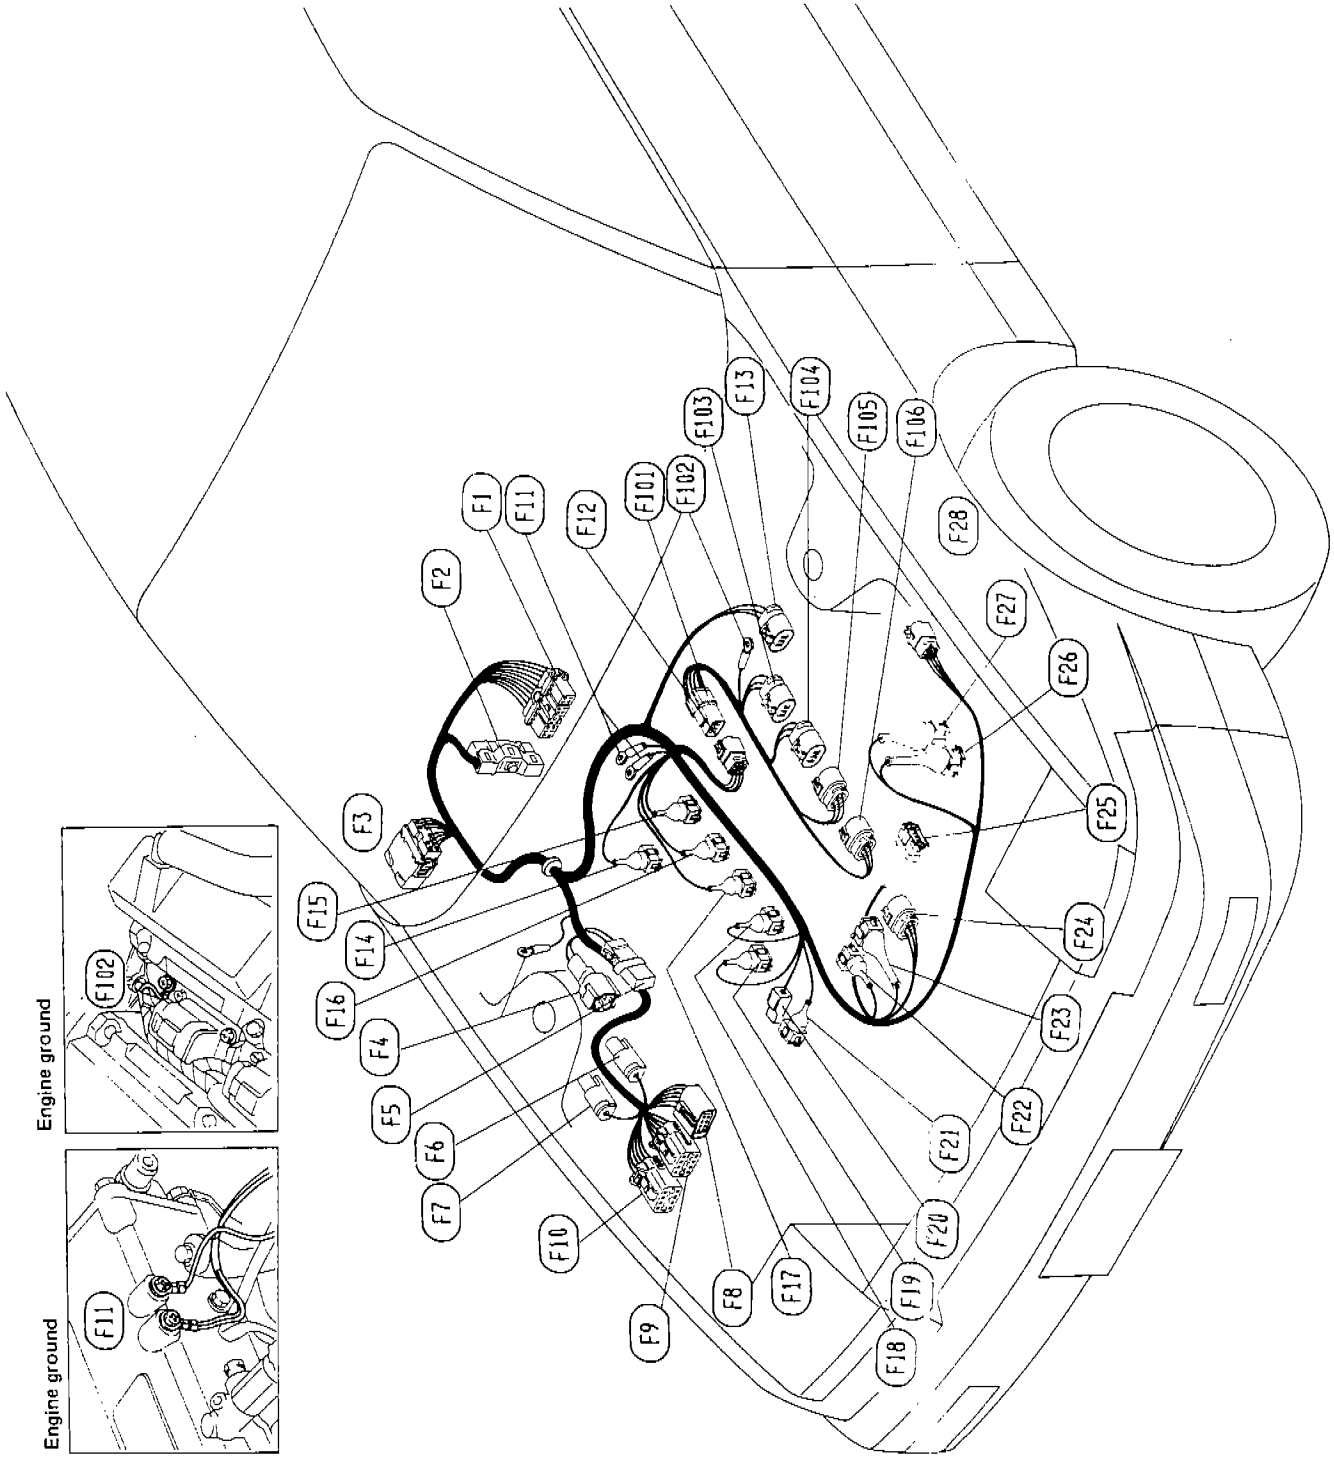


E.F.I. Harness (Cont'd)

(F1) : To main harness (M53)
(F2) : E.C.C.S. control unit
(F3) : To engine room harness (E116)
(F4) : Front brake skid sensor R.H.
(F5) : Resistor
(F6) : Check connector
(F7) : Check connector
(F8) : To engine room harness (E8) (White)
(F9) : To engine room harness (E9) (Gray)
(F10) : To engine room harness (E10) (Brown)
(F11) : Engine ground
(F12) : To ignition coil sub-harness (F101)
(F13) : Exhaust gas sensor (For model with catalyzer)
(F14) : F.I.C.D. solenoid valve
(F15) : Injector-4
(F16) : Injector-3
(F17) : Injector-2
(F18) : Injector-1
(F19) : A.A.C. solenoid valve
(F20) : Thermal transmitter
(F21) : Engine temperature sensor
(F22) : Air regulator
(F23) : Throttle valve switch
(F24) : Throttle sensor
(F25) : Crank angle sensor
(F26) : Air flow meter (For model with catalyzer)
(F27) : Air flow meter (Except for model with catalyzer)
(F28) : Dropping resistor
(F10) : To E.F.I. harness (F12)
(G102) : Engine ground
(F103) : Ignition coil-4
(F104) : Ignition coil-3
(F105) : Ignition coil-2
(F106) : Ignition coil-1

SEL808L

E.F.I. Harness (Cont'd)

R.H. DRIVE MODEL

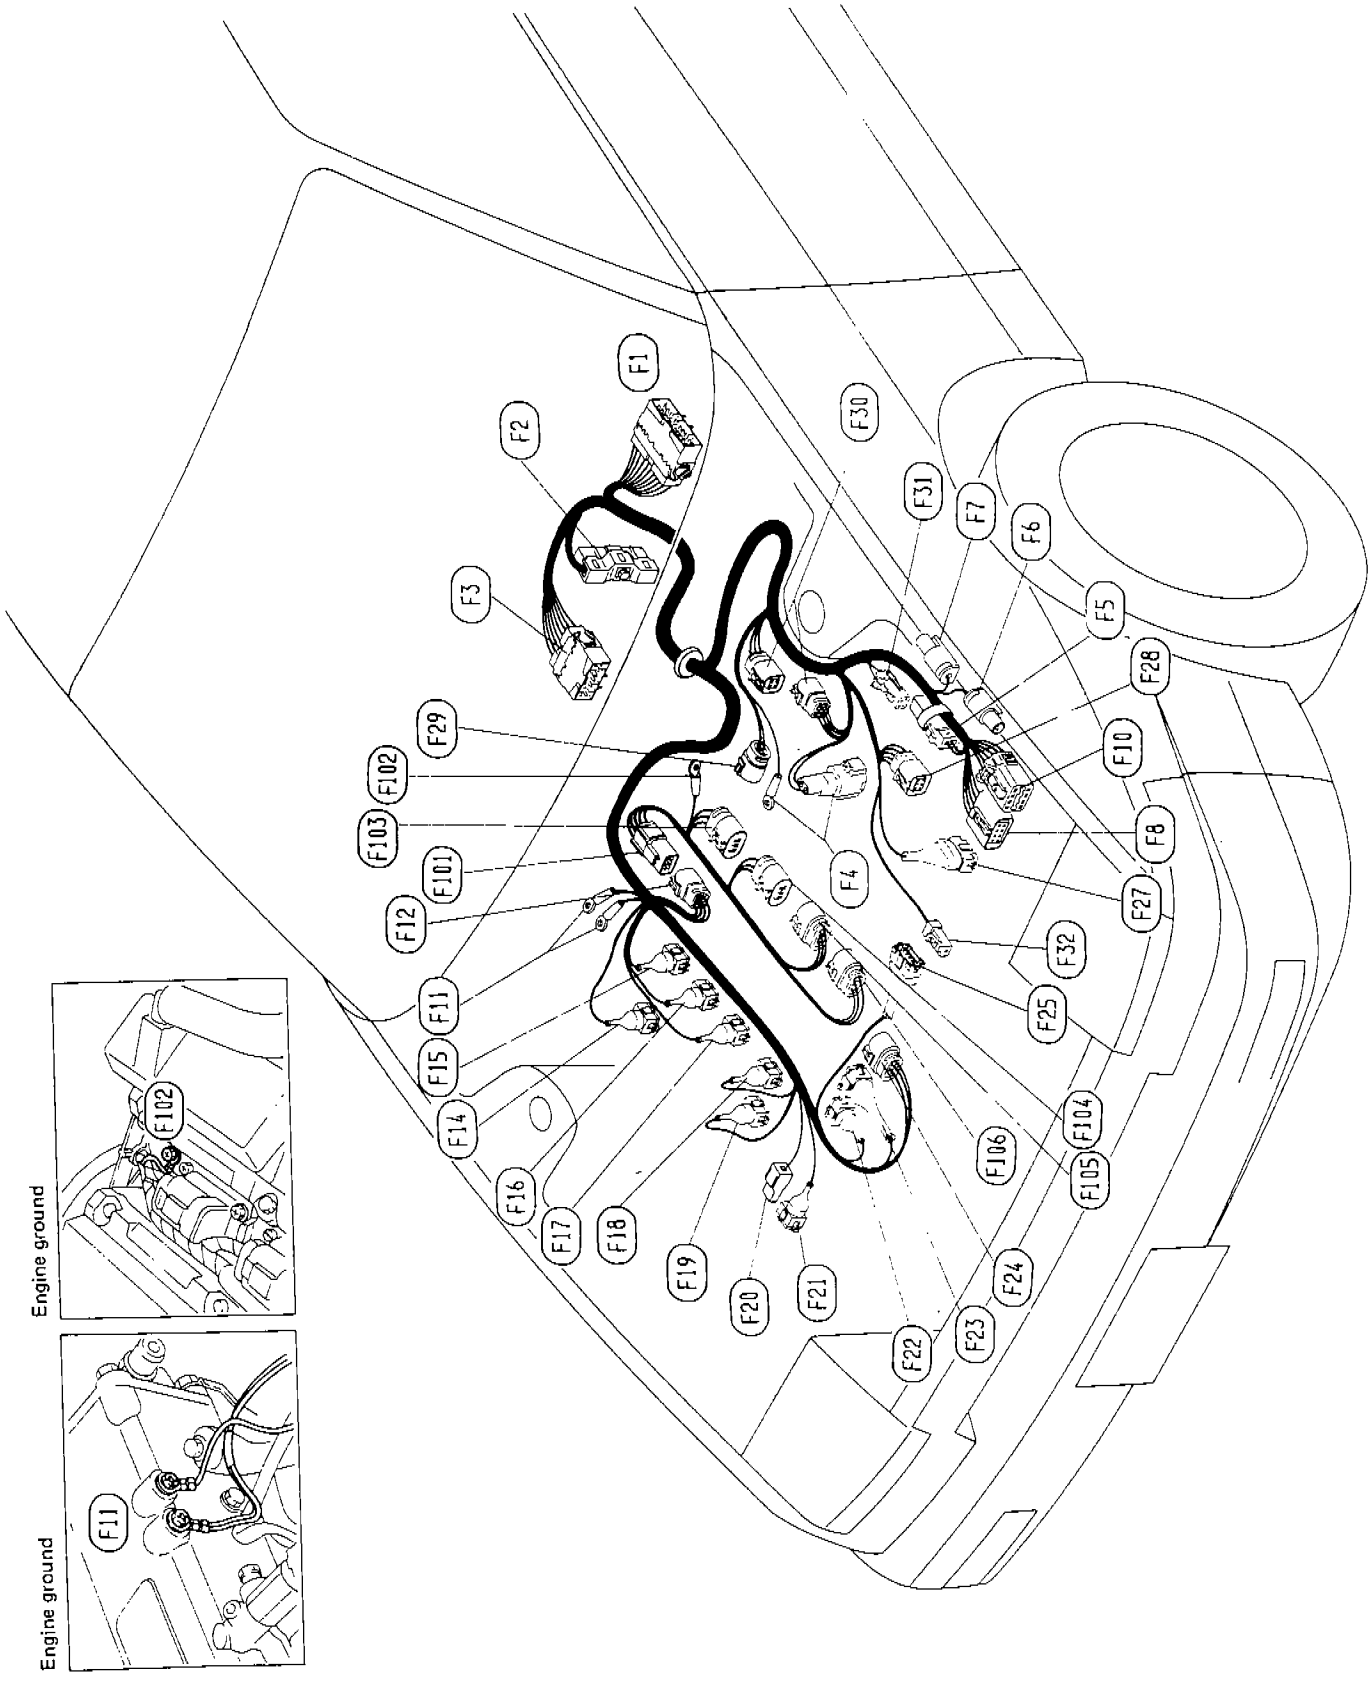


E.F.I. Harness (Cont'd)

(F1) : To main harness (M53)
(F2) : E.C.C.S. control unit
(F3) : To engine room harness (E116)
(F4) : Front brake skid sensor L.H.
(F5) : Resistor
(F6) : Check connector
(F7) : Check connector
(F8) : To engine room harness (E8) (White)
(F10) : To engine room harness (E10) (Brown)
(F11) : Engine ground
(F12) : To ignition coil sub-harness (F101)
(F14) : F.I.C.D. solenoid valve
(F15) : Injector-4
(F16) : Injector-3
(F17) : Injector-2
(F18) : Injector-1
(F19) : A.A.C. solenoid valve
(F20) : Thermal transmitter

(F21) : Engine temperature sensor
(F22) : Air regulator
(F23) : Throttle valve switch
(F24) : Throttle sensor
(F25) : Crank angle sensor
(F27) : Air flow meter
(F28) : Dropping resistor
(F29) : Pressure regulator control solenoid valve
(F30) : Power transistor unit
(F31) : Dropping resistor (A/T model)
(F32) : Compressor
(F101) : To E.F.I. harness (F12)
(F102) : Engine ground
(F103) : Ignition coil-4
(F104) : Ignition coil-3
(F105) : Ignition coil-2
(F106) : Ignition coil-1

SEL810L


Back Door Harness

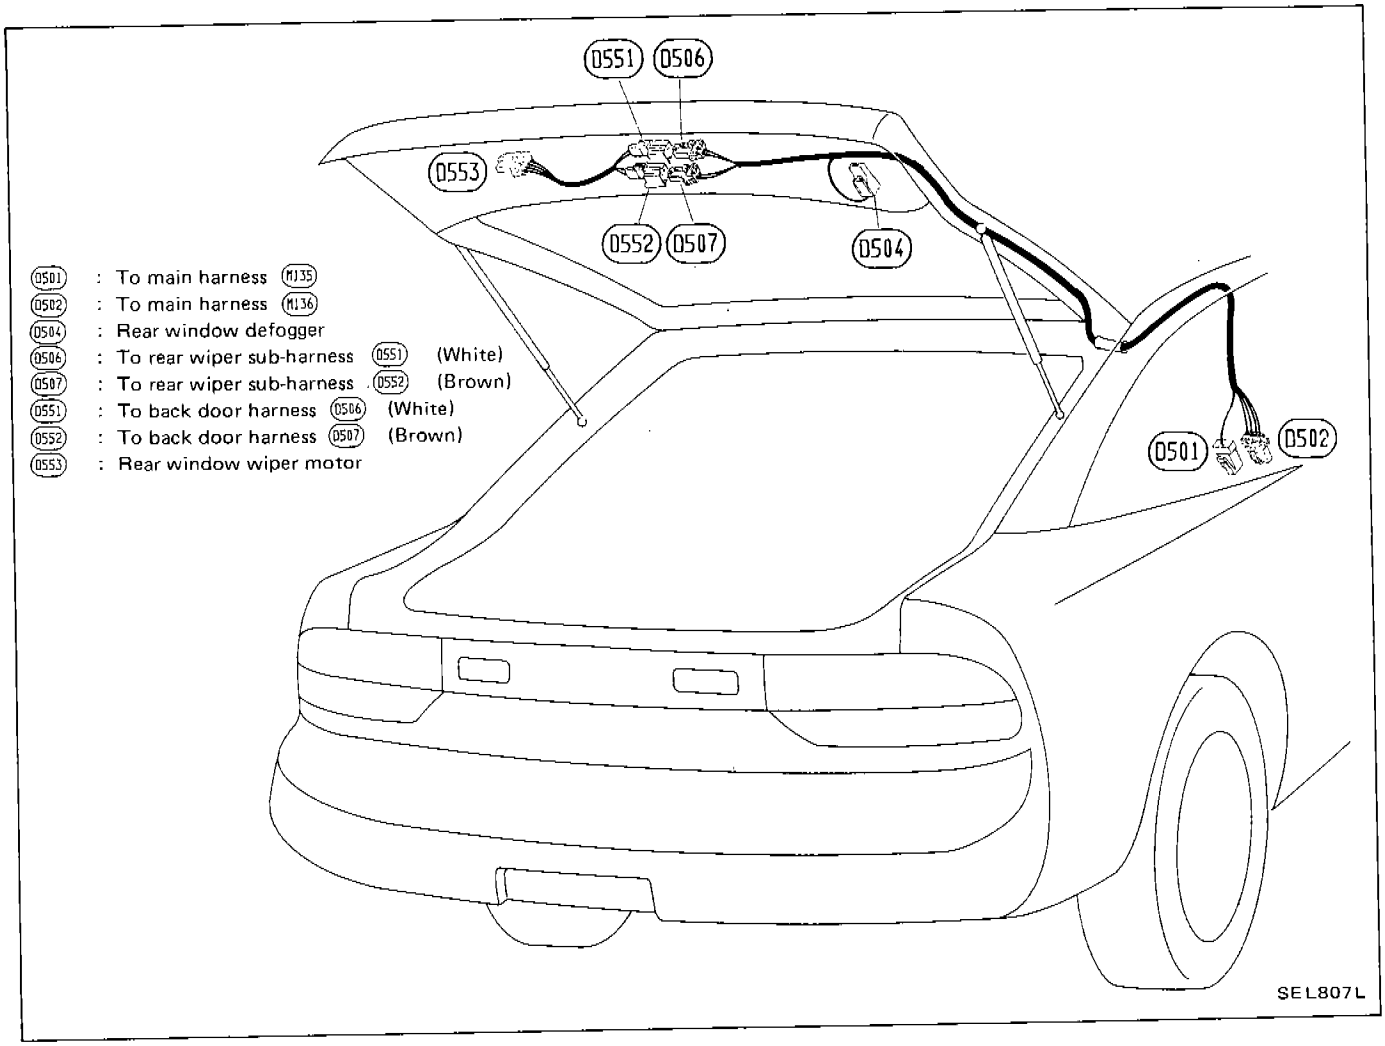

D501 : To main harness M135
D502 : To main harness M136
D504 : Rear window defogger
D506 : To rear wiper sub-harness D551 (White)
D507 : To rear wiper sub-harness D552 (Brown)
D551 : To back door harness D506 (White)
D552 : To back door harness D507 (Brown)
D553 : Rear window wiper motor

REMOVAL

- Remove fuse block retaining screws to gain access to S.M.J.
- Slide fuse block to the side, and remove S.M.J. retaining bolts to detach S.M.J.

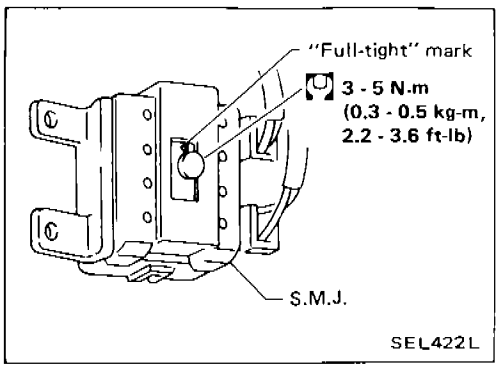

INSTALLATION


To install S.M.J., tighten bolts until orange "full-tight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m
(0.3 - 0.5 kg-m, 2.2 - 3.6 ft-lb)


CAUTION:
Do not overtighten bolts, otherwise, they may be damaged.

Terminal Arrangement

MAIN HARNESS

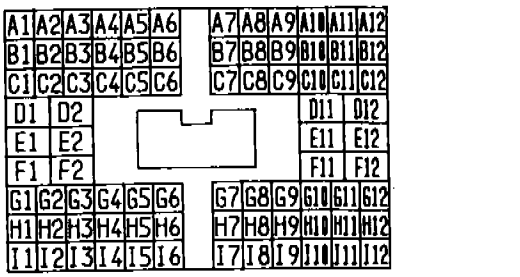


T.S.

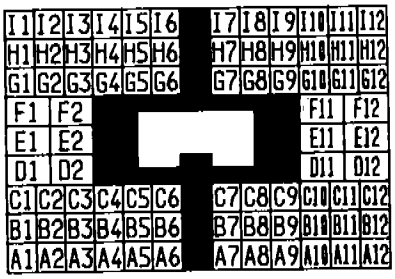


ENGINE ROOM HARNESS

E.C.C.S. CONTROL UNIT





View from harness side


H.S.

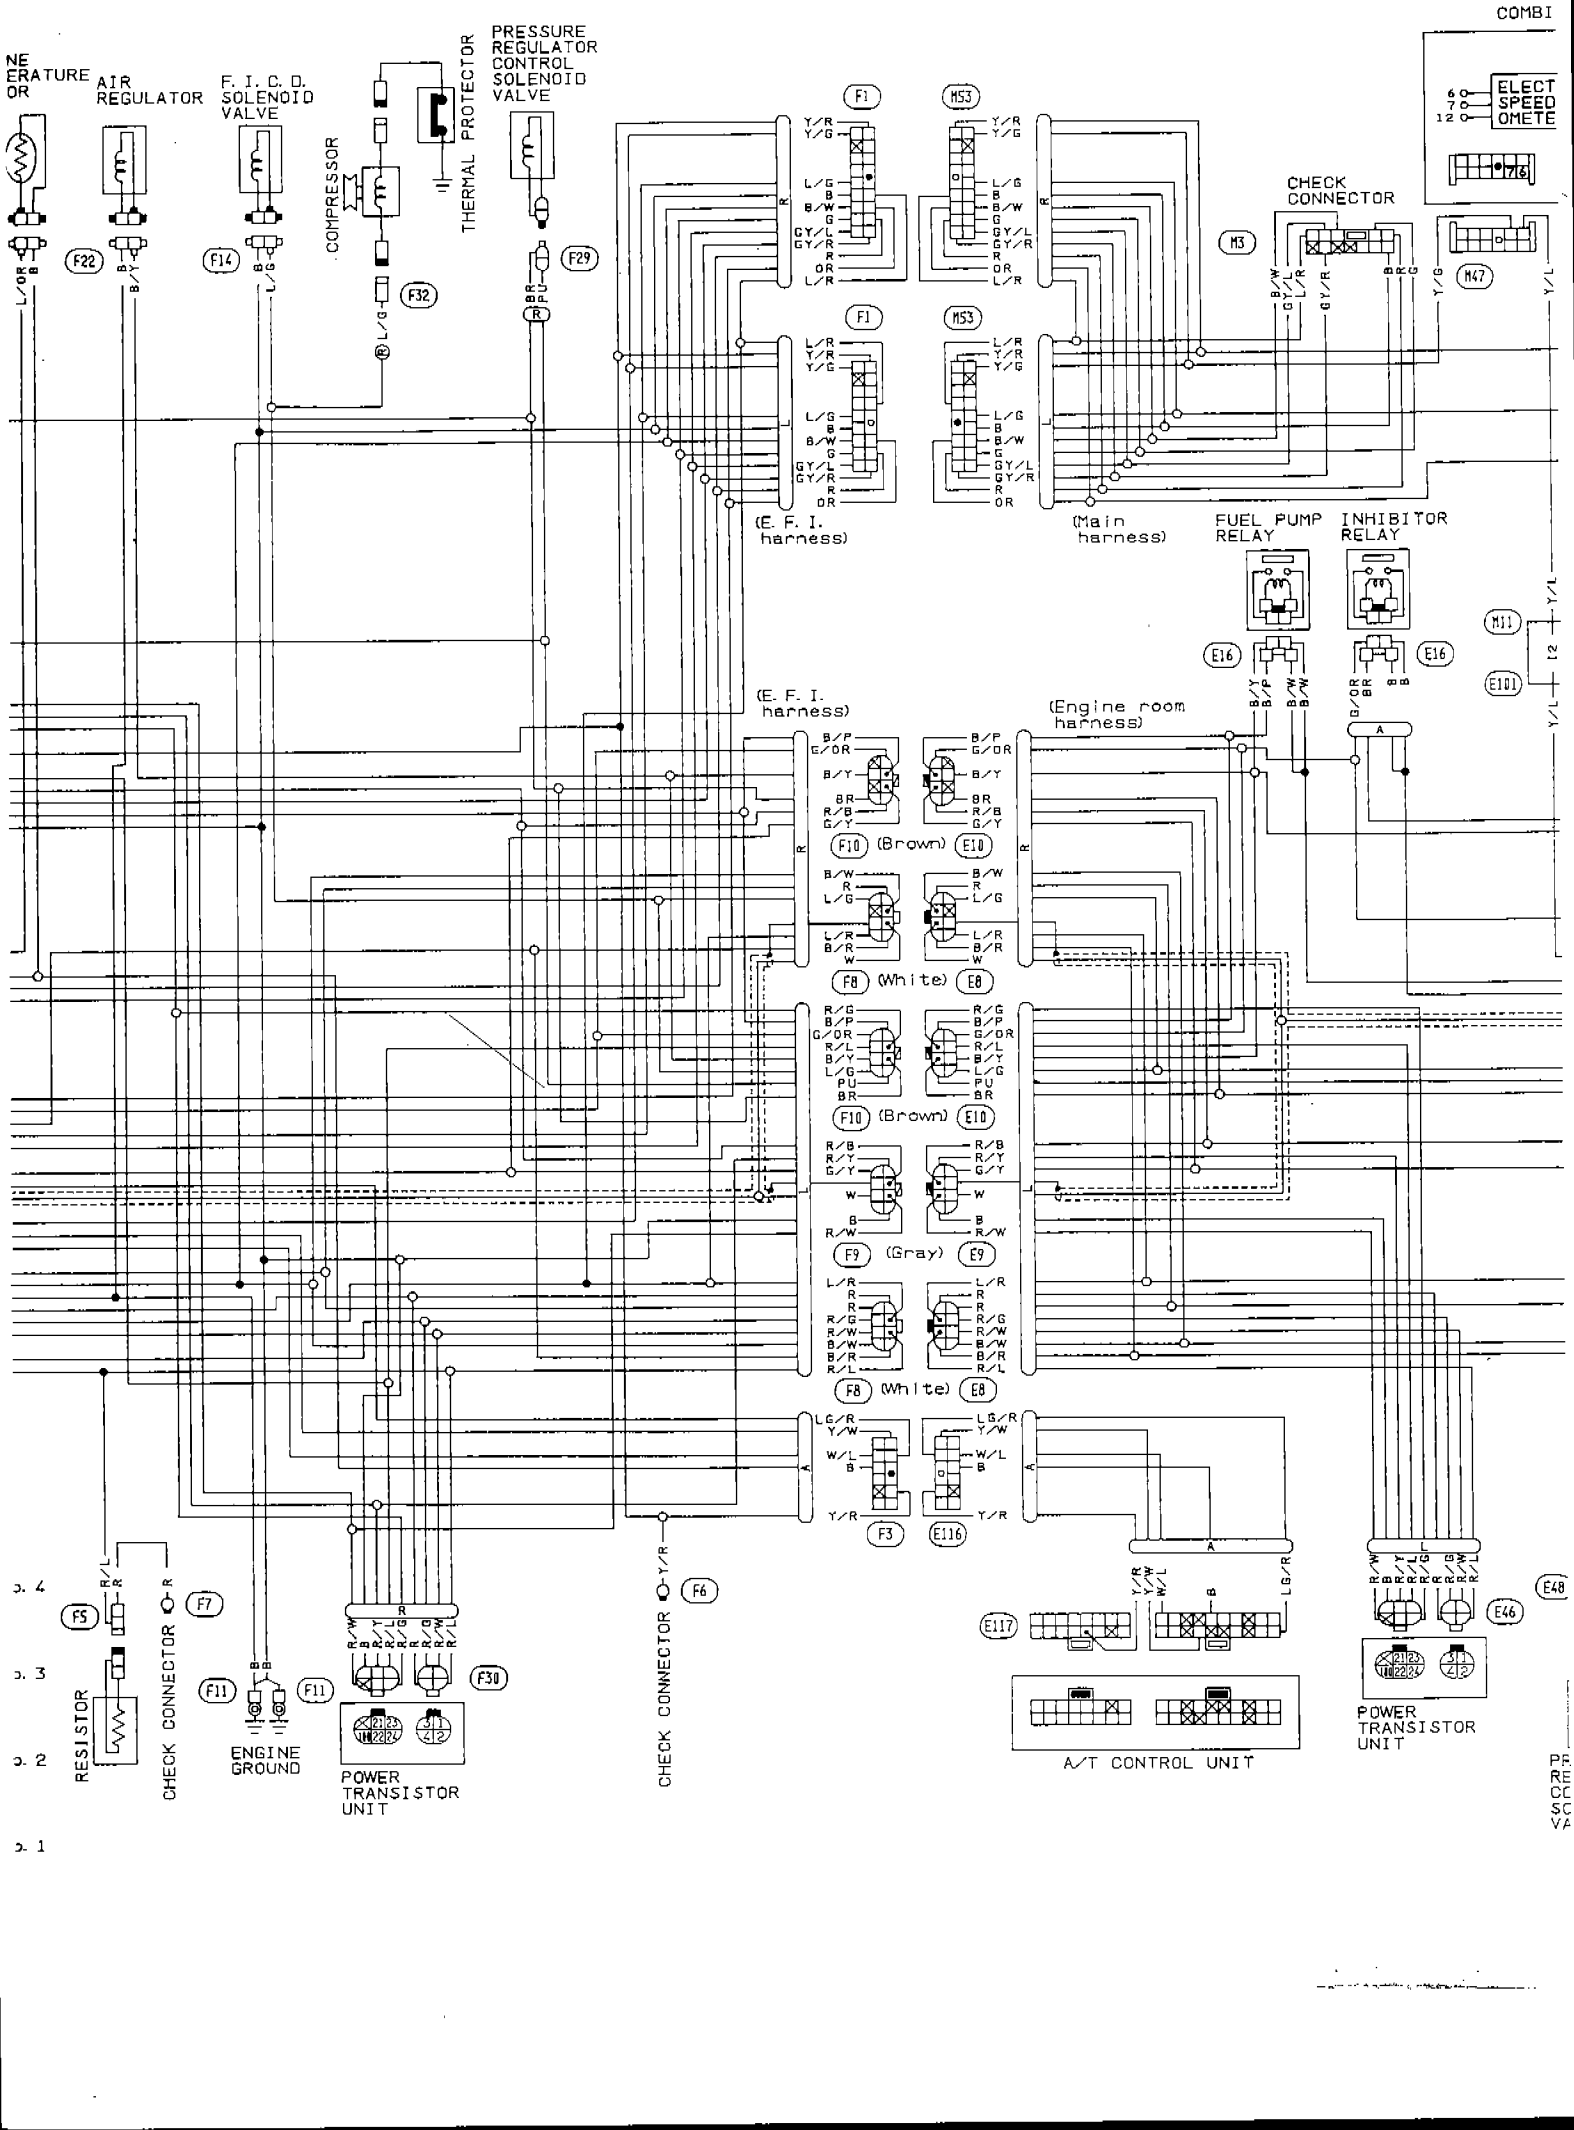

COMBI
ELECT
SPEED
OMETE
CHECK
CONNECTOR
PRESSURE
REGULATOR
CONTROL
SOLENOID
VALVE
THERMAL PROTECTOR
COMPRESSOR
AIR
REGULATOR
F. I. C. D.
SOLENOID
VALVE
(E. F. I.
harness)
(Main
harness)
FUEL PUMP
RELAY
INHIBITOR
RELAY
(E. F. I.
harness)
(Engine room
harness)
(Brown)
(White)
(Gray)
RESISTOR
CHECK CONNECTOR
ENGINE
GROUND
POWER
TRANSISTOR
UNIT
CHECK CONNECTOR
A/T CONTROL UNIT
POWER
TRANSISTOR
UNIT


NISSAN 200SX (S13 series)
CIRCUIT DIAGRAM

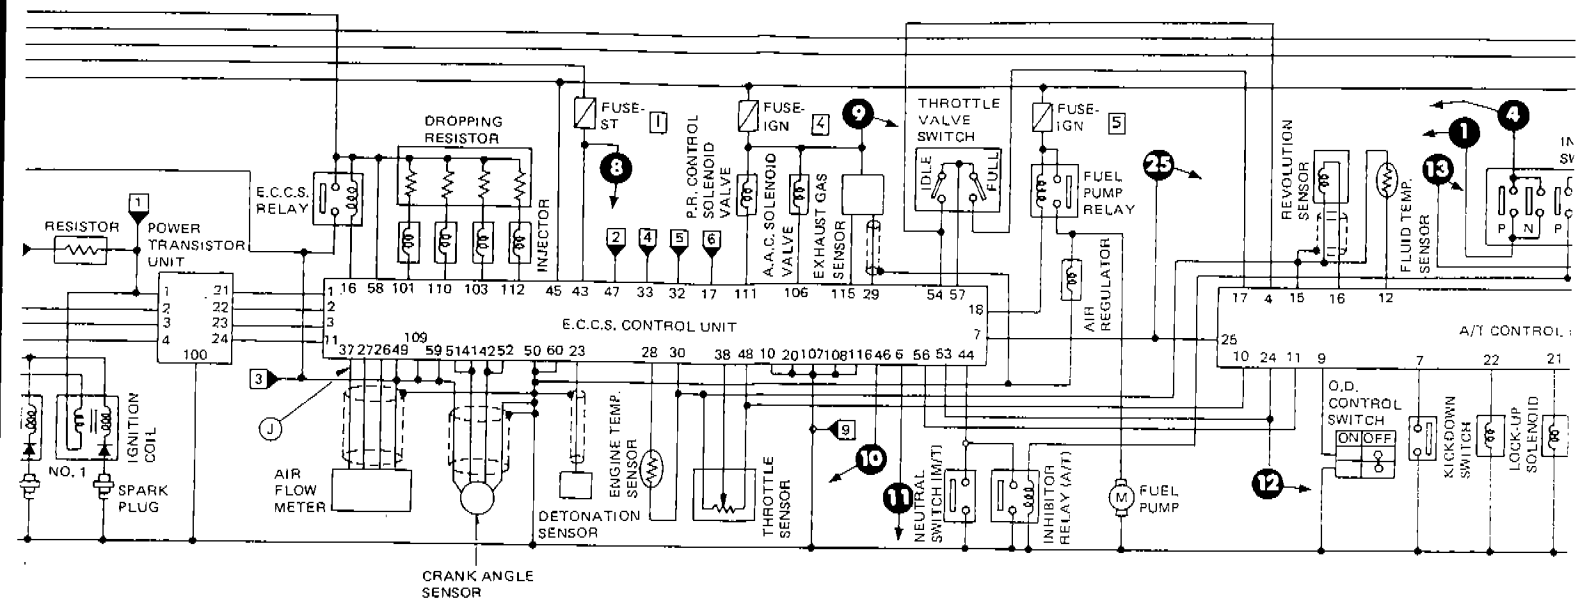

RESISTOR
POWER TRANSISTOR UNIT
E.C.C.S. RELAY
DROPPING RESISTOR
INJECTOR
FUSE- ST
FUSE- IGN
P.R. CONTROL SOLENOID VALVE
A.A.C. SOLENOID VALVE
EXHAUST GAS SENSOR
THROTTLE VALVE SWITCH
IDLE
FULL
FUSE- IGN
FUEL PUMP RELAY
REVOLUTION SENSOR
FLUID TEMP. SENSOR
AIR REGULATOR
E.C.C.S. CONTROL UNIT
A/T CONTROL
O.D. CONTROL SWITCH
ON OFF
KICKDOWN SWITCH
LOCK-UP SOLENOID
IGNITION COIL
NO. 1
SPARK PLUG
AIR FLOW METER
DETONATION SENSOR
ENGINE TEMP. SENSOR
THROTTLE SENSOR
CRANK ANGLE SENSOR
NEUTRAL SW (M/T)
INHIBITOR RELAY (A/T)
FUEL PUMP

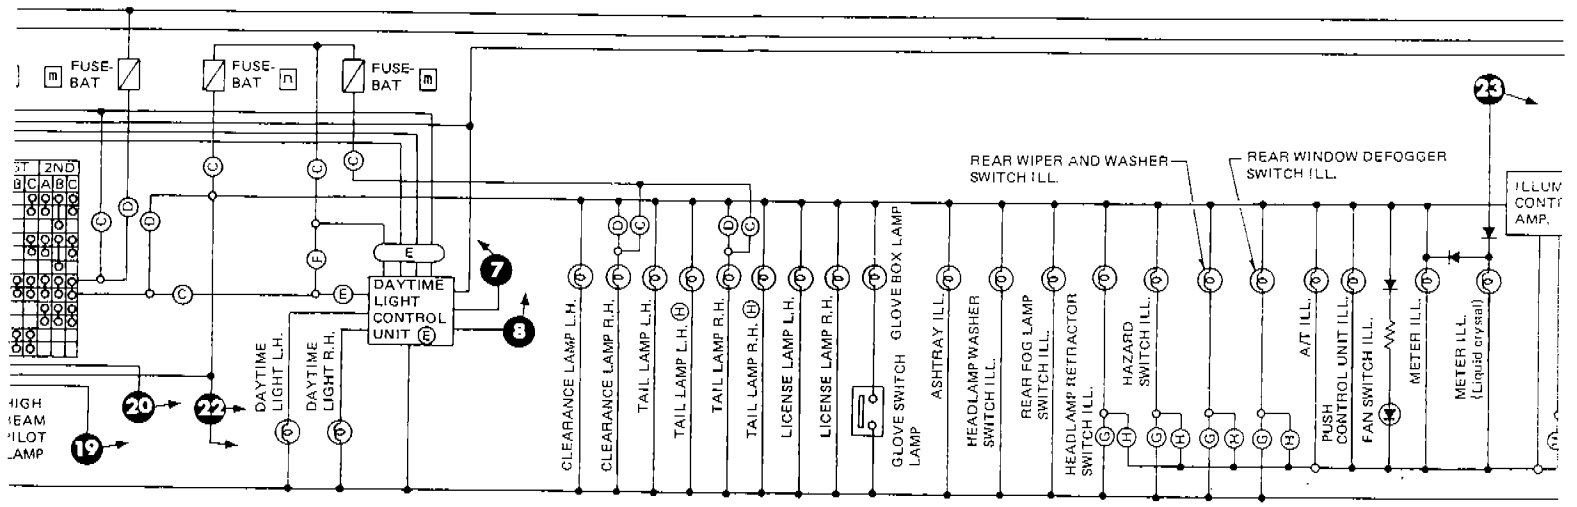

FUSE- BAT
FUSE- BAT
FUSE- BAT
DAYTIME LIGHT CONTROL UNIT
DAYTIME LIGHT L.H.
DAYTIME LIGHT R.H.
CLEARANCE LAMP L.H.
CLEARANCE LAMP R.H.
TAIL LAMP L.H.
TAIL LAMP R.H.
LICENSE LAMP L.H.
LICENSE LAMP R.H.
GLOVE SWITCH LAMP
GLOVE BOX LAMP
ASHTRAY ILL.
HEADLAMP WASHER SWITCH ILL.
REAR FOG LAMP SWITCH ILL.
HEADLAMP REFRACTOR SWITCH ILL.
HAZARD SWITCH ILL.
REAR WIPER AND WASHER SWITCH ILL.
REAR WINDOW DEFOGGER SWITCH ILL.
A/T ILL.
PUSH CONTROL UNIT ILL.
FAN SWITCH ILL.
METER ILL.
METER ILL. (Liquid crystal)

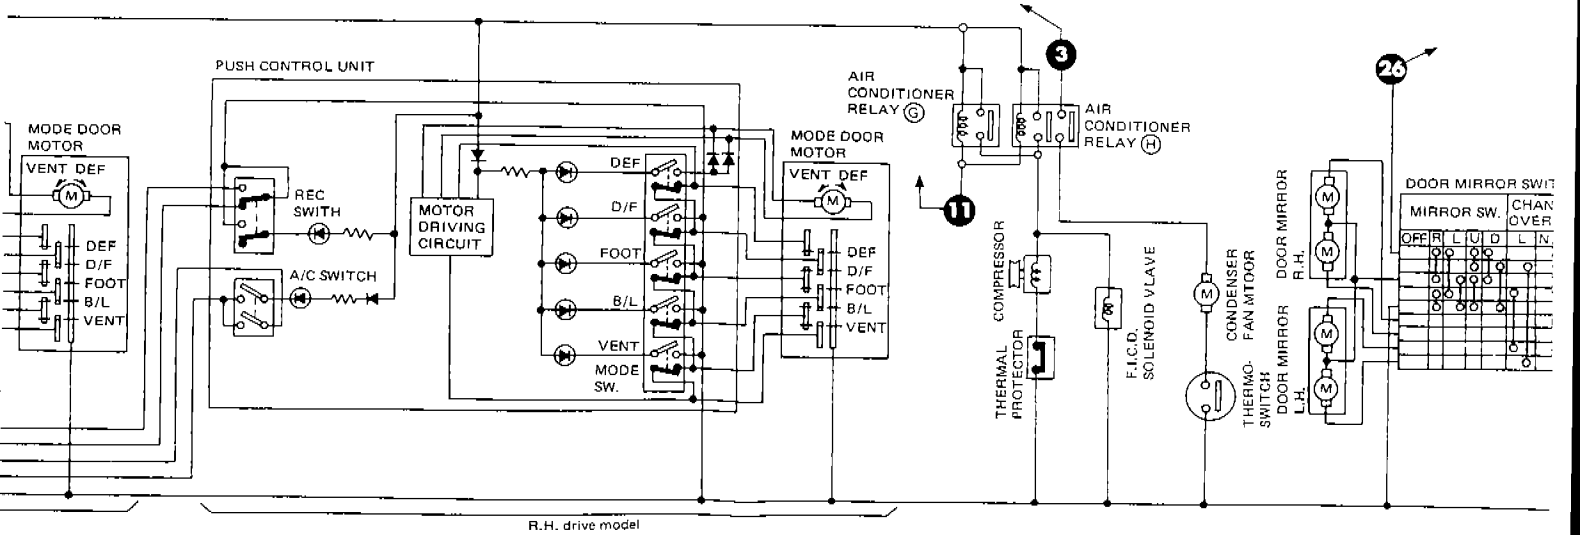
PUSH CONTROL UNIT
MODE DOOR MOTOR
VENT DEF
DEF
D/F
FOOT
B/L
VENT
REC SWITH
A/C SWITCH
MOTOR DRIVING CIRCUIT
MODE SW.
AIR CONDITIONER RELAY
AIR CONDITIONER RELAY
COMPRESSOR
THERMAL PROTECTOR
F.I.C.D. SOLENOID VLAVE
CONDENSER FAN MTOOR
THERMO-SWITCH
DOOR MIRROR R.H.
DOOR MIRROR L.H.
DOOR MIRROR SWIT
MIRROR SW.
OFF R L U D L N
R.H. drive model

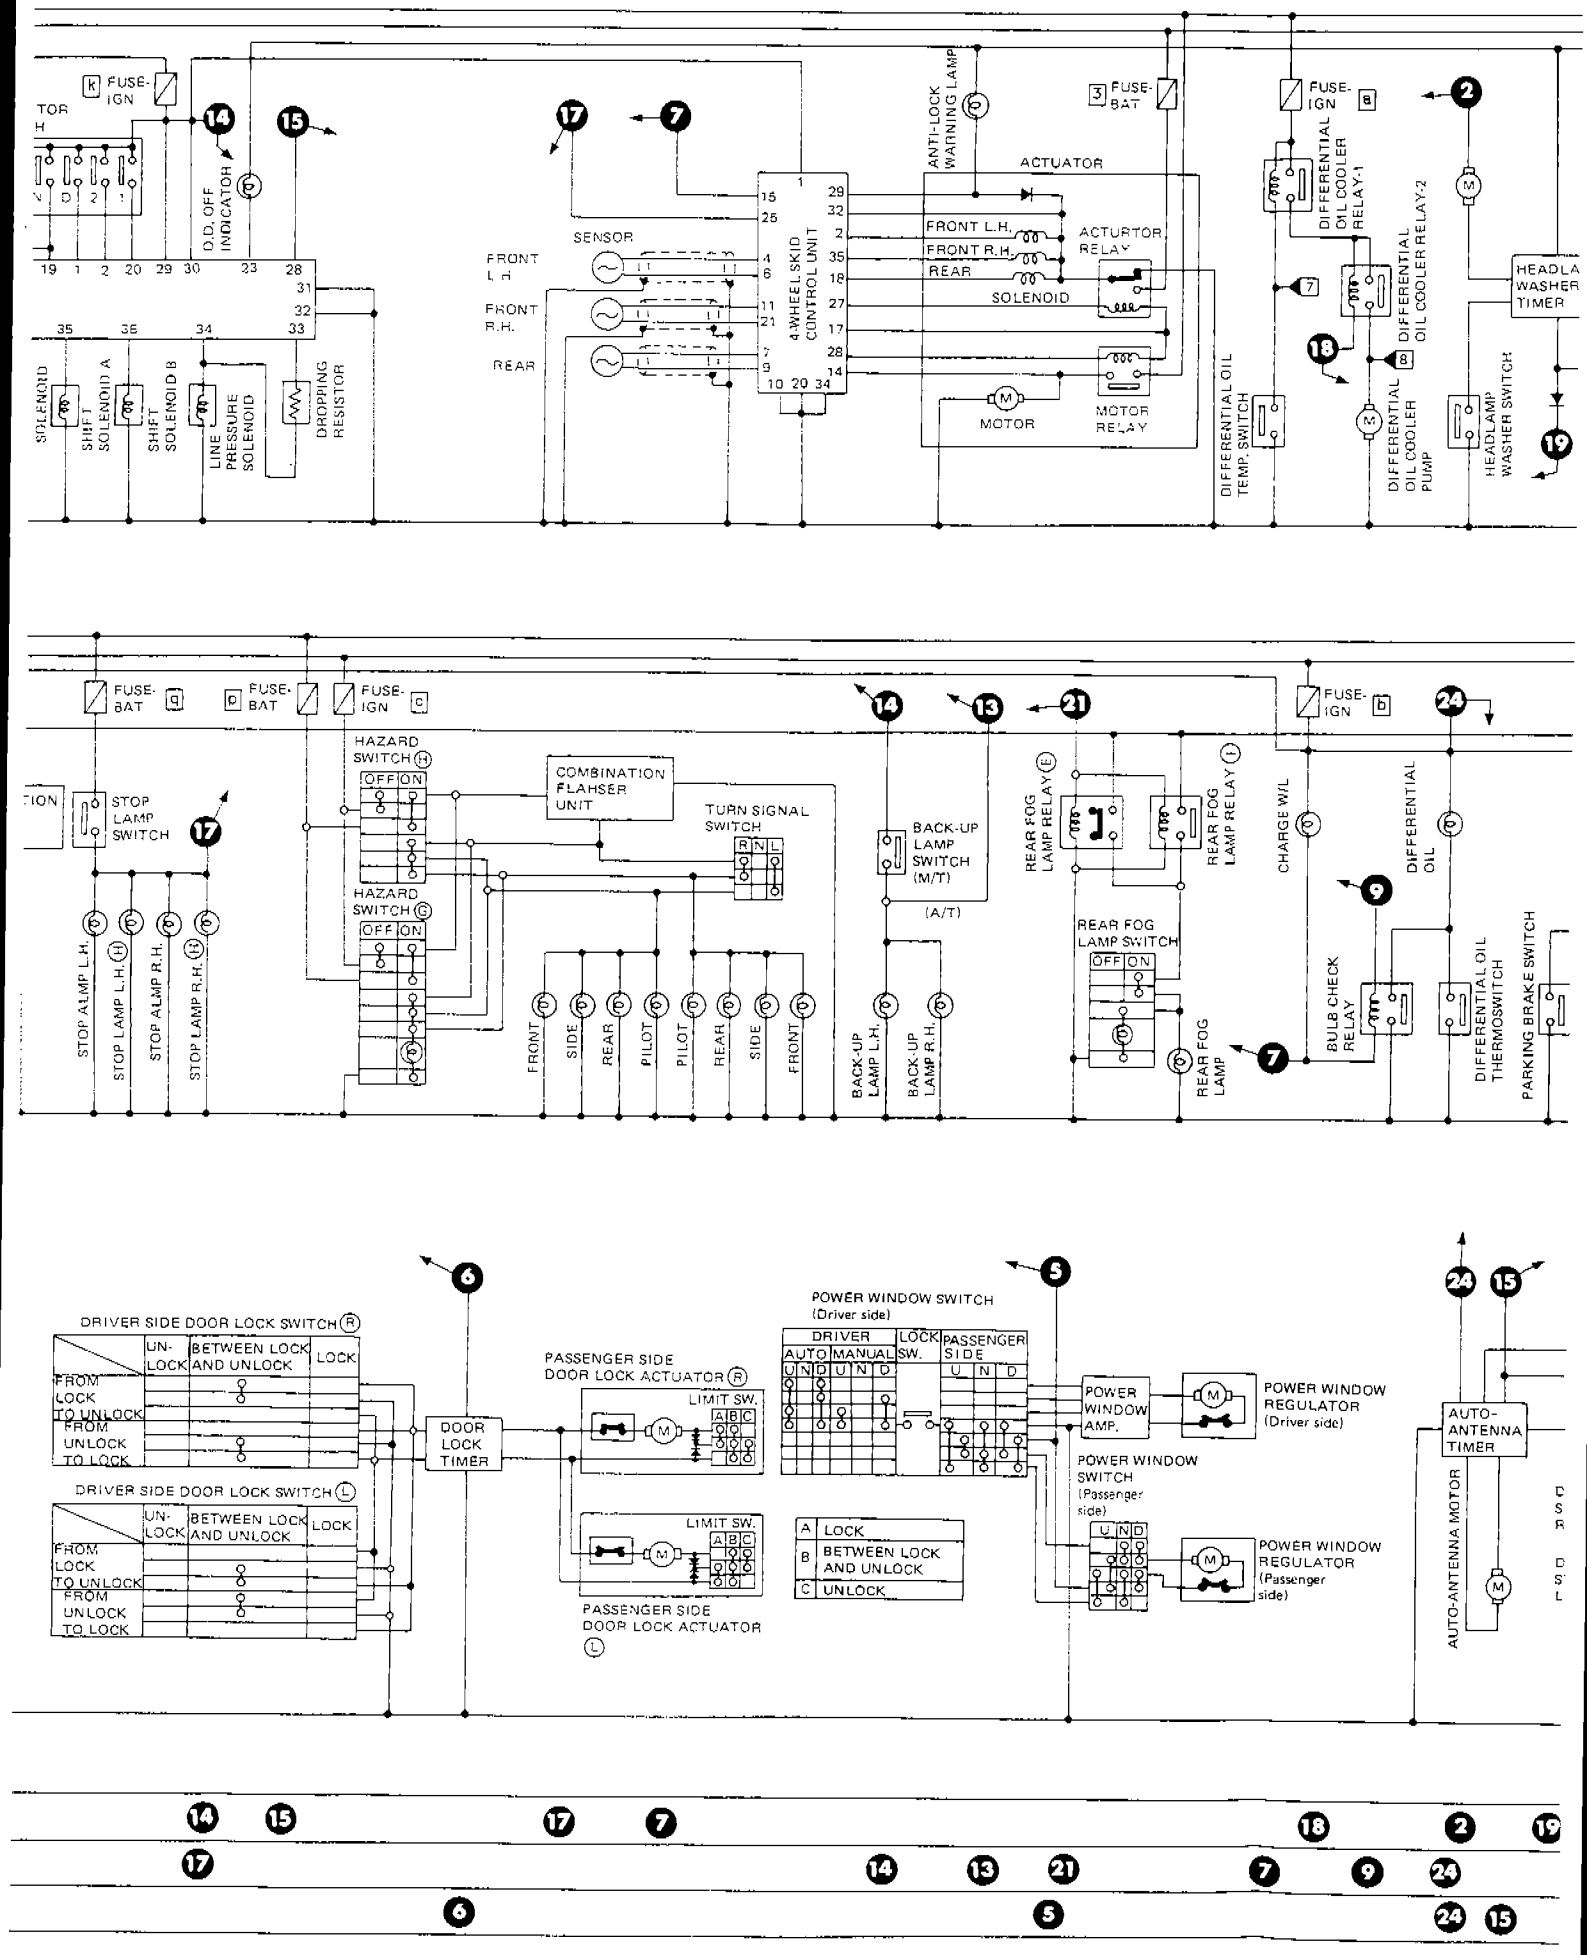

FUSE-IGN
O.D. OFF INDICATOR
SOLENOID
SHIFT SOLENOID A
SHIFT SOLENOID B
LINE PRESSURE SOLENOID
DROPPING RESISTOR
SENSOR
FRONT L.H.
FRONT R.H.
REAR
4-WHEEL SKID CONTROL UNIT
ANTI-LOCK WARNING LAMP
FUSE-BAT
ACTUATOR
FRONT L.H.
FRONT R.H.
REAR
ACTURTOR RELAY
SOLENOID
MOTOR
MOTOR RELAY
DIFFERENTIAL OIL TEMP. SWITCH
DIFFERENTIAL OIL COOLER RELAY-1
DIFFERENTIAL OIL COOLER RELAY-2
DIFFERENTIAL OIL COOLER PUMP
HEADLAMP WASHER TIMER
HEADLAMP WASHER SWITCH
FUSE-BAT
FUSE-BAT
FUSE-IGN
STOP LAMP SWITCH
HAZARD SWITCH
COMBINATION FLASHER UNIT
TURN SIGNAL SWITCH
HAZARD SWITCH
STOP LAMP L.H.
STOP LAMP L.H.
STOP LAMP R.H.
STOP LAMP R.H.
FRONT
SIDE
REAR
PILOT
PILOT
REAR
SIDE
FRONT
BACK-UP LAMP SWITCH (M/T)
(A/T)
BACK-UP LAMP L.H.
BACK-UP LAMP R.H.
REAR FOG LAMP RELAY
REAR FOG LAMP RELAY
REAR FOG LAMP SWITCH
REAR FOG LAMP
FUSE-IGN
CHARGE W/L
DIFFERENTIAL OIL
BULB CHECK RELAY
DIFFERENTIAL OIL THERMOSWITCH
PARKING BRAKE SWITCH
DRIVER SIDE DOOR LOCK SWITCH
UNLOCK
BETWEEN LOCK AND UNLOCK
LOCK
FROM LOCK TO UNLOCK
FROM UNLOCK TO LOCK
DOOR LOCK TIMER
PASSENGER SIDE DOOR LOCK ACTUATOR
LIMIT SW.
A LOCK
B BETWEEN LOCK AND UNLOCK
C UNLOCK
POWER WINDOW SWITCH (Driver side)
DRIVER
AUTO
MANUAL
LOCK SW.
PASSENGER SIDE
POWER WINDOW AMP.
POWER WINDOW REGULATOR (Driver side)
POWER WINDOW SWITCH (Passenger side)
POWER WINDOW REGULATOR (Passenger side)
AUTO-ANTENNA TIMER
AUTO-ANTENNA MOTOR

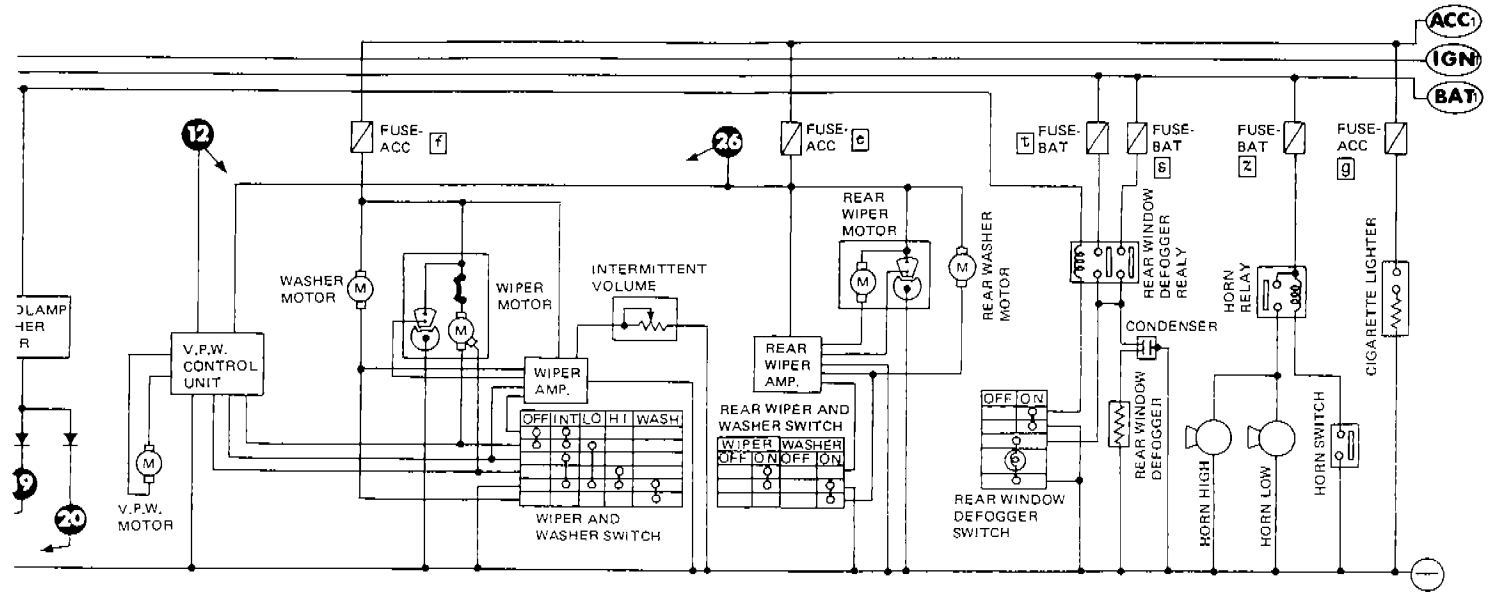

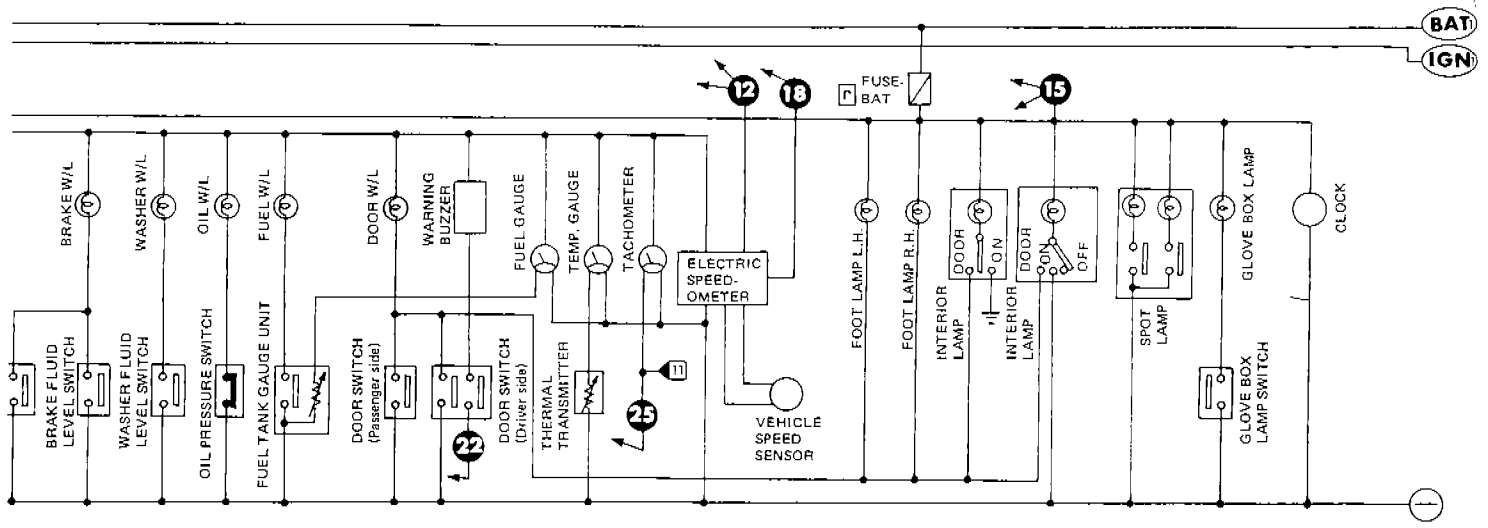


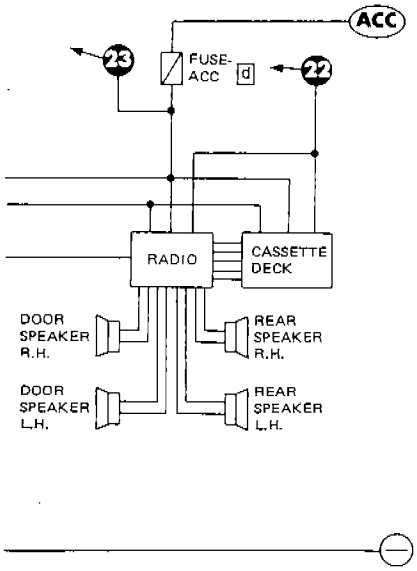


CHECK CONNECTOR

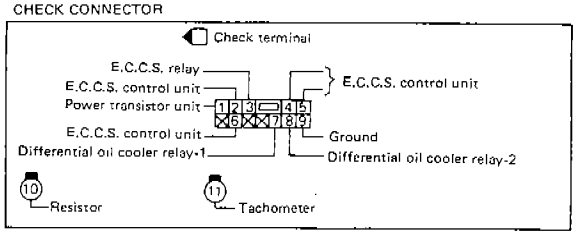



FUSE ARRANGEMENT

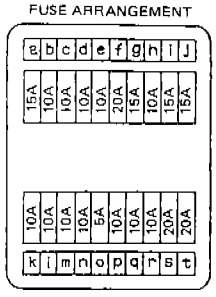



(M/T) : M/T model
(A/T) : A/T model
Ⓐ : Model with dim-dip lamp system
Ⓑ : Except Ⓐ
Ⓒ : L.H. drive model for Europe
Ⓓ : Except Ⓒ
Ⓔ : Model with daytime light system
Ⓕ : L.H. drive model for Europe without daytime light system
Ⓛ : L.H. drive model
Ⓡ : R.H. drive model
Ⓖ : For Europe
Ⓗ : Except for Europe
Ⓘ : Except Ⓔ
Ⓙ : Model without catalyzer

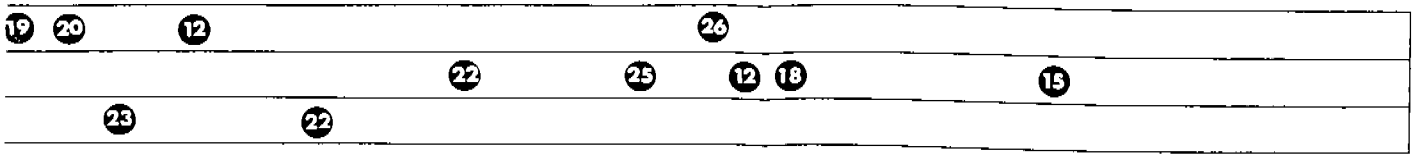

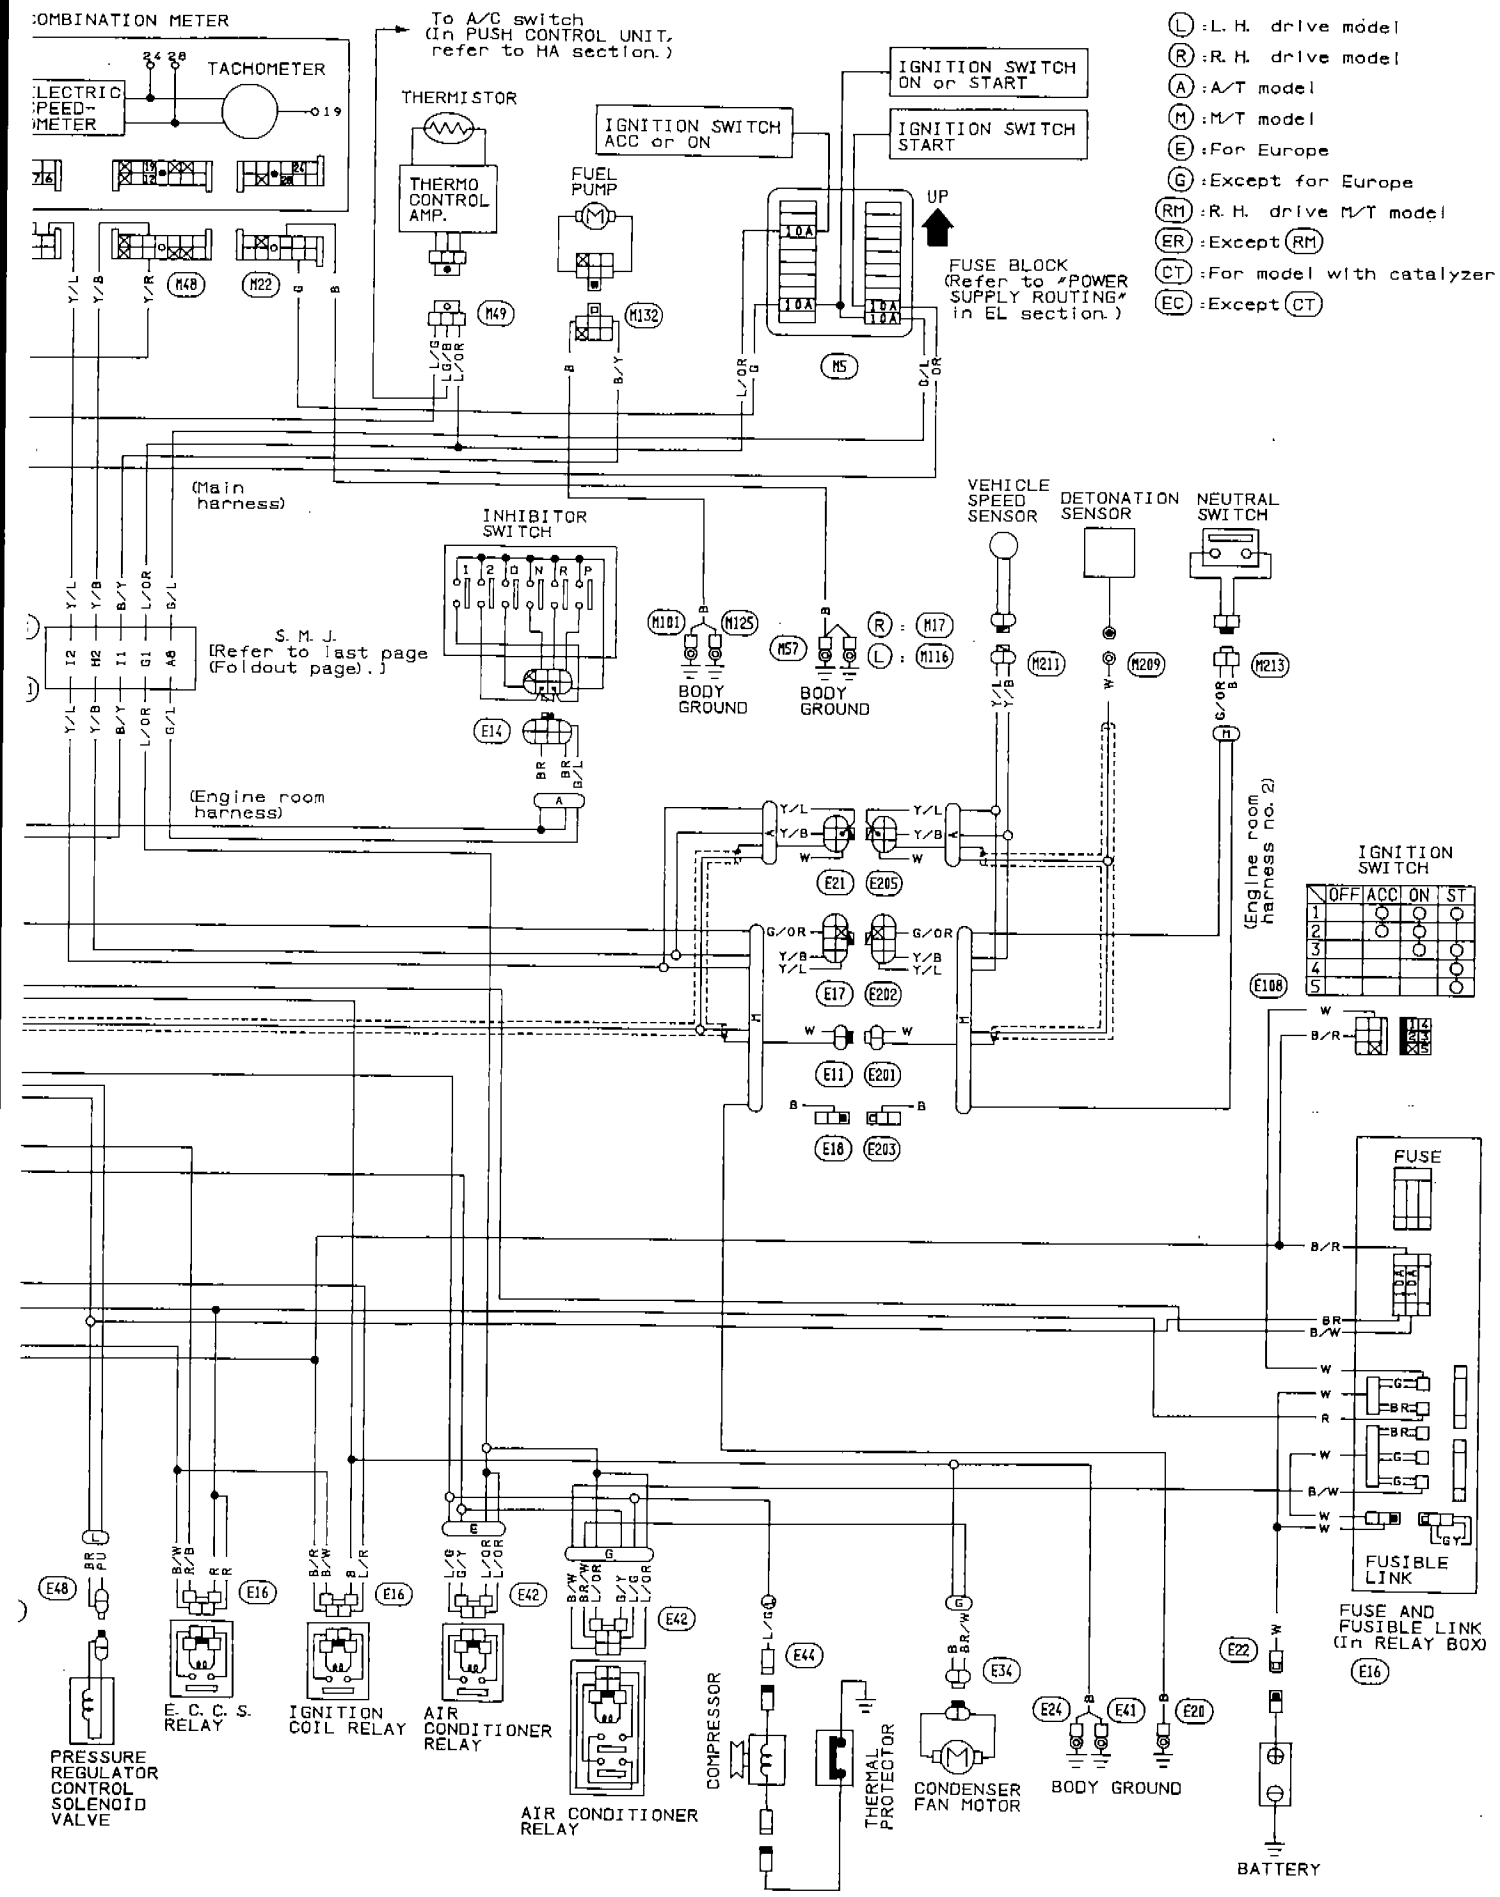
COMBINATION METER
TACHOMETER
To A/C switch (In PUSH CONTROL UNIT, refer to HA section.)
THERMISTOR
THERMO CONTROL AMP.
FUEL PUMP
IGNITION SWITCH ON or START
IGNITION SWITCH ACC or ON
IGNITION SWITCH START
UP
FUSE BLOCK (Refer to "POWER SUPPLY ROUTING" in EL section.)
Ⓛ :L.H. drive model
Ⓡ :R.H. drive model
Ⓐ :A/T model
Ⓜ :M/T model
Ⓔ :For Europe
Ⓖ :Except for Europe
(RM) :R.H. drive M/T model
(ER) :Except (RM)
(CT) :For model with catalyzer
(EC) :Except (CT)
(Main harness)
INHIBITOR SWITCH
VEHICLE SPEED SENSOR
DETONATION SENSOR
NEUTRAL SWITCH
S.M.J. (Refer to last page (Foldout page).)
BODY GROUND
BODY GROUND
(Engine room harness)
(Engine room harness no. 2)
IGNITION SWITCH
OFF ACC ON ST
FUSE
FUSIBLE LINK
FUSE AND FUSIBLE LINK (In RELAY BOX)
PRESSURE REGULATOR CONTROL SOLENOID VALVE
E.C.C.S. RELAY
IGNITION COIL RELAY
AIR CONDITIONER RELAY
AIR CONDITIONER RELAY
COMPRESSOR
THERMAL PROTECTOR
CONDENSER FAN MOTOR
BODY GROUND
BATTERY

NISSAN 200SX
E. C. C. S. WIRING DIAGRAM

